

 
# Cordless digital handset BUTLER 700C User Manual



<b><u>DESCRIPTION OF THE HANDSET.....</u></b>	<b><u>3</u></b>
HANDSET .....	3
DISPLAY .....	4
RECHARGEABLE BATTERIES .....	5
<b><u>ASSOCIATING THE HANDSET .....</u></b>	<b><u>6</u></b>
ASSOCIATION TO THE BUTLER 700 BASE.....	6
ASSOCIATION TO THE TOPCOM FREEPORT BASE.....	6
ASSOCIATION TO ANOTHER DECT BASE.....	7
<b><u>USING THE BUTLER 700C HANDSET.....</u></b>	<b><u>8</u></b>
ACTIVATE/DEACTIVATE THE HANDSET .....	8
RECEIVING A CALL.....	8
MAKING AN EXTERNAL CALL .....	8
MAKING AN INTERNAL CALL.....	8
HANDSFREE MODE .....	9
CALLING FROM THE ADDRESS BOOK .....	9
RECALL THE LAST 10 NUMBERS CALLED .....	9
DISPLAY OF CALL DURATION.....	9
INTERNAL CALL TRANSFER.....	9
THREE WAY CONVERSATION .....	10
USING THE ALPHANUMERICAL KEYPAD .....	10
USING THE MENU .....	11
CALLER IDENTIFICATION .....	11
LIST OF MISSED CALLS.....	11
ADDRESS BOOK .....	12
SECRET MODE ( TEMPORARY DEACTIVATION OF THE MICROPHONE ).....	14
LOCKING THE KEYPAD .....	14
EMERGENCY CALL ( BABY CALL ).....	14
<b><u>SETTINGS.....</u></b>	<b><u>16</u></b>
CHOOSING MENU LANGUAGE .....	16
ADJUSTING SPEAKER VOLUME .....	16
ADJUSTING THE RING VOLUME .....	16
CHOOSING THE RING MELODY .....	17
ACTIVATION / DEACTIVATION OF BLEEPS.....	17
NAMING HANDSETS .....	18
<b><u>USE WITH THE TOPCOM FREEPORT.....</u></b>	<b><u>19</u></b>
<b><u>TECHNICAL CHARACTERISTICS.....</u></b>	<b><u>20</u></b>
<b><u>WARRANTY.....</u></b>	<b><u>21</u></b>

# DESCRIPTION OF THE HANDSET


## HANDSET

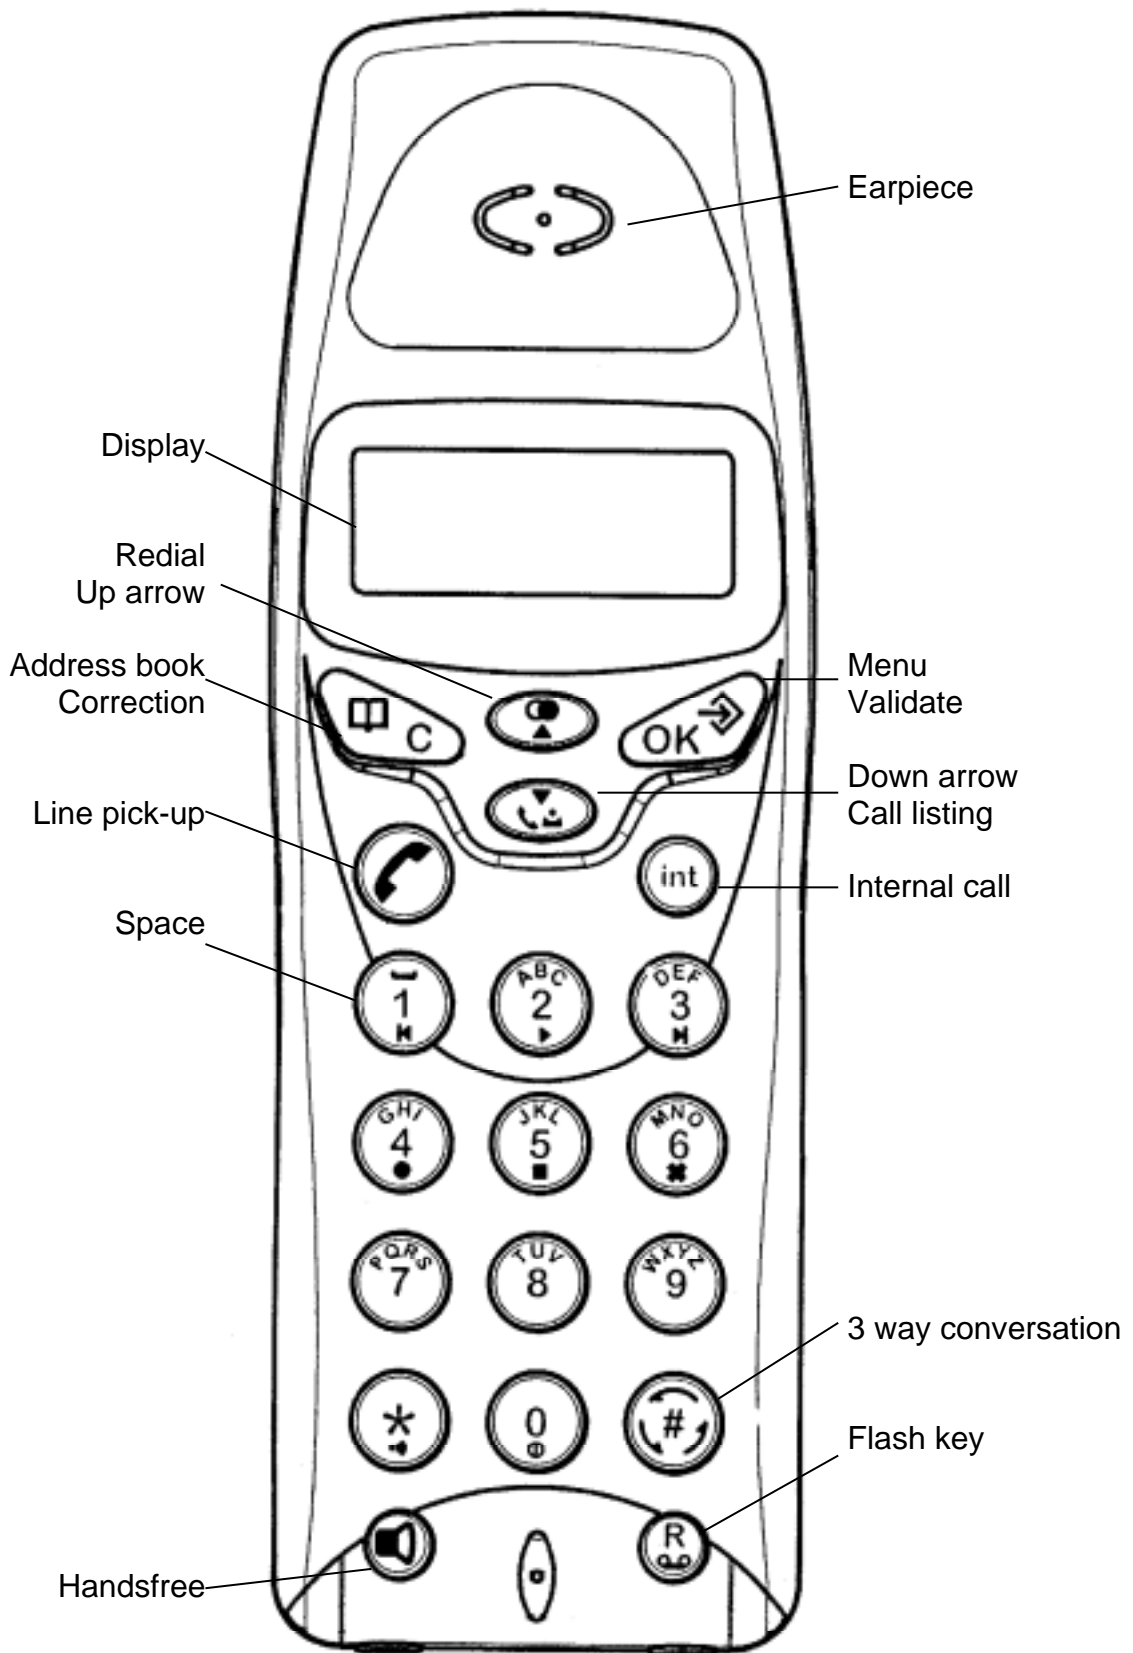

## DISPLAY

Icon line

 Character display line. (12 characters maximum)

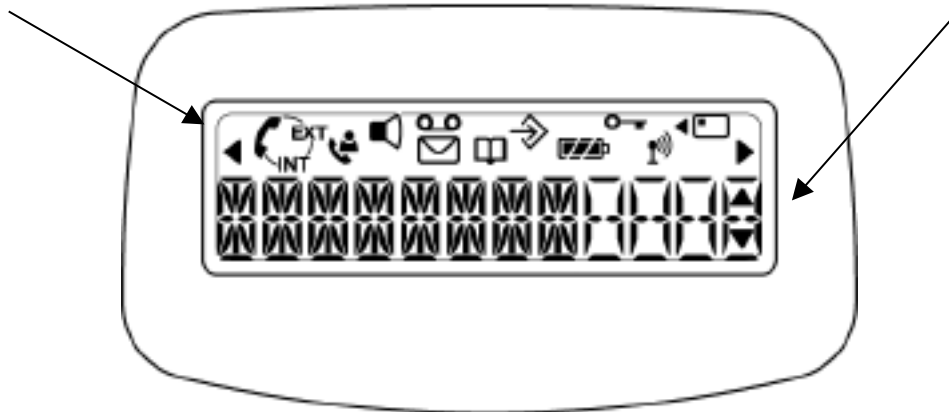

Each running operation has an associated icon

Icon :

Meaning :



You are on line.

EXT

You are having an external communication.

INT

You are having an internal communication.



You are in 3 way conversation.



Caller identification available /new numbers in call listing



Handsfree mode activated.



You are consulting your address book.



You are in the menu.



Rechargeable battery level indicator

1 segment: weak , 2 segments: medium, 3 segments: full



Handset keypad locked.




Base reception

The icon blinks when the reception is insufficient.

## RECHARGEABLE BATTERIES

 
To change or insert a rechargeable battery:

- 1 Slide the cover towards the bottom and then lift it up.
- 2 Insert the batteries respecting the (+ and -) polarity.
- 3 Replace the battery cover.

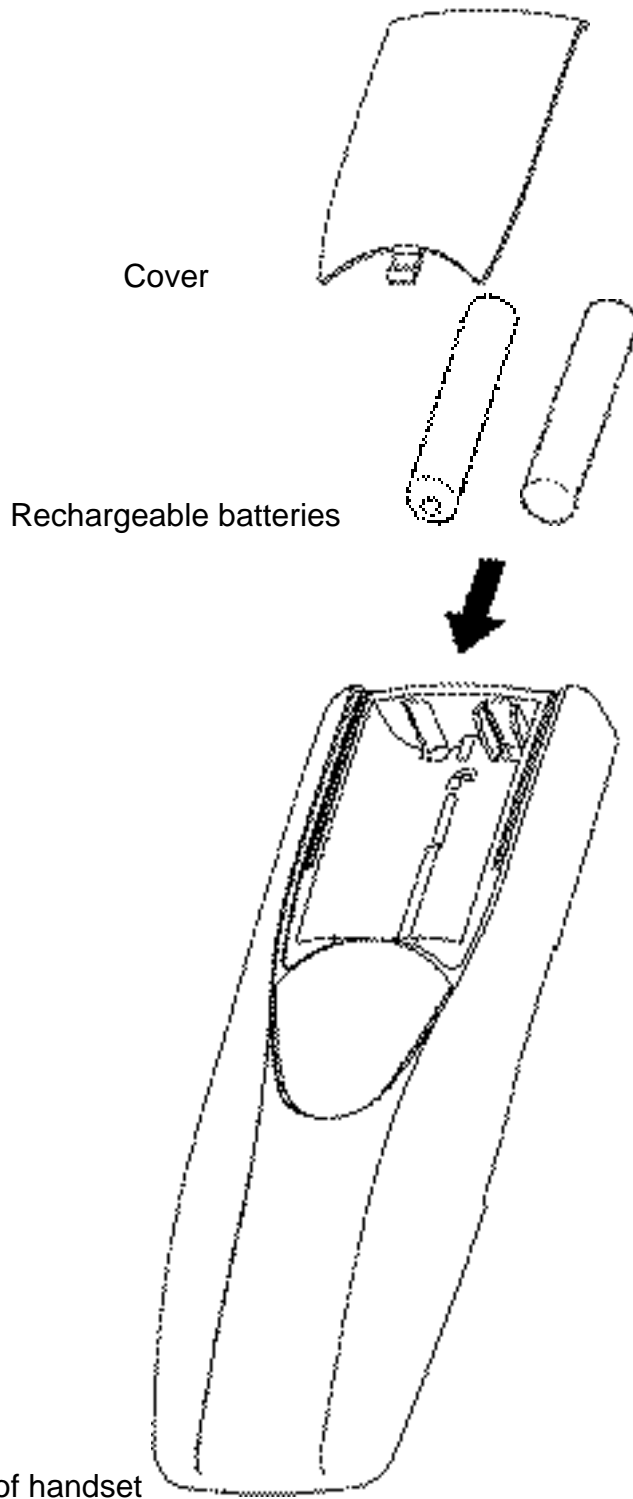

## ASSOCIATING THE HANDSET






---

The  icon and the text "NOT SUB" flashes on the display when the handset is not associated to the base. You have to associate a handset to a base, before you can use it.



### ASSOCIATION TO THE BUTLER 700 BASE




You have just bought an extra handset, and you wish to use it on the base of your telephone Butler 700.

The base can support a maximum of 5 handsets. If you already have 5 handsets, and you wish to change one of them, you must firstly delete a handset, then associate the new handset.

- 1 Put the base into "*association*" mode, by pressing and holding the key on the right side of the base for 4 seconds.
- 2 The base will then emit a bleep. It is now ready to be associated with a new handset, during the 90 seconds after pressing the button.
- 3 Enter the menu by pressing .
- 4 Select REGISTER.
- 5 Press .
- 6 Enter the base number for this handset, ( from 1 to 4 ). The flashing numbers are the numbers already used for other bases.
- 7 Press .
- 8 Enter the confidential code for the Butler 700 base (0000 by default ).
- 9 If the handset has located the base, it will display the base identification number. Validate the base association by pressing  or invalidate by pressing .
- 10 If the handset does not locate the base, it will return to the previous configuration after a few seconds. Try again by changing the base number and check that you are not in an environment where there is interference.






### ASSOCIATION TO THE TOPCOM FREEPORT BASE

- 1 Put the Freeport base into "*association*" mode, by removing and reconnecting the adapter from your Freeport.
- 2 The antenna LED blinks on the Freeport base. You now have 5 minutes to associate the handset.
- 3 Enter the menu of the Butler 700C by pressing .
- 4 Select REGISTER.
- 5 Press .

- 6 Enter the base number for this handset, ( from 1 to 4 ). The flashing numbers are the numbers already used for other bases.
- 7 Press .
- 8 Enter the confidential code of the Freeport 700 base (1111 by default).
- 9 If the handset has located the base, it will display the base identification number. Validate the base association by pressing   
or invalidate by pressing .
- 10 If the handset does not locate the base, it will return to the previous configuration after a few seconds. Try again by changing the base number and check if you are not in an environment where there is interference.

### **ASSOCIATION TO ANOTHER DECT BASE**

The DECT base has to be GAP compatible, otherwise you will not be able to associate the Butler 700C handset to this base.


- 1 Put the base in association mode. Refer to the user manual of your DECT base.
- 2 When the DECT base is in association mode, enter the menu of your Butler 700C by pressing .
- 3 Select REGISTER.
- 4 Press .
- 5 Enter the base number for this handset, ( from 1 to 4 ). The flashing numbers are the numbers already used for other bases.
- 6 Press .
- 7 Enter the confidential code for the DECT base. (Check the manual of the DECT base)
- 8 When the handset has located the base, it will display the base identification number. Validate the base association by pressing   
or invalidate by pressing .
- 9 If the handset does not locate the base, it will return to the previous configuration after a few seconds. Try again by changing the base number and check if you are not in an environment where there is interference.

## USING THE BUTLER 700C HANDSET

---

**ATTENTION** : How to use the handset depends on the base to which the handset has been associated. Some of the below mentioned functions will not be available because they are not supported by the DECT base. Especially the functions 'identification caller' and 'missed calls list' strongly depend on the base station. The following functions are for the handset that has been associated to the Topcom Butler 700 base.


### ACTIVATE/DEACTIVATE THE HANDSET


To save the rechargeable batteries of the handset, you can deactivate the handset by pressing and holding the  key for 1 second. Follow the same procedure to activate the handset. If you put the deactivated handset on the base station, it will be activated again automatically.

When the handset is deactivated :

- the display is empty.
- the handset can no longer receive calls
- the batteries are not being discharged.

### RECEIVING A CALL

When the handset rings, press  to answer. You are then connected to your correspondent. If the handset is lying on the base when the telephone starts to ring, you just need to pick up the handset and you are immediately connected to the line. You do not need to press any button.


When you press  when the telephone rings, the handset automatically changes to handsfree mode.


### MAKING AN EXTERNAL CALL

NORMAL NUMERATION :

- 1 Press .
- 2 Enter your correspondent's number.


PRENUMERATION :

Prenumeration allows you to correct a number as you dial using the  key.

- 3 Dial your correspondent's number.
- 4 Press .


### MAKING AN INTERNAL CALL

NORMAL NUMERATION :

- 1 Press .
- 2 Enter the number of the internal handset (1 to 5).




PRENUMERATION:

- 1 Enter the number of the internal handset (1 to 5) .
- 2 Press  .

## HANDSFREE MODE





You can converse with your correspondent without picking up the handset.



To activate or deactivate the handsfree mode, press the  key during a call.

To adjust the volume, refer to the chapter "Adjusting speaker volume".

## CALLING FROM THE ADDRESS BOOK

To call a correspondent whose name you have saved in the address book :

- 1 Press  to enter the address book.
- 2 Press the first letter of the name, the first name which starts with this letter or the nearest letter in the alphabet appears.
- 3 Go through the list of names with the  and  keys. The list scrolls down in an alphabetical order.
- 4 Press  to dial the number of the correspondent whose name is displayed.





To read the name before dialling, carry out steps 1 to 3 as mentioned above and press  . The number appears and you can modify it before dialling, using the  button.

## RECALL THE LAST 10 NUMBERS CALLED

Your telephone saves the 10 last calls you have made in the memory.

The correspondents called are identified by their telephone number or by their name if they appear in the address book.

To consult this list:

- 1 Press  .
- 2 Scroll through the calls with the up  and down  arrows.
- 3 To call the selected correspondent, simply press  when the telephone number or name is displayed.



## DISPLAY OF CALL DURATION


The communication duration is displayed after 20 seconds, in minutes - seconds, : "00-20"

If you press a key (0 - 9 ) during the conversation, the communication duration is reset to zero and reappears after 20 seconds. At the end of each call, the duration of communication is displayed for 5 seconds.

## INTERNAL CALL TRANSFER

When you wish to transfer an external call to another extension :




- 1 Press  during a conversation.
- 2 Select the number of the internal correspondent that you wish to call, the external caller is put on hold.
- 3 When the internal correspondent picks up, press  to hang up and transfer the call.

If the internal correspondent does not pick-up, press  again to reconnect to the external caller.

### THREE WAY CONVERSATION

You can converse simultaneously with an internal correspondent and an external correspondent.

When you are on line with an external correspondent :

- 1 Press .
- 2 Select the number of the internal correspondent that you wish to call.
- 3 When the internal correspondent answers, press and hold .
- 4 If the internal correspondent does not answer, press  again to reconnect to the external correspondent on-line.

### USING THE ALPHANUMERICAL KEYPAD

You can use the alphanumeric keypad to write text as well as figures. This is useful for entering a name into the address book, giving a name to a handset, ...

To select a letter, press the corresponding key as many times as necessary. For example to select an A, press 2 once, to select a B, press 2 twice and so on. To select A and then B consecutively, select an A, wait until the cursor moves on to the next character, then select a B.

To select an empty space, press 1.






To select a dash, press 1 twice

The keypad characters are as follows:

Keys	First press	Second press	Third press	Fourth press	Fifth press
1	space	-	1		
2	A	B	C	2	
3	D	E	F	3	
4	G	H	I	4	
5	J	K	L	5	
6	M	N	O	6	
7	P	Q	R	S	7
8	T	U	V	8	
9	W	X	Y	Z	9

## USING THE MENU

A wide range of telephone functions are accessible through a user friendly menu.

- 1 To enter the menu, press .
- 2 Scroll through the selections using the  and  keys. The arrow on the right of the display indicates that there are other possible selections to scroll through.
- 3 To validate a selection, press .
- 4 To return to the previous menu, press .


## CALLER IDENTIFICATION

Caller identification is only available if you have a subscription to this service. You can obtain this subscription from your telephone operator.

When you receive an external call, the caller's identity will appear on the display as the telephone rings.


You can therefore choose whether or not to answer the call.

If the network allows it, or if the name of the caller has been entered in the address book, the caller is identified by his or her name. When the caller's name is displayed,

press  to display his or her telephone number.

If he wants, the caller can hide his identity by calling a special number.


The caller's identity is replaced by the conversation duration after 20 seconds of communication. It is still possible to display the caller's identity after this time by

pressing  repeatedly for the name and number. If the number does not appear in the address book the operation " ADD " appears.






## LIST OF MISSED CALLS





In your absence, your telephone keeps a list in memory of the last 10 calls received that were not answered. The list is called « *missed calls list* ».

This function, like caller identification, is only available if your subscription to the telephone operator allows it. The correspondents that have called, are identified by their telephone number or name in the same way as in caller identification.

The presence of new and unanswered calls received is indicated by the flashing of a green light indicator on the base. The indicator flashes as many times as there are new calls. The  icon flashes on the display.

To consult the list of missed calls :

- 1 Press .
- 2 Scroll through the calls using the up  and down  arrows.
- 3 If you press , the telephone number and the number of calls received from this caller appear on the display. Press the  key again and you will see the time and date of the last call received.

- 4 Pressing  again will give you the option to put the telephone number in the address book or to erase it from the address book (press the down arrow).
- 5 If you wish to enter the number in the address book, you will be asked to enter the name.  
Note : when the number has already been entered in the address book, you will see the name of the caller and you can only delete it from the address book, not add it.
- 6 Press  to confirm or  to return to the previous menu.
- 7 To call back a correspondent, simply press the  key when the telephone number and name are displayed.

Remark : A beeping sound indicates the end or the beginning of the list.






## ADDRESS BOOK

The address book allows you to memorise the names and the telephone numbers of 50 correspondents. You can enter names of up to 8 characters length and numbers of up to 20 figures length.

To call a correspondent whose number you have memorised, refer to the section “*calling directly from address book*”.




To enter alphanumerical characters, refer to the section “*using the alphanumerical keypad*”.

### ADDING A NAME

- 1 Enter the menu by pressing .
- 2 Select PHONEBK .
- 3 Press .
- 4 Select ADD.
- 5 Press .
- 6 Enter the new name.
- 7 Press  to validate.
- 8 Enter the new telephone number.
- 9 Press  to validate.










*A double beep confirms the validation of your choice*

It is possible to automatically add a caller's name to the address book during a conversation if you have the caller identification service.


- 1 Press  to display the caller's number during the conversation.
- 2 Press , the text « ADD » appears.
- 3 Press  to validate.
- 4 Carry out steps 6 to 9 as mentioned above.

## MODIFY A NAME OR NUMBER

In order to modify a name or number in the address book:









- 1 Enter the menu by pressing .
- 2 Select PHONEBK.
- 3 Press .
- 4 Select MODIFY.
- 5 Press .
- 6 Move through the list of names with the  and  keys. The list scrolls down in alphabetical order.
- 7 Press  when you find the name to modify.
- 8 Use the  key to go back and enter the new name.
- 9 Press  to validate.
- 10 Enter the telephone number.
- 11 Press  to validate.

*A double bleep confirms the validation of your choice*

**Warning :** If you modify a telephone number in the address book when you consult the address book , the modification will be taken into account for one numeration only and will not be kept in the address book.

## DELETING A NAME FROM THE ADDRESS BOOK


To delete a name :


- 1 Enter the menu by pressing .
- 2 Select PHONEBK.
- 3 Press .
- 4 Select DELETE.
- 5 Press .
- 6 Move through the list of names using the  and  keys. The list scrolls down in alphabetical order.
- 7 Press  when you find the name you wish to delete.
- 8 The phone number is displayed, press .
- 9 "CONFIRM?" appears, press  to confirm.

*A double bleep confirms the validation of your choice*

## SECRET MODE ( TEMPORARY DEACTIVATION OF THE MICROPHONE )

It is possible to put an external correspondent on hold during a conversation.

Press  during the conversation, the microphone is then deactivated, the external correspondent is put on hold, you can talk freely without being heard by the correspondent.




Press  again to return to normal mode.

## LOCKING THE KEYPAD

Locking the keypad prevents you from dialling a number accidentally. This can be useful when there are small children.




When the keypad is locked, only the  key is available, all the other keys are locked.

### ACTIVATING THE KEYPAD LOCK

- 1 Enter the menu by pressing .
- 2 Select KEY LOCK.
- 3 Press .
- 4 Select ON.
- 5 Press  to validate.

*A double beep confirms the validation of your choice*

### DEACTIVATING THE KEYPAD LOCK



- 1 Enter the menu by pressing .
- 2 Select KEY LOCK.
- 3 Press .
- 4 Select OFF.
- 5 Press  to validate.



*A double beep confirms the validation of your choice*

## EMERGENCY CALL ( BABY CALL )

With emergency call you can dial a pre-programmed number simply by pressing a random key. This is useful for young children or telephone use in an emergency.




### NUMBER CHOICE

- 1 Enter the menu by pressing .
- 2 Select BABYCALL .
- 3 Press .
- 4 Select NUMBER?

- 5 Press  .
- 6 Enter the emergency number.
- 7 Press  to validate.

*A double beep confirms the validation of your choice*




#### ACTIVATE THE EMERGENCY NUMBER

- 1 Enter the menu by pressing  .
- 2 Select BABYCALL .
- 3 Press  .
- 4 Select ON.
- 5 Press  to validate.

*A double beep confirms the validation of your choice*

*Once the mode is activated, the word « BABYCALL » flashes on the screen of the handset*

#### DEACTIVATE THE EMERGENCY CALL MODE


- 1 Enter the menu by pressing  .
- 2 Select BABYCALL.
- 3 Press  .
- 4 Select OFF.
- 5 Press  to validate.


*A double beep confirms the validation of your choice*

## SETTINGS

---

### Note :





All settings have to be confirmed by pressing the  key. You will hear a double confirmation tone.

If you decide to cancel a certain setting and you don't want to save it, press the  key.

You will hear a double confirmation tone when the phone confirms all settings.

If the phone emits a long bleep, this means that the modification has not been accepted nor saved.





### CHOOSING MENU LANGUAGE

- 1 Enter the menu by pressing .
- 2 Select **HANDSET**.
- 3 Press .
- 4 Select **LANGUAGE**.
- 5 Press .
- 6 Select the language of choice.
- 7 Press  to validate.

*A double bleep confirms the validation of your choice*



### ADJUSTING SPEAKER VOLUME

The volume is identical for both the speaker and the handset loudspeaker.



- 1 Enter the menu by pressing .
- 2 Select **HANDSET**.
- 3 Press .
- 4 Select **EAR VOL**.
- 5 Press .
- 6 Select the desired volume (silence or 1 to 5).
- 7 Press .

*A double bleep confirms the validation of your choice*

### ADJUSTING THE RING VOLUME

- 1 Enter the menu by pressing .
- 2 Select **HANDSET**.
- 3 Press .







- 4 Select RING VOL .
- 5 Press  .
- 6 Select the desired volume (silence or 1 to 5).
- 7 Press  .

*A double bleep confirms the validation of your choice*

*A long bleep signifies that the modification has not been taken into account.*

## CHOOSING THE RING MELODY





### HANDSET MELODY, EXTERNAL CALL

- 1 Enter the menu by pressing  .
- 2 Select HANDSET.
- 3 Press  .
- 4 Select EXT RING.
- 5 Press  .
- 6 Select the melody of your choice ( 1 to 5 ).
- 7 Press  .

*A double bleep confirms the validation of your choice*

*A long bleep signifies that the modification has not been taken into account.*

### HANDSET MELODY, INTERNAL CALL

- 1 Enter the menu by pressing  .
- 2 Select HANDSET.
- 3 Press  .
- 4 Select INT RING.
- 5 Press  .
- 6 Select the melody of your choice ( 1 to 5 ).
- 7 Press  .


*A double bleep confirms the validation of your choice*





*A long bleep signifies that the modification has not been taken into account.*

## ACTIVATION / DEACTIVATION OF BLEEPS

You can choose whether you want the handset to emit bleeps or not while the keys are pressed, when the batteries are low, or when the handset is out of range of the base.

### KEYS

- 1 Enter the menu by pressing  .
- 2 Select HANDSET .

- 3 Press .
- 4 Select BEEP.
- 5 Press .
- 6 Select KEYTONE.
- 7 Press .
- 8 Select "ON" to activate "OFF" to deactivate.
- 9 Press .

*A double bleep confirms the validation of your choice*

#### LOW BATTERY




Proceed as before, but select "LOW BATT" instead of "KEYTONE".

#### HANDSET OUT OF RANGE



Proceed as before, but select "OUTRANGE" instead of "KEYTONE".

### **NAMING HANDSETS**

This function allows you to personalise each handset.

- 1 Enter the menu by pressing .
- 2 Select HANDSET .
- 3 Press .
- 4 Select NAME.
- 5 Enter the name.
- 6 Press  to validate.

*A double bleep confirms the validation of your choice*

While entering the name, press  to delete a character. Press and hold  to exit the menu without taking any modifications into account.



## USE WITH THE TOPCOM FREEPORT

---

First of all, associate the handset to the Freeport base as described earlier in this manual.



As soon as the association is completed, the handset automatically receives an internal number.

To know this internal number :

- 1 Press \*468# (\*INT#).
- 2 Press the  key.
- 3 The internal number of the handset to the Freeport base appears on the display.
- 4 Press the  key to end the connection.

For the operation of the other functions, check the manual of the Freeport base.

Remarks :

- An internal call : Press #, followed by the internal handset number and press the  key to start the internal communication. For example : #21  to call handset 21.
- Assigning an MSN number and call restrictions of the handset, have to be done via de PC software.

## TECHNICAL CHARACTERISTICS

---

- ◆ Standard : DECT ( **D**igital **E**nhanced **C**ordless **T**elecommunications )
- ◆ GAP ( **G**eneric **A**ccess **P**rofile )
- ◆ Frequency range: 1880 MHz to 1900 MHz
- ◆ Number of channels: 120 duplex channels
- ◆ Modulation: GFSK
- ◆ Speech coding: 32 kbit/s
- ◆ Emission power: 10 mW
- ◆ Range: 300 m in open space  
50 m maximum in a building
- ◆ Handset power supply: 2 rechargeable batteries AA, Ni-Cd 600mAh
- ◆ Handset autonomy: 150 hours in standby  
12 hours of communication
- ◆ Charge up time : 6-8 hours
- ◆ Normal conditions of use: +5°C to + 45°C
- ◆ Handset dimensions: length 16,5cm x width 5,5cm x height 3cm
- ◆ Weight of handset: 175 g including batteries

## WARRANTY

---

Warranty : 1 year  
Ask your dealer for your free swop warranty.

Attention : Do not forget to include your purchase invoice when you return the damaged device.

\*\*\*\*\*

**The equipment has been approved to 98/482/EG (TBR 21) for pan-European single terminal connection to the Public Switched Telephone Network (PSTN). However, due to differences between the individual PSTNs provided in different countries the approval does not, of itself, give an unconditional assurance of successful operation on every PSTN network termination point. Should you have problems, contact your dealer.**

This list will indicate the networks with which the equipment is designed to work and any notified networks with which the equipment may have interworking difficulties.

Network	Compatibility	Network	Compatibility
Austria	A	Luxembourg	A
Belgium	A	The Netherlands	A
Denmark	A	Portugal	A
Finland	A	Spain	A
France	A	Sweden	A
Germany	A	United Kingdom	A
Greece	A	Norway	A
Ireland	C	Switzerland	A
Italy	A		

A – equipment designed to work with country's network

B – equipment may have interworking difficulties with country's network

C – equipment not tested against compliance to country's network

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>