



**TOSHIBA**

**15V300PG**

**COLOUR TELEVISION**

**OWNER'S MANUAL**

## Contents

### SETTING UP

<b>Safety Precautions</b> – Some do's and don'ts for you to be aware of	3
<b>Installation and important information</b>	4
<b>The remote control</b> – an at-a-glance guide	5
<b>Connecting external equipment</b> – a guide to connecting equipment to the back of the television	6
<b>Connections and controls</b> – switching on the television, standby, using the side controls, headphone socket, connecting equipment to the side of the television	8
<b>Tuning the television</b> – initial tuning and programme sorting	9
<b>Tuning the television</b> – manual tuning	10
<b>Tuning the television</b> – APS, choosing a language	11

### CONTROLS AND FEATURES

<b>General controls</b> – time display, setting programme positions	12
<b>Stereo and bilingual transmissions</b> – stereo/mono or dual language broadcasts	12
<b>Child lock</b> – disabling the buttons on the television	12
<b>Sleep timer</b> – setting the television to turn off	12
<b>Picture format</b>	13
<b>Picture controls</b> – picture format, picture mode (contrast, brightness, sharpness, colour, hue) colour temperature, room lighting	13
<b>Sound controls</b> – volume, sound mute, equalizer, balance, AVL, effect	14
<b>Input selection and AV connections</b> – input and output sockets for connected equipment	15
<b>PC Mode</b>	15
<b>PC Input Display Modes</b>	16
	17

### TEXT SERVICES

<b>Text</b> – setting up and general information, control buttons	18
---	----

### PROBLEM SOLVING

<b>Questions and Answers</b> – answers to some of the more common queries	19
<b>Notes</b> – for your own records	20

### INFORMATION

<b>Specifications and Accessories</b> – technical information about the television, supplied accessories	
<b>15V300PG</b>	22
<b>Declarations</b>	23

## Safety Precautions

This equipment has been designed and manufactured to meet international safety standards but, like any electrical equipment, care must be taken to obtain the best results and for safety to be assured. Please read the points below for your own safety. They are of a general nature, intended to help with all electronic consumer products and some points may not apply to the goods you have just purchased.

### Air Circulation

Leave more than 10cm clearance around the television to allow adequate ventilation. This will prevent overheating and possible damage to the television. Dusty places should also be avoided.

### Heat Damage

Damage may occur if the television is left in direct sunlight or near a heater. Avoid places subject to extremely high temperatures or humidity, or locations where the temperature is likely to fall below 5°C (41°F).

### Mains Supply

The set should be operated only from a 220-240 V AC 50 Hz outlet. DO ensure that the television is not standing on the mains lead. DO NOT cut off the mains plug from this equipment, this incorporates a special Radio Interference Filter, the removal of which will impair its performance. It should only be replaced by a correctly rated and approved type and the fuse cover must be refitted. IF IN DOUBT PLEASE CONSULT A COMPETENT ELECTRICIAN.

### Do

**DO** read the operating instructions before you attempt to use the equipment.

**DO** ensure that all electrical connections (including the mains plug, extension leads and interconnections between pieces of equipment) are properly made and in accordance with the manufacturers' instructions. Switch off and withdraw the mains plug before making or changing connections.

**DO** consult your dealer if you are ever in doubt about the installation, operation or safety of your equipment.

**DO** be careful with glass panels or doors on equipment.

### Do not

**DON'T** remove any fixed cover as this may expose dangerous voltages.

**DON'T** obstruct the ventilation openings of the equipment with items such as newspapers, tablecloths, curtains, etc. Overheating will cause damage and shorten the life of the equipment.

**DON'T** allow electrical equipment to be exposed to dripping or splashing or objects filled with liquids, such as vases, to be placed on the equipment.

**DON'T** place hot objects or naked flame sources, such as lighted candles or nightlights on, or close to equipment. High temperatures can melt plastic and lead to fires.

**DON'T** use makeshift stands and NEVER fix legs with wood screws. To ensure complete safety, always fit the manufacturers' approved stand, bracket or legs with the fixings provided according to the instructions.

**DON'T** leave equipment switched on when it is unattended, unless it is specifically stated that it is designed for unattended operation or has a standby mode. Switch off by withdrawing the plug, make sure your family know how to do this. Special arrangements may need to be made for people with disabilities.

**DON'T** continue to operate the equipment if you are in any doubt about it working normally, or it is damaged in any way - switch off, withdraw the mains plug and consult your dealer.

WARNING - excessive sound pressure from earphones or headphones can cause hearing loss.

**ABOVE ALL - NEVER let anyone, especially children, push or hit the screen, push anything into holes, slots or any other openings in the case.**

**NEVER guess or take chances with electrical equipment of any kind - it is better to be safe than sorry.**

**THE MAINS SOCKET OUTLET IS USED AS A DISCONNECTING DEVICE AND THEREFORE SHOULD BE READILY OPERABLE.**


# Installation and important information

## Where to install

Locate the television away from direct sunlight and strong lights; soft, indirect lighting is recommended for comfortable viewing. Use curtains or blinds to prevent direct sunlight falling on the screen.

Place on a sturdy platform, the mounting surface should be flat and steady. It **must** be secured to the wall with a sturdy tie using the clip on the back of the television, this will prevent it from falling over.

Make sure the television is located in a position where it cannot be pushed or hit by objects and that small items cannot be inserted into slots or openings in the case.

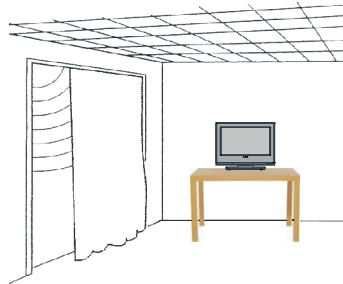

## Please take note

### EXCLUSION CLAUSE

Toshiba shall under no circumstances be liable for loss and/or damage to the product caused by:

- i) fire;
- ii) earthquake;
- iii) accidental damage;
- iv) intentional misuse of the product;
- v) use of the product in improper conditions;
- vi) loss and/or damage caused to the product whilst in the possession of a third party;
- vii) any damage or loss caused as a result of the owner's failure and/or neglect to follow the instructions set out in the owner's manual;
- viii) any loss or damage caused directly as a result of misuse or malfunction of the product when used simultaneously with associated equipment;


Furthermore, under no circumstances shall Toshiba be liable for any consequential loss and/or damage including but not limited to the following, loss of profit, interruption of business, the loss of recorded data whether caused during normal operation or misuse of the product.

*NOTE: A Toshiba wall bracket or stand, where available, must be used. If a non Toshiba wall bracket or stand is used the products' BEAB approval will become void and the equipment is then used at the consumers own risk*


If stationary images generated by text services, channel identification logos, computer displays, video games, on screen menus, etc. are left on the television screen for any length of time they could become conspicuous, it is always advisable to reduce both the brightness and contrast settings.

# The remote control

Simple at-a-glance reference of your remote control.

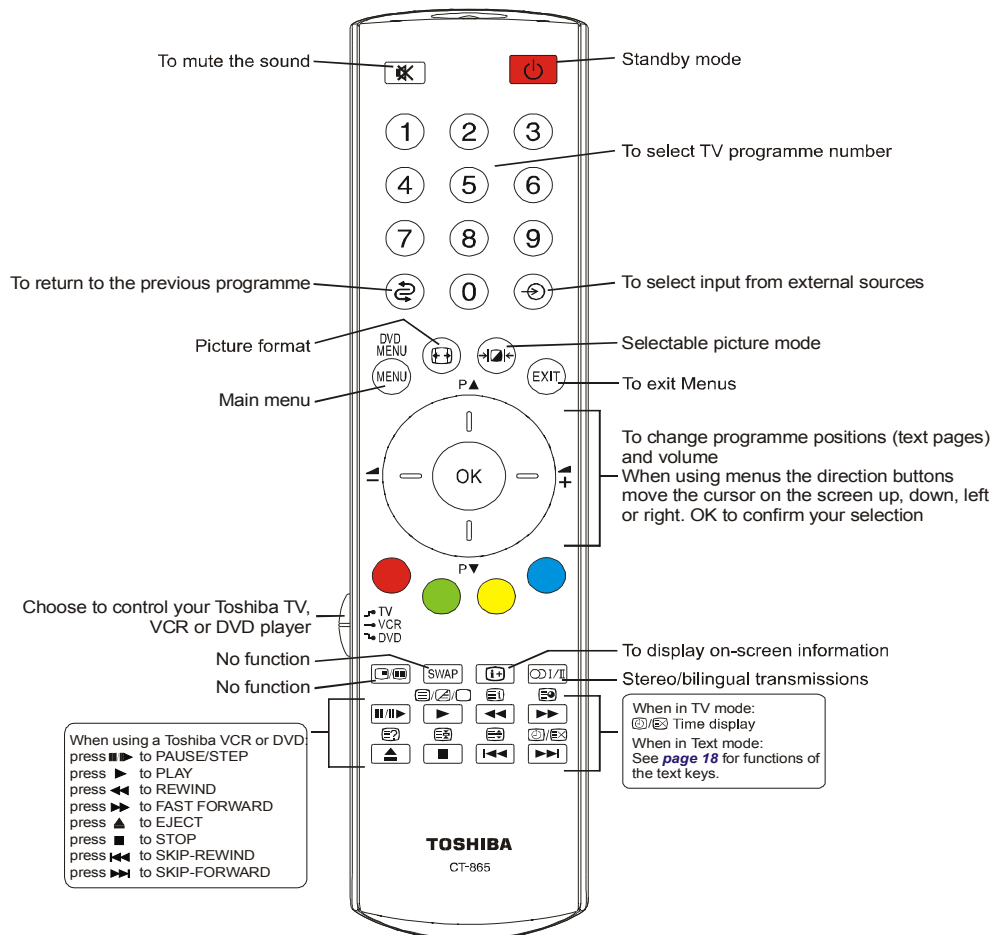

## Inserting batteries and effective range of the remote

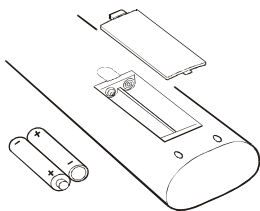

Remove the back cover to reveal the battery compartment and make sure the batteries are inserted the right way round. Suitable battery types for this remote are AAA, IEC R03 1.5V.


Do not combine a used, old battery with a new one or mix battery types. Remove dead batteries immediately to prevent acid from leaking into the battery compartment. Dispose of them in a designated disposal area.

**Warning:** Batteries must not be exposed to excessive heat such as sunshine, fire or the like.

The performance of the remote control will deteriorate beyond a distance of five metres or outside an angle of 30 degrees from the centre of the television. If the operating range becomes reduced the batteries may need replacing.

# Connecting external equipment

Before connecting any external equipment, disconnect from the main power.

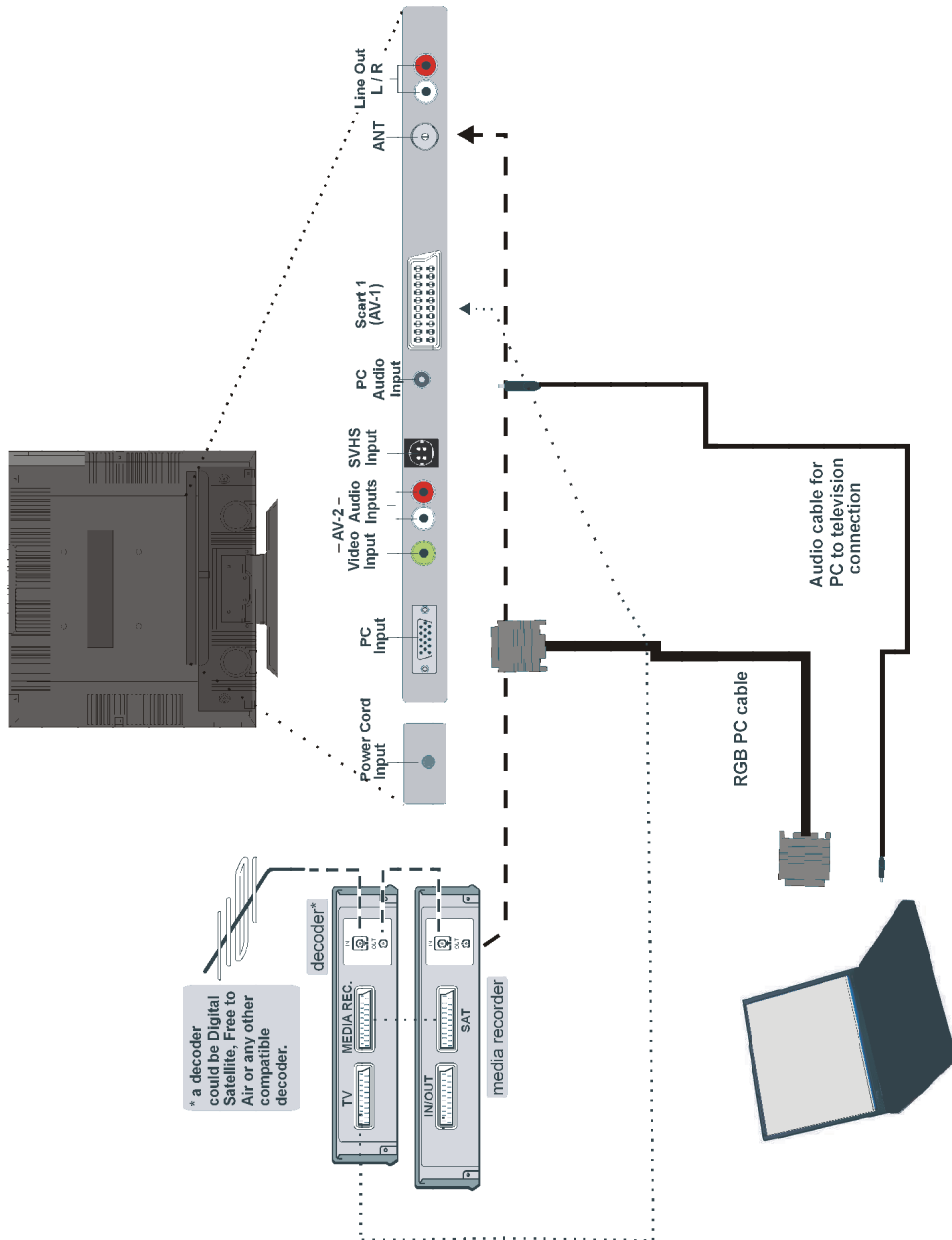

## Connecting external equipment continued,

### Aerial cables: — — — — —

Connect the aerial to the socket on the rear of the television. If you use a decoder and/or a media recorder it is essential that the aerial cable is connected through the decoder and/or through the media recorder to the television.


### SCART leads: . . . . .

Connect the media recorder **IN/OUT** socket to the television. Connect the decoder **TV** socket to the television. Connect the media recorder **SAT** socket to the decoder **MEDIA RECORDER** socket.

Before running **APS (AUTO PROGRAMMING SYSTEM)** put your decoder and media recorder to **Standby**.

A wide variety of external equipment can be connected to the back of the television, therefore the relevant owners manuals for *all* additional equipment *must* be referred to.

If connecting S-VIDEO equipment, set the **INPUT** for **S-VIDEO**. See **page 15**.


If the television automatically switches over to monitor external equipment, return to normal television by pressing the desired programme position button. To recall external equipment, press  to select between **TV**, **EXT1**, **EXT2**, **S-Video** or **PC RGB**.

### Connecting the PC via PC input

- Power off both computer and TV before making any connections.
- Connect the PC cable to the PC input of your TV and to the 15-pin connector on the rear of your computer.
- Tighten the screws on the plugs until the connectors are fastened securely.
- For PC sound, use stereo jack socket located at the rear side of the TV.

## Connections and controls

Whilst all the necessary adjustments and controls for the television are made using the remote control, the buttons on the top of the television may be used for some functions.

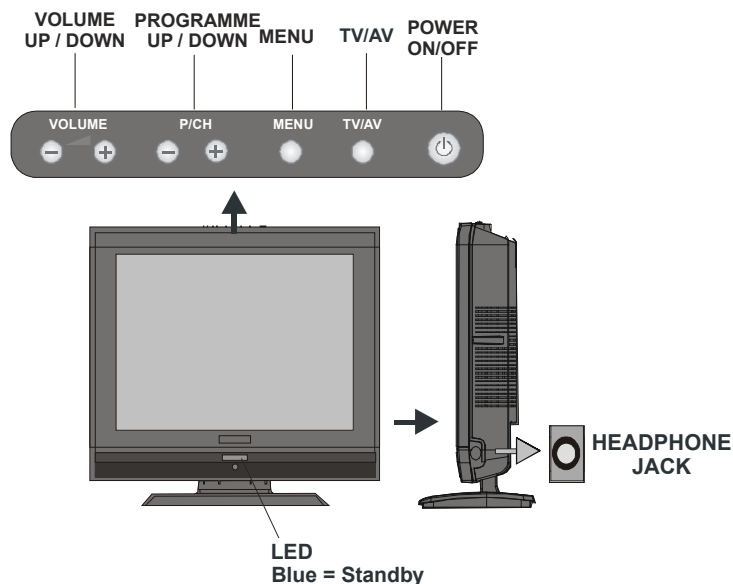

### Switching on

If the standby LED is unlit, connect the mains plug to the mains outlet. Press the Power button to switch the television into standby. The blue LED will light.

To view the television, press or any of the number buttons on the remote control, or the **P+** / **P-** buttons on the TV. The blue LED will turn off and the picture will appear after a few seconds.

To put the television into standby, press on the remote control, the blue LED will light.

### Using the remote control

Press the **MENU** button on the remote control to see the menus.

In **TV** mode the menu appears as a group of icons each for a menu option. Press the **Up** or **Down** button to select a topic.

To use the options press the **Right** or **OK** buttons on the remote control to select. Use **Up** or **Down** buttons to select the required choice. Follow the on screen instructions. The functions of each menu are described in detail throughout the manual.

### Using the controls and connections

Using the control buttons on the top of the TV:

- To alter the volume press **+** **-**.
- To alter the programme position press **▲** **▼** on the top of the TV.
- Press **MENU** and **+** **-** and **▲** **▼** to control the menu options.
- Press **MENU** to finish.

When connecting mono sound equipment to **EXT2 (BACK-AV)**, connect the audio output of the equipment to the L or R socket on the television, then press to select Dual I for the left mono, Dual II for the right mono, or stereo for mono through both left and right speakers.

To select the Input, press until **EXT2** is highlighted in **SOURCE** menu as described on **page 15**. The television will automatically sense the type of signal.


*Please always refer to the owner's manual of the equipment to be connected for full details.*




## Initial Tuning and programme sorting

Before switching on the television put your decoder and media recorder to **Standby** if they are connected and ensure the aerial is connected to your television. To set up the television use the buttons on the remote control as detailed on *page 5*.

- 1 Connect the mains plug and switch the TV into standby using the top Power button. Press any numbered or standby button on the remote control, the A.P.S. screen will appear. This screen will appear the first time that the television is switched on and each time the television is reset.

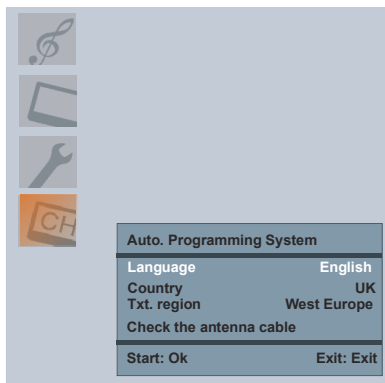

- 2 Use the Up or Down button to highlight the **Language** and **Country** items. Press the Left or Right button to adjust the highlighted item. Select Txt. region item by pressing the Up or Down buttons. Use Left or Right button to set Txt. region. Then press **OK** button to start tuning.
- 3 The television will start to search for available stations.

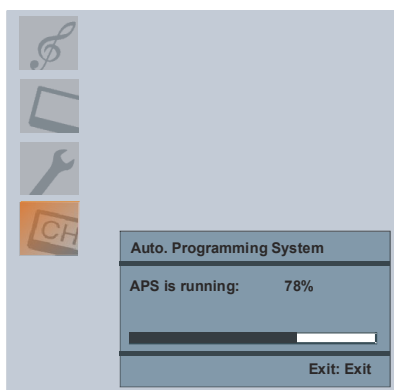

*You must allow the television to complete the search.*

When the search is complete the television will automatically select programme position 1. This may not be a clear picture or the signal may be weak, so the station order can be changed using **program table** which will appear on the screen.

Program Table		P01
P01	BBC 1	P11 .....
P02	C 04	P12 .....
P03	.....	P13 .....
P04	.....	P14 .....
P05	.....	P15 .....
P06	.....	P16 .....
P07	.....	P17 .....
P08	.....	P18 .....
P09	.....	P19 .....
P10	.....	P20 .....

Delete	Move
Name	A.P.S

Exit: Exit

- 4 With the list of stations now showing use the Up or Down button to highlight the station you want to move and press the **GREEN** button.
- 5 Use the Up or Down button to move through the list to the preferred position, as you do so the other stations will move to make room, then press the **GREEN** button again. The selected station will be moved to the new position.

Repeat as necessary, then press **EXIT**.

If the television cannot be connected to a media recorder/decoder with a SCART lead or if a station on another **system** is required, a programme position can be manually tuned in (see page 10).


# Manual tuning

The television can be tuned-in manually using **INSTALL**. For example: if the television cannot be connected to a media recorder/decoder with a SCART lead or to tune-in a station on another **System**.

## Manual tuning

To allocate a programme position on the television for a decoder and media recorder: turn the decoder on, insert a pre-recorded film into the media recorder and press **PLAY**, then manually tune.

- 1 Press **MENU** and using the **Up** or **Down** button select **INSTALL** menu. By pressing **Up** or **Down** button, select **Programming** option and press **Right** button.
- 2 Using the **Down** button select **Programme** and key in the programme position to be tuned with the number buttons, we suggest *Programme 0* for a media recorder.

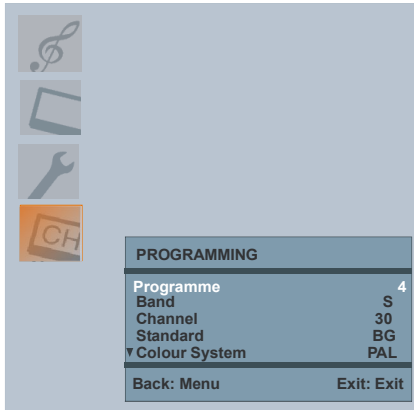

- 3 Use the **Down** button to select **Search** then press the **Left** or **Right** button to search. The television will begin searching for channels.
- 4 Each signal will show on the television, if it is not your media recorder press the **Left** or **Right** button to re-start the search.
- 5 When your media recorder signal is found, save the selection by pressing the **Down** button until **Store** is highlighted, then press the **Left/Right** or **OK** button to save.

Repeat for each *programme position* to be tuned then press **EXIT** to finish.

# APS, choosing a language

## APS (AUTOMATIC PROGRAMMING SYSTEM)

When the **APS (AUTOMATIC PROGRAMMING SYSTEM)** feature is selected all channels and settings will be lost, the television will return to factory settings and then re-tune.

- 1 Press **MENU** and using the Up or Down button select **INSTALL** menu. By using Up or Down buttons, select **PROGRAM TABLE** and press Right button.

Program Table		P01
P01	BBC 1	P11 .....
P02	C 04	P12 .....
P03	.....	P13 .....
P04	.....	P14 .....
P05	.....	P15 .....
P06	.....	P16 .....
P07	.....	P17 .....
P08	.....	P18 .....
P09	.....	P19 .....
P10	.....	P20 .....


Delete	Move
Name	A.P.S

Exit: Exit

- 2 The **PROGRAMMING** screen will appear on the screen. Press the **BLUE** button to select **APS**.

Auto. Programming System	
Country	UK
All prestored programs will be deleted	
Start: Ok	Exit: Exit
Back: Menu	

- 3 Press the Left or Right button to set the country.
- 4 Press the **EXIT** button to cancel **APS** or **OK** button to start.

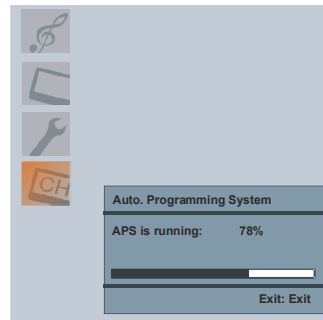

**You must allow the television to complete the search.**

When the search is complete the television will automatically select programme position 1. This may not be a clear picture or the signal may be weak, so the station order can be changed using **program table** which will appear on the screen.

- 5 Press **EXIT** to finish.

## Choosing a language

The **Language** feature allows the menus to be shown in a variety of languages.

- 1 Press **MENU** and using the **Up** or **Down** buttons, select the **Feature** menu.
- 2 Press the **Down** button to highlight **Language**, then use the **Left** or **Right** button to select the required language.

FEATURES	
Sleep Timer	Off
Language	English
Child Lock	Off
Menu Colour	Gray
Favorite Mode	Off
Back:Menu	Exit: Exit

# General controls, time display, stereo/bilingual transmissions, child lock, sleep timer

## Selecting programme positions

To select a programme position use the numbered buttons on the remote control. Programme positions can also be selected using P▲ and P▼ buttons on the remote control and the top of the TV. Press **12** to display the on-screen information i.e. programme position, stereo/mono signal and picture format. To revert to the previous programme position press **↶**.

## The Time Display

*The time display facility allows the current (text service) time to be seen on the television screen.*

Press **⌚/☒** whilst watching a normal television broadcast to see a time display from the broadcaster.

## Stereo and Bilingual transmissions

*If stereo or dual language broadcasts are transmitted the word Stereo or Dual will appear on the screen each time programme positions are changed, disappearing after a few seconds. If the broadcast is not in stereo the word Mono will appear.*


**Stereo...** Press **⊞/⊟** to select **Stereo** or **Mono**.

**Bilingual...** Bilingual transmissions are rare. If they are transmitted the word **Dual** will display. Choose the required programme number and if the word **Dual** appears press **⊞/⊟** to select **Dual 1** or **Dual 2**.

## Child lock

**CHILD LOCK** disables the buttons on the top of the television. All buttons on the remote control can still be used.

- 1 Press **MENU** and using the Up or Down button, select the **FEATURE** menu.
- 2 Press the Down button to choose **Child Lock** and press the Left or Right button to turn it on or off. Press **OK** button to finish.

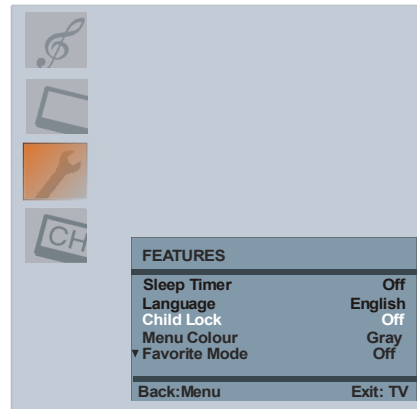


When **Child Lock** is selected, a reminder will appear when any of the top buttons are pressed. Once the television has been switched off it can **ONLY** be brought out of standby using the remote control.

## Sleep timer


*The television can be set to turn itself OFF after a certain time.*

- 1 Press **MENU** and **^** or **v** to select **Features**. Then press **>** or **OK** to enter the menu.
- 2 To set the number of minutes in which the television will turn off press **<** or **>**. This will increase or decrease in steps of 10 minutes.

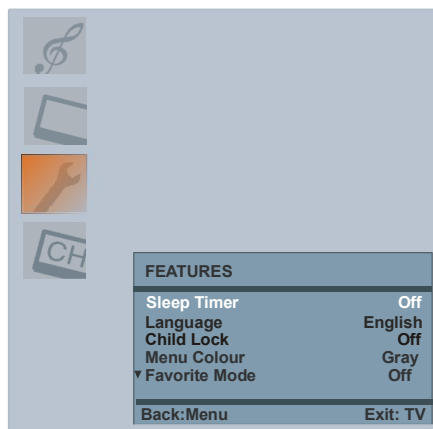


# Picture controls — picture format, picture mode, hue, colour temperature, room lighting

## Picture format

Depending on the type of broadcast being transmitted, programmes can be viewed in a number of formats. Press the  button repeatedly to select between **Auto**, **Wide**, or **4:3**.


**Note:** When **Auto** is selected the format being displayed is determined by the picture being broadcast.
 
## Picture mode

This television offers the choice of personalising the picture style. Press  to view the different styles available:

**MANUAL, BRIGHT, STANDARD and SOFT.**

- 1 Select the **PICTURE** option from the main menu.

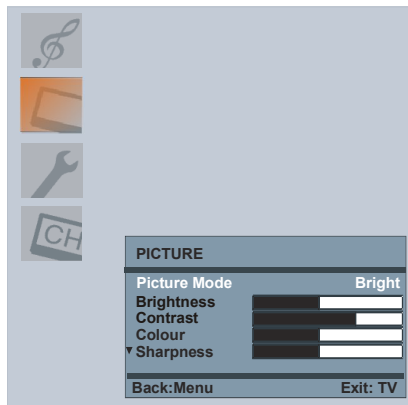


- 2 Press the **Down** button to highlight **Picture Mode** and then **Right** button to select a picture style.
- 3 When using Manual picture mode, use the **Up** and **Down** buttons to select **Contrast**, **Brightness**, **Sharpness** and **Colour**, then **Left** and **Right** buttons to adjust to suit personal taste.
- 4 Press the **Down** button and select **Reset** to reset the adjustments to factory default settings.

## Hue

*This item is displayed in PICTURE menu when the TV receives an NTSC signal.*

- 1 In the **PICTURE** menu press the Down button until **Hue** is highlighted.

- 2 Press the Left and Right buttons to adjust **Hue** to suit your preference.
- 3 Press **OK** to store the settings.

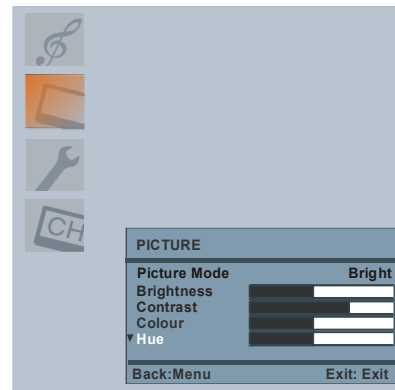

## Colour Temperature

**Colour Temperature** increases the 'warmth' or 'coolness' of a picture by increasing the red or blue tint.

- 1 In the **PICTURE** menu press the Down button until **Colour Temp** is highlighted.
- 2 Press the Left and Right buttons to select between **NORMAL**, **WARM** and **COOL** to suit your preference.
- 3 Press OK to store the settings.

## Room Lighting

**Room Lighting** adjusts the screen lighting according to your selection.

- 1 In the **PICTURE** menu press the Down button until **Room Lighting** is highlighted.
- 2 Press the Left and Right buttons to select between **Bright**, **Movie** or **Normal**. The differences may not always be noticeable.
- 3 Press **OK** to store the settings.

# Sound controls — volume, sound mute, equalizer, balance, AVL, effect

## Sound Controls

### Volume

Press  $\uparrow$  or  $\downarrow$  on the remote control or using the top buttons on the TV to adjust the volume.


### Sound Mute

Press  $\times$  on the remote control once to turn the sound off and again to cancel.


## Equalizer

The **Equalizer** feature has a number of sound settings to select from; **Flat**, **Speech**, **Music**, **Personal** and **Jazz**. These settings are all preset and cannot be altered. The **Personal** setting can be altered and stored to suit personal preference.

- 1 Select the **SOUND** option from the main menu.

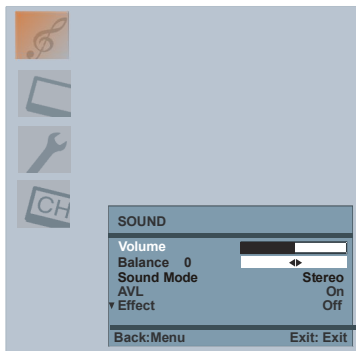

- 2 Use the **Down** button to highlight **Equalizer** then press the **Right** button to select mode.

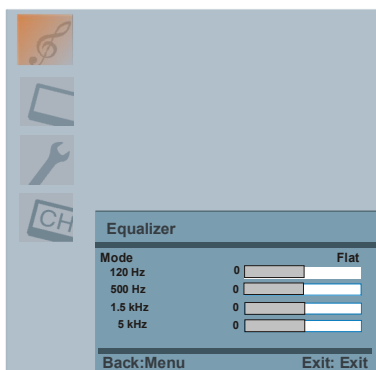

- 3 Using the **Up** and **Down** buttons select a frequency and then **Left** and **Right** buttons to adjust to suit personal taste. Note that user mode settings are stored automatically. Press **OK** to store the settings.

- 4 Press **EXIT** to return to TV.

## Sound Balance

- 1 Press the **Right** button to select the **SOUND** option from the main menu.

- 2 Press the **Down** button to highlight **Balance** and **Left** or **Right** button to adjust the settings. Press **OK** to store the settings.

- 3 Press **EXIT** to finish.

## AVL - Auto Volume Limiter

**AVL** limits high volume levels and prevents the extreme changes in volume that can occur when channels are changed or a programme switches to a commercial.

- 1 In the **SOUND** menu press the **Down** button to highlight **AVL**.

- 2 Use the **Left** or **Right** button to turn **AVL** on or off. Press **OK** to store the settings.

## Effect

**Effect** creates a synthetic sound effect for movies and television shows recorded in mono.

- 1 In the **SOUND** menu press the **Down** button to highlight **Effect**.

 
- 2 Use the **Left** or **Right** button to turn **Effect** on or off. Press **OK** to store the settings.


## Input selection, AV connections

See **page 6 and 7** for a clear view of the back connection recommendations, and **page 8** for the side connections.


### Input selection

Use the Input Selection if the television does not switch over automatically.

- 1 Press the external source selection button  to select an input from the menu displayed.

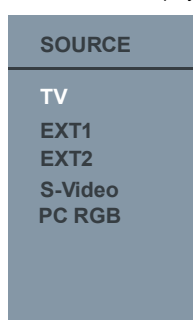

 Available source options are; **TV, EXT1, EXT2, S-VIDEO,** or **PC RGB.**

- 2 Press the  button on the remote control, or the TV/AV button on the TV until the required input is highlighted. Either wait or press **OK** to select.


# PC Mode

PC Picture Position and PC Picture menus are described below. The other menu items are identical to TV mode menus. Please see the previous sections. For connections please refer to **page 6**.

## Autoposition

If you shift the picture horizontally or vertically to an unwanted position, use this item to put the picture into correct place automatically.

- 1 Select the **GEOMETRY** option from the main menu.

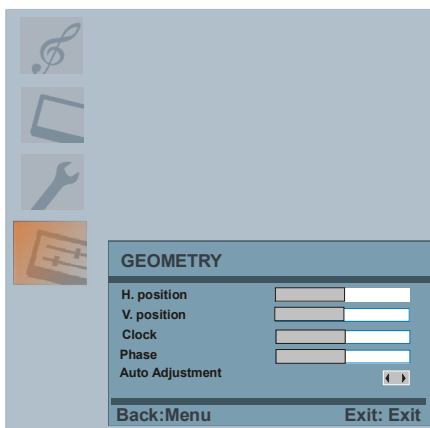

- 2 Press the **Down** button to highlight **Autoposition** and then press the **Right** button.

## H Position

**H (Horizontal) Position** shifts the image horizontally to right hand side or left hand side of the screen.

- 1 In the **GEOMETRY** menu press the **Down** button until **H Position** is highlighted.
- 2 Press the **Left** or **Right** button to adjust the value.

## V Position

**V (Vertical) Position** shifts the image vertically towards the top or bottom of the screen.

- 1 In the **GEOMETRY** menu press the **Down** button until **V Position** is highlighted.
- 2 Press the **Left** or **Right** button to adjust the value.

## Clock

**Clock** adjustment corrects interference that appear as vertical banding in dot intensive presentations like spreadsheets or paragraphs or text in smaller fonts.


- 1 In the **GEOMETRY** menu press the **Down** button until **Dot Clock** is highlighted.
- 2 Press the **Left** or **Right** button to adjust the value.

## Phase

Depending on the resolution and scan frequency that you input to the TV Set, you may see a hazy or noisy picture on the screen. In such a case you can use this item to get a clear picture by trial and error method.

- 1 In the **GEOMETRY** menu press the **Down** button until **Phase** is highlighted.
- 2 Press the **Left** or **Right** button to adjust the value.

## PC Picture controls

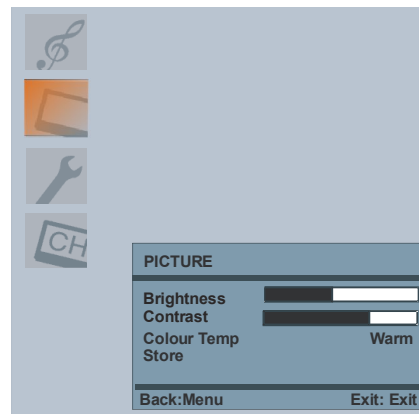

**Brightness**, **Contrast** and **Colour Temperature** adjustments in this menu are identical to adjustments defined in TV picture menu.




## PC Input Display Modes

Mode	Resolution		Frequency (Hz)	
	Horizontal	Vertical		
1	640	480	60	IBM, VGA
2	640	480	72	VESA
3	800	600	56	VESA
4	800	600	60	VESA
5	800	600	72	VESA
6	1024	768	60	VESA
7	1024	768	70	VESA

# Text services

Before using the text services the required language region must be chosen.

- 1 Select **Txt. region** from the **INSTALL** menu.
- 2 Press the Left or Right button to choose the required language region.

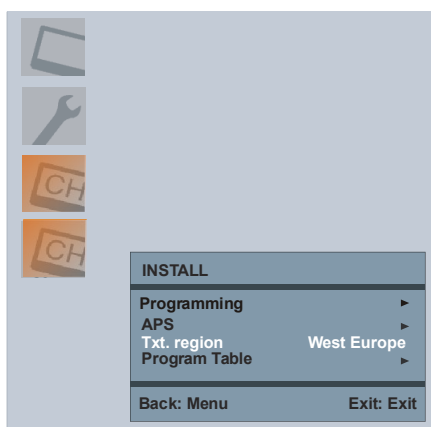

- 3 After the teletext language is selected, press EXIT.

The Text button:

To view text services press . Press again to superimpose text over a normal broadcast picture. Press again to return to normal viewing. Programmes cannot be changed until text is cancelled.

The first text page shown will be the *initial* page.

Any text page can be accessed by entering the 3 digit page number using the numbered buttons, pressing the coloured buttons or pressing P▲ to advance to the next page and P▼ to go back to the previous page.

Subtitles are available on page 888.

Four coloured titles will appear at the base of the screen. To access one of the four given subjects, press the relevant coloured button on the remote control.

For further information on your particular text system(s), see the broadcast text index page or, consult your local Toshiba dealer.

Below is a guide to the functions of the remote control text buttons.

## To display an initial page:

Press to access an initial page. The one displayed is dependant on the broadcaster.

## To access sub-pages:

If a text page has sub-pages, press and enter the subpage numbers 01,02,03 etc. which can be selected using **RED** or **GREEN** buttons on the remote control. The subpage selection is displayed at the bottom of the text page.

## To reveal concealed text:

To discover the solutions on quiz and joke pages press the button.

## To hold a wanted page:

At times it is convenient to hold a page of text. Press and will appear in the top left of the screen. The page will be held on screen until the button is pressed again.

## To enlarge the text display size:

Press once to enlarge the top half of the page, press again to enlarge the bottom half of the page. Press again to revert to normal size.

## To select a page whilst viewing a normal page:

Enter the page number then press , a normal picture will be displayed. The television will indicate when the page is present by displaying the page number at the top of the screen. Press to view the page.

## Questions and Answers

Below are the answers to some of the most common queries.  
For more information go to [www.toshiba.co.uk](http://www.toshiba.co.uk)

### **Q** Why is there no sound or picture?

**A** Check the mains switch is on and check all connections.  
Check the television is not in standby mode.


### **Q** Why is there a picture but no sound?

**A** Check the volume has not been turned down or that sound mute has not been selected.

### **Q** What can cause a poor picture?

**A** Interference or a weak signal. Try a different television station.

### **Q** Why doesn't the video/DVD being played show on screen?

**A** Make sure the VCR or DVD player is connected to the television as shown on page 6, then select the correct input by pressing 

### **Q** Why is the VCR/DVD picture in black and white?

**A** Check the correct **input** has been chosen, **S-VIDEO** or **AV**. See **AV connections**.

### **Q** Why is there a good video picture but no sound?

**A** Check the SCART lead connection.

### **Q** Why doesn't the remote control work?

**A** Check the batteries aren't dead or inserted incorrectly.

### **Q** Why don't the controls on the right side of the television work?

**A** Check that **CHILD LOCK** is not selected.

### **Q** Why is the sound only coming from one speaker when stereo sound is selected?

**A** Check that the balance in the **SOUND** menu hasn't been set to one side.

### **Q** Why are there problems with text service?

**A** Good performance of text depends on a good strong broadcast signal. This normally requires a roof or loft aerial. If the text is unreadable or garbled, check the aerial. Go to the *main index* page of the text service and look for the *User Guide*.

#### **Cleaning the screen and cabinet...**

Turn off the power, clean the screen and cabinet with a soft, dry cloth. We recommend that you **do not** use any proprietary polishes or solvents on the screen or cabinet as this may cause damage.

#### **Disposal...**

The following information is only for EU member states.

The use of the symbol indicates that this product may not be treated as household waste. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



# Notes

For your own records

# Notes

For your own records

# Specifications and accessories

## 15V300PG

<b>Broadcast Systems / Channels</b>			<b>Programme Positions</b>	100
PAL I	UHF UK21-UK69 VHF E2-E12, S1-5		<b>Stereo</b>	Nicam, German 2 carrier system
PAL-B/G	UHF E21-E69 VHF E2-E12, S1-5		<b>Visible Screen Size</b> (approx.)	15" diagonal
SECAM-L	UHF F21-F69 VHF F1-F10, B-Q		<b>Display</b>	4:3
SECAM-D/	UHF R21-R69 VHF R1-R12		<b>Screen Resolution</b>	1024x768
<b>Video Input</b>	PAL, SECAM, NTSC 3.58/4.43		<b>Sound Output</b> (at 10% distortion)	2 x 2 W R M S
<b>External Connections</b>			<b>Power Consumption</b>	45W (max)
EXT-1	Input / Output	21-pin Scart	RGB, A / V	<b>Standby</b> (approx.)
EXT-2	Input	RCA jacks	Video - composite Audio L+R S-video	<1W
SVHS	Input	4-pin		<b>Dimensions</b>
VGA Connection		15-Pin		373mm (W) 329mm (H) 75mm (D) (without stand) (approx.) 373mm (W) 358mm (H) 125mm (D) (with stand)
Line output (back)		RCA jacks	Audio L+R	<b>Weight</b> (approx.)
				3,1 Kg (with stand) 2,9 Kg (without stand)
				<b>Headphone Socket</b>
				3.5mm stereo
				<b>Accessories</b>
				Remote Control 2 Batteries (AAA, IEC R03 1.5V) P Clip VGA Cable PC Audio Cable

# TOSHIBA

## DECLARACION DE CONFORMIDAD CON NORMAS, EXPEDIDO POR EL FABRICANTE

El que suscribe: **VESTEL ELEKTRONİK SANAYİ VE TICARET A.Ş.** (Nombre del Fabricante)  
Organize Sanayi Bölgesi  
45030 Manisa Turkey (Razon social)

declara, bajo su propia responsabilidad, que el

Equipo: **TELEVISOR EN COLOR** Fabricado por: **TOSHIBA INFORMATION SYSTEMS (U.K.) LTD.**  
En (Estado o zona geográfica): **UNITED KINGDOM** Marca: **TOSHIBA**

Modelos: **15V300PG**

Objeto de esta declaracion, cumple con la normativa siguiente:

Articulo 9.2 del Reglamento Tecnico del servicio de Difusion de Television, aprobado en el R.D. 1160/89.

Anexo V del Reglamento sobre perturbaciones Radioelectricas aprobado en R.D. 138/89

Exigencias de seguridad del material electrico destinado a ser utilizado en determinados limites de tension, aprobado en el R.D. 7/1988

Hecho en: **TURKEY** (Lugar y fecha)



(Firma)

**SALIH YILDIRIM**  
(Nombre y apellidos)

**QUALITY MANAGER**  
(Cargo)

## DICHIARAZIONE DI CONFORMITÀ

**La Società** **Toshiba Information Systems (U.K.) Limited**  
**Consumer Products Division,**  
**European Service Centre,**  
**Admiralty Way, Camberley, Surrey GU15 3DT.**

dichiara che i prodotti Televisori a colori - Toshiba - Modelli **15V300PG**, é costruito in conformità alle prescrizioni del D.M. n. 548 del 28/8/95 pubblicato sulla G.U. n. 301 del 28/12/95 ed in particolare é conforme a quanto indicato nell'art. 2, comma 1, del decreto stesso.

**European Service centre:**  
Toshiba Information Systems (U.K.) Ltd  
Consumer Products Division  
European Service Centre  
Admiralty Way  
Camberley  
Surrey GU15 3DT  
England



"Printed on Recycled Paper" "100% Chlorine free"

Download from [Www.Somanuals.com](http://www.Somanuals.com). All Manuals Search And Download.





## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>