

Re-tuning: TOSHIBA Freeview TVs

7 Steps
(Steps 1-5)

This guide can be used to help you re-tune the following product with the remote control below:

17WLT56, 20WLT56, 23WLT56, 32WLT66,
37WLT66, 42WLT66


**Make sure your box is on and press 80
for the BBC News channel**




- 1) Press the Menu button. By default the Setup Menu will be highlighted





- 2) Use the Down Arrow button to select Auto Tuning on the third line of the menu and press the OK button

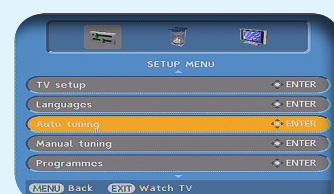


The message '...programmes and settings will be deleted' will appear

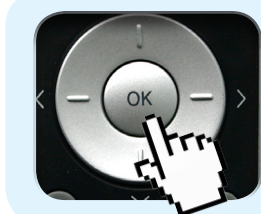


- 3) **Don't worry!** Select Yes and press the OK button

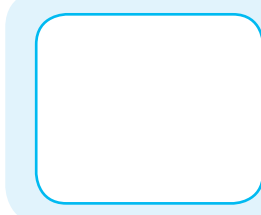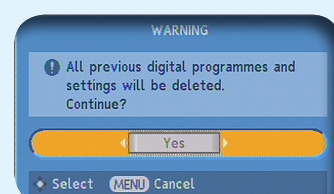

- 4) A re-tune screen will appear
No action required

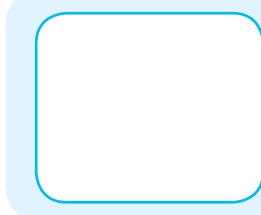

- 5) A completion screen will appear
No action required

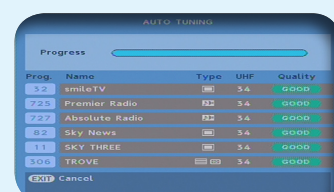

Manufacturer Helpline: **0844 856 0730**

email: Online form at www.toshiba.co.uk

Re-tuning: TOSHIBA Freeview TVs

7 Steps
(Steps 6-7)



- 6) A confirmation screen will appear with BBC1 playing out behind the menu
No action required



- 7) Press the Menu button to close the menu and start viewing channels



You have completed the procedure and can continue viewing digital channels.

Manufacturer Helpline: **0844 856 0730**

email: Online form at www.toshiba.co.uk

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>