

**TOTE
VISION®**

14" DVD & TV SYSTEM

OWNER'S MANUAL & INSTALLATION GUIDE

LCD-1411T / LCD-1411TD



Optional DVD Player



1319 Dexter Ave. N., Suite 020
Seattle, WA 98109
Tel: 206 623 6000
Fax: 206 623 6609

Important Notes :

1. Before operating your DVD and TV system, please read these instructions carefully.
2. Retain this manual for future reference.
3. Do not remove any WARNING stickers on this unit.
4. Do not use any chemical solvent, cleaning agent or corrosive detergent to clean away dirt on the surface of the screen. Doing so may cause irreversible damage to the surface of the LCD screen. To clean off dirt or fingerprints, it is recommended that a soft-damp lens cleaning cloth be used.
5. Using spare parts from another manufacturer may cause permanent damage to the unit.
6. Place the unit on a flat, hard and stable surface or hang on back of car seat.
7. Avoid installing the monitor screen in a position that is under direct sunlight and away from hot air vents.
8. Install the unit in a dry location, avoid condensation.
9. Obstacles may impede smooth running of the loading mechanism and may cause electrical short-circuit.
10. Keep ventilation areas clear to allow unit to cool properly.
11. Ensure the plugs are properly plugged in before operating the unit.
12. Should the LCD panel break, avoid contact with the broken glass or fluid leaking out from the enclosure. If you come into contact, flush and clean the affected areas with plenty of water. Seek medical attention immediately.
13. When operating the display unit, avoid touching or pressing on the LCD screen. Excessive force will damage the LCD screen.
14. When installing this unit in a vehicle, ensure that the installation and use of this unit is in compliance with local vehicle rules and regulations.
15. This product incorporates copy right protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macorvision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macorvision Corporation, and is intended for limited viewing uses only unless otherwise authorized by Macorvision Corporation. Reverse engineering or disassembly is prohibited.
16. Manufactured under License from Dolby Laboratories. "Dolby" and double-D symbol are trademarks of Dolby Laboratories. Confidential unpublished works. © 1992-1997 Dolby Laboratories. All rights reserved.



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN

▲ ATTENTION

1. location exposed to direct sunlight or strong artificial light
2. location exposed to high humidity, or poorly ventilated location
3. The product should not be mounted to a wall or ceiling.

CONTENTS :

1. INTRODUCTION	
Overview	01
2. PRODUCT SPECIFICATION	
Basic Specifications	02
Safety Precautions	02
3. CONTENTS / ACCESSORIES	03
4. FRONT PANEL CONTROL	
Panel Control	04
Input/Output	04
5. REMOTE CONTROL FUNCTION	05
6. INSTALLATION	
Television	06
Input (RCA) AV	06
Output (RCA) to Other AV Equipment	07
Connect Power	07
Power Connection (DC) - Invehicle	08
7. BASIC FUNCTIONS	
Power Signal	09
Mode	09
Volume Setting	10
Channel Search	10
Mute	10
8. OSD MENU SETTING	
Menu Setting	11
Picture Setting	11
FM Transmitter Setting	12
TV Channel Setting (Scan Channel/TV Source)	12
OSD Control Setting	13
Utility Setting (Sleep Timer/Dimmer/Speaker)	13

9. OPTIONAL DVD BASIC FUNCTION	
Playing DVD/CD	15
Ejecting DVD/CD Disc	15
DVD Navigation Keys	16
Stop Playback	16
Play/Pause	16
DVD Playback	16
Next Track or Previous Track	16
Stop	17
Repeat Mode	18
Camera Angle	18
Subtitle	19
DVD Menu	19
Display Function	20
10. OPTIONAL DVD ADVANCED FUNCTION	
DVD Typical Setup Menu and Configuration	21
Language Setup	22
Display Setup	23
Audio Setup	24
LOCK Setup	25
Rating	25
Password	26
Country Code	27
Others Setup	28
11. BASIC SPECIFICATIONS	
Panel Specifications	29
General Specifications	29
Disc Maintenances and Cleaning	30
DVD Player Features	30
DVD Player Playing Disc Types	30
12. ANNEX	31

Overview :

Congratulations on your purchase of the world's highest technical entertainment system. We are committed to bringing you the most technologically advanced products available. We are pleased that you choose our products. Through years of video entertainment products for your viewing pleasure.

The 14.1" GO ANYWHERE DVD/TV system provides all the functions of a television as well as the functionality of a DVD player for your viewing pleasure in the car, in the home, or in your RV.

This system incorporates the use of screen display menu controls that allows you to configure the system to suit your own personal preferences. For your listening flexibility, audio can be heard by different methods. 2-wired optional headphone jacks, Infrared (wireless), built-in stereo speakers, and wireless FM transmitter.

Basic Specification :

1. 14" (4:3) Color Active Matrix TFT LCD display
2. Optional Slot Load DVD player (DVD/VCD/CD/JPEG formats)
3. CATV Tuner: NTSC 2-125 Channels (VHF/UHF)
4. Built-in IR transmitter
5. Built-in left and right stereo speakers
6. AC/DC power adaptors
7. Built-in desk stand
8. Wall mounting capability
9. Optional carrying case / In Vehicle mounting case with
10. Optional two wired headphone jacks

Safety Precautions :

1. Ensure the plug is securely plugged into the main socket before operating the unit.
2. Ensure the Voltage on the main socket is the same as specified on the unit.
3. In the event of thunder & lightning or when not using the unit for a long period of time, remove the plug from the main socket for safety.
4. Do not plug in too many appliances together with this unit to prevent overloading the power supply.
5. Use parts only manufactured by the unit manufacturers.
6. Request a repair report from the technician/service personnel.

In case of the following emergencies, remove plug from the main socket immediately:

1. Plug or cables are damaged.
2. Any form of foreign objects dropped inside the enclosure.
3. Unit is being exposed to rain and/or water.
4. Unit unable to operate under normal operation.




Monitor


Optional 14.1" Bag & Straps



Remote Control

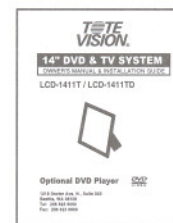

User Manual

 

DC Adaptor



AC Cable



AV Cable



Power Connect Wire



Optional Wireless Headphone


PANEL CONTROL :

- 1. LCD Monitor
- 2. IR Transmitter Sensor
- 3. Power/Stand by LED
- 4. Speaker
- 5. Volume Up/Down button
- 6. TV channel Up/Down button
- 7. OSD menu button
- 8. Mode button
- 9. DVD Play/Pause button
- 10. DVD Disc Eject button
- 11. Power button
- 12. DVD/CD/MP3 Slot
- 13. Cursor move & Enter button
- 14. Mute button






INPUT/OUTPUT :

- 15. AV Input
- 16. AV Output
- 17. DC In 12V or AC Adaptor
- 18. TV ANT

Optional DVD Player Mechanism

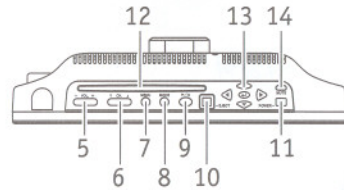


Optional No DVD Player Mechanism

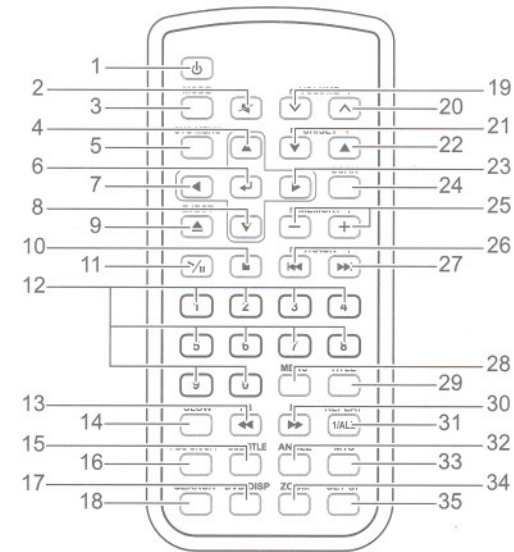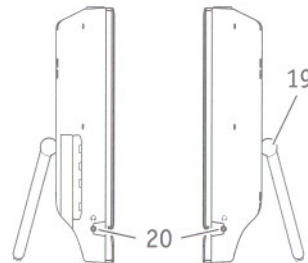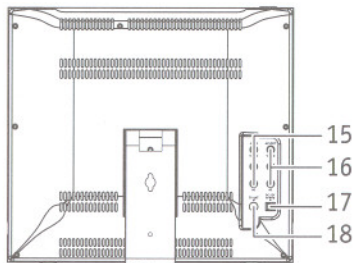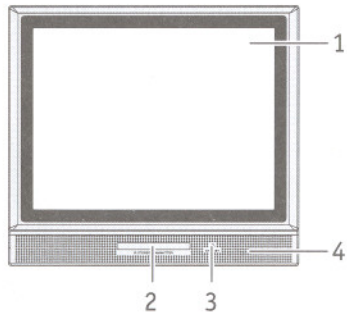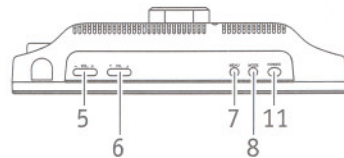


- 1. POWER : Power On/Off
- 2. MUTE : Turn Off Volume
- 3. MODE : Signal Source Button
- 4. Up < ▲ > : Cursor Up Button
- 5. SYS MENU : System Main Menu Selection Button
- 6. SAVE/ENTER : Enter Button
- 7. Left < ◀ > : Cursor Left Button
- 8. Down < ▼ > : Cursor Down Button
- 9. EJECT : DVD Eject Button
- 10. STOP : DVD Stop Play Button
- 11. PLAY/PAUSE : Play and Pause Button
- 12. 1/2/3/4/5/6/7/8/9/0 : Numbers Button
- 13. FB : DVD FAST Backward Play
- 14. SLOW : DVD Slow Motion Play
- 15. SUBTITL : DVD Subtitle Select Button
- 16. PBC ON/OFF : DVD Restart Setting
- 17. DVD DISP : DVD Display Setting Button
- 18. SEARCH : DVD Search Button
- 19. VOL < ▼ > : Decrease Volume Button
- 20. VOL < ▲ > : Increase Volume Button
- 21. CH/ SET < ▲ > : Channel Select Button
- 22. CH/ SET < ▼ > : Channel Select Button
- 23. Right < ▶ > : Cursor Right Button
- 24. SCAN : No Function
- 25. MEMORY(+/-) : No Function
- 26. PREV TRK < ◀◀ > : Previous Track
- 27. NEXT TRK < ▶▶ > : NEXT Track
- 28. MENU : DVD Main Menu
- 29. TITLE : DVD Title Button
- 30. FF : DVD Fast Forward Play
- 31. REP : DVD Repeat Button
- 32. ANGLE : DVD Angle Select
- 33. MTS : DVD Language Change Button
- 34. ZOOM : DVD Zoom Button
- 35. SETUP : DVD Setting Button

TELEVISION :

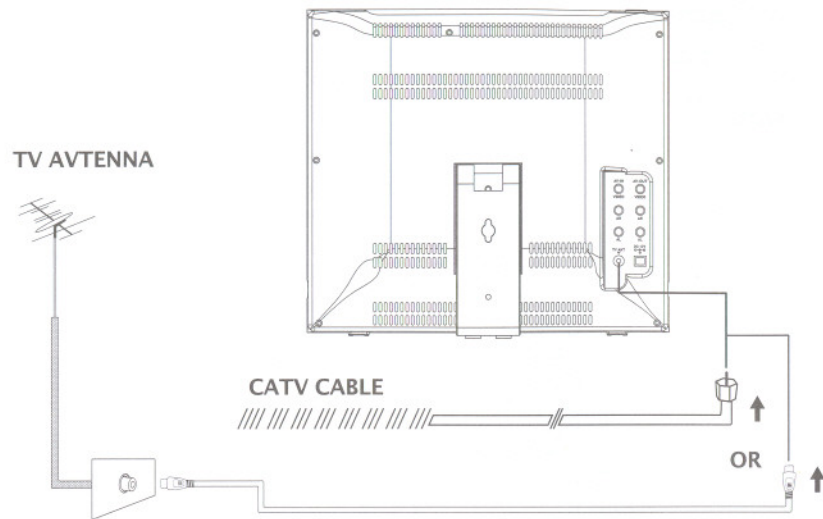


INPUT (RCA) AV :

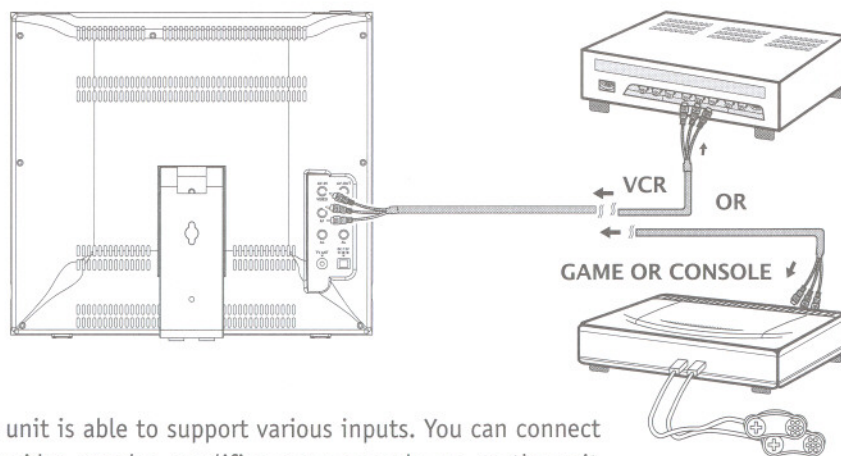

1. This unit is able to support various inputs. You can connect your video recoder, amplifier, game console etc, to the unit.
2. Connect your AV cable to the equipment as shown.


Output (RCA) to other AV Equipment :

Output the AV Signal using the unit AV output socket.

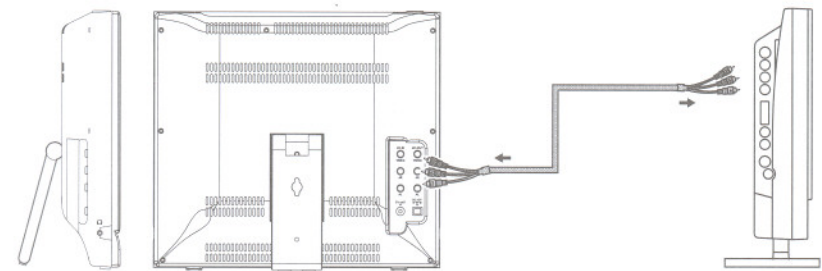

Connect Power:


Connect to the power source using the power cable and adapter provided.

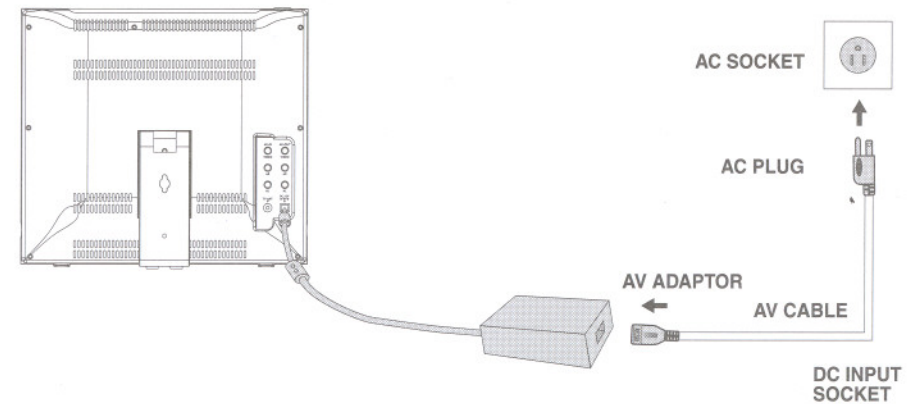


ATTENTION: Ensure the power supply is connected to the unit. When not using unit for a long period of time, remove power adaptor socket from the main power point.

Power Connection (DC) - Invehicle :


Connect the power source by using the optional DC power connection wire supplied with the units as shown below.

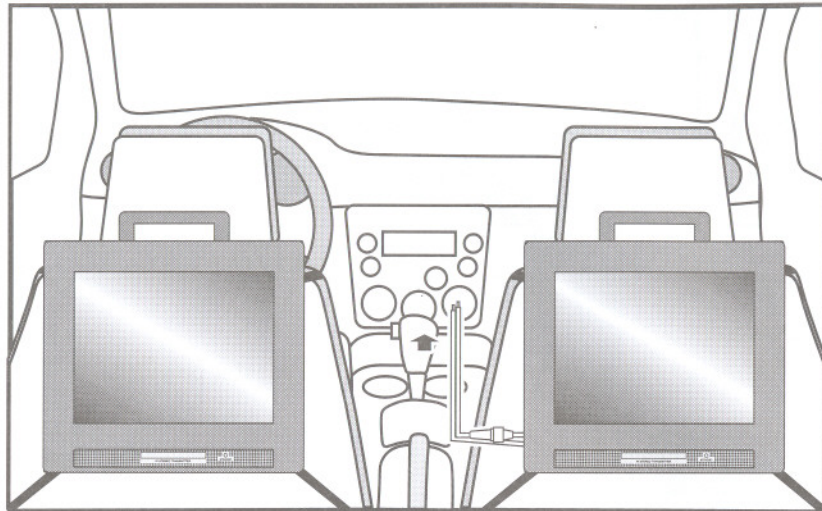**Power Signal :**

1. POWER indication LED on unit turns RED in color indicating power is connected.
2. Press the ON/OFF button on control panel or power button on remote, the POWER indication LED on TV front control panel will turn GREEN in color.


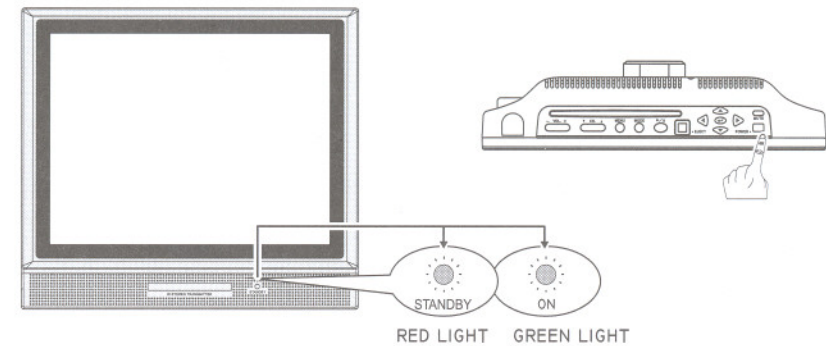
**Mode :**

1. Press MODE button on remote or on control panel to select from the various mode settings.
2. The mode setting status will change each time when MODE button is pressed – "TV - AUX - DVD"

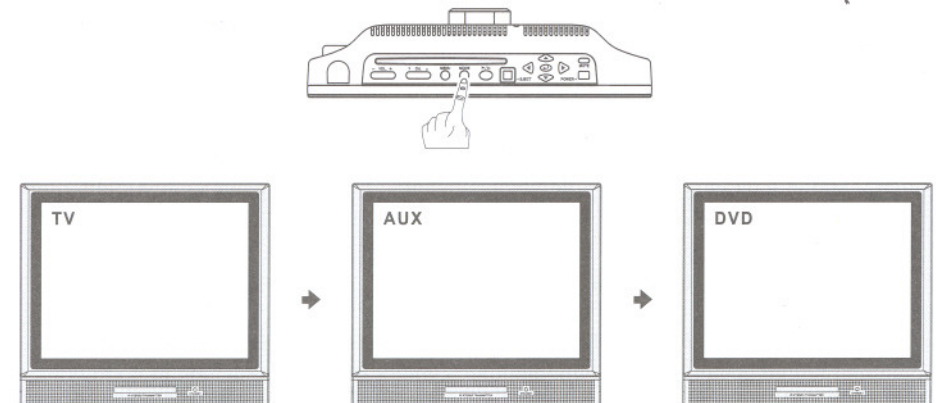


Volume Setting :


Press the "VOL-/+ " button on control panel or "VOLUME \wedge/\vee " on remote to adjust the volume level.

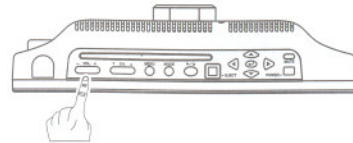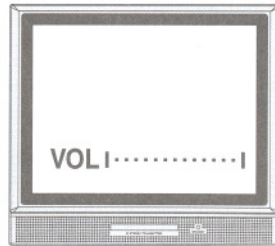**Channel Search :**


1. Press "CH Up/Down" ($\blacktriangle/\blacktriangledown$) button on remote or TV control panel to change/select channels.
2. Press on the number buttons on the remote control to change/select channel directly.

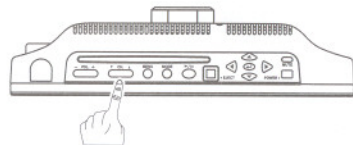**Mute :**

1. Press "Mute" button on remote control or on control panel to mute speakers.
2. Press "Mute" button again or the "Volume Up/Down" ($-/+$) button to restore sound to the speakers.

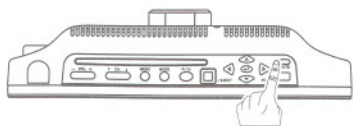**Menu Setting :**

The LCD monitor provides OSD (On Screen Display) settings which enables customized settings for the following:

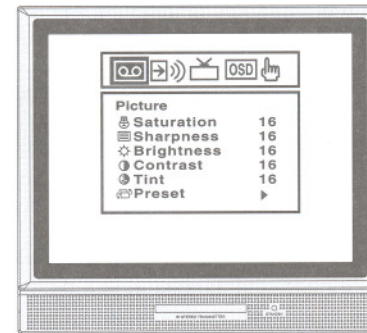

*Press MENU button on control panel or SYS MENU button on remote main menu, options will display the above menu on TV screen. The menu will remain displayed for 10-seconds, unless there is a menu selection made. Press $\blacktriangle/\blacktriangledown$ button on remote or $\langle \text{VOL. } -/+ \rangle$ button on control panel to select Picture/FM TRANSMITTER/TV CHANNEL/OSD CONTROL/UTILITY settings. Each time the setting is chosen, the symbol will highlight in yellow color.


Picture Setting :

When select Picture setting, press $\blacktriangledown/\blacktriangle$ button on remote or $\langle \text{CH. } \blacktriangledown/\blacktriangle \rangle$ button on control panel, Each time when SATURATION/SHARPNESS/BRIGHTNESS/CONTRAST/TINT setting is selected, the PICTURE Symbol and the words will highlight in RED color, then press $\langle \blacktriangleright \blacktriangleleft \rangle$ button on remote or $\langle \text{VOL. } + \rangle$ button on control panel and then press $\langle \blacktriangleleft \blacktriangleright \rangle$ button on remote or $\langle \text{VOL. } - \rangle$ button on control panel to adjust the settings.




FM Transmitter Setting :

When select FM Transmitter setting, press ▼/▲ button on remote or <CH. ▼/▲ > button on control panel. When CH-1 87.7MHz/CH-2 87.9MHz /CH-3 88.1MHz/CH-4 88.3MHz/CH-5 88.5MHz setting is selected, the FM Transmitter Symbol and the words will highlight in RED color, then press < ► > button on remote or <VOL. +> button on control panel to adjust the settings.

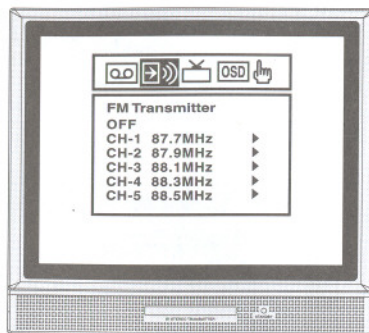
**TV Channel Setting :**

When select TV Channel setting, press ▼/▲ button on remote or <CH. ▼/▲ > button on control panel, Each time when Scan Channel/TV Source setting is selected, the TV Channel Symbol and the words will highlight in RED color, then press < ► > button on remote or <VOL. +> button on control panel to adjust the settings.


Scan Channel : When Scan Channel is selected, press < ► > button will make the monitor start to scan channel. Press MENU button again will stop the scanning.

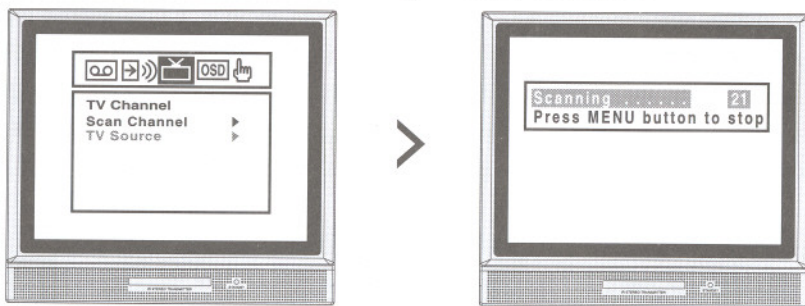

TV Source : When TV Source is selected, press < ► > button to select source CABLE or AIR.

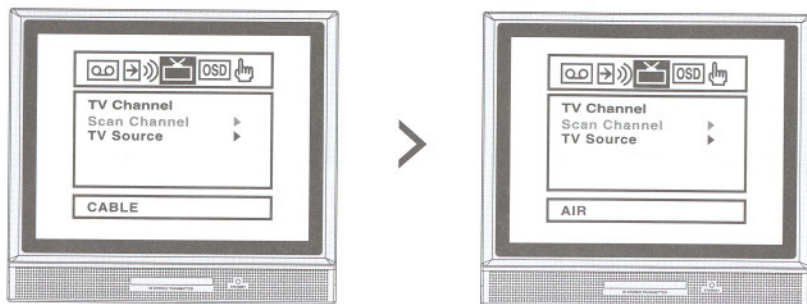
**OSD Control Setting :**

When select OSD Control setting, press ▼/▲ button on remote or <CH. ▼/▲ > button on control panel. Each time when V Position/H Position/Duratuion setting is selected, the OSD Control Symbol and the words will highlight in RED color, then press < ► > button on remote or <VOL. +> button on control panel and then press < ◀ > button on remote or <VOL. -> button on control panel to adjust the POSITION of OSD MENU. V Position is for VERTICAL adjusting, H Position is for HORIZONTAL adjusting, Duration is for adjusting remain menu displayed minutes.

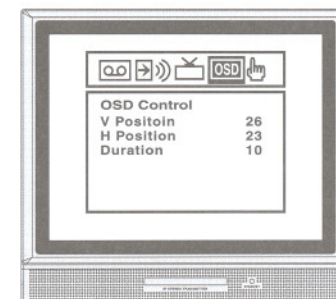
**Utility Setting :**

When select OSD Control setting, press ▼/▲ button on remote or <CH. ▼/▲ > button on control panel. Each time when Sleep Timer/Dimmer/Speaker setting is selected, the OSD Control Symbol and the words will highlight in RED color.


Sleep Timer : When Sleep Timer is selected, press < ► > button can adjust Sleep Time setting, <0/30/60/90/120/150> .

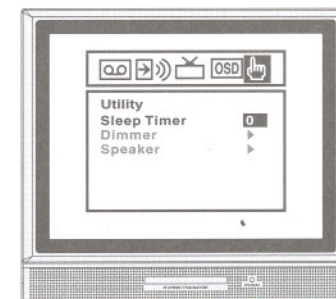

Dimmer : When Dimmer is selected, press < ► > button will adjust Dimmer On/Off.

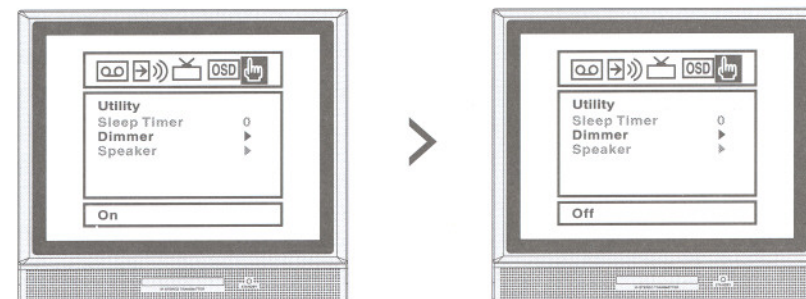


Speaker : When Speaker is selected, press < ▶ > button will adjust Speaker On/Off.

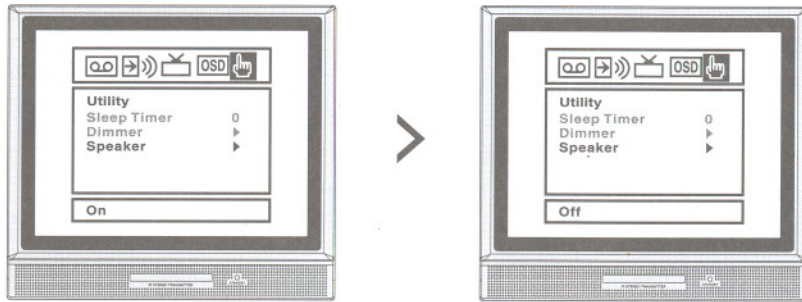

Playing DVD/CD :

1. Press POWE button on control panel or on remote to switch on the unit.
2. Press MODE button on the remote control repeatedly until DVD mode is displayed.
3. Insert the DVD into the DVD player as shown in the illustration below.

NOTE: To avoid damaging discs, insert the into the slot with the disc parallel to the slot.

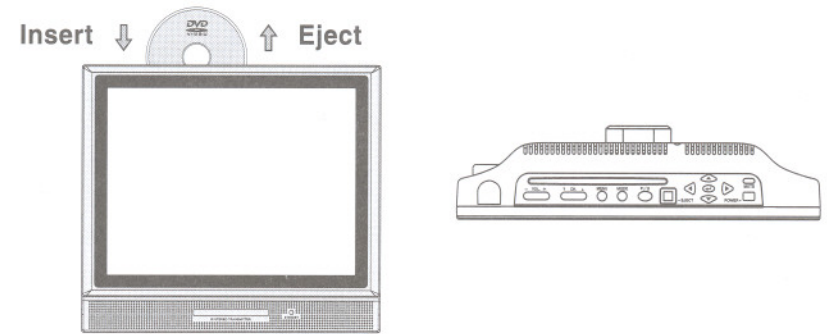

4. Disc will automatically play
 - If the DVD does not comes with Menu/Title, the Play will continue.
 - If the DVD comes with Menu/Title, Menu Options will be shown on the screen, press "Left/Right/Up/Down" (◀ / ▶ / ▼ / ▲) buttons on the remote control, to select the chapter for playing, press the "Enter" button on remote to begin play.
 - If the message "NO DISC" is displayed on the screen, check the format of the disc being used and ensure that the disc is being loaded with the label facing you <see illustration above>.
 - If the message "WRONG REGION" is display on the screen, it means the player does not support the regional code for that DVD.
5. Press the "Left/Right/Up/Down" (◀ / ▶ / ▼ / ▲) button on remote to select the chapter to be played.
6. Press the "PLAY/PAUSE(CH ▼)" button on control panel or the Play/Pause"(▶/⏸) button on remote to begin play. (You can also use the "ENTER" (↵)button on the remote.)

Ejecting DVD/CD Disc:

When in " DVD " mode, Press the "Eject" (▲) button on the remote or on the control panel to eject the DVD disc from the player.

DVD Navigation Keys :

The remote control's [LEFT], [RIGHT], [UP], [DOWN] & [ENTER] allows the user to navigate the DVD MENU or DVD TITLE MENU or DVD SETUP MENU.

Stop Playback :

Press remote control's [STOP] or the front panel's [STOP] to stop DVDC playback.

Play/Pause :

Press the "PLAY/PAUSE" (▶/⏸) button, during playback. The player will be placed in the pause mode.

Press the "PLAY/PAUSE" (▶/⏸) button again, the player will return to normal playback.

DVD Playback :

- (1) Press the "MODE" button on remote or on control panel to select the DVD mode.
- (2) When DVD playback commences. The disc will start to play if the disc does not have any menu setting recorded on it. If the disc has one or more titles recorded on it, a menu screen will appear on the monitor. (* The monitor will display "NO DISC" if there is no disc in the case.)
- (3) Press ◀ / ▶ / ▼ / ▲ on the remote to select the preferred title.
- (4) Press the ENTER or PLAY button, the selected item will now start playing.

Press the MENU or TITLE button, MENU screen will appear on the monitor.

NEXT Track or Previous Track :

Press Next Track (▶▶) during playback

MP3, Audio CD

The player will skip forward to the next track each time the button is pressed. "NEXT TRACK" will be displayed on the TV screen.

DVD

The player will skip forward to the Next Title / Chapter each time the button is pressed.

"dd" will be displayed on the TV screen.

WHERE aa:Current TITLE

bb:Total TITLE

cc:Current CHAPTER

ddd:Total CHAPTER

Press Previous Track (◀◀) during playback

MP3, Audio CD

The player will skip to the beginning of the previous track each time the button is pressed. "PREVIOUS TRACK" will be displayed on the TV screen.

DVD

The player will skip to the beginning of the previous chapter each time the button is pressed.

Stop :

- (1) During Audio CD playback, when "STOP" (■) button is pressed, the CD playback will stop.
- (2) During DVD playback, when "STOP" (■) button is pressed, press "PLAY/PAUSE (▶/⏸)" button to continue. The player records the point where the "STOP" (■) button is pressed (Resume playback function). Press the PLAY/PAUSE (▶/⏸) button again, the play will resume from this point.

If "STOP" (■) button is pressed. "OP" will appear and the resume playback function will be cleared.

Note: Resume playback function is not available for Audio CDs.

Repeat Mode :

For DVD/CD/MP3:

When REPEAT button on the remote is pressed, the OSD will appear on screen. The Repeat setting will cycle each time the Repeat button is pressed.



Chapter Repeat



Title Repeat



Repeat Off

Camera Angle :

Some DVD discs may contain scenes, which have more than one viewing angle. For these discs, the same scene can be viewed from a different angle by using the "ANGLE" button.

- (1) During DVD playback, press the "ANGLE" button on remote. " x / y" will appear <see illustration right>, x represents the current camera angle, and " y " represents the total available camera angle.




- (2) Press the ANGLE button on remote until the preferred angle is selected. The ANGLE selection will cycle through all available camera angle.

Note: This function will only work on discs where different camera angles have been recorded.

Subtitle :

During DVD playback, you may change the subtitle language from the one selected at the initial setting to a different language, if available.

- (1) Pressing "SUBTITLE ON / OFF" button, the following will appear as below:

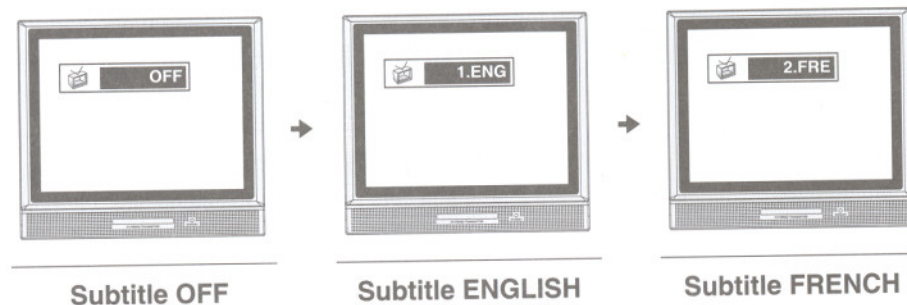

- (2) During DVD playback and SUBTITLE ON, press the "SUBTITLE" button until the preferred subtitle is selected. The SUBTITLE selection will cycle through all available subtitles.

Note: (1) The "SUBTITLE" works only for discs that have multiple subtitle.
 (2) In some cases, the subtitle will not changed immediately to the one selected.

DVD Menu :


Most DVD discs have unique menu structures call DVD menu.The DVD menu's contents and operation may differ from disc to disc.

- (1) During DVD playback, press the MENU button.The DVD menu available on the disc will be displayed.
 (2) Use ◀/▶/▼/▲ to select the preferred item or use the numeric button(s) to make a selection.
 (3) Press "ENTER" or "PLAY" button, the selected item will start playing.

Display Function :

- (1) Press "DISPLAY" button enables you to view the Title/Chapter/Title Play Time/Audio/Subtitle/Angle/Sound setting.
- (2) Use ◀ / ▶ / ▼ / ▲ button or Number button to select the preferred item, and press Enter button to save setting.

Note: (1) The "DISPLAY" works only for discs that have multiple display function.
 (2) In some cases, the display will not changed immediately to the one selected.

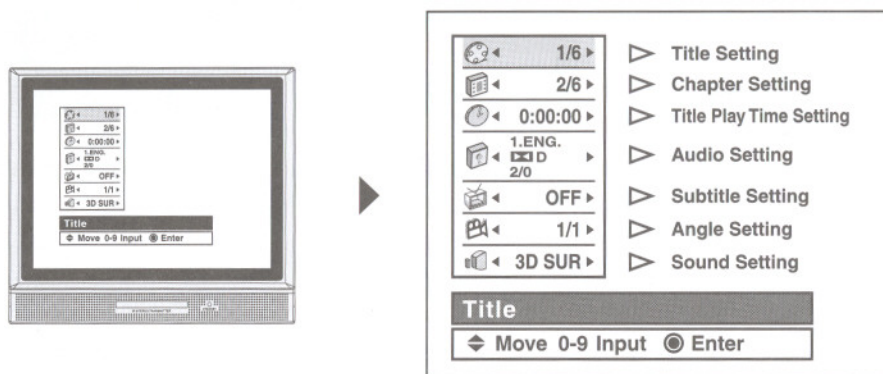

Title Setting : Display the current Title number and the total number of the disc titles. User can jump to the title number desired.

Chapter Setting : Display the current chapter number and the total number of the disc chapters. User can jump to the chapter number desired.

Title Play Time Setting : Display the disc playing time that has elapsed. You can directly input the desired time from which you want to start your playback.

Audio Setting : Display the current audio language used and the digital audio output. You can also switch to other audio language desired and digital audio outputs.


Subtitle Setting : Display the current subtitle language used. You can also switch to other subtitle language desired.

Angle Setting : Display the current angle. You can also switch to other angles.

Sound Setting : Display the current audio mode. You can select between the normal mode and 3D surround effect mode.

DVD Typical Setup menu and Configuration :


When the player is in stop mode, pressing "SETUP" button will allow you to modify some of the player's basic settings, you can use "UP< ▲ >/DOWN< ▼ >" buttons to enter a maternal selection, then press "RIGHT< ▶ >" button enter sub-selection and press "UP< ▲ >/DOWN< ▼ >" buttons again to enter the setting preferred, and press "ENTER" button to confirm the selection. Press "LEFT< ◀ >" button will exit the subselection or press "SETUP" button will exit Setup OSD Menu directly.

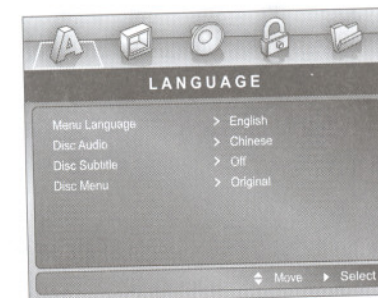


Note: Some DVD menu settings do not apply to this system, since it is specifically engineered for automotive use. Changing the state of some settings can cause apparent system failure. If you try to perform an action that is not permitted (such as accessing the Preferences menu while a disc is playing), the On-Screen-Display will appear as left chart.

Language Setup :

When select LANGUAGE setup, press "UP<▲>/DOWN<▼>" buttons to highlight Menu Language/Disc Audio/Disc Subtitle/Disc Menu selection, then press "RIGHT<▶>" button to enter the setting, and then press "UP<▲>/DOWN<▼>" buttons again to highlight the setting preferred, press "ENTER" button to confirm the selection. The OSD Menu will change as below chart:

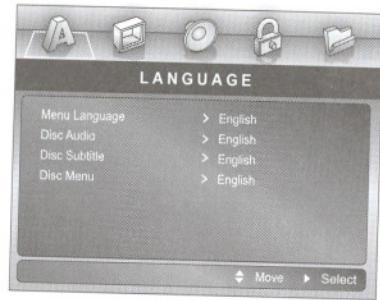

* LANGUAGE Setting

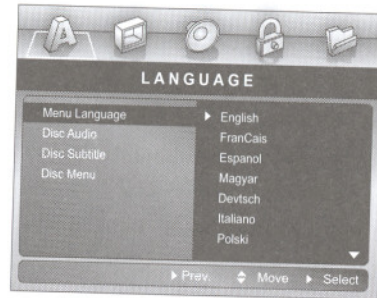

* Menu Language Setting



* Disc Audio Language Setting




* Disc Subtitle Language Setting



* Disc Menu Language Setting

Display Setup :


When select Display setup, press "UP<▲>/DOWN<▼>" buttons to highlight TV Aspect/Display Mode/TV Output/Video Output selection, then press "RIGHT<▶>" button to enter the setting, and then press "UP<▲>/DOWN<▼>" buttons again to highlight the setting preferred, press "ENTER" button to confirm the selection. The OSD Menu will change as below chart:

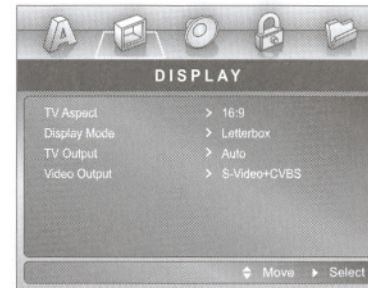


* DISPLAY Setting




* TV Aspect Setting

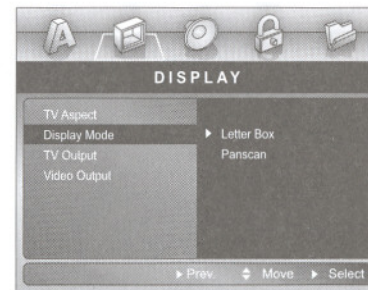

* Display Mode Setting

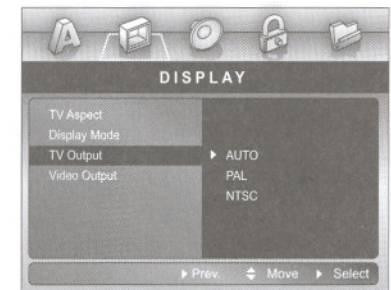

* TV Output Setting

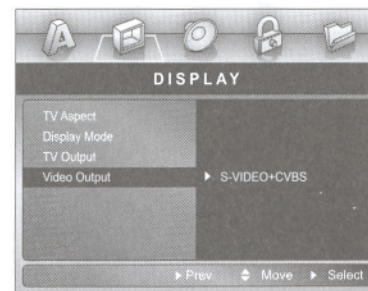


* Video Output Setting

Audio Setup :

When select Audio setup, press "UP< ▲ >/DOWN< ▼ >" buttons to highlight Dolby Digital/DTS/Sample Freq./Digital Output selection, then press "RIGHT< ► >" button to enter the setting, and then press "UP< ▲ >/DOWN< ▼ >" buttons again to highlight the setting preferred, press "ENTER" button to confirm the selection. The OSD Menu will change as below chart:



* AUDIO Setting

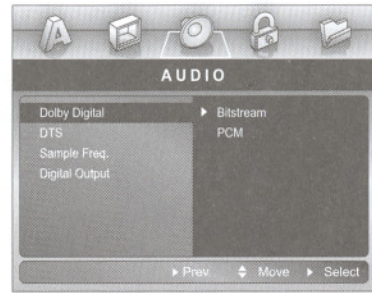

* Dolby Digital Setting



* DTS Setting



* Sample Freq. Setting




* Digital Output Setting

Lock Setup :


When select Lock setup, press "UP< ▲ >/DOWN< ▼ >" buttons to highlight Rating/Password/Country Code selection, then press "RIGHT< ► >" button to enter the setting, the OSD menu will request to input the password first. After the password is entered correctly, the parental control Rating level can be changed.

Rating :


* When pressing wrong code before press ENTER button, press LEFT< ◀ > button can clear the wrong number and enter the correct number again to enter the setting. The OSD Menu will change as below chart:

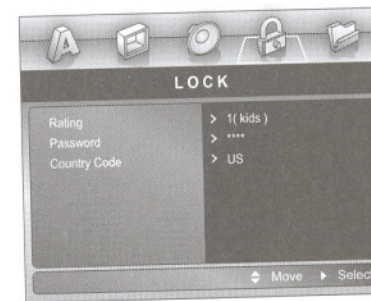

* LOCK Setting

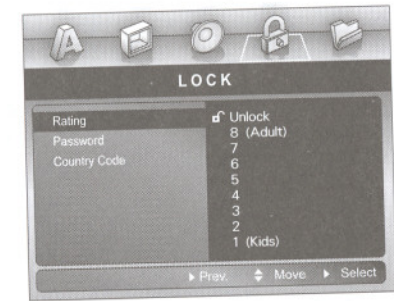

* Rating Setting

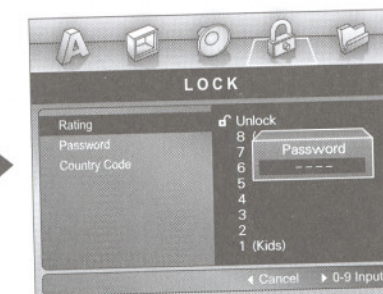

* Enter Password

* After password is entered successfully, press Up< ▲ >/Down< ▼ > button to change the parental control rating level. Including the Unlock level, there are total of 9 levels in the parental control rating levels. The parental control function is only valid after the disc eject.

*** The Factory original Password Code is "1234". You can use "1234" when you forget the new password.**


Password :

The Password item is used to set the new password or change the old password. Before enter the item, the system will request to input OLD PASSWORD first. After press ENTER, the system will request to input NEW PASSWORD, after input new password, the system will request to VERIFY the new password again. Then press ENTER to save setting. The OSD Menu will change as below chart:



* Password Setting

* Enter Password

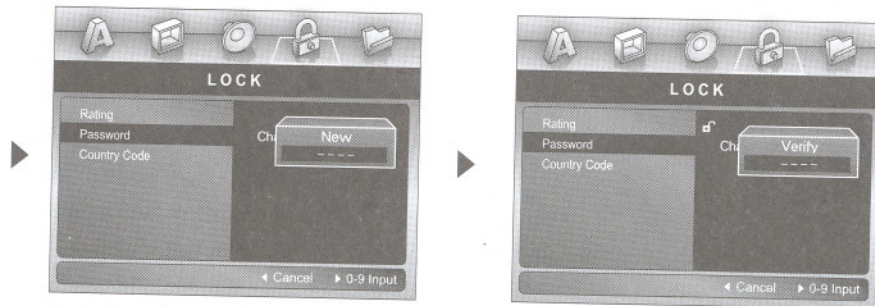

* Enter New Password

* Verify Password


Country Code :

Country code item is used to set the national code. It is a prerequisite that the setting of the parental control level is only valid when the country code of the unit is matched with that of the disc. Country code item provides two alphabetical letters for changes.

Before user can enter into the country code item, the system will request to input the password first. The country code can be changed only after the password is input successfully.

Press Up<▲>/Down<▼> to select the first letter. And press Right to move the highlight. Press Up<▲>/Down<▼> again to select the second letter. Then press ENTER to confirm the selection of the country code.

The OSD Menu will change as below chart:

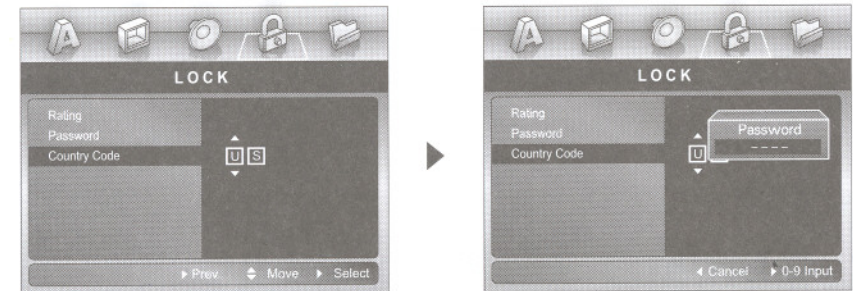

* Country Code Setting

* Enter New Password



* Change New Letter

* Change New Letter

Disc Maintenances and Cleaning :**Precautions:**

1. Do not touch the surface of the play side of the disc. And do not scrape paper or tape to discs.
2. Do not put tapes and glue on the surface of the disc, which will cause the image and sound deterioration. Wipe the disc from the center outwards with a soft cloth. Always keep the disc clean.
3. Do not put the disc under the sunlight or near the heating radiator. Recommend to put the disc inside the disc storage box to keep it under normal temperature after the disc playback is ended.

Disc Cleaning: Before the disc playback, wipe the disc from the center outwards with a soft cloth. Please do not use any type of solvent, such as benzene, commercially available cleaners or antistatic spray for vinyl LPs. It may damage the disc.

DVD Player Features :

1. Fully Compatible
2. Intelligence Disc Upgrade
3. MPEGII Support
4. Single Chip
5. Unique HDCD Function Support
6. Progressive Scanning
7. Focusing
8. Supports Picture CD and Photo CD
9. Supports DVD Audio
10. Supports DVD-VR
11. Mixing Playback

DVD Player Playing Disc Types:

1. DVD Video
2. SVCD
3. VCD
4. DVCD
5. CD-DA
6. DTS-CD
7. HDCD
8. MP3/WMA/JPEG
9. Picture-CD
10. CD-R/CD-RW
11. DVD-R / DVD-RW

All specifications are subjected to change without prior notice.

LCD Monitor Care & Cleaning Tips :

To avoid possible shock hazard, be sure the LCD TV is turn off and unplugged from the main electrical outlet before cleaning. Do not use any form of solvents on the LCD monitor.

Cleaning the LCD Monitor :

1. Use a soft, clean & dry cloth to gently wipe off the dust on the LCD monitor.
2. Use a clean cloth dampened with water to wipe off the dirt.
3. Do not exert force when cleaning the LCD monitor.

Cleaning the Enclosure :

1. Use a soft, clean & dry cloth to gently wipe off the dust on the LCD monitor.
2. Use a clean cloth dampened with water to wipe off the dirt.
3. Do not exert force when cleaning the LCD monitor.

Troubleshooting :

If the unit fails to operate normally, try solving the problems using the guide below. If the problem persists, switch off the unit and ask the dealer or technical services for assistance. Do not attempt to repair the defective unit yourself. Do not endanger yourself as high voltage is involved.

1. No Picture :

- a. Check that the power cord is plugged into the main socket and the power supply is turned on.
- b. Check the contrast and brightness setting.
- c. Check the Antenna connection to see if it is properly connected to the LCD TV Input Terminal.
- d. Be sure you have selected the correct source mode.

2. DVD Player Not Working Properly :

- a. Ensure disc is correctly inserted into the player.
- b. Ensure disc is not damaged and is of correct format.
- c. Please wait patiently as some disc requires longer time to read.

3. Snowish Picture :

- a. Check to see if the Antenna is correctly connected.
- b. Check to see if the picture setting is correctly set.

4. Flickers Picture :

- a. Check that the power coming from the main socket is sufficient.
- b. Check that unit is not placed too near speakers or magnetic objects.
- c. Check to see that the unit setting is correctly set.

5. Color Patch(Unevenness) :

Be sure you have made connection correctly.

6. Horizontal Dotted :

Be sure you have made connection correctly.

7. No Sound :

- a. Check that mute function is off.
- b. Increase the volume.

8. Remote Control not Working :

- a. Check batteries are installed correctly, replaced if necessary.
- b. Aim the remote controller towards the unit remote sensor.

ONE YEAR LIMITED WARRANTY

ToteVision warrants to the original purchaser that this product is free from defects in workmanship and material under normal use and conditions for a period of 1 year from the date of original purchase, subject to the limitations below. Should service be required by reason of any defect or malfunction during the warranty period, *ToteVision* will repair or at its discretion replace this product, without charge (except for a \$15.00 charge for handling, packing, return shipping, and subject to verification of the defect or malfunction), upon delivery of this product to the Factory Service Center listed below with proof of date of purchase. During the warranty period *ToteVision* will repair or replace, free of charge, defective units **WHICH ARE NOT DEFECTIVE DUE TO ORDINARY WEAR AND TEAR, USER ABUSE, OR OTHER CAUSES NOT ARISING OUT OF MANUFACTURER'S DEFECTS IN MATERIALS OR WORKMANSHIP.**

Before returning this product for service:

1. If it is necessary to pack the unit in other than original carton and protectors, please insure proper packaging for good protection.
2. Enclose a photocopy of your dated sales receipt, credit card statement, or other proof of the date of purchase, a description of your complaint, your name, address and day time telephone number. (Do not use P.O. Box numbers since UPS cannot deliver to P.O. Boxes.) Your warranty registration information must be on file in our office as a method of identification. If proof of original ownership is not in our records, the repairs will be treated as "out-of-warranty" and your unit will be returned to you C.O.D. for repair and handling charges.
3. For "In Warranty repairs" enclose a check or money order payable to the order of *ToteVision* for the sum of \$15.00 for return postage and handling.
4. Ship the unit prepaid to the Factory Service Center listed below.
5. If your unit needs service after the warranty period has expired, ship it prepaid and insured to the Factory Service Center below. Enclose a description of your complaint; your name, company name, address, and day time telephone number. You will be advised of estimated repair charges.

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover:

- (i) products which have been damaged by negligence, misuse, accidents, abuse, acts of God, or units which have been modified or repaired by unauthorized persons,
- (ii) cracked or broken units or units damaged by excessive heat or cold, or units exposed to excessive UV light.
- (iii) products which have their serial numbers removed, altered or rendered illegible,
- (iv) products that have been in constant use (24 hours per day, 7 days per week) that have cold cathode florescent tubes (CCFT) that do not provide sufficient illumination,
- (v) the cost of shipping this product to the Factory Service Center and its return to you.

No warranty, expressed or implied, as to merchantability or fitness for a particular use is made beyond this Limited Warranty. *ToteVision* will not be liable for incidental or consequential damages or lost profits arising from product defects or malfunctions. This warranty is valid only in the United States of America and does not extend to owners of the product subsequent to the original purchaser. Any applicable implied warranties are also limited to 1 year and *ToteVision* will not be liable for consequential damages. (Some states do not allow limitations on implied warranties or exclusions of consequential damages, so that these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

As a precondition to receiving any of the benefits of this limited warranty, your completed warranty registration information must be on file in our office. **IF YOUR INFORMATION IS NOT ON FILE WITH US, ALL WARRANTY CLAIMS WILL BE DENIED. TO PROTECT YOUR WARRANTY, MAIL YOUR REGISTRATION INFORMATION TODAY!** Submission of a unit determined not defective will result in a charge to you for testing and handling the unit. Thoroughly test your unit before submitting it for warranty claim repair.

Send unit to: TOTEVISION SERVICE CENTER 1319 Dexter Avenue N. # 020, Seattle, WA 98109

For further information: call (206) 623-6000 or fax (206) 623-6609

WARRANTY REGISTRATION

Protect your Warranty by completing and mailing this form to: *ToteVision*, 1319 Dexter Avenue N. # 020, Seattle, WA 98109

Model Number: _____ Serial Number: _____
 Name: _____
 Address: _____
 City: _____ State: _____ Zip: _____
 Telephone number: (_____) _____
 Dealer: _____ Dealer City: _____ State: _____

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>