

YARIS SEDAN

2009 Quick Reference Guide



2009 Yaris Sedan

This *Quick Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Quick Reference Guide* is not intended as a substitute for the *Owner's Manual* located in your vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Yaris.

! A word about safe vehicle operations

This *Quick Reference Guide* is not a full description of Yaris operations. Every Yaris owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this *Quick Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

INDEX

OVERVIEW

Engine maintenance	7
Fuel tank door release and cap	6
Hood release	7
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
Keyless entry¹	6
Trunk release	6

FEATURES/OPERATIONS


Air Conditioning/Heating	13
Audio	12-13
Automatic Transmission	8
Bottle holders-Rear seat	15
Clock	14
Cruise control	14
Cup holders	15
Light control-Instrument panel	14
Lights & turn signals	11
Parking brake	9
Power outlet	13
Seat adjustments-Front	9
Seat adjustments-Rear	10
Seats-Head restraints	10
Tilt steering wheel	8
Windows-Power	9
Windshield wipers & washers	10

SAFETY AND EMERGENCY FEATURES

Door locks-Power	16
Doors-Child safety locks	16
Seat belts	16
Seat belts-Shoulder belt anchor	17
Spare tire & tools	17
Trunk-Internal release	17
Tire Pressure Monitoring (warning) System	16

¹ Visit your Toyota dealer for information on this and other customizable options.

Instrument panel

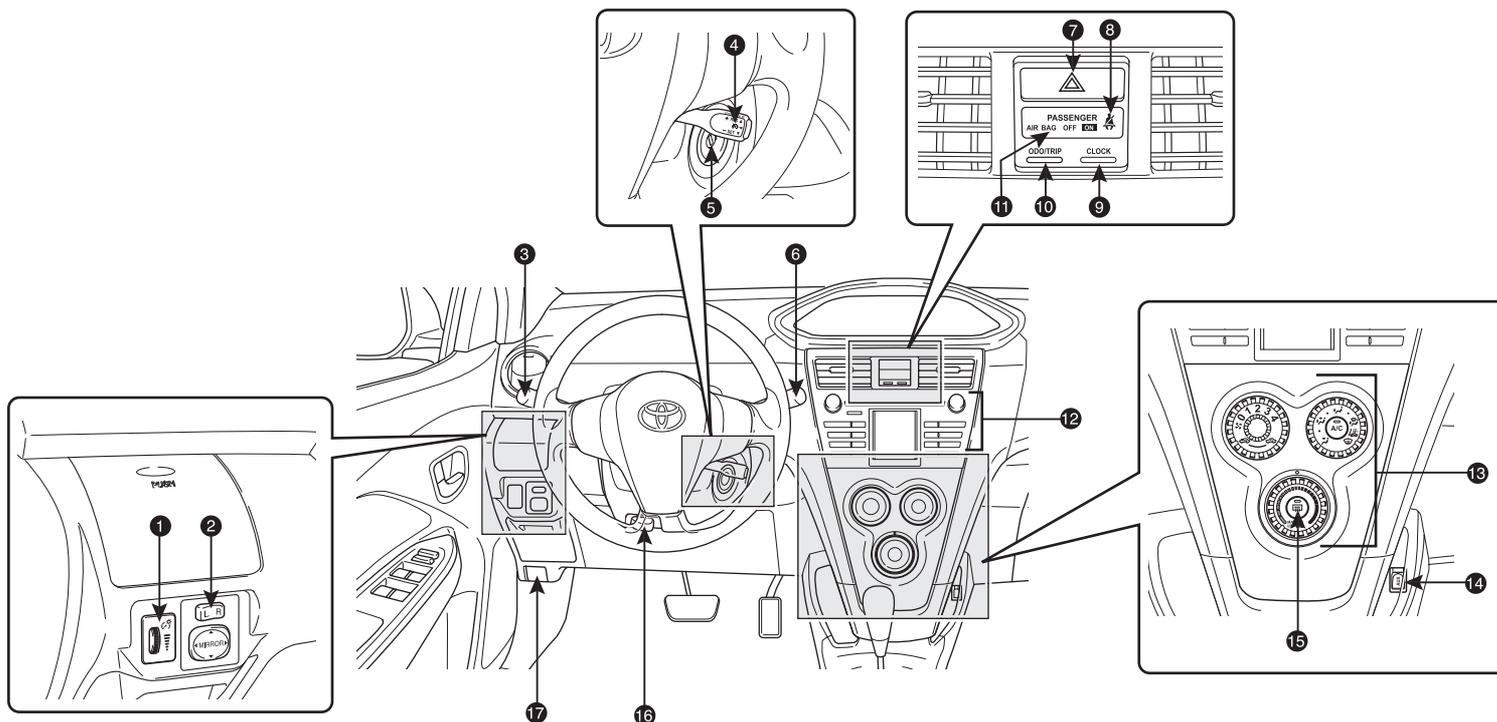


- ❶ Instrument panel light control
- ❷ Power rearview mirror controls*
- ❸ Headlight, turn signal and front fog light* controls
- ❹ Cruise control
- ❺ Engine switch
- ❻ Wiper and washer controls

- ❶❶ "AIR BAG ON" and "AIR BAG OFF" indicator
- ❶❷ Audio system*
- ❶❸ Air Conditioning controls
- ❶❹ AUX adapter*
- ❶❺ Rear window defogger switch*
- ❶❻ Tilt steering lock release lever
- ❶❼ Hood release


* If equipped

Instrument cluster

With optitron type meter

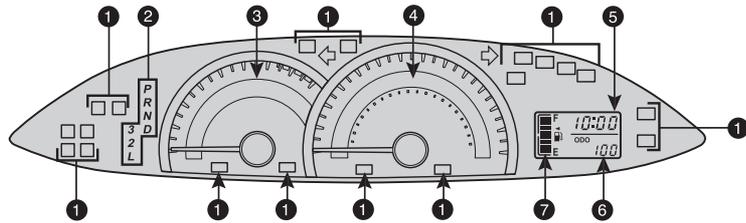

Without optitron type meter

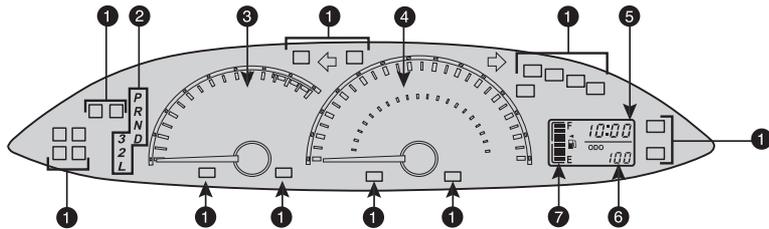

- 1 Service indicator and reminder
- 2 Gear shift position indicator (if equipped)
- 3 Tachometer
- 4 Speedometer
- 5 Clock
- 6 Odometer and two trip meters
- 7 Fuel gauge

- Malfunction/Check Engine indicator¹
- Low engine oil pressure warning¹
- Open door warning
- Airbag SRS warning¹
- Low windshield washer fluid level warning
- Electric power steering system warning¹
- Low fuel level warning
- Engine oil replacement reminder¹
- AIR BAG ON indicator
- AIR BAG OFF indicator
- Headlight low beam indicator
- Headlight high beam indicator
- Front fog light indicator
- Turn signal indicator
- High engine coolant temperature warning¹
- Low engine coolant temperature indicator²
- Cruise control indicator³
- Cruise control/set indicator
- Anti-lock Brake System warning¹
- Low Tire Pressure Warning¹

Indicator symbols

For details, refer to “Indicators and warning lights,” Section 2-2, 2009 Owner’s Manual.


- BRAKE Brake system warning¹
- Driver seat belt reminder (alarm will sound if speed is over 12 mph)
- Front passenger seat belt reminder (alarm will sound if speed is over 12 mph)
- Charging system warning¹

¹ If indicator does not turn off within a few seconds of starting engine, there may be a malfunction. Have vehicle inspected by your Toyota dealer.

² For details, refer to “If your vehicle overheats,” Section 5-2, 2009 Owner’s Manual


³ If this light flashes, refer to “Cruise control,” Section 2-4, 2009 Owner’s Manual.

Fuel tank door release and cap

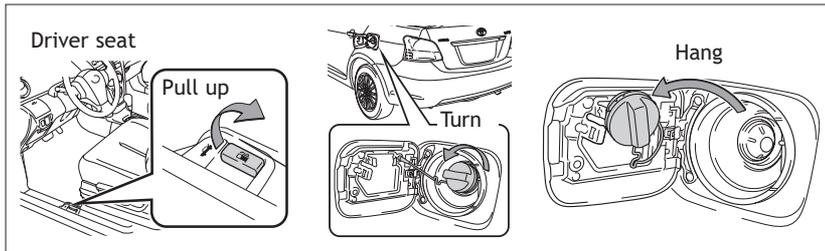


NOTE: Tighten until one click is heard. If the cap is not tightened enough, Check Engine “” indicator may illuminate.


Keyless entry (if equipped)

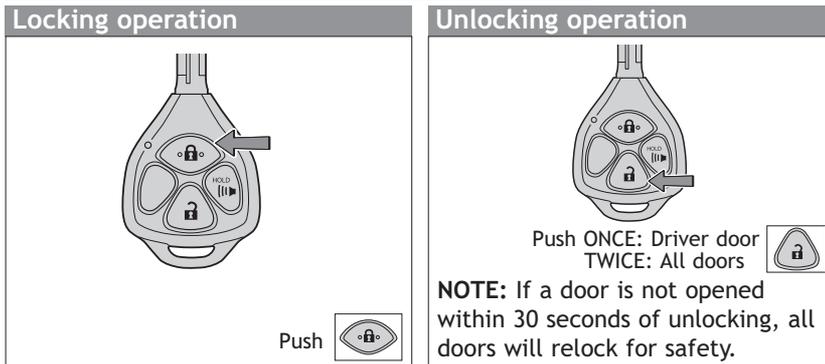


Trunk release

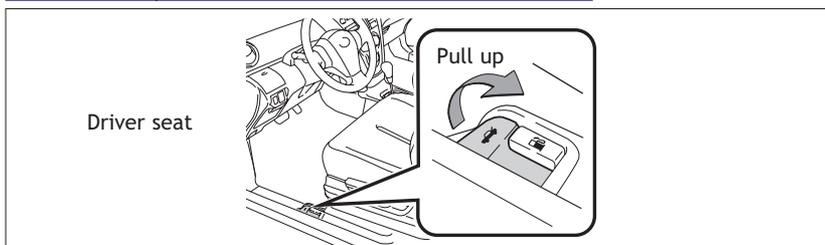

Hood release

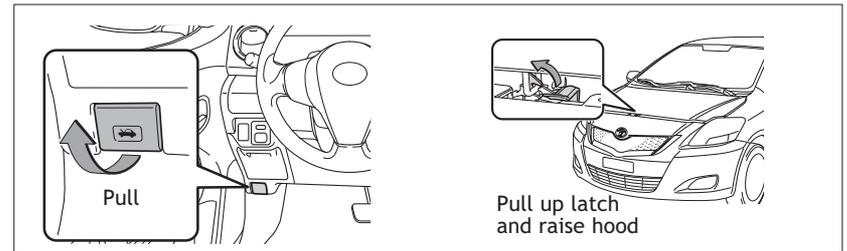

Engine maintenance

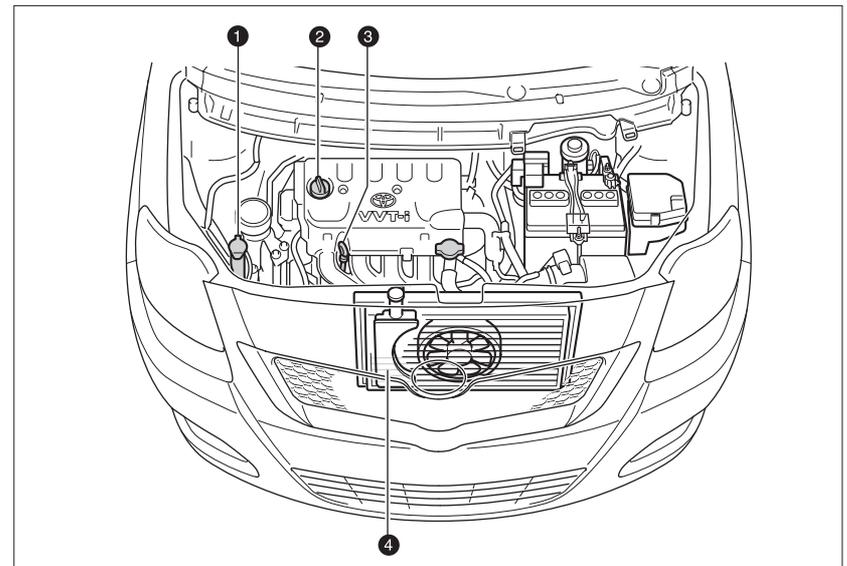


- 1 Windshield washer fluid tank
- 2 Engine oil filler cap
- 3 Engine oil level dipstick
- 4 Engine coolant reservoir

Note: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the “Owner’s Warranty Information Booklet,” “Scheduled Maintenance Guide” or “Owner’s Manual Supplement.”

FEATURES/OPERATIONS


Automatic Transmission (if equipped)

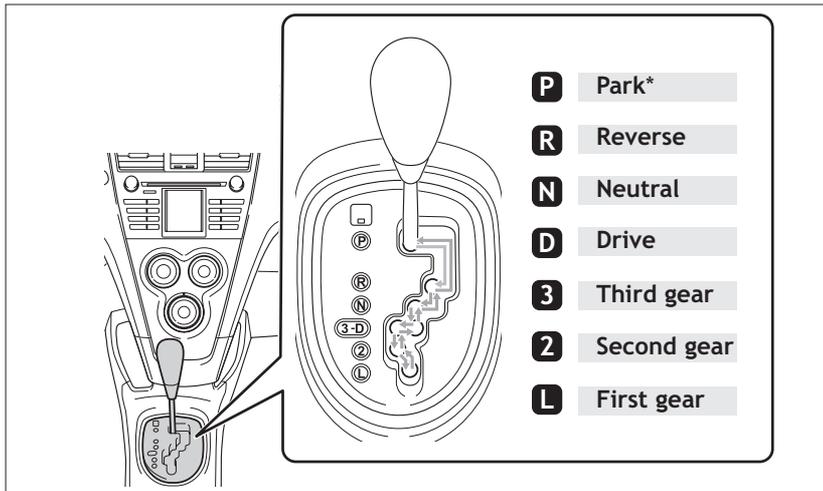

* The engine switch must be "ON" and the brake pedal depressed to shift from Park.

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.


Tilt steering wheel

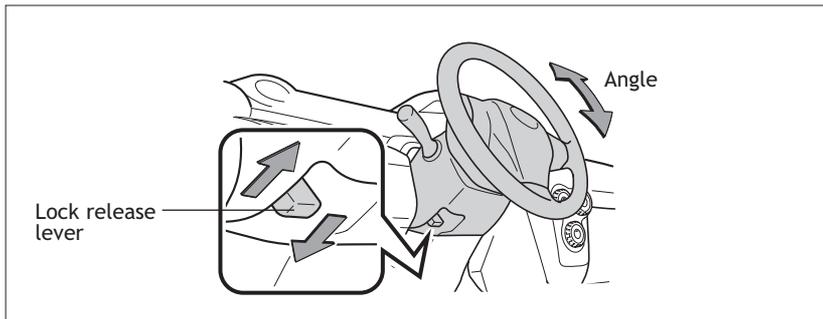


Hold wheel, push lever down, set angle and return lever.

Note: Do not attempt to adjust while the vehicle is in motion.

Parking brake

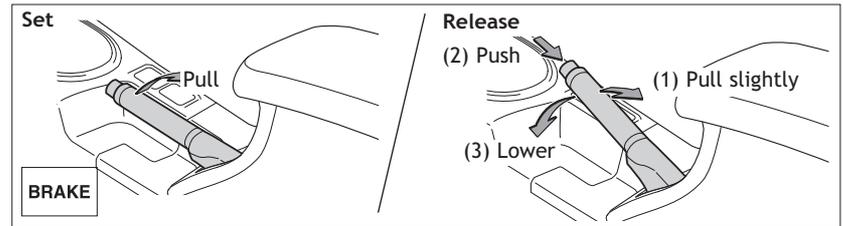

Windows-Power (if equipped)

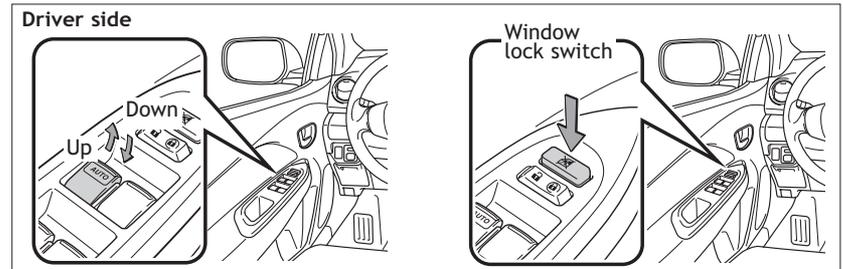


Window operation

Automatic down operation (driver side only) Push the switch completely down and release to fully open. To stop window at any point, lightly pull the switch up.


Window lock switch Deactivates all passenger windows. Driver's window remains operable.

Seat adjustments-Front

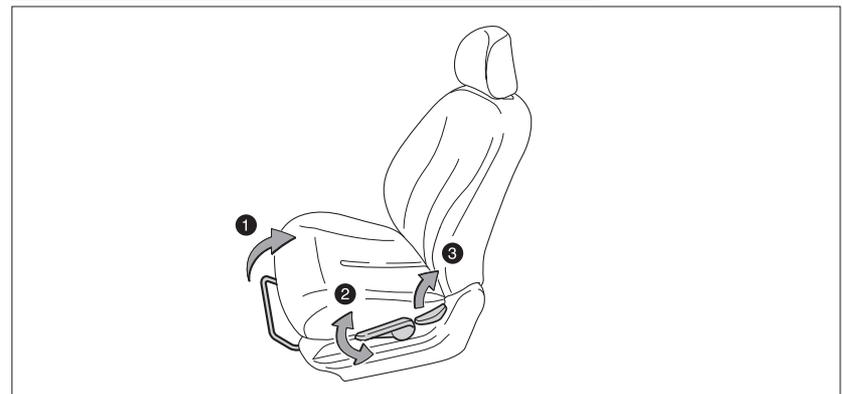

- 1 Seat position (forward/backward)
- 2 Height crank (driver side only)
- 3 Seatback angle

Seat adjustments-Rear (fold-down type)

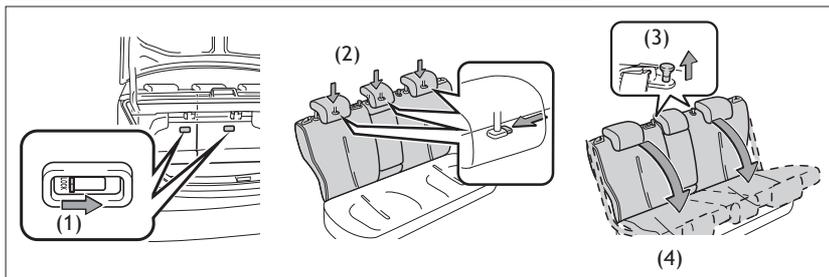


To fold down the rear seatback

- (1) Slide the seatback security lock to the right unlock position from the trunk room.
- (2) Lower the seat head restraints.
- (3) Pull the lock release knob up.
- (4) Fold the seatback down.

Refer to the *Owner's Manual* for more details.

Seats-Head restraints

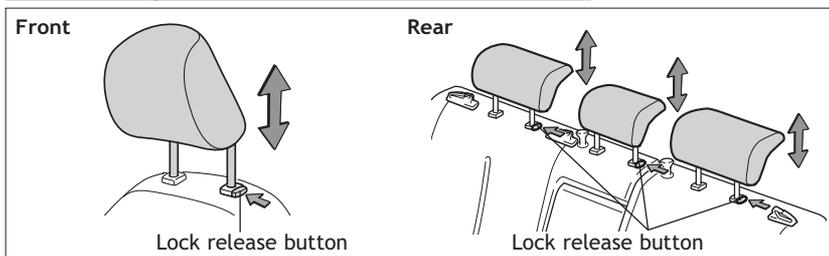

Windshield wipers & washers

With intermittent wiper

Adjust interval*
Single wipe
Interval wipe
Slow
Fast
Pull to wash and wipe

*** Intermittent windshield wiper interval adjustment**
Rotate to increase/decrease wiper frequency.

Without intermittent wiper

Single wipe
Interval wipe
Slow
Fast
Pull to wash and wipe

Lights & turn signals

Headlights

Headlights
Parking lights
Low beam
High beam
High beam flasher

Turn signals

Right turn
Lane change
Lane change
Left turn


Front fog lights (if equipped)

Turn


Front fog lights turn on only when the headlights are on low beam.

Audio

Type 1

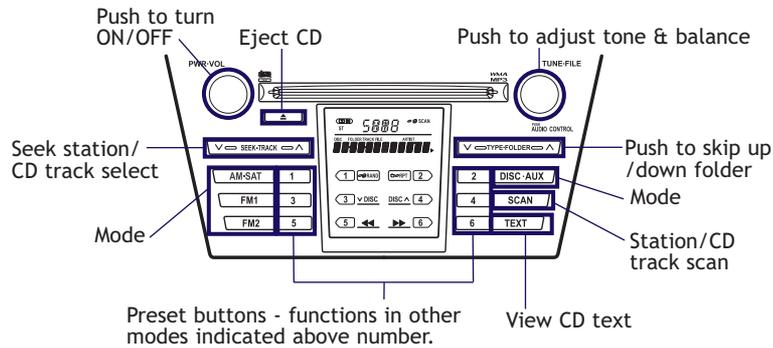

Type 2

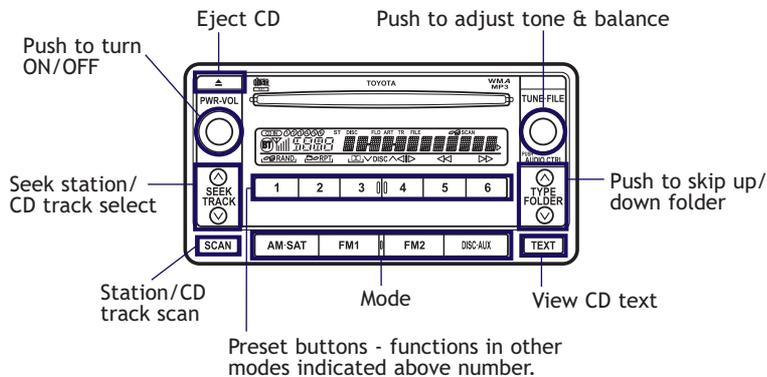

CD PLAYER


To scan tracks on a disc Push and hold “SCAN.” Push again to hold selection.

RADIO

To preset stations Tune in the desired station and hold down a preset button (1-6) until you hear a beep. Push desired preset button (1-6) to select.

To scan stations Push “SCAN.” Push and hold to scan preset stations. Push again to hold selection.


AUX audio jack (if equipped)

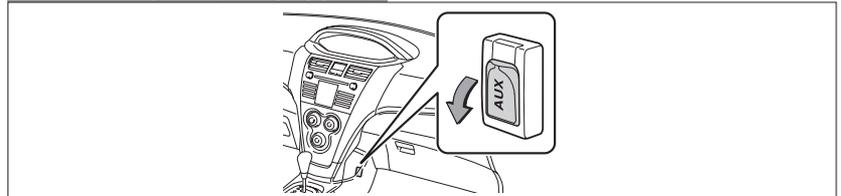

By inserting a mini plug of a commercially available component into the AUX audio jack, you can listen to music from a portable audio device through the vehicle’s speaker system while in AUX mode.


NOTE: An iPod®-dedicated port is standard on all S model sedans.

Air Conditioning/Heating

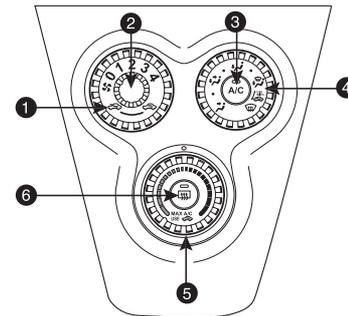

- 1 Fresh or recirculated cabin air
- 2 Fan speed
- 3 Air Conditioning ON/OFF
- 4 Airflow vent
- In “” or “” mode, use fresh air to reduce window fogging.
- 5 Temperature selector
- 6 Rear defogger (if equipped)


Power outlet (if equipped)

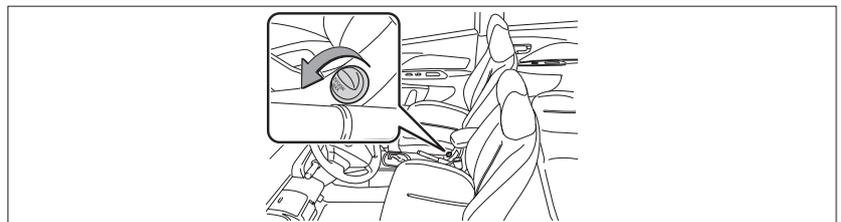


Designed for 12V car accessories. Key must be in the “ACC” or “ON” position to be used.

Cruise control (if equipped)

Turning system ON/OFF

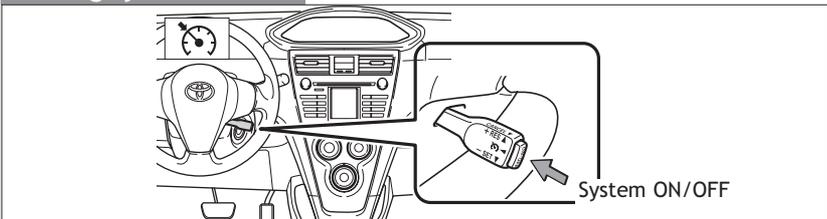

Functions

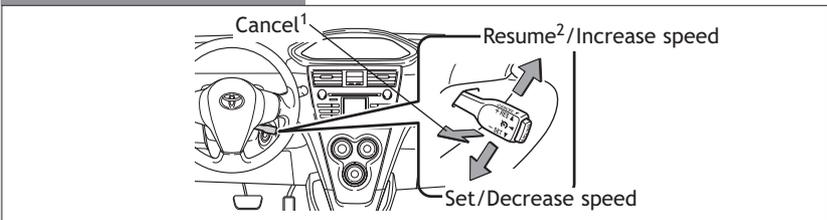


¹ The set speed may also be cancelled by depressing the brake pedal.


² Unless vehicle speed drops below 10 mph, the set speed may be resumed once vehicle exceeds 25 mph.

Refer to the *Owner's Manual* for more details.

Light control-Instrument panel

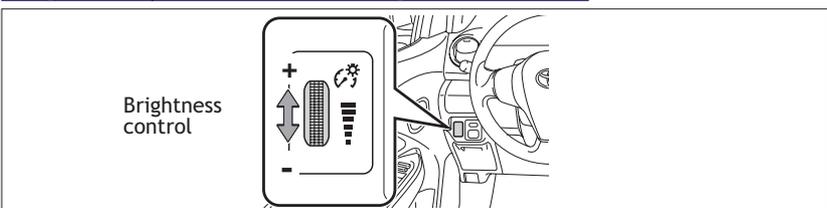


Clock

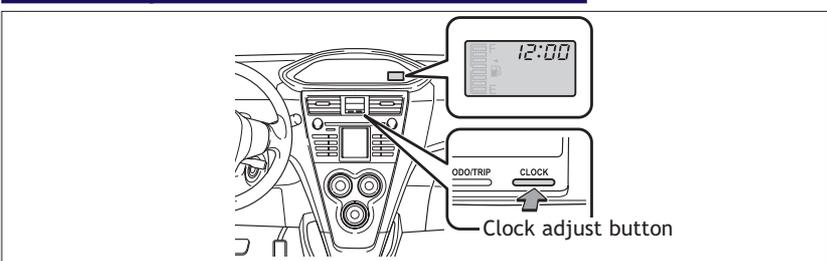

(1) Push and hold the CLOCK button to enter adjustment mode. (2) Press CLOCK button to adjust hours. (3) Wait five seconds to adjust the minutes. (4) Wait another five seconds for process to complete.


Cup holders

Front

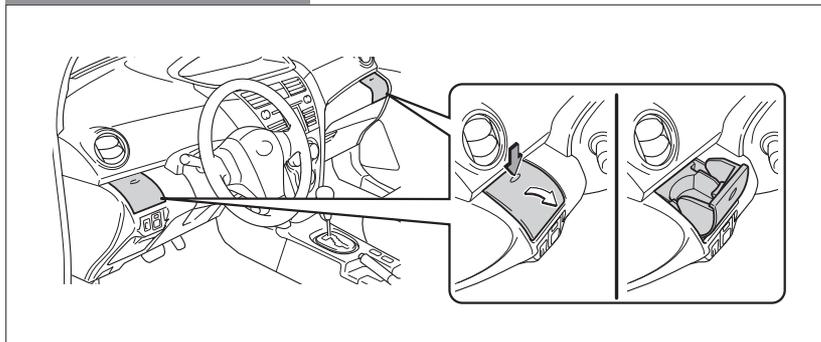


Rear


Rear console box

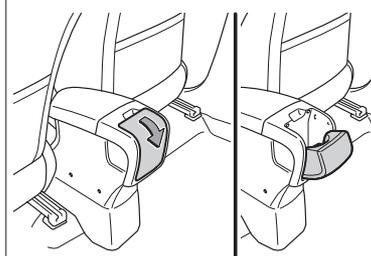

Rear seat armrest (if equipped)

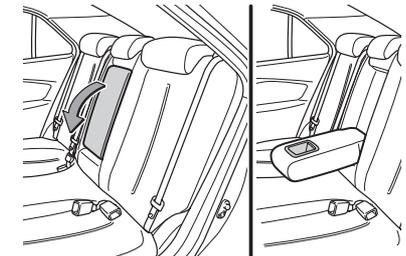


Bottle holders-Rear seat

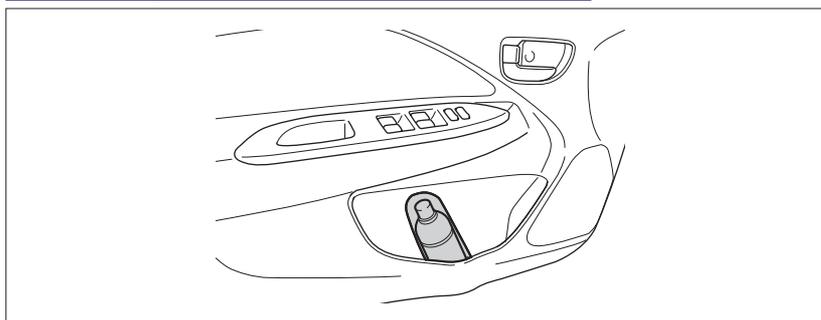


SAFETY AND EMERGENCY FEATURES

Door locks-Power (if equipped)

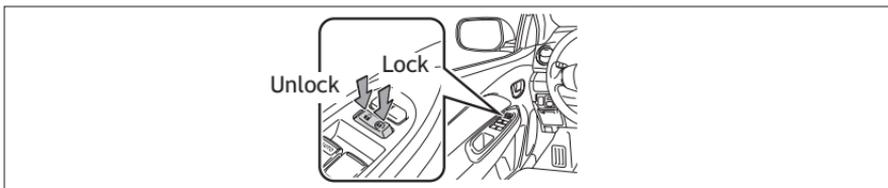


Doors-Child safety locks

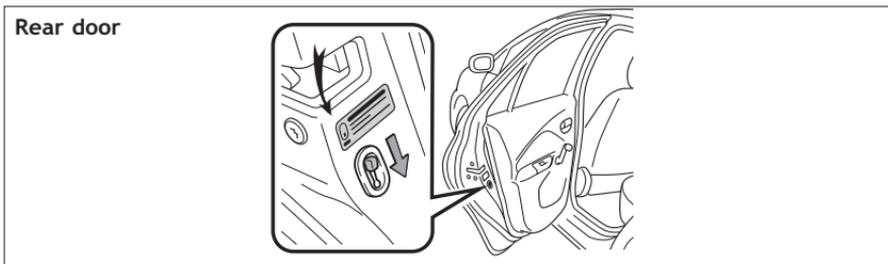

Moving the lever to “LOCK” will allow the door to be opened only from the outside.

Seat belts

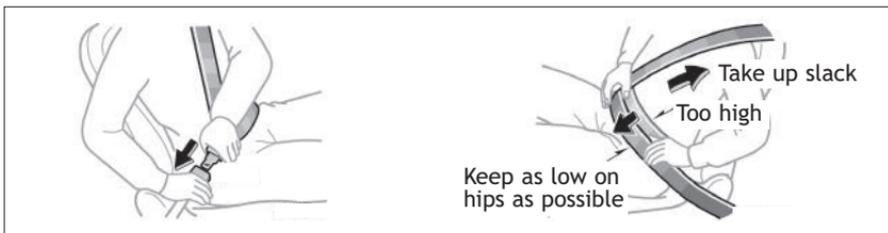

If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.


To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.

Tire Pressure Monitoring (warning) System

If tire pressure becomes critically low on any of the tires (excluding the spare), (⚠) indicator will illuminate. Correctly adjusting tire inflation will turn off the light after a few minutes. If the light does not turn off, have the system checked by your Toyota dealer.


Refer to the *Owner's Manual* for more details.

Seat belts-Shoulder belt anchor

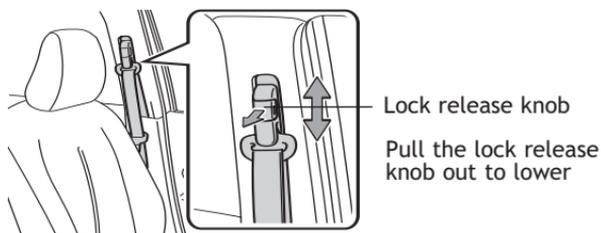


Spare tire & tools

Tool location

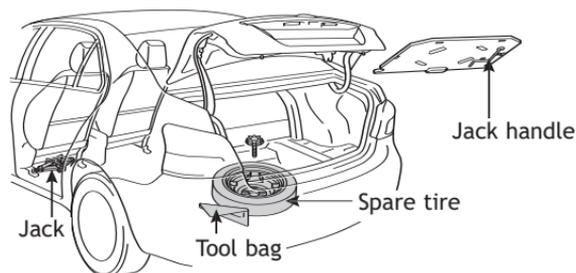


Removing the spare tire

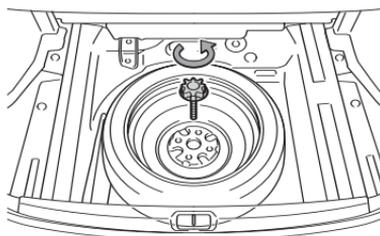

Loosen and remove the bolt.
Refer to the *Owner's Manual* for tire changing and jack positioning procedures.

Trunk-Internal release

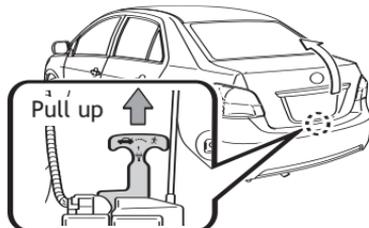



Customer Experience Center
1-800-331-4331

MN 00505-QRG09-YARS
Printed in the USA 7/08

Download from www.Somanuals.com. All Manuals Search And Download.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>