

# TRICITY

## TIR2410

### Steam Iron



Instruction Manual

**Please follow all the precautions listed below for safety and to reduce the risk of fire, injury or electrical shock.**

Read all the instructions before operating the iron and keep them for future reference. If you pass the product on to a third party, include these instructions.

Unplug the iron from the mains supply when not in use, and before emptying, filling, or cleaning.

Do not touch the soleplate of the iron if it is hot.

Always hold the appliance by the handle.

Keep the appliance well away from surfaces and objects that can be damaged by heat.

Ensure there is adequate room to operate the iron.

Ensure that the iron cannot fall into water.

Do not immerse the connecting cord in any liquid.

Do not let the connecting cord overhang the edge of the work surface or allow it to touch hot surfaces or sources of heat or flame.

If any part of this appliance is damaged or malfunctions in any way, or the connecting cord or mains plug is broken do not continue to use it. Seek expert assistance.

Do not use the iron if the cord insulation or conductors are visibly damaged.

Do not use the iron if water is leaking from it.

Do not leave the iron face down at any time. Stand it upright on its heel, on a level heatproof surface.

Do not use outdoors or in damp or wet conditions.

When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.

Do not use this iron for professional laundry services.

Do NOT use this appliance for any purpose not covered by the instructions.

Use caution when turning the iron upside down, there may be hot water in the water tank.

Use only with a purpose-built ironing board.

Observe all ironing instructions and ironing temperature dot settings given by the garment manufacturer. These are normally on a label or labels inside the garment.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of this appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

Parents must warn children not to touch hot appliance parts.

**The iron must not be left unattended while it is connected to the supply mains.**

**Do not use this iron if it is dropped, has visible signs of damage or is not watertight.**

**Burns can occur from touching hot metal parts, hot water or steam. Exercise care when handling this appliance!**

### **ELECTRICAL INFORMATION**

 
Before using this appliance ensure that the voltage of your electricity supply is the same as that indicated on the appliance.

The means of disconnecting this appliance from the mains supply is the mains plug. This should be unobstructed and readily operable at all times

**This appliance must be earthed**

## Features and controls

- A: Soleplate
- B: Spray nozzles
- C: Filler cap
- D: Steam control
- E: Shot of steam button
- F: Spray button
- G: Power cord
- H: Safety sleeve
- I: Water reservoir
- J: Temperature knob
- K: Power light
- L: Self-Clean button
- M: Maximum filling level

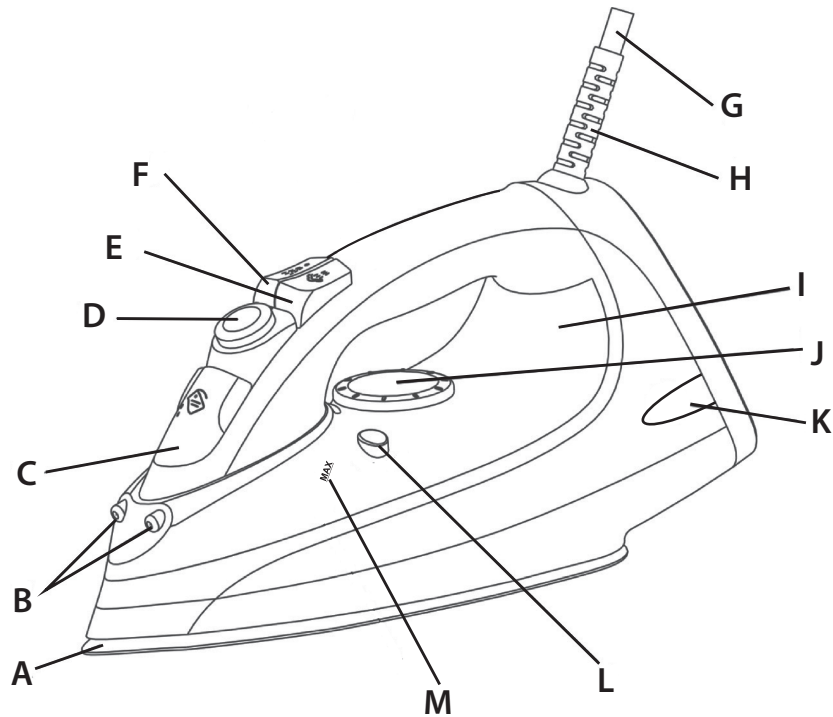

### Unpacking Your Iron

Unpack the iron carefully. If you dispose of the packaging, do so having regard to any recycling regulations in your area.

#### **The packaging contains:**

One Tricity Steam Iron

One filler cup

**If any item is missing or damaged:** please contact the Tesco store where you purchased the item, or your nearest Tesco store. Please have your receipt ready when you call.

### Important Special Features of Your Iron

**Soleplate:** The soleplate of the iron is coated. To protect the finish do not use abrasives to clean the iron and avoid running the iron over hard metal surfaces.

**Anti-Scale System:** A special resin filter inside the water reservoir softens the water and prevents scale build-up in the plate. The resin filter is permanent and does not need replacing.

Use tap water only. Distilled and/demineralised water makes the anti-calc system ineffective by altering its characteristics. Do not use chemical additives, scented substances or decalcifiers. Failure to comply may invalidate the guarantee.

**Anti-Drip System:** Always iron delicate fabrics at low temperatures. At these low temperatures the soleplate may cool to the point where no steam comes out, but drops of boiling water can still escape which can leave marks or stains. If this occurs, the Anti-drip system automatically activates to prevent vapourization, so that you can iron the most delicate fabrics without risk of spoiling or staining them.

### Ironing Temperatures

Check the ironing instructions attached to the article (they are on a label showing a symbol of an iron). Always follow these ironing instructions. The indications on the iron's temperature dial and the table below will help you.

If there are no ironing instructions but you know the fabric, then use the table below. The table is valid only for the actual materials and does not take account of any finish applied to the fabric. Textiles to which a finish has been applied (wrinkle relief, printed T shirts etc.) should be ironed at lower temperatures.

If the fabric contains mixed fibres, select the lowest ironing temperature of the composition, e.g. iron a 60% polyester /40% cotton mix at the temperature indicated for polyester.



#### **Do not iron**

**Synthetics.** Set Iron to LOW (•)

**Wool, Silk.** Set Iron to MEDIUM (••)

**Cotton, Linen.** Set Iron to HIGH (•••)

The iron heats up quicker than it cools down. Sort fabrics to be ironed into groups according to temperature; wool with wool, cotton with cotton, etc. Start by ironing articles requiring low temperature settings and progress to higher ones.

**Note:** Do not iron garments that are dirty or stained. The heat may set the stain.

Pure (100%) wool fabrics may be pressed with the iron set to a steam position and the garment protected by a dry cloth.

# Basic Operation

## Filling the Iron

DO NOT use water containing softeners, perfumes or additives as these may damage the iron irreparably.

 
Unplug the iron from the mains. Set the Steam Control to **OFF**.

Lift up the water filler cap. Be careful not to use excessive force or you may damage the hinge.

Fill carefully with fresh water using the supplied filler cup.

Do not fill the iron above the **MAX** mark indicated on the side of the iron.

Close the cap

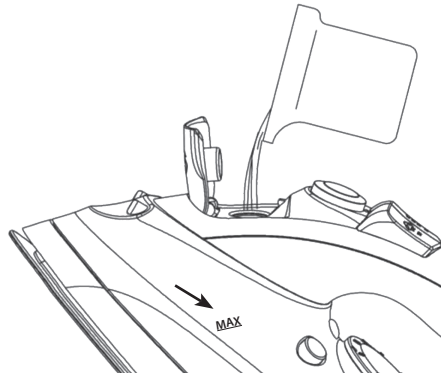

## Operation

Ensure the mains socket is switched off at the wall and the Steam Control is **OFF**.

 
Fill the iron with water as described above.

Place the iron on its heel on the ironing board rest and connect the power cord to the wall socket.

Switch on the power. The pilot light will illuminate.

Select the correct temperature.

Turn clockwise to increase and anti clockwise to reduce temperature.

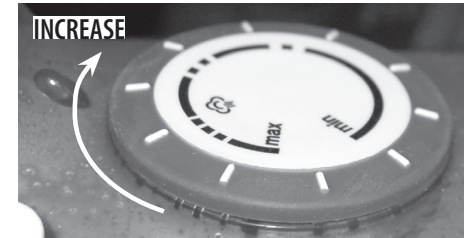

The pilot light will turn 'OFF' when the indicated setting reaches the correct temperature. The iron is now ready for use.

During use the indicator will come on and off as the thermostat maintains the iron at the correct temperature setting.

**Note:** Some parts have been lightly greased and the iron might smoke slightly when switched on for the first time. After a short while, this will cease.

**Before using your iron for the first time:** Pass the iron over a clean cotton cloth to remove any residue.

## Steam Ironing

Steam Ironing should be carried out at the highest settings on the temperature dial.

The quantity of steam is regulated by the Steam Control.

Move the steam control to a suitable position depending on the amount of steam required and the ironing temperature.

 
Warning: the iron gives off steam continuously only if you hold the iron horizontally. You can stop the continuous steam by placing the iron in a vertical position or by moving the steam selector to **MIN**.

### Shot of Steam Button

This feature may be used during steam or dry ironing but only when the iron is at highest settings.

Press the Shot of Steam button to release a surge of steam. You may need to press the button a few times to prime the system. Wait a few seconds for the steam to penetrate the fabric before pressing the button again.

Excessive use of this feature will cause the iron to cool, and the pilot light will illuminate. If this happens, wait for the pilot light to go out before using the feature again.

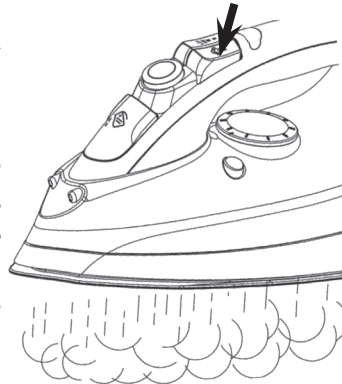


### Vertical Shot of Steam

Set the iron to its highest temperature and wait for the pilot light to go out.

Set the iron vertical. Hold the iron away from you and 15 – 30 centimetres from the garment.

Press the Shot of Steam Button once. Steam penetrates into the garment removing the wrinkles.

 **For stubborn wrinkles:** set the iron back on its stand and wait a few seconds. Repeat the procedure once more. Most wrinkles can be removed within three presses.

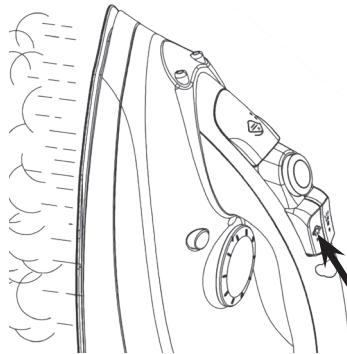

**Warning:** DO NOT allow anyone to come near you during this process.

NEVER allow steam to get anywhere near your body or clothing or apply steam to clothes or fabrics that are being worn by human or pets. DANGER OF SCALDING.

Hold the iron facing away from you at all times. DO NOT OVERREACH or operate the iron while standing on a ladder etc.

### Spray Button

Press the spray button to spray water on the material. It may be used for steam or dry ironing.

Note: To avoid staining, do not use the spray on silk or synthetics, and be careful when you iron delicate fabrics.

Note: For Spray and Shot of Steam functions to operate, the water tank must be at least one-quarter full.

 
If these features stop working place the iron on its stand and fill the water tank.

### During Ironing:

In between operations always stand the iron on its heel.

NEVER leave the iron face down.

During use, the anti drip system may emit a loud clicking sound, particularly when the iron heats up or cools down. This is normal and indicates that the system is functioning correctly.

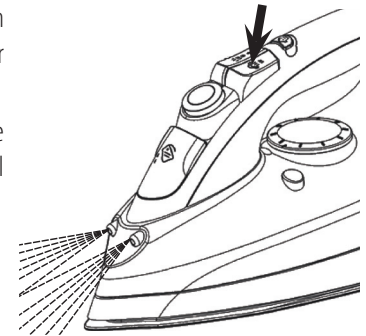

## Care, Cleaning and Storage

### After you have finished ironing:

Set the steam control to minimum.

 
Switch the iron off at the mains and unplug.

Stand the iron on its heel and let the iron cool down fully.

### When the iron is cool:

Invert the iron, open the filler and pour away the excess water from the tank.

When pouring away the water, gently shake the iron to remove any loose particles from the tank.

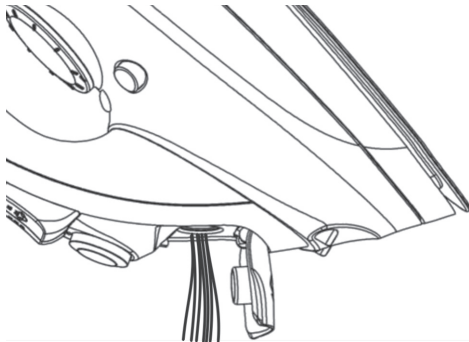

### Care and Cleaning

Unplug the iron from the mains and allow it to cool down fully.

**Cleaning:** To remove starch or other deposits from the soleplate, apply a small amount of mild cleaner to a damp cloth, forming a paste on the cloth. Gently rub the soleplate, then wipe with a moist cloth.

The body of the iron may now be cleaned with a barely damp cloth and then dried thoroughly. Do not wet the appliance body, cord or mains plug.

**CAUTION:** Never use scouring pads, abrasives or harsh cleaners on the iron body or the soleplate.

### Self Cleaning

This operation removes scale and impurities from the iron. We recommend using it every 10-15 days.

Fill the reservoir to the MAX level. Set the steam control to "0".

Set the temperature knob to the highest temperature.

Switch the iron on and wait for the power light to turn off.

Unplug the iron from the mains.

Hold the iron horizontally over the sink.

Press and hold the Self Clean button.

Steam and boiling water will drain from the holes on the soleplate washing away any deposits that have built up. Gently move the iron back and forth until the water tank is empty.



When Self-Cleaning is complete, release the Self-Clean button. Rest your iron on its heel rest and allow to fully cool down. Wipe the soleplate with a cold damp cloth. and store it safely.

### Storage

When not in use the iron should be securely stored out of the reach of children. Store the iron on its heel. Do NOT store the iron on its soleplate or you may damage the finish.

loosely loop the cord without kinking or straining it.

**Do not** wrap the cord tightly around the body of the iron.

After storage, always ensure the cord is fully unwound and kinks are straightened out to prevent internal damage to the cord.

### Warranty

Your Tricity iron is covered by a warranty for 12 months from the date of purchase. If a fault develops during this period, please return the unit to your nearest Tesco store together with the original receipt as proof of purchase. This warranty in no way affects your consumer rights.

### Specifications

Voltage Rating: 220-240V AC, 50Hz

Power Consumption: 2000-2400W

Net Weight: 1.5 kg



UK: Waste electrical products should not be disposed of with household waste. Separate disposal facilities exist, for your nearest facilities. See [www.recycle-more.co.uk](http://www.recycle-more.co.uk) or in-store for details.

ROI: Produced after 13th August 2005. Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

# TRICITY

Tesco Stores Ltd, Delamare Road,  
Cheshunt, Herts, EN8 9SL



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>