





Amazing Shooting Star Projector


CAUTION:

Do not look directly into the light source. Doing so can cause serious and irreparable eye damage.

BATTERY INSTALLATION

Tool required - Small Phillips head screwdriver

- Using a Phillips head screwdriver, remove the battery cover as shown.
- 2. Insert 3 "AA" batteries as indicated in the battery compartment and replace cover.

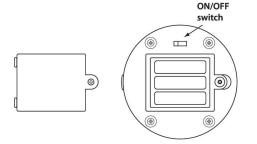

BATTERY SAFETY INFORMATION

- Non-chargeable batteries are not to be recharged
- Rechargeable batteries are only to be charged under adult supervision
- Rechargeable batteries are to be removed from the toy before being charged
- Different types of batteries or new and used batteries are not to be mixed
- Batteries are to be inserted with the correct polarity
- Exhausted batteries are to be removed from the toy
- The supply terminals are not to be short-circuited

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 Consult the dealer or an experienced radio/TV technician for help.

(AA/LR6) x3 Batteries not included Requires 3 x 1.5V AA/LR6 batteries


IMPORTANT: For best experience, use in a completely darkened room.

SET UP

- Slide the switch on the underside of the projector to the "ON" position.
- Place the projector on a desk or nightstand with the button on the side of the base pointing to

pointing to the center of the room.

3. Press the button to turn the projector on. Press again to turn off. NOTE: If left on, the projector will turn off automatically after 15

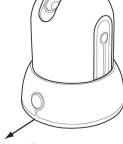

Center of room

arter 15 minutes. Press the button again to awake the projector.

 Adjust the angle of the projector as needed to see shooting stars streak across the ceiling of your room.

STAR STICKERS

Create a glow-in-the-dark night sky with the included stickers. Simply stick them on your ceiling or walls.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE — DO NOT DISCARD

Ouestions? Visit unclemitton.com

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com