

Uniden®

DXI 986-2



**QUICK
EASY
STEPS**
FOR SETTING
UP YOUR
PHONE!

OWNERS

DXI 986-2 SERIES

Download from www.Somanuals.com. All Manuals Search And Download.

EASILY REGISTER THIS
PRODUCT ONLINE AT
www.uniden.com

Step 1 Checking the Package Contents

Make sure you have received the following items in the package. If any of these items are missing or damaged, contact the Uniden Parts Department.

- Main base unit (1)
- Handset (2)
- Charging cradle (1)
- AC adapter (2)
- Rechargeable battery (2)
- Telephone cord (1)
- Beltclip (2)
- This owner's manual (1)
- Other printed material (1)

Uniden Parts Department
at (800) 554-3988
Hours: M-F 8:00 a.m. to
5:00 p.m. CST.
or visit our website at
www.uniden.com for
replacement parts.

Step 2 Install and Charge the Handset Batteries

TO INSTALL THE HANDSET BATTERIES

 
(see page 10 for details)

Charge the handset battery packs for at least 15-20 hours before using your new cordless telephones for the first time!

- A** Remove the cover.
Use only the Uniden rechargeable battery packs supplied with your new phones!



- B** Connect the battery Pack connector with the correct polarity.



- C** Replace the cover.



Plug each AC adapter cord into each charging cradle and then into each 120V AC outlet.
Use only the Uniden AC adapters supplied with your new phones!

D

 


E

Place the handset in the main base and place the other handset in the charging cradle, and then charge continuously for 15 - 20 hours before using the phone.

Step 3 Connect to Phone Line

When the handset battery packs are fully charged, after 15-20 hours of charging, plug the telephone cord into the main base unit and then into a telephone wall jack.



Your phones are set for tone dialing. If your local network requires pulse dialing, please see "Choosing the dialing mode" on page 18.

Step 4 Register 2nd Handset to Main Base

A After fully charging both handsets, remove the second handset from the extra charging cradle and place in the main base unit. The main base LED light will flash indicating registration is occurring.

B Wait for at least 5 seconds before removing handset. Once registration is complete, the cordless phone is ready for use.

Step 5 Setting Menu Display Options



Note: There are five setup options available. They are Caller ID options (AutoTalk, CIDCW [Caller ID on Call Waiting], Area Code), Dial Mode and Language (see page 16 for details).

TO SET CALLER ID, LANGUAGE AND DIALING OPTIONS

- A** Press and hold the *caller id/menu* key in standby mode.
- B** Press the *vol/▲/∧* or *vol/▲/∨* key to move the pointer to an option.
- C** Press the *select/channel* key to change the option setting.
- D** Press the *end* key to exit, and return the handset to the main base.

OPTIONS INCLUDE

- A** Auto Talk On/Off
- B** CIDCW On/Off
(Caller ID on Call Waiting)
- C** Area Code Enter/Remove
- D** Dial Pulse/Tone
- E** Language English/French/Spanish

1° Paso Inspección del contenido del embalaje

Asegúrese de que haya recibido los siguientes artículos en el paquete. Si alguno de estos artículos falta o está dañado, comuníquese con el departamento de partes de Uniden.

- Base principal (1)
- Receptor (2)
- Cargador (1)
- Adaptador CA (2)
- Pila recargable (2)
- Cable telefónico (1)
- Pinza para la correa (2)
- Este manual para el usuario (1)
- Otros folletos (1)

Uniden Parts Department
Teléfono: (800)554-3988
Horas: de Lunes a Viernes
desde las 8:00 a.m. hasta las
5:00 p.m., hora central
O visítenos en nuestra página
Web en www.uniden.com
para conseguir las partes de
reemplazo.

2° Paso Instalación y carga de la pila para el receptor

PARA INSTALAR LA PILA DEL RECEPTOR

(Consulte la página 10 para más detalles)

¡Cargue el paquete de pilas del receptor por lo menos de 15-20 horas antes de usar sus nuevos teléfonos inalámbricos por primera vez!

- A** Quite la tapa.
¡Use solamente los paquetes de pilas recargables de Uniden suministrado con sus nuevos teléfonos!



- B** Conecte el enchufe del paquete de las pilas con la polaridad correcta.



- C** Reponga la tapa.



Conecte cada cable de los adaptadores CA en cada cargador y luego en tomas de 120V AC.

 
- D** ¡Use solamente los adaptadores CA de Uniden suministrados con sus nuevos teléfonos!



- E** Coloque el receptor en la base y coloque el otro receptor en el cargador, y cárguelos continuamente por 15-20 horas antes de usar el teléfono.

3° Paso Conexión a la línea telefónica

Cuando los paquetes de pilas estén totalmente cargados, después de una carga de 15-20 horas, conecte el cable telefónico en la base y luego en el enchufe telefónico de la pared.




Sus teléfonos están programados para marcación por tono. Si su red local requiere la marcación por pulso, por favor consulte "Selección del modo de marcación" en la página 18.

4° Paso Registre el 2° receptor en la base principal antes de usarlo

- A** Después de cargar totalmente los dos receptores, quite el segundo receptor del cargador extra y colóquelo en la base principal. El LED de la base comenzará a destellar indicando que el registro está teniendo lugar.

- B** Espere por lo menos 5 segundos antes de quitar el receptor de la base. Una vez que el registro esté completo, podrá usar el teléfono

 5° Paso Programación de las opciones para la exhibición en la pantalla



Nota: Hay 5 opciones de programación disponibles. Estas son opciones de la identificación de llamadas (AutoTalk, CIDCW [Identificación de llamadas de llamadas en espera], Código del área), Modo de marcación y del lenguaje. (Consulte la página 16 para más detalles).

PARA PROGRAMAR LAS OPCIONES DE IDENTIFICACIÓN DE LLAMADAS, LENGUAJE Y MARCACIÓN

- A** Mantenga oprimido el botón **caller id/menu** en el modo de espera.
- B** Oprima el botón **vol/▲/△/∧** o **vol/▼/▽/∨** para mover el cursor a la opción deseada.
- C** Oprima el botón **select/channel** para cambiar la opción.
- D** Oprima el botón **end** para salir, y devuelva el receptor a la base.

LAS OPCIONES INCLUYEN

- A** Auto Talk Encendido/apagado
- B** CIDCW Encendido/apagado (Identificación de llamadas de llamadas en espera)
- C** Código del área Insertar/quitar
- D** Marcación Pulso/tono
- E** Lenguaje Inglés/ Francés/ Español

Contents

Quick Reference Guide	3	Chain Dialing	28
Welcome/Features	6	Editing a Stored Name and/or Phone Number	29
Controls and Functions	7	Erasing a Stored Name and Phone Number	31
Getting Started		RocketDial	
Setting up the Phone	9	RocketDial	32
Register Handsets to Main Base Before Using!	14	Storing and Editing the RocketDial	32
When to Re-register Handsets	15	Making Calls with the RocketDial	33
Call Transfer Feature	15	Deleting the RocketDial	33
Setting Menu Display Options	16	Caller ID Features	
Basics		Caller ID and CIDCW (Caller ID on Call Waiting)	34
Making and Receiving Calls	19	When the Telephone Rings	34
Adjusting the Handset Ringer and		Viewing the Caller ID Message List	35
Earpiece Volume	20	Deleting Information from the Caller ID List	36
Redial	21	Using the Caller ID List	38
Tone Dialing Switch-over	21	Additional Information	
Traveling Out-of-Range	21	Changing the Digital Security Code	40
Selecting a Different Channel	22	Installing the Beltclip	40
Find Handsets	22	Headset Installation	41
Flash and Call Waiting	22	Note on Power Sources	41
Voice Mail Waiting Indicator	23	Maintenance	41
Memory Dialing		Troubleshooting	42
Storing Phone Numbers and Names in Memory		General Information	45
Dial	24	Precautions & Warranty	46
Steps for Entering Names and Special Characters	26	I.C. Notice	48
Making Calls with Memory Dialing	27	Index	49

Welcome

Congratulations on your purchase of the Uniden cordless telephone. This cordless phone is designed and engineered to exacting standards for reliability, long life, and outstanding performance.

Note: Some illustrations in this manual may differ from the actual unit for explanation purposes. The color of your cordless telephone may vary.

Features


- 900 MHz Extended Range Technology
- 3 Line Backlit Display
- English, French or Spanish Display Option
- Caller ID and Caller ID on Call Waiting
- RocketDial®
- 10 Number Memory Dialing
- Last Number Redial
- Flash and Pause
- Tone/Pulse Dialing
- Find Handset Locator
- Earpiece Volume Control
- Ringer Volume Control (High-Low-Off)
- Hearing Aid Compatible
- 20 Channel Autoscans
- Call Transfer from Handset to Handset

Be sure to visit our web site: www.uniden.com

Uniden® and RocketDial® are registered trademarks of Uniden America Corporation. AutoTalk, AutoStandby, UltraClear Plus, Random Code and AutoSecure are trademarks of Uniden America Corporation.


Controls and Functions

Handsets

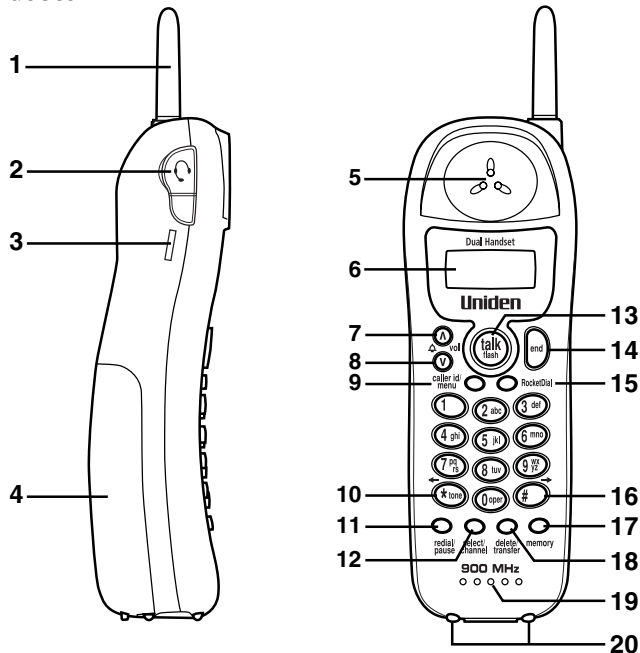


1. Handset antenna
2. Optional headset jack
3. Beltclip hole
4. Handset battery compartment
5. Handset earpiece
6. LCD display
7. vol/▲/▲ (volume & scroll) key (p. 20)
8. vol/▲/▼ (volume & scroll) key (p. 20)
9. caller id/menu key (p. 16/34)
10. ✱/tone/← (left cursor) key (p. 21)
11. redial/pause key (p. 19)
12. select/channel key (p. 22/24)
13. talk/flash key (p. 19)
14. end key (p. 19)
15. RocketDial key (p. 32)
16. #/→ (right cursor) key (p. 24)
17. memory key (p. 24)
18. delete/transfer key (p. 15/31)
19. Handset microphone and ringer speaker
20. Handset charging contacts

Main Base Unit

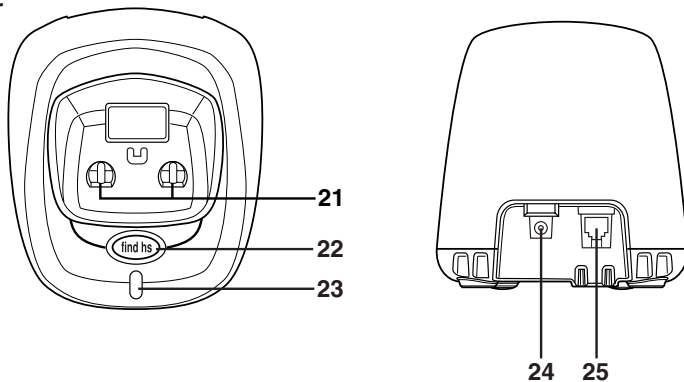

Extra Charging Cradle (for Second Handset)

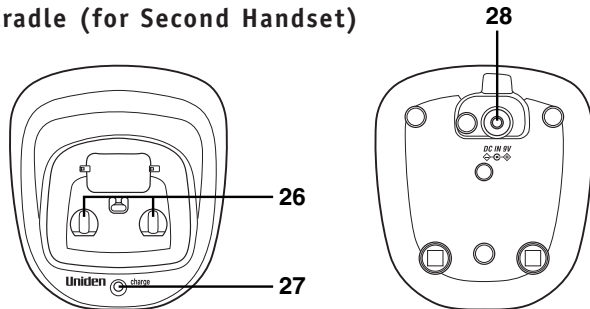

21. Main base charging contacts
22. find hs key (p. 22)
23. charge/in use and VMWI (Voice Mail Waiting Indicator) LED
24. DC IN 9V jack
25. Telephone line jack
26. Charging contacts
27. Charge LED
28. DC IN 9V jack

Setting up the Phone

Do the following steps:

- A. Choose the best location
- B. Install the rechargeable battery packs into both handsets
- C. Connect the main base unit and charging cradle

A. Choose the best location

Before choosing a location for your new phone, read the INSTALLATION CONSIDERATIONS included in the PRECAUTIONS. Here are some important guidelines you should consider:

Avoid heat sources, such as radiators, air ducts, and sunlight

Avoid television sets and other electronic equipment

Choose a central location


Avoid noise sources such as a window by a street with heavy traffic

Avoid microwave ovens

Avoid excessive moisture, extremely low temperatures, dust, mechanical vibration, or shock

Avoid personal computers

Avoid other cordless telephones

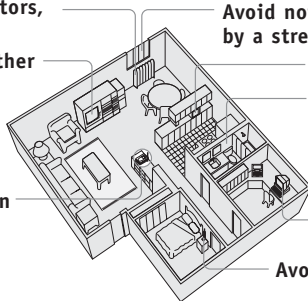

- The location should be close to both a phone jack and a continuous power outlet which is not switchable.
- Keep the main base and each handset away from sources of electrical noise such as motors, microwave ovens, and fluorescent lighting.
- The main base can be placed on a desk or tabletop.



If your home has specially wired alarm equipment connected to the telephone line, be sure that installing the system does not disable your alarm equipment.

If you have questions about what will disable your alarm equipment, contact your telephone company or a qualified installer.




Use only the Uniden (BT-905) rechargeable battery packs supplied with your cordless telephones.

B. Install the rechargeable battery packs into both handsets

Both handsets are powered by a rechargeable battery packs. The battery recharges automatically when the handset is placed in the main base unit or charging cradle.

Charge the handset battery pack for at least 15-20 hours before using your new cordless telephone for the first time! To maximize the charge capacity of your battery pack, DO NOT plug the telephone cord into the main base unit and wall jack until the battery is fully charged.


- 1) Press down on the handset battery case cover (use the finger indentation for a better grip) and slide the cover downward to remove.
- 2) Plug the battery pack connector (red & black wires) into the jack inside the battery compartment. (The connector notches fit into the grooves of the jack only one-way.) Match the wire colors to the polarity label in the battery compartment, connect the battery, and listen for a click to insure connection.
- 3) Make sure you have a good connection by slightly pulling on the battery wires. If the connection is secure, the battery jack will remain in place.

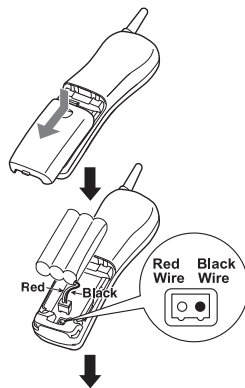

- 4) Place the battery case cover back on the handset by sliding it upwards until it clicks into place.
- 5) Place one handset in the main base unit and one handset in the charging cradle for 15-20 hours without interruption. The main base or charging cradle unit's LED light (labeled **charge/in use** or **charge**) illuminates once the handset is placed in the main base or charging cradle. The LED light will illuminate whether the battery pack is connected or not.

If the main base **charge/in use** or charging cradle **charge** LED light does not illuminate:

- Check to see if each AC adapter is plugged into both cradles and the electrical wall outlets properly. (Use only the supplied AC adapters. Do not use any other AC adapters.)
- Check to see if both handsets are sitting correctly in each cradle and making good contact with each charging cradle unit's charging contact.

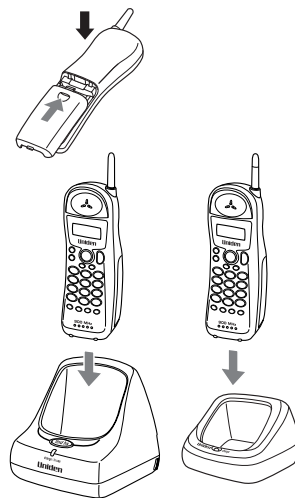

Place the handsets in the main base and charging cradle with the keypad facing forward for charging.



Replacement batteries are also available through the Uniden Parts Department at (800) 554-3988, Monday through Friday from 8:00 a.m. to 5:00 p.m. or online at www.uniden.com



- Even when the battery pack is not being used, it will gradually discharge over a long period of time. For optimum performance, be sure to return the handset to either cradle after a telephone call.
- **Talk Mode** - The handset is off either charging cradle and the **talk/flash** key has been pressed, enabling a dial tone.
- **Standby Mode** - The handset may be sitting in or off either charging cradle but is NOT in use. The **talk/flash** key has not been pressed and there is no dial tone.

Low battery alert

When the battery pack is very low and needs to be charged, the phone is programmed to eliminate functions in order to save power. If the phone is not in use, **Low Battery** appears on the LCD and none of the keys will operate.

If the phone is in use, **Low Battery** flashes and the handset beeps. Complete your conversation as quickly as possible and return the handset to either charging cradle for charging.

 


Dial mode setting, last number dialed, names and numbers stored in memory locations (including RocketDial), CID list are retained for up to 30 minutes while you replace the battery pack.

Cleaning the battery charging contacts

To maintain a good charge, it is important to clean the charging contacts on both handsets once a month. Using water only, dampen a cloth to clean the charging contacts. Then make sure to go back over the charging contacts with a dry cloth before returning the handsets to the main base unit or charging cradle to charge.

Caution: Do not use paint thinner, benzene, alcohol, or other chemical products. Doing so may discolor the surface of the telephone and damage the finish.



Contacts

 

C. Connect the main base unit and charging cradle

1) Connect each AC adapter to the **DC IN 9V** jack and to each standard 120V AC wall outlet.

2) Set the main base and charging cradle on a desk or tabletop, and place one handset in the main base unit and one in the charging cradle.

3) Make sure that the **charge/in use** and **charge** LED illuminate.

If the LED does not illuminate, check to see that the AC adapter is plugged in and the handset makes good contact with the cradle's charging contacts.

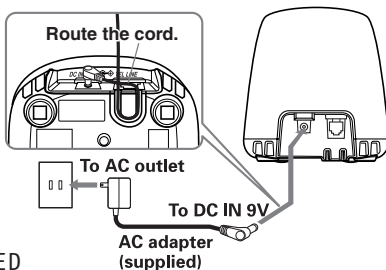

- Connect each AC adapter to each continuous power supply.
- Place the main base unit and charging cradle close to the AC outlets so that you can unplug the AC adapters easily.

• After installing the battery packs in the handsets, charge your handsets at least **15-20 hours before plugging into the phone line.**


4) Once the handset battery packs are fully charged, connect the telephone line cord to the **TEL LINE** jack and to a telephone outlet.



If your telephone outlet isn't modular, contact your telephone company for assistance.




Modular

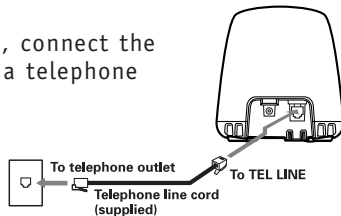

- Use only the supplied AD-0001 AC adapters. Do not use any other AC adapters.
- Place the power cord so that it does not create a trip hazard or where it could become chafed and create a fire or electrical hazard.



 - When you charge the handsets, Caller ID summary screen and the name of the handset, **HS1** appears. If **HS2** appears, you are charging the handset No. 2.



- The charging cradle can be used to charge either handset.

Register Handsets to Main Base Before Using!

When handsets are removed from the packaging, install batteries and fully charge for 15-20 hours.

The handset YOU CHOOSE (does not matter which handset) to place in the main base to charge, will automatically be registered to that main base.

The second handset (charging in the extra charging cradle), MUST also be registered to the main base before use. Follow the steps below to registered the second handset.

Follow these simple steps to register:

- 1) First, install the battery packs in both handsets. Place either handset in the main base, then place the second handset in the charging cradle. Charge both handsets **for 15-20 hours**.
- 2) After fully charging both handsets, remove the handset in the charging cradle, and place it in the main base. The **charge/in use** LED light on the main base will begin to flash, indicating that the registration is taking place between the second handset and the main base.
- 3) Wait for at least 5 seconds before removing the handset from the main base.

Congratulations, the registration has been completed, and your dual handset cordless phones are ready for use!

When to Re-register Handsets


- 1) You'll need to re-register the second handset (follow steps on page 14) each time the digital security code is changed. Refer to page 40 for details regarding the Digital Security Code.
- 2) When there is a power failure for more than one hour:
If power failure occurs (e.g. due to electrical storm or if the unit is unplugged during a move), both handsets will need to be re-registered. To re-register, follow the same registration process on page 14.

Call Transfer Feature

Conveniently, your cordless phone allows you to transfer outside calls from handset to handset, simply by pressing the **delete/transfer** key. Not to worry, conversations will not be interrupted; only one handset at a time can talk with an outside caller. The second handset cannot go off hook to listen to conversations or make an outgoing call while the other handset is in use.

To transfer a call (to the second handset)

- 1) Press **delete/transfer** during a call. The call will automatically be placed on hold and the transfer tone sounds.
- 2) When the other handset receives the call, the transfer tone stops. To cancel the transfer, press **delete/transfer** or **talk/flash** on the handset.

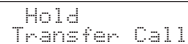

Hold
Transfer Call

To receive a transfer call (from the second handset)

Pick up the handset (when AutoTalk is set to on), or pick up the handset and press **talk/flash** to answer the transferred call. Additionally, you can answer the transferred call by pressing any number key, ***/tone/←** or **#/→** (when AutoTalk is set to on).



Transfer Call

note

- If the second handset's battery becomes very low, the handset must be recharged for 15-20 hours and re-registered to the main base unit.
- Make sure to return the handsets to the charging cradles after each phone call.
- **Call transfer** allows you to transfer outside calls from handset to handset, only one handset at a time can talk with an outside caller.
- If you transfer the call and it is not picked up after 5 minutes, the call will be disconnected.



The cordless phone features include **AutoTalk™** and **AutoStandby™**. AutoStandby allows you to hang up by simply returning the handset to the main base or charging cradle.

Setting Menu Display Options

There are five setup options available. They are Caller ID options (AutoTalk, CIDCW [Caller ID on Call Waiting], Area Code), Dial mode and Language.

AutoTalk allows you to answer the phone without pressing the **talk/flash** key. If the phone rings when AutoTalk is on, simply remove the handset from either charging cradle and the phone automatically answers the call. If the phone rings when AutoTalk is off, you must press the **talk/flash** key to answer the call.

CIDCW and Dial Mode options can only be set by using Handset 1. If you try to set by using Handset 2, you will not see these options listed on the LCD screen. To confirm which handset is HS1, refer to the display indicating HS1 or HS2.

AutoTalk, Area Code and Language options can be set by using either Handset 1 or Handset 2.

```
Auto Talk :Off
Area Code :
Language  :Eng
```

Caller ID options

To change your AutoTalk and CIDCW:

- 1) Press and hold the **caller id/menu** key. The following screen appears.
- 2) Use the **vol/▲/∧** or **vol/▲/∨** key to move the pointer to the selection that you would like to change. Press the **select/channel** key to toggle between On and Off.
- 3) Press the **end** key and return the handset to the main base unit to complete the setting. The handset returns to standby mode.

```
Auto Talk :Off
CIDCW     :On
Area Code :
```


Entering Your Area Code

If you enter a 3-digit area code number in the **Area Code** option, your local area code does not appear in Caller ID messages. Do not program this option if your calling area requires 10-digit dialing. When reviewing Caller ID messages, you will see only the local seven digit number. For calls received from outside your local area code, you will see a full 10-digit number.

1) When the phone is in standby mode, press and hold the **caller id/menu** key. The Caller ID setting screen appears.

```

▶Auto Talk   :Off
CIDCW       :On
Area Code   :
  
```

2) Press the **vol/▲/▼** key twice to select **Area Code**.

```

Auto Talk   :Off
CIDCW       :On
▶Area Code  :
  
```

3) Press the **select/channel** key.

4) Use the number (**0 - 9**) or **delete/transfer** key to enter the 3-digit area code.

```

Auto Talk   :Off
CIDCW       :On
▶Area Code  :■
  
```

5) Press the **select/channel** key. A confirmation tone sounds and the displayed area code is entered.

6) Press the **end** key or return the handset to the main base unit or charging cradle to complete the setting. The handset returns to standby mode.

When the area code has already been stored in memory, the stored area code will be displayed. To change it, use the **delete/transfer** key and number keys to enter the new area code.

Then press the **select/channel** key. A confirmation tone sounds. To complete the setting, press the **end** key or return the handset to the main base unit or charging cradle.

```

Auto Talk   :Off
CIDCW       :On
▶Area Code  :817
  
```

note

Make sure your battery pack is fully charged before choosing the dialing mode.



- Dialing mode can only be changed from handset 1. To confirm which handset is HS1, look at the display indicating HS1 or HS2.
- If you are not sure of your dialing system, set for tone dialing. Make a trial call. If the call connects, leave the setting as is. Otherwise set for pulse dialing.
- If your phone system requires pulse dialing and you need to send the DTMF tones for certain situations during a call, you may switch over to tone dialing. (Refer to "Tone Dialing Switch-over" on page 21.)

Choosing the dialing mode

Most phone systems use tone dialing which sends DTMF tones through the phone lines. However, some phone systems (such as those in rural areas) still use pulse dialing. The default setting is tone dialing. Depending on your dialing system, set the mode as follows:

- 1) When the phone is in standby mode, press and hold the **caller id/menu** key. The following screen appears.
- 2) Press the **vol/▲/▼** key three times to select **Dial**.
- 3) Press the **select/channel** key to toggle between **Tone** and **Pulse**.
- 4) Press the **end** key and return the handset to the main base unit to complete the setting. The handset returns to standby mode.

```
▶Auto Talk :Off
CIDCW      :On
Area Code  :
```

```
CIDCW      :On
Area Code  :
▶Dial      :Tone
```

Setting the language

There are three languages to choose from; English, French and Spanish.

- 1) When the phone is in standby mode, press and hold the **caller id/menu** key. The following screen appears.
- 2) Press the **vol/▲/▼** key four times to select **Language**.
- 3) Press the **select/channel** key to toggle between **Eng**, **Fr.** and **Esp.**
- 4) Press the **end** key or return the handset to the main base unit or charging cradle to complete the setting. The handset returns to standby mode.

```
▶Auto Talk :Off
CIDCW      :On
Area Code  :
```

```
Area Code  :
Dial       :Tone
▶Language  :Eng
```

Making and Receiving Calls

	Handset On Main Base or Charging Cradle	Handset Off Main Base or Charging Cradle
To receive a call	Pick up the handset (AutoTalk: on) or pick up the handset and press the talk/flash key (AutoTalk: off).	Press the talk/flash key (AutoTalk: off), or press the talk/flash, */tone/←, #/→ , or any number key (AutoTalk: on).
To make a call	<ol style="list-style-type: none"> 1) Pick up the handset. 2) Press the talk/flash key. 3) Listen for the dial tone. 4) Dial the number. <p style="text-align: center;">OR</p> <ol style="list-style-type: none"> 1) Pick up the handset. 2) Dial the number, then press the talk/flash key. 	<ol style="list-style-type: none"> 1) Press the talk/flash key. 2) Listen for the dial tone. 3) Dial the number. <p style="text-align: center;">OR</p> <p>Dial the number, then press the talk/flash key.</p>
To hang up	Press the end key or return the handset to the main base or charging cradle (AutoStandby).	
To redial	<ol style="list-style-type: none"> 1) Pick up the handset. 2) Press the talk/flash key. 3) Listen for the dial tone. 4) Press the redial/pause key. <p style="text-align: center;">OR</p> <ol style="list-style-type: none"> 1) Pick up the handset. 2) Press the redial/pause key, then press the talk/flash key. 	<ol style="list-style-type: none"> 1) Press the talk/flash key. 2) Listen for the dial tone. 3) Press the redial/pause key. <p style="text-align: center;">OR</p> <p>Press the redial/pause key, then press the talk/flash key.</p>



Refer to page 16 "Setting Menu Display Options" to turn on the AutoTalk feature if desired.

Adjusting the Handset Ringer and Earpiece Volume

Handset ringer tone and volume

Press the volume up key or volume down key (labeled as the **vol/▲/▲** or **vol/▲/▼** key) in standby mode to select one of five ringer tones and volume combinations.

Earpiece volume


Pressing the volume up key or volume down key (labeled as the **vol/▲/▲** or **vol/▲/▼** key) during a call will change the earpiece volume of the handset. This setting will remain in effect after the telephone call has ended.



When you press volume up key (the **vol/▲/▲** key) in Maximum mode or volume down key (the **vol/▲/▼** key) in Low mode, an error tone sounds.

Temporarily Mute Ringer

If the handset is off the main base or charging cradle, simply press the **end** key to temporarily mute the incoming ring. The ringer will sound with the next incoming call.

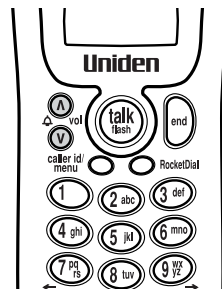

Redial

The **redial/pause** key redials the last number dialed. The redialed number can be up to 32 digits long.


Tone Dialing Switch-over

Some telephone companies use equipment that requires pulse dialing (sometimes referred to as rotary dialing). If you need to enter tone dialing digits, you can switch-over to tone dialing during the call. This feature is useful when you need tone dialing to use automated systems, for example, entering your bank account number after you have called your bank.

Initially make your call with the pulse dialing mode. Once your call connects, press the ***tone/←** key. Enter the desired number. These digits will be sent as tone dialing. Once the call ends, the tone mode is canceled and pulse dialing mode resumes.

Traveling Out-of-Range

During a call, as you begin to move your handset too far from your main base unit, noise increases. If you pass the range limits of the main base unit, your call will terminate within 5 minutes.

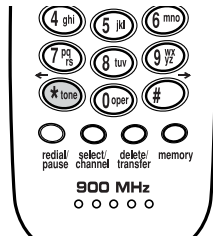

note

- The tone feature only applies when the dial mode is set to pulse.
- This special number can be stored in a memory location. This is referred to as Chain Dialing (see page 28).



- The **UltraClear Plus™** true compander circuitry virtually eliminates background noise. This innovative technology, together with 20 different channels, provides you with the best possible reception during all your conversations.
- Paging is also canceled when the phone receives an incoming call.


Selecting a Different Channel

If you encounter interference while using your phone, you can manually change the phone's channel for clear operation. This function works only when the phone is in use. Press the **select/channel** key. **Scanning** appears on the display, indicating the phone is changing to another channel. For more information on interference, refer to "Precautions" on page 46.


Find Handsets

To locate the handsets, press the **find hs** key on the main base. Both handsets beep for 60 seconds.

Paging of both handsets is canceled when pressing any key on either handset or the **find hs** key on the main base.

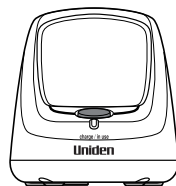

Flash and Call Waiting

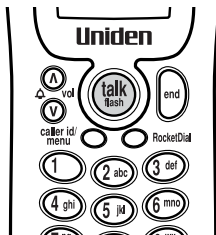

If you have "Call Waiting" service and a call waiting tone sounds while you are on a call, press the **talk/flash** key to accept the waiting call. There is a short pause, then you will hear the new caller. To return to the original caller, press the **talk/flash** key again.



You must subscribe through your local telephone company to receive Call Waiting service.

Voice Mail Waiting Indicator

If you subscribe to voice mail service, you can use your cordless telephone to access your voice mailbox. The **charge/in use** LED light on the main base of your phone flashes whenever you have messages waiting in your voice mailbox. Just program the **RocketDial** key with your access number, and you can get your messages at the touch of a button. (The voice mail service provider will supply you with the access number. This number may be simply a phone number. Refer to the provider's literature.)

You may need to occasionally reset the indicator if it remains on after you have retrieved your messages. To reset the indicator, press and hold the **find hs** key for 5 seconds.



You must subscribe to voice mail service from your telephone company in order to use this feature. The voice mail company will provide you with the access number.



In memory dialing operation, you must press a key within 30 seconds or the phone will return to standby mode. If you return the handset to the main base, the phone will return to standby mode also.

Storing Phone Numbers and Names in Memory Dial

Memory Dialing allows you to dial a number using just a few key presses. Your cordless phone stores up to 10 names/numbers in each handset.

- 1) Press the **memory** key in standby mode. `Select Memory` is displayed.
- 2) Enter a number (**0 - 9**), or press the **vol/▲/∧** or **vol/▲/∇** key to select the memory location where you would like to store the number.
- 3) Press the **memory** or **select/channel** key.
- 4) Press the **memory** or **select/channel** key. `Store Name` appears and a cursor flashes indicating that the display is ready for the name to be entered.

If the Edit screen appears, the selected memory location is already stored. Then you must either edit the entry in this location, delete the entry in this location, or select `Go Back` to choose another location.

- 5) To enter a name (up to 13 characters), use the number keys.
 - See the "Steps for Entering Names and Special Characters" (see page 26).
 - Use the **#/→** and ***/tone/←** keys to move the cursor to the desired location.
 - Use the **delete/transfer** key to delete characters as needed.
 - Press and hold the **delete/transfer** key to delete all the characters.
 - If a name is not required, go to step 6.

```
Select Memory
01▶
02 JOHN DOE
```

```
01:(Empty)
Press Select
to edit
```

```
Store Name
█
```

```
▶Edit Memory01
Delete Memory01
Go Back
```


6) Press the **memory** or **select/channel** key. Store Number is displayed. The cursor flashes indicating that the display is ready for the number to be entered.

```
Store Number
█
```

7) Use the number keys, the ***/tone/←** or **#/→** key to enter the phone number.

The phone number cannot exceed 20 digits.

Use the **redial/pause** key to enter a pause in the dialing sequence.

The display shows a P. Each pause counts as one digit and represents a two second delay of time between the digits.

Use the **delete/transfer** key to delete digits as needed.

```
Store Number
8007303456█
```

8) Press the **memory** or **select/channel** key. You will hear a confirmation tone, and the following screen appears.

Memory storage is complete.

For example, if you store a name and number into memory location number 01, the display shows Memory01 Stored.

After about 2 seconds, the following screen is displayed.

Repeat steps 2 - 8 to store more numbers.

```
Memory01 Stored
```

9) Press the **end** key to exit memory setup mode, returning to standby.

```
01 Movies
02 JOHN DOE
03 MOM AND DAD
```



- The pause feature is useful for long distance calling, credit card dialing, or sequences that require a pause between digits.
- The pause key counts as one digit. Pressing the **redial/pause** key more than once increases the length of a pause between number.



If the next character uses the same number key, you must press the **#/→** key to move the cursor over. Otherwise the next time you press the number key, it changes the character that was previously set.

Steps for Entering Names and Special Characters

Refer to the letters on the number keys to select the desired characters. With each press of a numeric key, the displayed character appears in the following order: Upper case letters first, lower case letters next and finally the number corresponding to the key.

If you make a mistake while entering a name

Use the *** / tone / ←** or **# / →** key to move the cursor to the incorrect character. Press the **delete / transfer** key to erase the wrong character, then enter the correct character. To delete all characters, press and hold the **delete / transfer** key.

For example, to enter **Movies**.

- 1) Pick up the handset. Press the **memory** key.
- 2) Enter a number or press the **vol / ▲ / ^** or **vol / ▲ / v** key to select a memory location.
- 3) Press the **memory** or **select / channel** key.
- 4) Press the **memory** or **select / channel** key. (When there is information already stored in the selected memory location, **Edit MemoryXX** is displayed. See page 29 for information on "Editing a Stored Name and/or Phone Number".)
- 5) Press **6** then press the **# / →** key to move the cursor to the right.
- 6) Press **6** six times.
- 7) Press **8** six times.
- 8) Press **4** six times.
- 9) Press **3** five times.
- 10) Press **7** eight times.
- 11) When finished, press the **memory** or **select / channel** key.

To continue to store the telephone number, proceed to step 7 on page 25.

	Number of times key is pressed								
keys	1	2	3	4	5	6	7	8	9
1	1								
2abc	A	B	C	a	b	c	2		
3def	D	E	F	d	e	f	3		
4ghi	G	H	I	g	h	i	4		
5jkl	J	K	L	j	k	l	5		
6mno	M	N	O	m	n	o	6		
7pqrs	P	Q	R	S	p	q	r	s	7
8tuvw	T	U	U	t	u	v	8		
9wxyz	W	X	Y	Z	w	x	y	z	9
0*#	*	#	-	&	<	>	(blank)	0	

Making Calls with Memory Dialing

Memory dialing from Standby Mode

- 1) Press the **memory** key. The handset displays your programmed memory locations.
- 2) Enter a number (**0 - 9**), or press the **vol/▲/▲** or **vol/▲/▼** key to select the memory location you would like to dial.
- 3) Press the **talk/flash** key. Connecting and the number you would like to dial appear on the display. Then the displayed number is dialed.



To exit the memory function without dialing, press the **end** key. The handset returns to standby mode.

```
Select Memory
01 Movies
02 JOHN DOE
```

 
 
```
-----
-Connecting-
8007303456
```



- If you press the **select/channel** key before the **talk/flash** key, you can confirm the name and the number stored in the selected memory location.
- Whenever you are using a memory menu screen, you must press a key within 30 seconds or the phone will return to standby.



Memory dialing from Talk Mode

- 1) Press the **talk/flash** key. Connecting appears.



- 2) After the display changes from Connecting to Talk, press the **memory** key.

  - 3) Enter a number (0 - 9), or press the **vol/▲/△** or **vol/▲/▽** key to select the memory location of the desired phone number. If you press the **select/channel** key, the number is dialed.



- 4) To hang up, press the **end** key.

Chain Dialing

The memory locations on the handset are not limited to phone numbers. You can also store a group of numbers (up to 20 digits) that you need to enter once your call connects. This is referred to as Chain Dialing.

An example of this is a bank account number. Once you have called your bank, and are prompted to enter the account number, press the **memory** key and select the location number where the special number has been stored. Then press the **select/channel** key.

Store your special number with an identifying name. (Refer to "Storing Phone Numbers and Names in Memory Dial" on page 24.)

Editing a Stored Name and/or Phone Number

1) Press the **memory** key in standby mode. Select Memory is displayed.

```
Select Memory
01: Movies
02: JOHN DOE
```

2) Enter a number (**0 - 9**), or press the **vol/▲/△** or **vol/▲/▽** key to select the memory location you would like to edit, and press the **memory** or **select/channel** key.

```
01: Movies
8007303456
```

3) Press the **memory** or **select/channel** key. The following screen appears with the memory location number that you have selected in the display.

```
Edit Memory01
Delete Memory01
Go Back
```

4) Press the **vol/▲/△** or **vol/▲/▽** key to select Edit MemoryXX, then press the **memory** or **select/channel** key. The following screen appears. The cursor flashes, indicating that the display is ready for the name to be edited. When a name has not been stored, the cursor appears at the beginning of the second line.

```
Store Name
Movies█
```

5) Use the *** /tone/←**, **# /→**, **delete/transfer**, or any number key to edit the name (see page 26). To edit only the phone number, skip this step.

6) Press the **memory** or **select/channel** key. The following screen appears. The cursor flashes indicating that the display is ready for the number to be edited.

```
Store Number
8007303456█
```

7) Use the number keys, the *** /tone/←**, **# /→**, **redial/pause**, or **delete/transfer** key to edit the phone number (see page 25). The phone number cannot exceed 20 digits.

If you don't want to change the phone number, skip this step.

8) Press the **memory** or **select/channel** key. If you changed either name or phone number, a confirmation display shows up. If it is correct, press the **vol/▲/∧** key to move the pointer to **Yes** and press the **select/channel** key. You hear a confirmation tone, and the following screen appears. The memory storage is complete.

For example, if you edit a name and/or number in memory location number 01, the display shows **Memory01 Stored**. After about 2 seconds, **Select Memory** screen is displayed.

```
Replace Memory?  
Yes  
▶No
```

```
Memory01 Stored
```

```
01▶Movies  
02 JOHN DOE  
03 MOM AND DAD
```

9) Press the **end** key to return to standby mode.

Erasing a Stored Name and Phone Number

1) Press the **memory** key in standby mode. Select Memory is displayed.

```
Select Memory
01 Movies
02 JOHN DOE
```

2) Enter a number (**0 - 9**), or press the **vol/▲/△** or **vol/▲/▽** key to select the memory location you would like to erase.

3) Press the **memory** or **select/channel** key.
The name and phone number selected appears with the memory location number that you have selected in the display.

```
02: JOHN DOE
5452930
```

4) Press the **memory** or **select/channel** key.

5) Press the **vol/▲/▽** key to move the pointer down to Delete MemoryXX.

```
Edit Memory02
Delete Memory02
Go Back
```

6) Press the **memory** or **select/channel** key. Delete MemoryXX? appears.

```
Delete Memory02?
Yes
Delete
```

7) Press the **vol/▲/△** key to move the pointer to Yes.

8) Press the **select/channel** or **delete/transfer** key.
You hear a confirmation tone, and MemoryXX Deleted appears.

```
Memory02 Deleted
```

9) After about 2 seconds, the display returns to the Select Memory screen. You may delete the information in another memory location (return to step 2) or press the **end** key to return to standby mode.

```
01 Movies
02
03 MOM AND DAD
```



- **RocketDial**® is a one touch speed dial key that automatically dials your most important or frequently called number. The number dialed is a preset number stored by the user.
- Number stored in RocketDial is independent from the numbers stored in Memory Dial.

 
RocketDial

You can store your most frequently dialed number in the RocketDial location in each handset. The RocketDial allows you to dial a number with one key press. (There is no need to press the **talk/flash** key. The phone will automatically dial the number stored.) If you subscribe to voice mail service, you can store your access number in this location.




Storing and Editing the RocketDial


- 1) When the phone is in standby mode, press and hold the **RocketDial** key. The following display appears.



 
If the Edit screen appears, there is a number already stored. Press the **vol/▲/▲** or **vol/▲/▼** key to select **Edit Number**. Then press the **select/channel** key.



 - 2) Store the number by following step 7 under "Storing Phone Numbers and Names in Memory Dial" on page 25.
- 3) Press the **select/channel** key.



 You hear a confirmation tone, and **Number Stored** appears. Memory storage is complete.



Making Calls with the RocketDial

When the phone is in standby mode, simply press the **RocketDial** key. The number stored in the RocketDial memory location is instantly dialed.

Deleting the RocketDial

- 1) When the phone is in standby mode, press and hold the **RocketDial** key. The following display appears.
- 2) Press the **vol/▲/▲** or **vol/▲/▼** key to select Delete Number.
- 3) Press the **select/channel** key. The following display appears.
- 4) Press the **vol/▲/▲** key to move the pointer to Yes.
- 5) Press the **select/channel** or **delete/transfer** key. You hear a confirmation tone, and the following display appears. After about 2 seconds, the handset returns to standby mode.

```

Edit Number
Delete Number
Go Back
  
```

```

Delete Number?
  Yes
  No
  
```

```

Number Deleted
  
```



If RocketDial does not have a stored number, an error tone will sound, and the phone will not dial.



- If you answer a call before the Caller ID message is received (for example, before the second ring), the Caller ID message will not appear.
- When the call is received via a telephone company that does not offer Caller ID service, the caller's phone number and name do not appear. (This includes international calls.)
- When the call is via a private branch exchange (PBX), the caller's phone number and name may not appear.

Caller ID and CIDCW (Caller ID on Call Waiting)

You must subscribe to Caller ID service through your local telephone provider to use this feature.

When the telephone rings, the Caller ID feature allows you to view the caller's name, phone number, date and time of call. With CIDCW (Caller ID on Call Waiting), you will hear a Call Waiting tone while you are on a call, and the Caller ID data is displayed. To accept the waiting call, press the **talk/flash** key (see page 22). Additionally, you can dial a number stored in the Caller ID list or save data to your Memory dial list.

When the Telephone Rings


- 1) When the Caller ID message is received, the display shows the caller's phone number along with the date and time. The incoming call information is stored in the Caller ID record. If the Caller ID service includes the caller's name, the caller's name appears on the display (up to 15 letters).



You may receive any one of the following messages:

- | | |
|-----------------------------------|-------------------|
| When invalid data is received | "Incomplete Data" |
| When a private name is received | "Private Name" |
| When a private number is received | "Private Number" |
| When a unknown name is received | "Unknown Name" |
| When a unknown number is received | "Unknown Number" |

2) When you pick up the phone, the display changes to `Connecting`. (Auto Talk feature is set to on).

 Data errors appear as "■".

Viewing the Caller ID Message List

The Caller ID list stores information for up to 30 incoming calls - even unanswered calls.

- 1) Press the **caller id/menu** key in standby mode.
The summary screen appears. The screen shows the number of new messages and total messages.
- 2) Press the **vol/▲/▼** or **vol/▲/▲** key to display the latest or oldest Caller ID message.
- 3) Press the **vol/▲/▼** key to see the next message. Or press the **vol/▲/▲** key to see the previous message.
- 4) Press the **end** key to return to standby mode.

```
Caller ID
New :01
Total:02
```

```
5/17 12:30PM 03
Jane Smith
214-555-1234
```



- In Caller ID operation, if no key is pressed for more than 30 seconds, an error tone sounds and the telephone returns to standby mode.
- Each message can be up to 15 characters for the phone number and the name.
- The number of calls from the same Caller ID appears next to the received time. Once you view the new message, the number will be cleared and disappear.



- While using the Delete All? or Delete Message? screen, if no key is pressed for more than 30 seconds, an error tone sounds, and the handset returns to standby mode.
- If you get an incoming call or page, the deleting operation is canceled, and you can answer the call or page.

Deleting Information from the Caller ID List

The cordless phone stores up to 30 messages (Caller ID names/numbers) in each handset. If the phone receives the 31st message, the oldest one in the list is automatically deleted. Caller ID data can also be deleted manually.

Deleting a Caller ID message

- 1) Press the **caller id/menu** key in standby mode. Find the message to be deleted from the Caller ID list by pressing the **vol/▲/△** or **vol/▲/▽** key.
- 2) Press the **delete/transfer** key.
- 3) Press the **vol/▲/△** or **vol/▲/▽** key to select Yes or No.
- 4) Press the **select/channel** or **delete/transfer** key.

When the pointer is at Yes:

You hear a confirmation tone and the Caller ID message is deleted. The next Caller ID message is then displayed.

When the pointer is at No:

The display returns to the Caller ID message.

Deleting all Caller ID names/numbers

- 1) Press the **caller id/menu** key in standby mode.
- 2) Press the **delete/transfer** key.

```
5/17 12:30PM 03  
Jane Smith  
214-555-1234
```

```
Delete Message?  
▶ Yes  
No
```

```
Caller ID  
New :01  
Total:02
```

3) Press the **vol/▲/▲** or **vol/▲/▼** key to select Yes or No.

4) Press the **select/channel** or **delete/transfer** key.

When the pointer is at Yes:

You hear a confirmation tone and all stored Caller ID messages are deleted.

When the pointer is at No:

The display returns to the summary screen.

```
Delete All?  
Yes  
▶ No
```

```
Caller ID  
Total:00
```

```
Caller ID  
New :01  
Total:02
```



- You cannot make a call from the Caller ID list if your cordless phone is connected to a private branch exchange (PBX).

Using the Caller ID List

Calling a party from the Caller ID list

You can place a call from the Caller ID list. The cordless phone stores up to 30 messages (Caller ID names/numbers) in each handset.

- 1) Press the **caller id/menu** key. Select the phone number that you want to dial by pressing the **vol/▲/△** or **vol/▲/▽** key.
- 2) Press the **talk/flash** key. The displayed phone number dials automatically.



You can place a call from Talk Mode. Press the **talk/flash** key, then press the **caller id/menu** key. Select the phone number that you want to dial by pressing the **vol/▲/△** or **vol/▲/▽** key. Press the **select/channel** key. The displayed phone number will be dialed.

```
5/17 12:30PM 03
Jane Smith
214-555-1234
```

```
-Connecting-
2145551234
```

- When a long distance call has been set, **1** appears in the display.

Long Distance calls and Area Code Setting/Cancellation

Pressing **1** while the incoming Caller ID information is displayed will place or remove the prefix **1** in the display to set up for a long distance call or cancel. Pressing **3** will set or cancel an area code setting.

Storing Caller ID messages in Memory dialing

Messages (Caller ID names/numbers) shown in the Caller ID list can be stored in memory dialing.

1) Press the **caller id/menu** key. Select the phone number to be stored from the Caller ID list by pressing the **vol/▲/△** or **vol/▲/▽** key.

```
5/17 12:30PM 03  
Jane Smith  
214-555-1234
```


2) Press the **memory** key.

```
Select Memory  
01  
02 JOHN DOE
```

3) Press the **vol/▲/△** or **vol/▲/▽** key or enter a number (**0 - 9**) to select the memory location to be stored.

4) Press the **select/channel** key. You hear a confirmation tone, and the number is stored in memory. The display returns to the Caller ID list.

```
5/17 12:30PM 03  
Jane Smith  
214-555-1234
```

 If a message has already been stored in the selected memory number location, a confirmation screen is displayed. Press the **vol/▲/△** key to select **Yes**. Press the **select/channel** key to overwrite. The display returns to the Caller ID list.

```
Replace Memory?  
Yes  
No
```



You cannot store a Caller ID message if no phone number appears in the message.



- To protect you against misbilled calls which might result from your phone being activated by other equipment, the cordless phone provides **AutoSecure™** (which electronically locks your phone when each handset is in the main base or charging cradle) and **Random Code™** digital security (which automatically selects one of over 262,000 digital security codes for each handset and main base).
- If the handset battery pack is completely discharged or the battery pack is removed, the digital security code will be lost. If this happens, a new security code is set automatically the next time the battery pack is charged.

Changing the Digital Security Code

The digital security code is an identification code used to connect each handset and the main base unit. Normally, setting the code is not necessary. The first time you charge each handset in the main base, the security code is automatically set. In the rare situation that you suspect another cordless telephone is using the same security code, you can change the code.

- 1) Remove the handset from the main base unit or charging cradle. Press and hold the **find hs** key on the main base.
- 2) While holding the **find hs** key, place the handset in the main base unit, and leave the handset on the main base for more than 3 seconds. A new random security code is set.



You can change the phone's digital security code on either handset. However, you must re-register the other handset (not used to change the digital security code) back to the main base unit. See registration on page 14.

Installing the Beltclip

To attach the beltclip

Insert the beltclip into the holes on each side of the handset. Press down until it clicks.

To remove the beltclip

Pull both sides of the beltclip to release the tabs from the holes.

Headset Installation

Your phone may be used with an optional headset, the Uniden HS910. To use this feature, insert the headset plug into the headset jack. Your phone is ready for hands-free conversations. (Headset may be purchased by calling the Uniden Parts Department or visiting the web site. See QUICK REFERENCE GUIDE on page 3.)



Note on Power Sources

Battery replacement and handling

When the operating time becomes short even after a battery is recharged, please replace the battery. With normal usage, your battery should last about one year. Please contact your place of purchase or the Uniden Parts Department for a replacement battery.

Warning: To avoid the risk of personal injury or property damage from fire or electrical shock, only use the Uniden battery model and Uniden adapter model specifically designated for this product.

Power Failure

During the period that the power is off, you will not be able to make or receive calls with the telephone.

Caution

- Use only the specified Uniden battery packs (BT-905).
- Do not remove the battery from each handset to charge it.
- Never throw the battery into a fire, disassemble it, or heat it.
- Do not remove or damage the battery casing.

Maintenance

To maintain a good charge, it is important to clean the charging contacts on both handsets once a month. Using water only, dampen a cloth to clean the charging contacts. Then, make sure to go back over the charging contacts with a dry cloth.

Caution

Do not use paint thinner, benzene, alcohol, or other chemical products. Doing so may discolor the surface of the telephone and damage the finish.

Troubleshooting

If your phone is not performing to your expectations, please try these simple steps first.

Symptom	Suggestion
The charge/in use LED or charge LED won't illuminate when the handset is placed in the main base or charging cradle.	<ul style="list-style-type: none">• Make sure the AC adapters are plugged into each charging cradle and wall outlet.• Make sure both handsets are properly seated in each charging cradle.• Make sure the charging contacts on both handsets are clean.
The audio sounds weak and/or scratchy.	<ul style="list-style-type: none">• Move the handset and/or main base to a different location away from metal objects or appliances and try again.• Press the select/channel key to help eliminate background noise.• Make sure that the handset is not too far from the main base.
Can't make or receive calls.	<ul style="list-style-type: none">• Re-register both handsets (see page 14).• Check both ends of the telephone line cord.• Make sure the AC adapter is plugged into the main base and wall outlet.• Disconnect the AC adapter for a few minutes, then reconnect it.• Make sure that the handset is not too far from the main base.
The handset doesn't ring or receive a page.	<ul style="list-style-type: none">• Re-register both handsets (see page 14).• The battery pack may be weak. Charge the battery for 15-20 hours.• The handset may be too far away from the main base unit.• Place the main base unit away from appliances or metal objects.• Check the battery pack to insure there is a secure connection.• Make sure ringer volume isn't set to turned off.

Symptom	Suggestion
Severe noise interference.	<ul style="list-style-type: none"> • Keep both handsets away from microwave ovens, computers, remote control toys, wireless microphones, alarm systems, intercoms, room monitors, fluorescent lights, and electrical appliances. • Move to another location or turn off the source of interference.
The Caller ID does not display.	<ul style="list-style-type: none"> • The handset was picked up before the second ring. • The call was placed through a switchboard. • Call your local telephone company to verify your Caller ID service is current. • Charge the handset.
Handset No.1 or No.2 is not working.	<ul style="list-style-type: none"> • Make sure the battery pack is connected to the handset and fully charged.
Unavailable message is displayed on the LCD screen of the handset.	<ul style="list-style-type: none"> • Make sure the other handset is not already in use. Both handsets cannot be in talk mode at the same time. • Place the handset in the main base for at least 5 seconds to re-register to the main base. • Make sure the handset is not too far from the main base when trying to use.
The handset doesn't communicate with the main base or the other handset.	<ul style="list-style-type: none"> • Re-register both handsets (see page 14). • Make sure that you have registered the second handset.
No 3-way conversation.	<ul style="list-style-type: none"> • Only one handset at a time can talk with an outside caller. To allow the other handset to talk to the caller, transfer the call.
Voice Message Indication does not work.	<ul style="list-style-type: none"> • Contact your local telephone company to make sure that your telephone receives FSK message signaling. • Reset the indicator by pressing and holding the find hs key for 5 seconds.
If you still have a problem.	<ul style="list-style-type: none"> • Call our customer hotline at 1-800-297-1023.

Liquid Damage

Moisture and liquid can damage your cordless phone. In case of accidental submersion, please read the following steps.

Case	Action
If the handset or either charging cradle is exposed to moisture or liquid, but the liquid only affects the exterior plastic housing.	Wipe off the liquid, and use as normal.
If moisture or liquid has entered the plastic-housing (i.e. liquid can be heard in the phone or liquid has entered the handset battery compartment or vent openings on the either charging cradle).	<p>Handset:</p> <ol style="list-style-type: none">1. Remove the battery cover and leave it off for ventilation.2. Remove the battery pack by disconnecting.3. Leave the battery cover off and the battery pack disconnected for at least 3 days.4. Once the handset is completely dry, reconnect the battery pack and the battery cover.5. Recharge the handset's battery pack for 20 hours in either charging cradle before using the phone. <p>Charging cradle:</p> <ol style="list-style-type: none">1. Disconnect the AC adapter from the charging cradle cutting off electrical power.2. Disconnect the telephone cord from the charging cradle.3. Let dry for at least 3 days. <p>IMPORTANT: You must unplug the telephone line while recharging the battery pack to avoid charge interruption.</p> <p>CAUTION: DO NOT use a microwave oven to speed up the drying process. This will cause permanent damage to the handset, charging cradle and the microwave oven. After following these steps, if your cordless telephone does not work, please send to: Uniden America Corporation Parts and Service Division 4700 Amon Carter Blvd. Ft. Worth, TX76155 1-800-554-3988. Monday through Friday 8 a.m. to 5 p.m. CST</p>

General Information

The phone complies with FCC Parts 15 and 68.

Operating temperature: -10° to +50°C (+14°F to +122°F)

AC Adapter Information

AC Adapter part number: AD-0001
Input Voltage: 120V AC 60Hz
Output Voltage: 9V DC 210 mA

Battery Information

Battery part number: BT-905
Capacity: 600 mA, 3.6V



- **To avoid damage to the phone use only Uniden AD-0001 and BT-905 with your phone.**
- If each handset is left off of the main base or charging cradle, the actual Talk mode duration will be reduced respective to the amount of time each handset is off the main base or charging cradle.

Recharge your phone on a regular basis by returning the handset to the main base or charging cradle after each phone call.

When the operating time becomes short, even after the battery is recharged, please replace the battery. With normal usage, the battery should last about one year.

A replacement Uniden adapter and battery may be purchased at your local Uniden dealer or by contacting the Uniden Parts Department (800) 554-3988. Hours are from 8:00 a.m. to 5:00 p.m. Central Time, Monday through Friday. We can also be reached on the web at www.uniden.com.

Specifications, features, and availability of optional accessories are all subject to change without prior notice.

Precautions!

Before you read anything else, please observe the following:

Warning!

Uniden America Corporation DOES NOT represent this unit to be waterproof. To reduce the risk of fire, electrical shock, or damage to the unit, DO NOT expose this unit to rain or moisture.

Rechargeable Nickel-Cadmium Battery Warning

- This equipment contains a rechargeable nickel-cadmium battery.
- Cadmium is a chemical known to the State of California to cause cancer.
- The rechargeable nickel-cadmium battery contained in this equipment may explode if disposed of in a fire.
- **Do not** short-circuit the battery.
- Do not charge the rechargeable nickel-cadmium battery used in this equipment in any charger other than the one designed to charge this battery as specified in the owner's manual. Using another charger may damage the battery or cause the battery to explode.

Rechargeable Nickel-Cadmium Batteries Must Be Recycled or Disposed of Properly



- Uniden voluntarily participates in an RBRC® industry program to collect and recycle nickel-cadmium batteries at the end of their useful life, when taken out of service within the United States. The RBRC® program provides a convenient alternative to placing used nickel-cadmium batteries into the trash or municipal waste stream, which is illegal in some areas.
- Through the RBRC® program, Uniden makes it easy for you to drop off the used battery at local retailers of replacement nickel-cadmium batteries. You may also contact your local recycling center for information on where to return the used battery. Please call 1-800-8-BATTERY for information on Ni-Cd battery recycling in your area. Uniden's involvement in this program is part of its commitment to protecting our environment and conserving natural resources.
- RBRC® is a registered trademark of the Rechargeable Battery Recycling Corporation.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Uniden works to reduce lead content in our PVC coated cords in our product and accessories.

Warning:

The cords on this products and/or accessories contain lead, a chemical

known to the State of California to cause birth defects or other reproductive harm. **Wash hands after handling.**

Important Safety Instructions

When using your telephone equipment, these basic safety precautions should always be followed to reduce the risk of fire, electrical shock, and injury to persons:

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall outlet before cleaning. Use a dry cloth for cleaning without liquid or aerosol cleaners.
4. Do not use this product near water; for example, near a bathtub, wash bowl, kitchen sink or laundry tub, in a wet basement, or near a swimming pool.
5. Do not place this product on an unstable cart, stand, or table. The telephone may fall, causing serious damage to the unit.
6. Slots and openings in the cabinet and the back or bottom are provided for ventilation. To protect the product from overheating, these openings must not be blocked or covered. This product should never be placed near or over a radiator or heat register. This product should not be placed in a built-in installation unless proper ventilation is provided.
7. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your dealer or local power company.
8. Do not allow anything to rest on the power cord. Do not locate this product where the cord will be damaged by persons walking on it.
9. Do not overload wall outlets and extension cords, as this can result in the risk of fire or electrical shock.
10. Never push objects of any kind into this product through cabinet slots, as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. Never spill liquid of any kind on the product.
11. To reduce the risk of electric shock, do not disassemble this product. Take it to qualified service personnel when service or repair work is required. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used.
12. Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - A. When the power supply cord is damaged or frayed.
 - B. If liquid has been spilled into the product.
 - C. If the product has been exposed to rain or water.
 - D. If the product does not operate normally when following the operating instructions. (Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive repair work by a qualified technician.)
 - E. If the product has been dropped or the cabinet has been damaged.

- F. If the product exhibits a distinct change in performance.
13. Do not use the telephone to report a gas leak in the vicinity of the leak.

Additional Battery Safety Precautions

Caution! To reduce the risk of fire or injury to persons by the battery, read and follow these instructions:

1. Use only the Uniden battery pack specified in the owner's manual.
2. Do not dispose of the battery pack in a fire. The cell may explode. Check the nickel-cadmium battery disposal package insert for disposal instructions.
3. Do not open or mutilate the battery pack. Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.
4. Exercise care in handling the battery in order not to short the battery with conducting materials such as rings, bracelets, and keys. The battery or conductor may overheat and cause burns.
5. Charge the battery pack provided with or identified for use with this product only in accordance with the instructions and limitations specified in the owner's manual provided for this product.
6. Observe proper polarity orientation between the battery pack and battery charger.

SAVE THESE INSTRUCTIONS!

Important Electrical Considerations

Unplug all electrical appliances when you know an electrical storm is approaching. Lightning can pass through your household wiring and damage any device connected to it. This phone is no exception.

The FCC Wants You To Know

Changes or modifications to this product not expressly approved by Uniden, or operation of this product in any way other than as detailed by the owner's manual, could void your authority to operate this product. Your telephone complies with Part 68 of FCC Rules. You must, upon request, provide the FCC registration number and the REN to your telephone company. Both numbers are on the main base unit.

NOTE: You must not connect your phone to:

- coin-operated systems
- most electronic key telephone systems

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired Operation. Privacy Of Communications May Not Be Ensured When Using This Phone.

Range

Your new phone is designed to achieve the maximum possible range by transmitting and receiving according to the highest specifications set forth by the FCC. We have rated this phone to operate at a maximum distance with the qualification that the range depends upon the environment in which the telephone is used. Many factors limit range,

and it would be impossible to include all the variables in our rating. The Maximum Range rating of this phone is meant to be used as a means of comparison against other range claims.

Telephone Line Problems

The FCC has granted the telephone company the right to disconnect service in the event that your phone causes problems on the telephone line. Also, the telephone company may make changes in facilities and services which may affect the operation of your unit. However, your telephone company must give adequate notice in writing prior to such actions to allow you time for making necessary arrangements to continue uninterrupted service.

If you are having trouble with your telephone service, you must first disconnect your phone to determine if it is the cause of your problem. If you determine that it is the cause, you must leave it disconnected until the trouble has been corrected.

Radio Interference

Radio interference may occasionally cause buzzing and humming in your cordless handset, or clicking noises in the main base. This interference is caused by external sources such as TV, refrigerator, vacuum cleaner, fluorescent lighting, or electrical storm. Your unit is NOT DEFECTIVE. If these noises continue and are too distracting, please check around your home to see what appliances may be causing the problem.

In addition, we recommend that the main base not be plugged into a circuit that also powers a major appliance because of the potential for interference. Be certain that antenna on the unit is fully extended. In the unlikely event that you consistently hear other voices or distracting transmissions on your phone, you may be receiving radio signals from another cordless telephone or other source of interference. If you cannot eliminate this type of interference, you need to change to a different channel.

Finally, it should be noted that some cordless telephones operate at frequencies that may cause interference to nearby TVs and VCRs. To minimize or prevent such interference, the main base of the cordless telephone should not be placed near or on top of a TV or VCR. If interference is experienced, moving the cordless telephone farther away from the TV or VCR will often reduce or eliminate the interference.

More Than One Cordless Telephone

If you want to use more than one cordless telephone in your home, they must operate on different channels. Press the channel key to select a channel that provides the clearest communication.

Cordless Telephone Privacy

Cordless telephones are radio devices. Communications between the handset and main base of your cordless telephone are accomplished by means of radio waves which are broadcast over the open airways. Because of the inherent physical properties of radio waves, your communications can be received by radio receiving devices other than your own cordless telephone unit. Consequently, any communications using your cordless telephone may not be private.

Installation Considerations

Selecting a Location

Before choosing a location for your new phone, there are some important guidelines you should consider:

- The location should be close to both a phone jack and continuous power outlet. (A continuous power outlet is an AC outlet which does not have a switch to interrupt its power.)
- Keep the main base and handset away from sources of electrical noise such as motors or fluorescent lighting.
- The main base can be placed on a desk or tabletop.
- You should charge your new phone for 15-20 hours before completing the installation or using the handset.

Telephone Line Outlets

There are two types of phone outlets:

Modular Jack

Most phone equipment available now uses modular jacks. Phone cords are fitted with a molded plastic connector which plugs into this type of jack. If you do not have modular phone jacks, contact your local telephone company for information about their installation.

Hardwired Jack

Some equipment is wired directly to a phone jack, and these types of installations require a modular jack converter. This type of installation is not difficult; however, you should contact your Uniden telephone dealer or a telephone supply store for advice about the proper adapter or converter for your particular situation.

Connecting the Telephone Cords

Consider these safety guidelines before connecting the telephone cords:

Caution!

- *Never install telephone wiring during a lightning storm.*
- *Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected.*
- *Use caution when installing or modifying telephone lines.*

Applying Power to the Main base

This phone requires an AC outlet, without a switch to interrupt power, and the included AC adapter. To relieve strain on the DC plug when the phone is placed on a desk or table, wrap the power cord around the strain relief notch on the back of the main base.

NOTE: Place the power cord so that it does not create a trip hazard, or where it could become chafed and create a fire or other electrical hazards.

One Year Limited Warranty

Important: Evidence of original purchase is required for service. **WARRANTOR:** UNIDEN AMERICA CORPORATION ("Uniden") **ELEMENTS OF WARRANTY:** Uniden warrants, for one year, to the original retail owner, this Uniden Product to be free from defects in materials

and craftsmanship with only the limitations or exclusions set out below.

WARRANTY DURATION: This warranty to the original user shall terminate and be of no further effect 12 months after the date of original retail sale. The warranty is invalid if the Product is (A) damaged or not maintained as reasonable or necessary, (B) modified, altered, or used as part of any conversion kits, subassemblies, or any configurations not sold by Uniden, (C) improperly installed, (D) serviced or repaired by someone other than an authorized Uniden service center for a defect or malfunction covered by this warranty, (E) used in any conjunction with equipment or parts or as part of any system not manufactured by Uniden, or (F) installed or programmed by anyone other than as detailed by the owner's manual for this product.

STATEMENT OF REMEDY: In the event that the product does not conform to this warranty at any time while this warranty is in effect, warrantor will either, at its option, repair or replace the defective unit and return it to you without charge for parts, service, or any other cost (except shipping and handling) incurred by warrantor or its representatives in connection with the performance of this warranty. Warrantor, at its option, may replace the unit with a new or refurbished unit. **THE LIMITED WARRANTY SET FORTH ABOVE IS THE SOLE AND ENTIRE WARRANTY PERTAINING TO THE PRODUCT AND IS IN LIEU OF AND EXCLUDES ALL OTHER WARRANTIES OF ANY NATURE WHATSOEVER, WHETHER EXPRESS, IMPLIED OR ARISING BY OPERATION OF LAW, INCLUDING, BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THIS WARRANTY DOES NOT COVER OR PROVIDE FOR THE REIMBURSEMENT OR PAYMENT OF INCIDENTAL OR CONSEQUENTIAL DAMAGES.** Some states do not allow this exclusion or limitation of incidental or consequential damages so the above limitation or exclusion may not apply to you.

LEGAL REMEDIES: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This warranty is void outside the United States of America and Canada.

PROCEDURE FOR OBTAINING PERFORMANCE OF WARRANTY: If, after following the instructions in the owner's manual you are certain that the Product is defective, pack the Product carefully (preferably in its original packaging). The Product should include all parts and accessories originally packaged with the Product. Include evidence of original purchase and a note describing the defect that has caused you to return it. The Product should be shipped freight prepaid, by traceable means, to warrantor at:

Uniden America Corporation

Parts and Service Division
4700 Amon Carter Blvd. Fort Worth, TX 76155

(800) 297-1023, 8 a.m. to 5 p.m. Central, Monday through Friday
or visit our website at www.uniden.com

I.C. Notice

TERMINAL EQUIPMENT

NOTICE: This equipment meets the applicable Industry Canada Terminal Equipment Technical Specifications. This is confirmed by the registration number. The abbreviation, IC, before the registration number signifies that registration was performed based on a Declaration of Conformity indicating that Industry Canada technical specifications were met. It does not imply that Industry Canada approved the equipment.

NOTICE: The Ringer Equivalence Number (REN) for this terminal equipment is marked on the equipment itself. The REN assigned to each terminal equipment provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed five.

RADIO EQUIPMENT

The term "IC:" before the radio certification number only signifies that Industry Canada technical specifications were met.

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. "Privacy of communications may not be ensured when using this telephone".

Index

A

- AC adapter information 45
- Adjusting ringer and earpiece volume..... 20

B

- Battery pack
 - Information 45
 - Install 10
 - Maintenance 12, 41
 - Preparing and charging 10
 - Replacement and handling 41
- Beltclip installation 40

C

- Caller ID
 - Caller ID service 34
 - Call Waiting 22
 - Deleting 36
 - Setting Caller ID options 16
 - Using 38
 - Viewing 35
- Call Transfer Feature 15
- Channel 22
- Cleaning contacts..... 12
- Connection 13

D

- Dial mode..... 18
- Digital security code..... 40

E, F, G

- Earpiece volume..... 20
- Find Handsets..... 22
- General information 45

H

- Headset installation 41

I, J, K, L

- I.C. Notice 48
- Interference 47
- Language 18

M, N, O

- Maintenance 41
- Making a call 19
- Memory dialing
 - Editing a stored name and/or phone number..... 29
 - Erasing a stored name and phone number..... 31
 - Making calls with memory dialing 27
 - Storing phone numbers and names 24

P, Q

- Package contents..... 3
- Precautions..... 46
- Quick reference guide 3

R

- Receiving a call..... 19
- Redialing a call 19, 21
- Ringer tone and volume..... 20
- RocketDial 32

S

- Second Handset 14
- Setting menu options 16
- Setting up the handset 10
- Setting up the phone 9

T, U, V, W, X, Y, Z

- Technical information 45
- Troubleshooting 42
- Voice mail waiting indicator..... 23
- Warranty 47

MEMO

At Uniden, we'll take care of you!

If you need any assistance with this product, please call our Customer Hotline at **1-800-297-1023**

or visit our web site at **www.uniden.com**

PLEASE DO NOT RETURN THIS PRODUCT TO THE PLACE OF PURCHASE.

Our Uniden representatives will be happy to help you with any matters regarding the operation of this unit, available accessories, or any other related matters.

Thank you for purchasing a Uniden product.
Hours: M-F 8:00 AM to 5:00 PM CST.



For information on the accessibility features of this product, please call

1-800-874-9314 (V/TTY)

Uniden®

May be covered under one or more of the following U.S. patents:

4,523,058	4,595,795	4,797,916	5,381,460	5,426,690	5,434,905
5,491,745	5,493,605	5,533,010	5,574,727	5,581,598	5,650,790
5,660,269	5,661,780	5,663,981	5,671,248	5,696,471	5,717,312
5,732,355	5,754,407	5,758,289	5,768,345	5,787,356	5,794,152
5,801,466	5,825,161	5,864,619	5,893,034	5,912,968	5,915,227
5,929,598	5,930,720	5,960,358	5,987,330	6,044,281	6,070,082
6,125,277	6,253,088	6,314,278	6,418,209		

© Uniden America Corporation, Fort Worth, Texas.
Custom manufactured in China.

Contains additional foreign articles.

UCZZ01427ZZ

Download from [Www.Somanuals.com](http://www.Somanuals.com). All Manuals Search And Download.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>