

---

# Uniden

## USER GUIDE

### DECT1905

OPTIONAL HANDSET TO SUIT MODELS  
DECT 1915, DECT1955

DIGITAL CORDLESS  
TELEPHONES  
WITH SMS  
MESSAGING  
AND FULL  
COLOUR



THIS EQUIPMENT IS NOT DESIGNED FOR  
MAKING EMERGENCY TELEPHONE CALLS  
WHEN THE POWER FAILS. ALTERNATIVE  
ARRANGEMENTS SHOULD BE MADE FOR  
ACCESS TO DIAL EMERGENCY SERVICES.

Ver. 1, Mar 05

Before operating this set,  
please read these instructions carefully.

### Important note — emergency calls

The DECT 1905 must be registered to a base series (DECT 1915 or DECT1955) before use and is not designed for making emergency calls when the mains power fails. So you should make alternative arrangements for access to Emergency Services.

(This means that you should also have a basic phone that does not need mains power, connected to your line so that you can make calls during a power failure.)

### If you need help ...

Visit our websites for information;

Australia: [www.uniden.com.au](http://www.uniden.com.au)

New Zealand: [www.uniden.co.nz](http://www.uniden.co.nz)

 
### Unpacking your DECT1905

In the box are:

- the **cordless handset**
- two rechargeable **batteries** and a **battery compartment cover** for each handset
- **charger pod** with separate **mains power lead and adaptor**

Keep the packaging materials in a safe place in case you later need to transport the unit.

**Keep your sales (till) receipt, which is your guarantee.**



---

## Read these notes first

 
---

---

### Choosing a site for the charger pod

The charger pod(s) should be placed on a level surface, in a position where:

- the mains adapter plug will reach an easily accessible 240-V AC switched mains supply socket — **never try to lengthen the mains power cable**
- it is not close to another telephone — this can cause radio interference
- it is not close to a sink, bath or shower, or anywhere else where it might get wet
- it is not close to other electrical equipment — fridges, washing machines, microwave ovens, fluorescent lights, TVs etc.




---

### Radio signals between handset and base unit

To use your handset and base unit together, you must be able to establish a radio link between them. Be aware that:

- Any **large metal object** — like a refrigerator, a mirror or a filing cabinet — between the handset and the base unit may block the radio signal.
- Other **solid structures**, like walls, may reduce the signal strength.



---


### Mains power connection

**IMPORTANT** — The DECT 1905 charger pod must be used with the mains adapter supplied with the unit. Using any other adapter will invalidate any approval given to this apparatus.

## Installation and Set-up

- 1 Choose a suitable site for the charger pod. See page 3.

Plug the mains adapter into a 240 V AC, 50 Hz mains socket, with the switch on the socket set to OFF

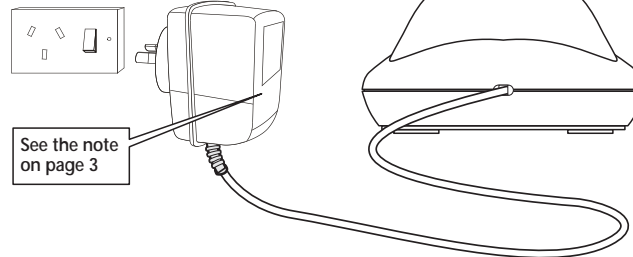


- 2 Switch on at the mains socket

- 3 Fit the rechargeable batteries in each handset

A. Fit the two batteries as shown, making sure you match the + and - ends to the markings in the battery compartment

B. Fit the battery compartment cover, sliding it into place and pressing firmly to make sure it is secure

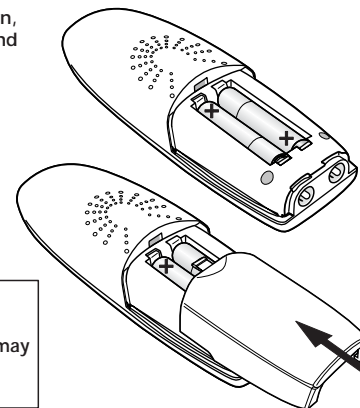

Battery safety  
DON'T use non-rechargeable batteries in the handset — they may burst, causing damage. Use the rechargeable batteries supplied.

### Installation and set-up

#### 4 Charge the batteries for 15 hours

Before you use the handset for the first time, it's important to charge the batteries fully.


The handset 'beeps' when it's correctly in position on the charging cradle.

Leave the handset on the charging cradle for 15 hours.

The battery charge level symbol should increase by one bar every half hour when you're charging an empty battery. If you think that the symbol isn't showing the correct battery charge level, remove and refit the batteries.

Keeping the batteries charged

- When you don't need to use the handset (for example, overnight or when you go out), replace it on the base unit or charger pod, to keep the batteries charged.
- Whenever the battery charge level symbol shows 'nearly empty' (☐), place the handset on the base unit or charger pod to charge the batteries.

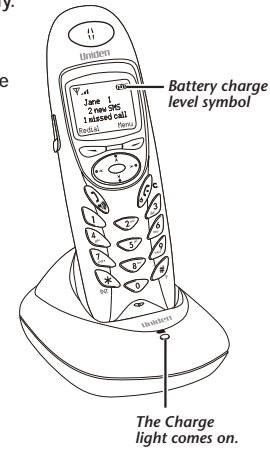

## BASIC USE

### Before you start

---

#### Electrical safety

- **DON'T** let the base unit or charger pod get wet. Electrical equipment can cause serious injury if used while you are wet or standing in water.
- If the base unit or charger pod ever falls into water, **DON'T** retrieve it until you have unplugged the power lead from the mains and the telephone line plug from the telephone socket (base unit only); then pull it out by the unplugged cables.
- **NEVER** use your DECT 1905 outdoors during a thunderstorm — unplug the base unit from the telephone line and the mains socket when there are storms in your area. Damage caused by lightning is not covered by the guarantee.

#### Interference

If the sound quality gets worse as you move around while on a call, this is probably caused by interference between the handset and the base unit, perhaps because you are too near to another phone or other electrical equipment.

**Move to a different position** to clear the interference. If you do not move, your call may be cut off.

- ! **Radio interference in the environment may occasionally cause a short break in the link between the handset and the base unit while you are on a call. The handset's display may briefly show No Base Found until the link is restored.**

#### 'Out of range' warning

If you hear a **warning tone** during a call, and/or the sound in the earpiece becomes faint or distorted, you may be going out of range of the base unit. **Move nearer to the base unit within 20 seconds**, until the tone stops. Otherwise, your call may be cut off.







## Handset registration

- ! You must register the DECT 1905 handset to a compatible base (DECT 1915 or DECT1955 series base) before use.



To check whether a handset is already registered, **make sure mains power to the base unit is switched on and the handset is within range**. The handset's display should show its name (default **Handset**) and number. If the display constantly shows **No base found**, you need to register the handset.

Each handset can be registered to **up to four base units**, which have numbers 1 to 4.

To re-register 1 or to register a new handset






-  On the base unit, press and hold the **FIND HS** button until you hear **Registration tone** (repeated 'beeps')  
You now have **60 seconds** to register the handset.
-  On the handset, press the **right Soft button [Menu]**, then press the **▲** or **▼** button to scroll to **Handset**.
-  Press the **right Soft button [OK]**
-  Press the **▲** or **▼** button to scroll to **Register**, then press the **right Soft button [OK]**  
⇒ The display shows a list of base units. If any of these numbers has a tick next to it, the handset is already registered to that base unit.
-  Move the highlight to **BASE: 1** then press the **right Soft button [OK]**  
⇒ The display shows **Base-PIN:**
-  Key in the base unit's PIN code (default 0000)  
If the base unit's PIN code has been changed from 0000 (see your base unit's User Guide), you'll need to know the current PIN code.

### Handset registration

- 7  **Press the right Soft button [OK]**  
⇨ The display may flash **Re-register** for a few moments, while the handset searches for a base unit. It then shows a list of handset numbers for the base unit.
- 8  **Key in a free handset number (optional) and press the right Soft button [OK]**  
(If you don't key in a number, the base will select one automatically.)  
⇨ If registration is successful, the display returns to standby mode.

To register to an extra base unit **Follow the steps as for re-registering, but at step 5, move the highlight to a free base unit number (one without a tick)**

To de-register a handset

- 1  **Press the right Soft button [Menu], then press the ▲ or ▼ button to scroll to Base**
- 2  **Press the right Soft button [OK], then press the ▲ or ▼ button to scroll to De-register**
- 3  **Press the right Soft button [OK]**  
⇨ The display shows **Base-PIN:**
- 4  **Key in the base unit's PIN code (default 0000) and press the right Soft button [OK]**  
⇨ The display shows a list of the handsets registered to the base unit.
- 5  **Key in a handset number**  
⇨ The display shows **De-register** for a few moments. When the handset has been de-registered, the display goes back to standby mode.









### Handset registration

To select a base unit

If your handset is registered to more than one base unit, it will automatically select the one with which it can best set up a radio link (usually the nearest one). Or you can select a base unit manually.

**You don't need this function if you have only one base unit.**

- 1  Press the right Soft button [Menu], then press the ▲ or ▼ button to scroll to **Handset**.
- 2  Press the right Soft button [OK]
- 3  Press the ▲ or ▼ button to scroll to **Select Base**, then press the right Soft button [OK]  

- 4  Move the highlight to the base unit number you want, or to **Best Base**, then press the right Soft button [OK]  
  

⇒ The display shows a list of base units. The currently selected base unit (or **Best Base** for automatic selection), has a tick next to it.

⇒ The display may show **No base found** for a few moments, then it should return to standby mode. If it continues to show **No base found**, you'll need to select a different base unit, or **Best Base** for automatic selection.

**!** We recommend that you leave this setting at **Best Base** (the default) if you want your handset to work with more than one base unit.



### **Handset registration**

---

To register to a different brand of base unit

Your DECT 1905 handset(s) can be registered to any GAP-compatible base unit.

**But we do not guarantee that all features or display messages will be available using other manufacturers' equipment.**

- 1 Follow the instructions in the **base unit's** User Guide to put the base unit into registration mode.
- 2 Follow the instructions to register the handset (Steps 2 to 5 on page 7).

If you need to enter a PIN code for the base unit, refer to the **base unit's** User Guide.

If you have problems, visit our website at [www.uniden.com.au](http://www.uniden.com.au)  
[www.uniden.co.nz](http://www.uniden.co.nz)



## Warranty

### One Year Limited Warranty

Important: Evidence of original purchase is required for warranty service.

Warrantor: Uniden Australia Pty Limited. ABN 58001 865 498  
Uniden New Zealand Limited

**ELEMENT OF WARRANTY:** Uniden warrants to the original retail owner for the duration of this warranty, its DECT 1905 (herein after referred to as the Product), to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below.

**WARRANTY DURATION:** This warranty to the original retail owner only, shall terminate and be of no further effect 12 months after the date of original retail sale. This warranty will be deemed invalid if the product is: (A) Damaged or not maintained as reasonable and necessary, (B) Modified, altered or used as part of any conversion kits, subassemblies, or any configurations not sold by Uniden, (C) Improperly installed, (D) Repaired by someone other than an authorised Uniden Repair Agent for a defect or malfunction covered by this warranty, (E) Used in conjunction with any equipment or parts or as part of a system not manufactured by Uniden, (F) Only available in the original country of sale.

**PARTS COVERED:** This warranty covers for one (1) year, the DECT 1905 Unit and Handset only. All accessories (Cables etc.) are covered for 90 days only.

**STATEMENT OF REMEDY:** In the event that the Product does not conform to this warranty at any time while this warranty is in effect, the warrantor at its discretion, will repair the defect or replace the product and return it to you without charge for parts or service. THIS WARRANTY DOES NOT COVER OR PROVIDE FOR THE REIMBURSEMENT OR PAYMENT OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. THIS GUARANTEE IS IN ADDITION TO AND DOES NOT IN ANY WAY AFFECT YOUR RIGHTS UNDER THE CONSUMER GUARANTEE ACT.

#### PROCEDURE FOR OBTAINING PERFORMANCE OR

**WARRANTY:** In the event that the product does not conform to this warranty, the Product should be shipped or delivered, freight pre-paid, with evidence of original purchase (e.g. a copy of the sales docket), to the warrantor at:

**UNIDEN AUSTRALIA**  
SERVICE DIVISION  
345 Princes Highway,  
Rockdale NSW 2216  
Fax (02) 9599 3278

**UNIDEN NEW ZEALAND LIMITED**  
SERVICE DIVISION  
150 Harris Rd,  
East Tamaki, Auckland  
Fax (09) 274 4253

[www.uniden.com.au](http://www.uniden.com.au)

[www.uniden.co.nz](http://www.uniden.co.nz)

Customers in other States should ship or deliver the Product freight pre-paid to their nearest Uniden Authorised Repair Centre (Contact Uniden for the nearest Warranty Agent to you).

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>