

# DWX337 Waterproof Accessory Handset User's Guide

## What's in the box?



DWX337 waterproof  
accessory handset  
and water resistant  
charger

AC adapter  
(PS-0035)

Not pictured:

- Factory installed rechargeable battery
- Belt Clip

- **If any items are missing or damaged, contact our Customer Care Line immediately. Never use damaged products!**
- **Need Help? Get answers 24/7 at our website: [www.uniden.com](http://www.uniden.com).**

If You...	Contact Uniden's...	Phone Number
have a question or problem	Customer Care Line*	817-858-2929 or 800-297-1023
need a part or accessory	Parts Department*	800-554-3988
need special assistance due to a disability	Accessibility Help Line	800-874-9314 (voice or TTY)

\* During regular business hours, Central Standard Time. Visit our website for detailed business hours.

## IMPORTANT SAFETY INSTRUCTIONS!

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

- ◆ The charger is NOT waterproof: Do not use or place the charger near water (e.g., near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool).
- ◆ If the charger falls into the water, unplug the AC adapter before removing it from the water. After you remove the charger from the water, contact Customer Service (see the front cover for contact information).
- ◆ Wipe excess water off of the handset before returning it to the charger.
- ◆ Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
- ◆ Do not use the telephone to report a gas leak in the vicinity of the leak.
- ◆ Use only the power cord and batteries indicated in this manual.
- ◆ Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.
- ◆ Do not place the handset in any charging cradle without the battery installed and the battery cover securely in place.

**SAVE THESE INSTRUCTIONS!**

## Understanding the Waterproof Handset

- ◆ The handset complies with JIS7 water submersion specifications. It can remain submerged under 3 feet of water for up to 30 minutes without damage or loss of functionality.
- ◆ If the handset falls into water, just remove it; you can continue using the handset as normal.


- ◆ The handset will still receive calls even if it is under water, but you probably won't be able to hear the ringer or the earpiece. To avoid any accidents, do not try to use the handset while it is still under water.
- ◆ If you notice that the sound is distorted after your handset is submerged in water, there might still be water around the speaker and microphone. Just shake the handset to clear the water, and the sound should return to normal.
- ◆ Don't place the handset where it will be subjected to direct sunlight for long periods of time.

## SETTING UP YOUR HANDSET

### Charging the Battery

The handset's rechargeable battery is already installed. Before you can charge the battery, you have to activate it.

1. Remove the cardboard spacer.
2. Press the activation pin according to the directions on the label.
3. Remove the label once the handset is activated.

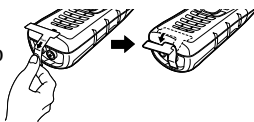

- ✗ **Save the activation pin in case you need to change the handset's activation status later (i.e., to deactivate the handset when it will not be used for a long time). Use the plastic activation pin or a blunt-tipped object like an uncurled paper clip to press the activation toggle through the rubber seal. Do not use a sharp object; sharp objects might puncture the rubber seal and jeopardize the handset's waterproof status.**

4. Connect the AC adapter to the charger's **AC IN 8V** jack and set the cord into the notch. (This adapter might already be connected.)
3. Plug the other end of the adapter into a standard 120V AC power outlet.
4. Place the handset in the charger with the display facing forward. The display on the handset should turn on. If the handset display does not turn on, try one of the following:
  - ◆ Checking the AC adapter connection.
  - ◆ Seeing if the outlet is controlled by a wall switch.

- ✗ **Charge the handset completely (about 16 hours) before using it.**

### Registering the Handset

#### Compatible Bases

This handset is designed for use with Uniden's DECT3380 base. Other Uniden DECT6.0 bases might be compatible with this handset. For an up-to-date list of compatible bases for this handset, see our website.

#### Register the handset

1. On the base, press and hold **FIND**.
2. On the handset, press and hold **#** until the display says *Handset Registering* (about 2 seconds).

- ✗ **After about 30 seconds, the handset display should say *Registration Complete*.**

#### Test the connection

Pick up the handset and press **TALK/FLASH**. Make sure you get a dial tone. (Press **END** to hang up.)

If...	Try...
<ul style="list-style-type: none"> <li>- you don't hear a dial tone</li> <li>- the display says <i>Registration Failed</i></li> </ul>	Making sure the handset is fully charged, then trying again.

## Using your Handset

- ◆ All features and operation for the handset are described in the user's guide for one of the bases listed under the Compatible Bases section.
- ◆ User guides for all Uniden phones are available on our website for free downloading.

## IMPORTANT INFORMATION

### Specifications

AC Adapter	Part number	PS-0035
	Input voltage	120V AC, 60 Hz
	Output voltage	8V AC @ 300mA
Battery pack	Part number	BT-1018
	Capacity	500mAh, 2.4V DC

- ◆ Use only the supplied AC adapter.
- ◆ Be sure to use the proper adapter for the base and any chargers.
- ◆ Do not place the power cord where it creates a trip hazard or where it could become chafed and create a fire or electrical hazard.
- ◆ Do not place the unit in direct sunlight or subject it to high temperatures.


### Battery Information

- ◆ Fully charged, the battery should provide about 8 hours of talk time and about 7 days of standby time. For best results, return the handset to the cradle after each call to keep it fully charged.
- ◆ Keep an eye on the battery status icon. When the battery gets too low, the handset shows a low battery alert. If you hear a strange beep during a call, check the display: if you see the low battery alert, finish your conversation as quickly as possible and return the handset to the cradle. If the handset is in standby, none of the keys will operate.
- ◆ With normal use, the battery should last about one year. Replace the battery when the talk time becomes short even when the battery is charged. To buy a replacement battery, call the Parts Department listed on the front cover.

### **Replace the Rechargeable Handset Battery Pack**

Follow these steps to replace the battery:

1. Unscrew the four screws holding the battery cover and remove it.
2. Remove the old battery pack from the battery compartment.
3. Line up the new battery's connector with the jack inside the battery compartment (the connector only fits one way).
4. Push the connector in firmly. Tug on the battery wires gently to make sure you have a good connection.
5. Before replacing the battery cover, check the rubber seal located on the under side of the cover: make sure that the seal is set in the groove and that there is no foreign matter under the seal.

 **Note: If the rubber seal appears worn, nicked, or dried out, you must replace it. New seals are available through the Parts Department (see the cover page for contact information).**

6. Replace the battery cover; use the four screws to secure the cover to the back of the handset.

### **Rechargeable Nickel-Metal-Hydride Battery Warning**

**CAUTION! Risk of explosion if battery is replaced by an incorrect type! Dispose of used batteries according to the instructions. Do not open or mutilate the battery. Disconnect the battery before shipping this product.**

- ◆ This equipment contains a rechargeable Nickel-Metal-Hydride battery.

- ◆ The rechargeable batteries contained in this equipment may explode if disposed of in a fire.
- ◆ Nickel is a chemical known to the state of California to cause cancer.
- ◆ Do not short-circuit the battery.
- ◆ Do not charge the battery used in this equipment in any charger other than the one designed to charge this battery as specified in the owner's manual. Using another charger may damage the battery or cause it to explode.

**Rechargeable batteries must be recycled or disposed of properly.**

**Uniden works to reduce lead content in PVC coated cords in our products and accessories.**

**Warning! The cords on this product and/or accessories contain lead, a chemical known to the state of California to cause birth defects or other reproductive harm. Wash hands after handling.**

## Compliance Information

Any changes or modifications to this product not expressly approved by the manufacturer or other party responsible for compliance could void your authority to operate this product.

### FCC Part 15 information

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Privacy of communications may not be ensured when using this phone.

**FCC PART 15.105(b):** Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### RF exposure information

This product complies with FCC radiation exposure limits under the following conditions:

- The base must be placed to allow a minimum of 20 cm (8 inches) between the antenna and all persons during normal operation.
- The base must not be collocated or operated in conjunction with any other antenna or transmitter.
- The handset is designed for body-worn operation and meets FCC RF exposure guidelines when used with any belt clip, carrying case, or other accessory supplied with this product. (All necessary accessories are included in the package; any additional or optional accessories are not required for compliance with the guidelines.) Third party accessories (unless approved by the manufacturer) should be avoided as these might not comply with FCC RF exposure guidelines.

### Industry Canada (I.C.) Notice

#### *Terminal equipment*

NOTICE: This equipment meets the applicable **Industry Canada Terminal Equipment Technical Specifications**. This is confirmed by the registration number. The abbreviation *IC* before the registration number signifies that registration was performed based on a Declaration of Conformity indicating that Industry Canada technical specifications were met. It does not imply that Industry Canada approved the equipment.

NOTICE: The Ringer Equivalence Number (REN) for this terminal equipment is marked on the equipment itself. The REN assigned to each terminal equipment provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed 5.

#### *Radio equipment*

The term *IC* before the radio certification number only signifies that Industry Canada technical specifications were met. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. "Privacy of communications may not be ensured when using this telephone".

# One-year Limited Warranty

**Important: Evidence of original purchase is required for warranty service.**

**WARRANTOR:** UNIDEN AMERICA CORPORATION ("Uniden")

**ELEMENTS OF WARRANTY:** Uniden warrants, for one year, to the original retail owner, this Uniden Product to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below.

**WARRANTY DURATION:** This warranty to the original user shall terminate and be of no further effect 12 months after the date of original retail sale. The warranty is invalid if the Product is (A) damaged or not maintained as reasonable or necessary, (B) modified, altered, or used as part of any conversion kits, subassemblies, or any configurations not sold by Uniden, (C) improperly installed, (D) serviced or repaired by someone other than an authorized Uniden service center for a defect or malfunction covered by this warranty, (E) used in any conjunction with equipment or parts or as part of any system not manufactured by Uniden, or (F) installed or programmed by anyone other than as detailed by the owner's manual for this product.

**STATEMENT OF REMEDY:** In the event that the product does not conform to this warranty at any time while this warranty is in effect, warrantor will either, at its option, repair or replace the defective unit and return it to you without charge for parts, service, or any other cost (except shipping and handling) incurred by warrantor or its representatives in connection with the performance of this warranty. Warrantor, at its option, may replace the unit with a new or refurbished unit. **THE LIMITED WARRANTY SET FORTH ABOVE IS THE SOLE AND ENTIRE WARRANTY PERTAINING TO THE PRODUCT AND IS IN LIEU OF AND EXCLUDES ALL OTHER WARRANTIES OF ANY NATURE WHATSOEVER, WHETHER EXPRESS, IMPLIED OR ARISING BY OPERATION OF LAW, INCLUDING, BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THIS WARRANTY DOES NOT COVER OR PROVIDE FOR THE REIMBURSEMENT OR PAYMENT OF INCIDENTAL OR CONSEQUENTIAL DAMAGES.** Some states do not allow this exclusion or limitation of incidental or consequential damages so the above limitation or exclusion may not apply to you.

**LEGAL REMEDIES:** This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This warranty is void outside the United States of America and Canada.

**PROCEDURE FOR OBTAINING PERFORMANCE OF WARRANTY:** If, after following the instructions in the owner's manual you are certain that the Product is defective, pack the Product carefully (preferably in its original packaging). Disconnect the battery from the Product and separately secure the battery in its own separate packaging within the shipping carton. The Product should include all parts and accessories originally packaged with the Product. Include evidence of original purchase and a note describing the defect that has caused you to return it. The Product should be shipped freight prepaid, by traceable means, to warrantor at:

**Uniden America Service  
4700 Amon Carter Blvd.  
Fort Worth, TX 76155**

- Uniden® is a registered trademark of Uniden America Corporation.
- Call waiting, CID, CIDCW, and Voice Mail are telephone line services. Your phone supports these services, but you have to arrange for them through your telephone provider. Contact your provider for details.
- The pictures in this manual are for example only. Your phone may not look exactly like the pictures.

May be covered under one or more of the following U.S. patents:

5,663,981	5,671,248	5,717,312	5,732,355	5,754,407	5,758,289
5,768,345	5,787,356	5,794,152	5,801,466	5,825,161	5,864,619
5,893,034	5,912,968	5,915,227	5,929,598	5,930,720	5,960,358
5,987,330	6,044,281	6,070,082	6,076,052	6,125,277	6,253,088
6,314,278	6,321,068	6,418,209	6,618,015	6,714,630	6,782,098
6,788,920	6,788,953	6,839,550	6,889,184	6,901,271	6,907,094
6,914,940	6,940,867	6,953,118	7,023,176	7,030,819	7,146,160
7,203,307	7,206,403	7,310,398	7,460,663		

Other patents pending.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>