

Uniden®

***Cordless
Telephone
with Answering System***

Instruction Manual

900 MHz

EXA2955

Precautions!

Before you read anything else, please observe the following:

Warning!

Uniden America Corporation DOES NOT represent this unit to be waterproof. To reduce the risk of fire, electrical shock, or damage to the unit, DO NOT expose this unit to rain or moisture.

Rechargeable Nickel-Cadmium Battery

Warning

- This equipment contains a rechargeable nickel-cadmium battery.
- Cadmium is a chemical known to the State of California to cause cancer.
- The rechargeable nickel-cadmium battery contained in this equipment may explode if disposed of in a fire.
- **Do not** short-circuit the battery.
- Do not charge the rechargeable nickel-cadmium battery used in this equipment in any charger other than the one designed to charge this battery as specified in the instruction manual. Using another charger may damage the battery or cause the battery to explode.

Rechargeable Nickel-Cadmium Batteries Must Be Recycled or Disposed of Properly



- Uniden voluntarily participates in an RBRC® industry program to collect and recycle nickel-cadmium batteries at the end of their useful life, when taken out of service within the United States. The RBRC® program provides a convenient alternative to placing used nickel-cadmium batteries into the trash or municipal waste stream, which is illegal in some areas.
- Through the RBRC® program, Uniden makes it easy for you to drop off the used battery at local retailers of replacement nickel-cadmium batteries. You may also contact your local recycling center for information on where to return the used battery. Please call 1-800-8-BATTERY for information on Ni-Cd battery recycling in your area. Uniden's involvement in this program is part of its commitment to protecting our environment and conserving natural resources.
- RBRC® is a registered trademark of the Rechargeable Battery Recycling Corporation.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Important Safety Instructions

When using your telephone equipment, these basic safety precautions should always be followed to reduce the risk of fire, electrical shock, and injury to persons:

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall outlet before cleaning. Use a dry cloth for cleaning without liquid or aerosol cleaners.
4. Do not use this product near water; for example, near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement, or near a swimming pool.
5. Do not place this product on an unstable cart, stand, or table. The telephone may fall, causing serious damage to the unit.
6. Slots and openings in the cabinet and the back or bottom are provided for ventilation. To protect the product from overheating, these openings must not be blocked or covered. This product should never be placed near or over a radiator or heat register. This product should not be placed in a built-in installation unless proper ventilation is provided.
7. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your dealer or local power company.
8. Do not allow anything to rest on the power cord. Do not locate this product where the cord will be damaged by persons walking on it.
9. Do not overload wall outlets and extension cords, as this can result in the risk of fire or electrical shock.
10. Never push objects of any kind into this product through cabinet slots, as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. Never spill liquid of any kind on the product.
11. To reduce the risk of electric shock, do not disassemble this product. Take it to qualified service personnel when service or repair work is required. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used.
12. Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - A. When the power supply cord is damaged or frayed.
 - B. If liquid has been spilled into the product.
 - C. If the product has been exposed to rain or water.

- D. If the product does not operate normally when following the operating instructions. (Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive repair work by a qualified technician.)
 - E. If the product has been dropped or the cabinet has been damaged.
 - F. If the product exhibits a distinct change in performance.
13. Do not use the telephone to report a gas leak in the vicinity of the leak.

Additional Battery Safety Precautions

Caution! To reduce the risk of fire or injury to persons by the battery, read and follow these instructions:

1. Use only the appropriate type and size battery pack specified in the instruction manual.
2. Do not dispose of the battery pack in a fire. The cell may explode. Check the nickel-cadmium battery disposal package insert for disposal instructions.
3. Do not open or mutilate the battery pack. Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.
4. Exercise care in handling the battery in order not to short the battery with conducting materials such as rings, bracelets, and keys. The battery or conductor may overheat and cause burns.
5. Charge the battery pack provided with or identified for use with this product only in accordance with the instructions and limitations specified in the instruction manual provided for this product.
6. Observe proper polarity orientation between the battery pack and battery charger.

SAVE THESE INSTRUCTIONS!

Important Electrical Considerations

Unplug all electrical appliances when you know an electrical storm is approaching. Lightning can pass through your household wiring and damage any device connected to it. This phone is no exception.

Warning!

Please do not attempt to unplug any appliance during an electrical storm.

The FCC Wants You To Know

Changes or modifications to this product not expressly approved by Uniden, or operation of this product in any way other than as detailed by the instruction manual, could void your authority to operate this product. The equipment cannot be used on public coin phone service provided by the telephone company. Connection to party line service is subject to state tariffs. (Contact the state public utility commission, public service commission or corporation commission for information.)

Range

Your new phone is designed to achieve the maximum possible range by transmitting and receiving according to the highest specifications set forth by the FCC. We have rated this phone to operate at a maximum distance with the qualification that the range depends upon the environment in which the telephone is used. Many factors limit range, and it would be impossible to include all the variables in our rating. The Maximum Range rating of this phone is meant to be used as a means of comparison against other range claims.

Telephone Line Problems

The FCC has granted the telephone company the right to disconnect service in the event that your phone causes problems on the telephone line. Also, the telephone company may make changes in facilities and services which may affect the operation of your unit. However, your telephone company must give adequate notice in writing prior to such actions to allow you time for making necessary arrangements to continue uninterrupted service.

If you are having trouble with your telephone service, you must first disconnect your phone to determine if it is the cause of your problem. If you determine that it is the cause, you must leave it disconnected until the trouble has been corrected.

Radio Interference

Radio interference may occasionally cause buzzing and humming in your cordless handset, or clicking noises in the base. This interference is caused by external sources such as TV, refrigerator, vacuum cleaner, fluorescent lighting, or electrical storm. Your unit is NOT DEFECTIVE. If these noises continue and are too distracting, please check around your home to see what appliances may be causing the problem. In addition, we recommend that the base not be plugged into a circuit that also powers a major appliance because of the potential for interference. Be certain that the antenna on the unit is fully extended when needed.

In the unlikely event that you consistently hear other voices or distracting transmissions on your phone, you may be receiving radio signals from another cordless telephone or other source of interference. If you cannot eliminate this type of interference, you need to change to a different channel.

Finally, it should be noted that some cordless telephones operate at frequencies that may cause interference to nearby TVs and VCRs. To minimize or prevent such interference, the base of the cordless telephone should not be placed near or on top of a TV or VCR. If interference is experienced, moving the cordless telephone farther away from the TV or VCR will often reduce or eliminate the interference.

More Than One Cordless Telephone

If you want to use more than one cordless telephone in your home, they must operate on different channels. Press the channel key to select a channel that provides the clearest communication.

Cordless Telephone Privacy

Cordless telephones are radio devices. Communications between the handset and base of your cordless telephone are accomplished by means of radio waves which are broadcast over the open airways. Because of the inherent physical properties of radio waves, your communications can be received by radio receiving devices other than your own cordless telephone unit. Consequently, any communications using your cordless telephone may not be private.

Installation Considerations

Selecting a Location

Before choosing a location for your new phone, there are some important guidelines you should consider:

- The location should be close to both a phone jack and continuous power outlet. (A continuous power outlet is an AC outlet which does not have a switch to interrupt its power.)

- Keep the base and handset away from sources of electrical noise such as motors or fluorescent lighting.
- Be sure there is sufficient space to fully extend the base antenna.
- The base can be placed on a desk or tabletop or mounted on a standard telephone wall plate.
- You should charge your new phone for 15-20 hours before completing the installation or using the handset.

Telephone Line Outlets

There are two types of phone outlets:

Modular Jack

Most phone equipment available now uses modular jacks. Phone cords are fitted with a molded plastic connector which plugs into this type of jack. If you do not have modular phone jacks, contact your local telephone company for information about their installation.

Hardwired Jack

Some equipment is wired directly to a phone jack, and these types of installations require a modular jack converter. This type of installation is not difficult; however, you should contact your Uniden telephone dealer or a telephone supply store for advice about the proper adapter or converter for your particular situation.

Connecting the Telephone Cords

Consider these safety guidelines before connecting the telephone cords:

Caution!

- Never install telephone wiring during a lightning storm.
- Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected.
- Use caution when installing or modifying telephone lines.

Applying Power to the Base

This phone requires an AC outlet, without a switch to interrupt power, and the included AC adapter. To relieve strain on the DC plug when the phone is placed on a desk or table, wrap the power cord around the strain relief notch on the bottom of the base.

NOTE: Place the power cord so that it does not create a trip hazard, or where it could become chafed and create a fire or other electrical hazards.

Plug the AC Adapter into a standard 120 VAC wall outlet.

Do not use an outlet controlled by a wall switch. Use only the Uniden AC Adapter supplied with this phone.

Table of contents

Getting Started

- 6 Read this first
- 7 Step 1:Checking the package contents
- 8 Step 2:Setting up the base phone
- 11 Step 3:Preparing the battery pack
- 13 Identifying the parts

Basics

- 16 Making calls
- 18 Redialing
- 19 Receiving calls

Telephone Features

- 20 Memory dialing
 - 20 Storing phone numbers on the handset
 - 21 Storing phone numbers on the base phone
 - 22 Making calls with memory dialing on the handset
 - 22 Making calls with memory dialing on the base phone
- 23 Setting the ringer type
 - 23 Turning off the ringer
 - 24 Checking the ringer type
 - 24 Adjusting the ringer volume level of the base phone
- 25 Switching the phones during a call
 - 25 To switch from the base phone to the handset
 - 26 To switch from the handset to the base phone
- 27 Talking between the handset and the base phone (Intercom)
 - 27 To talk from the handset to the base phone
 - 28 To talk from the base phone to the handset

- 29 Transferring a call
 - 29 To transfer from the base phone to the handset
 - 30 To transfer from the handset to the base phone
- 31 Having a three-way conference
 - 31 To join the phone conversation

Answering Machine Features

- 32 Setting up the answering machine
 - 32 Setting the time and day of the week
 - 33 Recording the greeting
 - 35 Setting the number of rings
 - 36 Setting the audible message alert
 - 37 Turning on the answering function
- 39 Playing back messages
 - 40 Adjusting the speaker volume
 - 40 Erasing messages
- 42 Selecting the Announcement Only Mode
- 43 Screening calls
- 44 Recording a memo message
- 45 Operating from an outside phone
 - 45 Setting the remote ID code (security code)
 - 46 Picking up new messages

Additional Information

- 47 Mounting the base phone on a wall
- 48 Troubleshooting
- 50 Maintenance
- 51 Specifications
- 52 Index
- 55 One Year Limited Warranty

Read this first

Before you use your phone, you must first set it up. Here's a quick way to set up your phone: Steps 1, 2 and 3.

Step 1 (page 7)

First, unpack the phone and the supplied accessories.

Step 2 (pages 8 to 10)

Next, you need to do three things to set up the base phone, including finding the best location for the base phone.

Base phone

Step 3 (pages 11 to 12)

Then, insert the battery pack into the handset and charge it for 15-20 hours.

Handset

That's it!

About the digital security code

The cordless telephone uses a digital security code to provide protection against unwanted access to your base phone.


The security code blocks other cordless handsets to make calls through your base phone.

A random security code will be assigned automatically between your base phone and handset when you charge the battery pack for the first time.


Step 1

Checking the package contents


Make sure you have received the following items in the package.

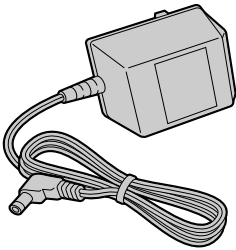

AC power adapter (AD-314)

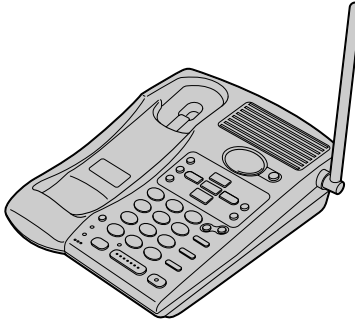


Base phone

 


Handset



Telephone line cord (1)

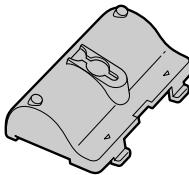

Wall bracket/stand
for base phone

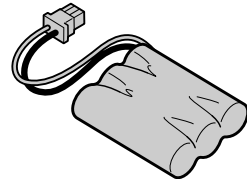

Rechargeable battery pack
(BT-905)

Uniden Parts Department

(800) 554-3988

Hours: M-F 7:00 AM to 5:00 PM CST.

We can also be reached on the web at www.uniden.com

Step 2


Setting up the base phone

Do the following steps:

- Choose the best location
- Connect the base phone
- Choose the dialing mode

Choose the best location


Where you place the base phone affects the reception quality of the handset.

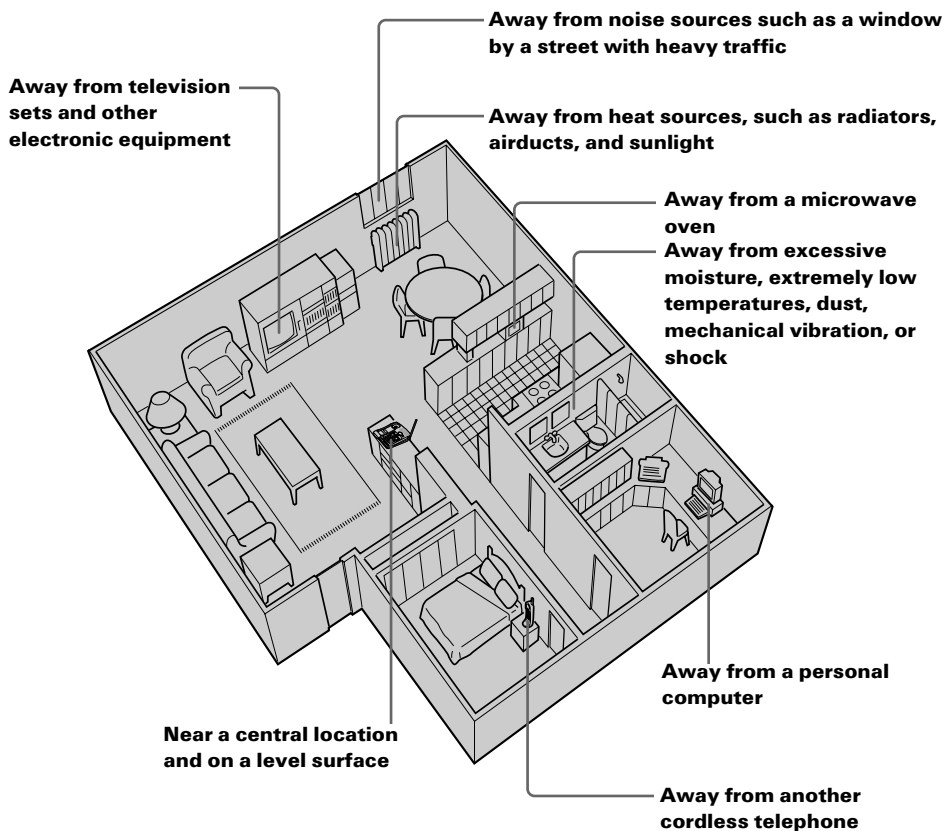

CAUTION: · Should you experience intermittent loss of audio during a conversation, try moving closer to the base or move base phone away from other noise sources.
· The cordless telephone operates at a frequency that may cause interference to nearby TVs and VCRs; the base phone should not be placed near or on the top of a TV or VCR; and, if interference is experienced, moving the cordless telephone farther away from the TV or VCR will often reduce or eliminate the interference.

Connect the base phone

If you want to hang the base phone on the wall, see page 47.

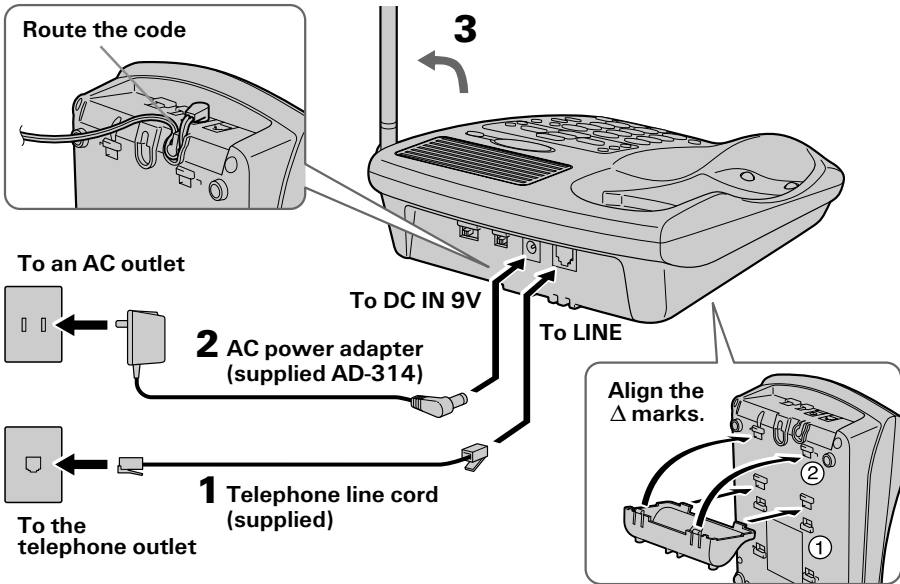

If you want to use the wall bracket as the stand, attach it on the bottom of the base phone before step 1 as illustrated above.

- 1** Connect the telephone line cord to the LINE jack and to a telephone outlet.
- 2** Connect the AC power adapter to the DC IN 9V jack and to an AC outlet.
- 3** Raise the antenna. Make sure it points towards the ceiling.

continued

Step 2: Setting up the base phone (continued)

Notes

- Use only the supplied AD-314 AC power adapter. Do not use any other AC power adapter.
- Connect the AC power adapter to a continuous power supply.
- Place the base phone close to the AC outlet so that you can unplug the AC power adapter easily.

Polarity of the plug



Tip


If your telephone outlet is not modular, contact your telephone service company for assistance.

Modular



Choose the dialing mode

For the telephone to work properly, select an appropriate dialing mode (tone or pulse).

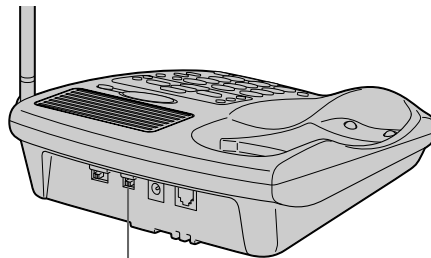

DIAL MODE switch

Depending on your dialing system, set the DIAL MODE switch as follows:

If your dialing system is	Set the switch to
Tone	TONE
Pulse	PULSE

If you aren't sure of your dialing system


Make a trial call with the DIAL MODE switch set to TONE.

If the call connects, leave the switch as is; otherwise, set to PULSE.


Step 3

Preparing the battery pack


Charge the battery pack for 15-20 hours before you start using your phone.

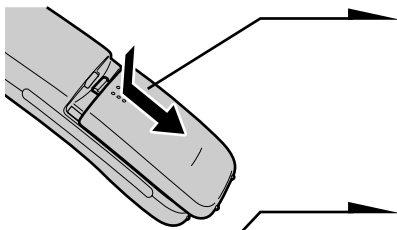


- 1** Slide open the battery compartment lid of the handset.

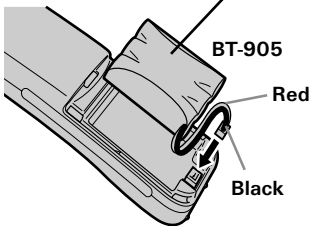

- 2** Connect the battery connector with correct polarity (black wire goes on left side and red wire goes on right).

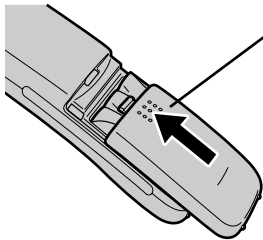

- 3** Close the battery compartment lid.

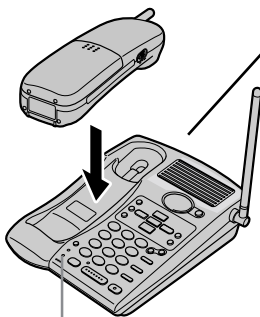

- 4** Place the handset on the base phone. The CHARGE LED lights up when the handset is properly seated on the charge terminals of the base phone. Charge the battery pack for 15-20 hours so that the battery is fully charged. The CHARGE LED remains lit even after charging is completed.

CHARGE LED

continued

Step 3: Preparing the battery pack (continued)

Battery duration

A fully charged battery pack lasts for about:

- approx. 7 hours when you use the handset continuously.
- approx. 7 days when the handset is in standby mode.

Notes

- The battery pack will gradually discharge over a long period of time, even if not in use.
- If you leave the battery pack in the handset without charging it, the battery pack will be completely discharged.
It may require several times of charging to recover its full capacity.

To obtain the best performance from the battery

Do not place the handset on the base phone after each call. The battery works best if the handset is returned to the base phone after two or three calls. However, do not leave the handset off the base phone for a long period of time as this will completely discharge the battery pack.

When to purchase a new battery pack

If the battery lasts only a few minutes even after 15-20 hours of charging, the usable life of the battery has expired and needs replacement. Contact Uniden Parts Department (see page 7), and ask for a BT-905 rechargeable battery pack.


Note

Battery life may vary depending on usage condition and ambient temperature.

Identifying the parts

Refer to the pages indicated in parentheses for details.

Handset

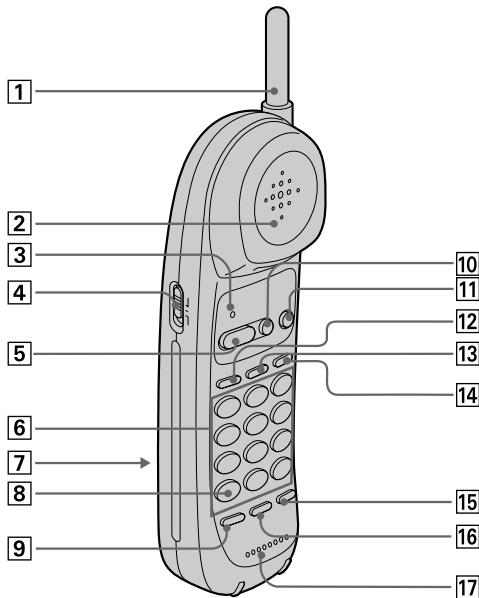


- | | |
|---|--|
| <p>1 Antenna</p> <p>2 Speaker</p> <p>3 TALK/BATT LOW LED
(p. 16, 20)
Lights up during a call, flashes when you store a phone number for memory dialing.</p> <p>4 VOL (volume) switch (p. 16, 19)
Adjusts the handset volume.</p> <p>5 TALK button (p. 16, 19)
Lets you make or receive a call.</p> <p>6 Dialing keys (p. 16)</p> <p>7 Battery compartment (p. 11)</p> <p>8 *TONE button (p. 16, 19)
Allows you to switch temporarily to tone dialing.</p> <p>9 MEMORY button (p. 22)
Used to make a call with memory dialing.</p> | <p>10 OFF button (p. 16, 19)
Allows you to disconnect the call.</p> <p>11 FLASH button (p. 16, 19)</p> <p>12 HOLD button (p. 16, 19, 26)
Used to hold a call.</p> <p>13 INTERCOM button (p. 27)
Used to make an intercom call.</p> <p>14 CHANNEL button (p. 16, 19)
Used to select a better channel.</p> <p>15 REDIAL/P (PAUSE) button
(p. 18, 22)
Redials the last number called, inserts a pause in the dialing sequence.</p> <p>16 SET UP button (p. 20)
Used to store numbers for memory dialing.</p> <p>17 Microphone</p> |
|---|--|


continued

Identifying the parts (continued)

Base Phone

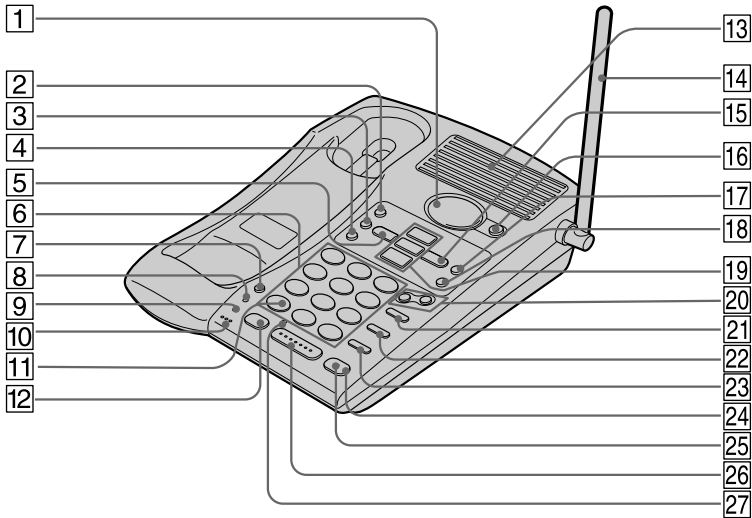


- 1** **Message counter** (p. 37)
Indicate the number of new messages recorded. “A” appears in the announcement only mode. “FL” appears when there is no space to record messages.
- 2** **TIME/SET button** (p. 32, 45)
Press when setting the day and time, or to check the current time.
Also used when setting the remote ID code (security code).
- 3** **SELECT button** (p. 32)
- 4** **MENU button** (p. 32)
- 5** **REPEAT/SLOW button** (p. 32, 39)
Press to repeat the current message or go back to the previous message.
Keep the button pressed for slow playback of messages.
- 6** **Dialing keys** (p. 17)
- 7** **EDIT button** (p. 21)
Used to store numbers for memory dialing.
- 8** **IN USE LED** (p. 17, 19, 25)
Lights when one of the phones is in use.
- 9** **CHARGE LED** (p. 11)
Lights while the battery is being charged.
- 10** **MIC (microphone)** (p. 33, 44)
- 11** **TONE button** (p. 17, 19)
Allows you to switch temporarily to tone dialing.
- 12** **HOLD button** (p. 17, 19, 25)
Used to hold a call.
- 13** **Speaker**
- 14** **Antenna** (p. 9, 47)
- 15** **SKIP/QUICK button** (p. 32, 39)
Press to skip to the next message.
Keep the button pressed for quick playback of messages.
- 16** **ANSWER ON/OFF button** (p. 37)
Turns the answering function on or off.

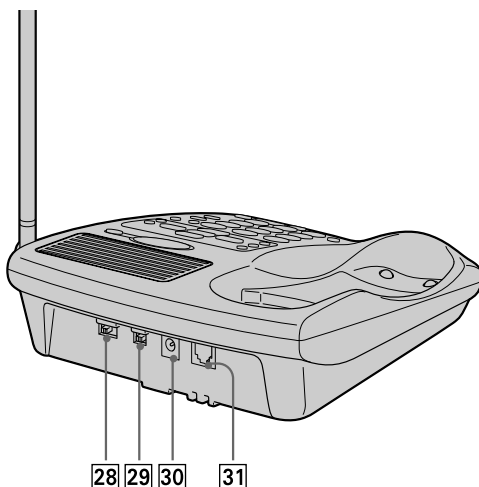

- 17 REC/MEMO button** (p. 33, 44)
Records a greeting or memo message.
- 18 ERASE button** (p. 34, 40)
Erases the recorded greeting or messages.
- 19 PLAY/STOP (MAILBOX 1,2,3) button** (p. 39)
Plays back the messages in each mailbox.
- 20 VOL (Volume) +/- button** (p. 17, 19, 40)
Adjusts the speaker volume.
- 21 REDIAL/P (PAUSE) button** (p. 18, 22)
Redials the last number called, inserts a pause in the dialing sequence.
- 22 MEMORY button** (p. 22)
Used to make a call with memory dialing.
- 23 FLASH button** (p. 17, 19)
- 24 INTERCOM button** (p. 28)
Used to make an intercom call.
- 25 INTERCOM LED** (p. 27)
Lights up during an intercom call.
- 26 SPEAKER (PHONE) button** (p. 17, 19)
Used to make or receive a call with the base phone.
- 27 SPEAKER (PHONE) LED** (p. 17, 19)
Lights while making or receiving a call with the base phone.
- 28 RINGER switch** (p. 24)
Adjusts the ringer volume.
- 29 DIAL MODE switch** (p. 10)
Selects pulse or tone dialing.
- 30 DC IN 9V jack** (p. 9, 47)
- 31 LINE (telephone line) jack** (p. 9, 47)

Making calls

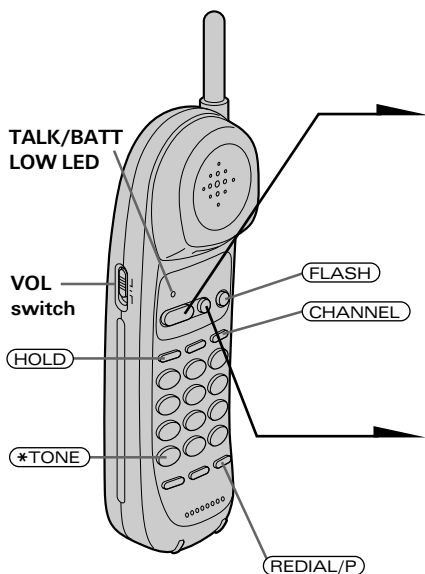

- 1** Pick up the handset from the base phone.
- 2** Press **(TALK)**.
The TALK/BATT LOW LED on the handset and the IN USE LED on the base phone light up. Then you'll hear a dial tone. If you hear error beeps, move closer to the base phone.
- 3** Dial the phone number.
- 4** When you're done talking, press **(OFF)** or replace the handset on the base phone.
The TALK/BATT LOW LED on the handset and the IN USE LED on the base phone go off.

Additional tasks

To	Do this
Put a call on hold	Press (HOLD) . The TALK/BATT LOW LED flashes slowly. Press (TALK) to resume the conversation.
Select a better channel	Press (CHANNEL) .
Adjust the handset Volume	Set the VOL switch to H (high), M (middle) or L (low).
Switch to tone dialing Temporarily	Press (*TONE) while using the telephone after you're connected. The line remains in tone dialing until disconnected.
Switch to another call ("call waiting" service*)	Press (FLASH) to access the flash function. Press (FLASH) again to return to the first caller.

* You need to subscribe to the service from your telephone company.

Notes

- Before dialing, make sure you can hear the dial tone, otherwise you cannot dial correctly.
- When the TALK/BATT LOW LED repeats a set of two flashes, the base phone is in use.
- When you set the handset volume to H (high), the volume will be raised considerably. Under normal circumstances, set the volume to M (middle).

If the handset battery becomes weak during a call

You hear a beep every three seconds and the TALK/BATT LOW LED on the handset flashes.

The call will disconnect soon. Replace the handset on the base phone to charge.

For optimum performance, charge the battery for 15-20 hours.

Note that during the first 10 - 15 minutes of charging, the phone will be inactive, i.e., unable to make or receive a call.

After this initial 10 - 15 minutes, you **may** be able to use the phone, but the battery duration will be **very short**; thus it is recommended that you **fully charge** the battery before the next usage.

Making calls through the speakerphone

Press **(SPEAKER)** on the base phone.


The SPEAKER LED and the IN USE LED light up.

“- -” appears on the display.

Dial the phone number.

When you are done talking, press

(SPEAKER) again.

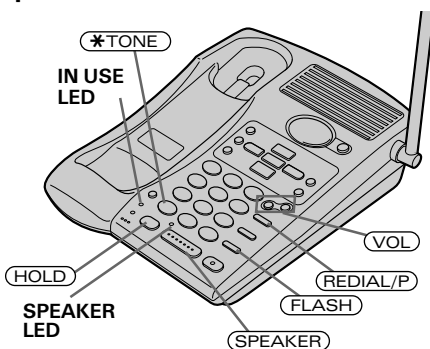

Additional tasks

To	Do this
Put a call on hold	Press (HOLD) . The IN USE LED flashes slowly. Press (SPEAKER) to resume the conversation.
Adjust the speaker volume	Press (VOL +) or (VOL -) .
Switch to tone dialing temporarily	Press (*TONE) while using the telephone after you're connected. The line remains in tone dialing until disconnected.
Switch to another call ("call waiting" service*)	Press (FLASH) to access the flash function. Press (FLASH) again to return to the first caller.

* You need to subscribe to the service from your telephone company.

continued

Making calls (continued)

To obtain the best speakerphone performance

- You may not be able to hear the other party's voice in a noisy place. Therefore, use the speakerphone in a quiet room.
- Do not bring your hand or other object too close to the microphone or you will hear a shrill noise ("feedback").
- When the speaker volume is loud, or the telephone has been placed close to a wall, you may find that the volume drops suddenly. This is due to a circuit in the telephone designed to protect against feedback. In such cases, lower the speaker volume slightly.

Redialing

On the handset

- 1** Press **TALK**.
The TALK/BATT LOW LED lights up.
- 2** Press **REDIAL/P** to redial the number last dialed.

On the base phone

- 1** Press **SPEAKER**.
The SPEAKER LED lights up.
"- -" appears on the display.
- 2** Press **REDIAL/P** to redial the number last dialed.


Note

If the number last dialed exceeds 32 digits, only the first 32 digits are dialed.

Tip

The number to be redialed is the last number dialed either on the handset or on the base phone.

Receiving calls

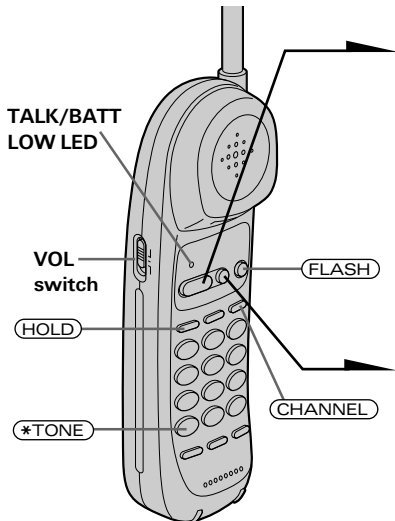

- 1** When you hear the phone ring;
 - Press **(TALK)** (or any key except **(OFF)**).
 - or
 - Pick up the handset from the base phone when the handset is placed on the base phone. The TALK/BATT LOW LED on the handset and the IN USE LED on the base phone light up.
- 2** When you're done talking, press **(OFF)** or replace the handset on the base phone. The TALK/BATT LOW LED on the handset and the IN USE LED on the base phone go off.

Additional tasks

To	Do this
Put a call on hold	Press (HOLD) . The TALK/BATT LOW LED flashes slowly. Press (TALK) to resume the conversation.
Select a better channel	Press (CHANNEL) .
Adjust the handset volume	Set the VOL switch to H (high), M (middle) or L (low).
Switch to tone dialing temporarily	Press (*TONE) while using the telephone after you're connected. The line remains in tone dialing until disconnected.
Switch to another call ("call waiting" service*)	Press (FLASH) to access the flash function. Press (FLASH) again to return to the first caller.
Turn on/off the ringer of the handset	See "Setting the ringer type" on page 23.

* You need to subscribe to the service from your telephone company.

Receiving calls through the speakerphone

When the phone rings, press **(SPEAKER)** on the base phone.

The SPEAKER LED and the IN USE LED light up.


"- -" appears on the display.

To adjust the speaker volume, press **(VOL+)** or **(VOL-)**.

When you are done talking, press **(SPEAKER)** again.

To obtain the best speakerphone performance, see page 18.


To adjust the ringer volume, see page 24.

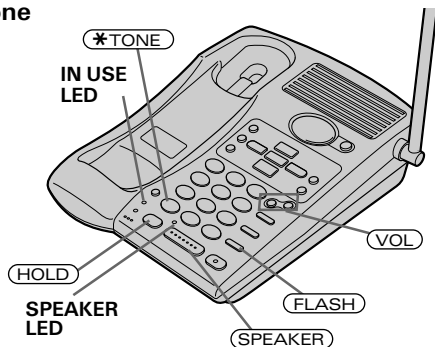

Memory dialing

You can dial with a touch of a few buttons by storing a phone number on a dialing key. You can store up to 10 different phone numbers separately on the handset and on the base phone.

Storing phone numbers on the handset

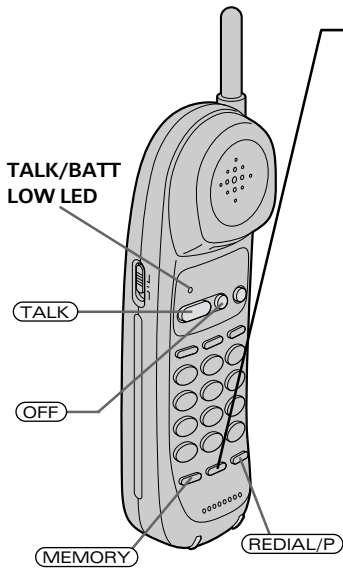

- 1** Press **SET UP**.
The TALK/BATT LOW LED flashes.
- 2** Press one of the dialing keys (0 to 9) for the phone number to be stored.
You'll hear a confirmation beep.
- 3** Enter the phone number you want to store.
You can enter up to 16 digits, including a tone and a pause, each of which is counted as one digit.
- 4** Press **SET UP** again.
You'll hear a confirmation beep, and the number is stored. The TALK/BATT LOW LED goes off.


Notes

- In step 3, if you don't enter the phone number, the previously stored number will be erased.
- Do not allow more than 20 seconds to elapse between each step of the procedure.
- Before storing phone numbers, make sure the handset is not in use.

Tip

If you enter a wrong number, press **OFF**, then start from the beginning.

Storing phone numbers on the base phone

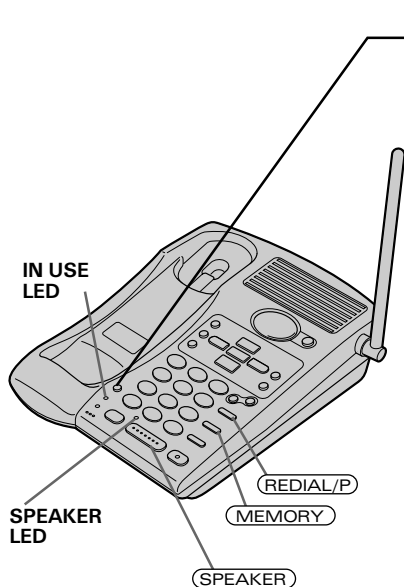

- 1** Press **EDIT** .
The **SPEAKER LED** flashes quickly.
- 2** Press one of the dialing keys (**0** to **9**) for the phone number to be stored.
You'll hear a confirmation beep.
- 3** Enter the phone number you want to store.
You can enter up to 16 digits, including a tone and a pause, each of which is counted as one digit.
- 4** Press **EDIT** again.
You'll hear another confirmation beep, and the number is stored.

Notes

- In step 3, if you don't enter the phone number, the previously stored number will be erased.
- Do not allow more than 20 seconds to elapse between each step of the procedure.
- You cannot store phone numbers on the base phone while the handset is being used. The **IN USE LED** will light up to indicate this condition.

Tip

If you enter a wrong number, press **EDIT** , then start from the beginning.

continued

Memory dialing (continued)

To store the previous number dialed

Press **REDIAL/P** directly after step 2, then go to step 4.

To store a number to be dialed via Private Branch Exchange (PBX)

Before entering a phone number in step 3 on the previous page, do as follows:

- 1 Enter the outside line access digit (e.g. 9).
- 2 Press **REDIAL/P** .

To change a stored number

To store a new number, follow the instructions described previously.

To clear a number from memory

- 1 Press **SET UP** on the handset/ **EDIT** on the base phone.
- 2 Press the memory dialing key you want to clear.
- 3 Press **EDIT** again.

Making calls with memory dialing on the handset


- 1 Press **TALK** .
The TALK/BATT LOW LED lights up.
- 2 Press **MEMORY** .
- 3 Enter the desired memory dialing number (**0** to **9**) .
The phone number stored in the memory dialing number will be dialed.

Making calls with memory dialing on the base phone

- 1 Press **SPEAKER** .
The SPEAKER LED lights up.
- 2 Press **MEMORY** .
- 3 Enter the desired memory dialing number (**0** to **9**) .
The phone number stored in the memory dialing number will be dialed.

Setting the ringer type

You can select a ringer type from four types.

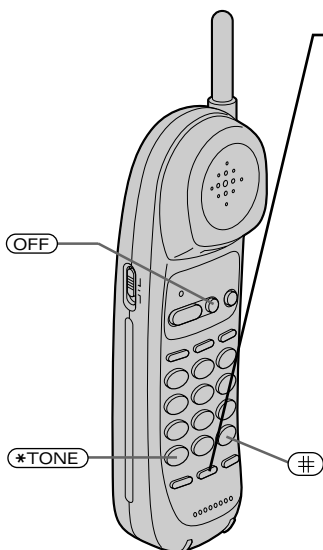

1 Press **SET UP** .

2 Press **#** or ***TONE** .

3 Press a number button, **1** to **4** , to select a ringer type.

You'll hear the corresponding ringer tone.

4 Press **OFF** .

Turning off the ringer

1 Press **SET UP** .

2 Press **#** or ***TONE** .

3 Press **5** .

4 Press **OFF** .

The ringer on the handset is turned off.

To turn the ringer on again

Follow the instructions described in "Setting the ringer type."

Note

Do not allow more than 20 seconds to elapse between each step of the procedure.

continued

Setting the ringer type (continued)

Checking the ringer type


- 1 Press **SET UP**.
- 2 Press **Ⓜ** or ***TONE**.
- 3 Press **⓪**.
The currently selected ringer sounds.
- 4 Press **OFF**.

Note

If you hear no sound (only key beep), the ringer on the handset has been turned off.

Adjusting the ringer volume level of the base phone


Set the RINGER switch on the base phone to HIGH or LOW. To turn the ringer off, set it to OFF.

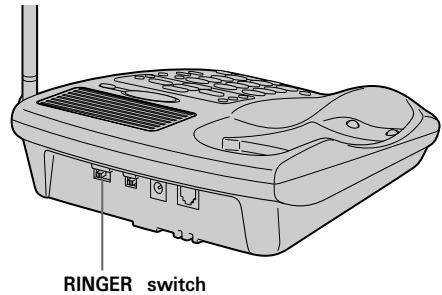


Switching the phones during a call

When you put a call on hold, you can return to the call on the other phone without disconnecting the call.

To switch from the base phone to the handset

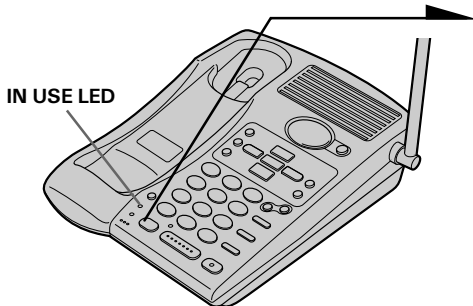

IN USE LED

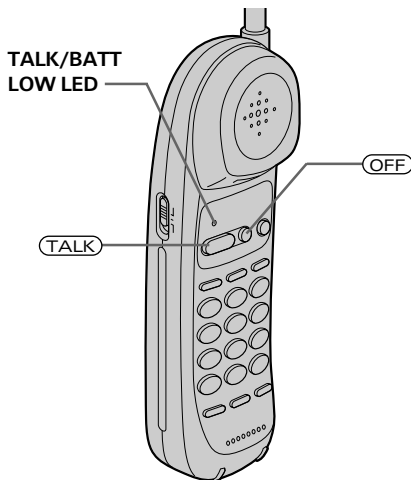

TALK/BATT
LOW LED

TALK

OFF

- 1** Press **(HOLD)** on the base phone.
The IN USE LED and the TALK/BATT LOW LED on the handset will flash slowly.
- 2** Press **(TALK)** or pick up the handset from the base phone.
The IN USE LED and the TALK/BATT LOW LED on the handset will light up.
- 3** When you are done talking, press **(OFF)** or replace the handset to the base phone.


Notes

- If you pick up the handset while talking through the speakerphone on the base phone, the call will be switched to the handset.
- If you do not press **(HOLD)** in step 1, and press **(TALK)** in step 2, you can make a three-way conversation (see “Having a three-way conference” on page 31).
- When the call is put on hold on the base phone, if you pick up the handset, the call will be switched to the handset.

continued

Switching the phones during a call (continued)


To switch from the handset to the base phone

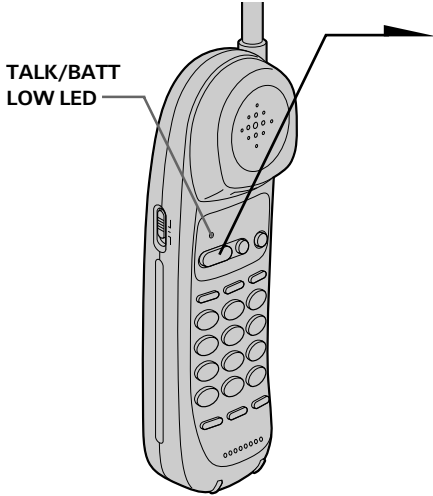

1 Press **(HOLD)** on the handset. The TALK/BATT LOW LED and the IN USE LED on the base phone will flash slowly.


2 Press **(SPEAKER)**. The SPEAKER LED on the base phone will light up. The TALK/BATT LOW LED will flash.

3 When you are done talking, press **(SPEAKER)** again.

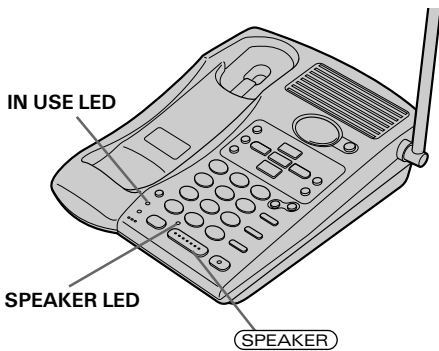

Talking between the handset and the base phone (Intercom)

You can talk between the base phone and the handset. You can start the intercom from either phone.

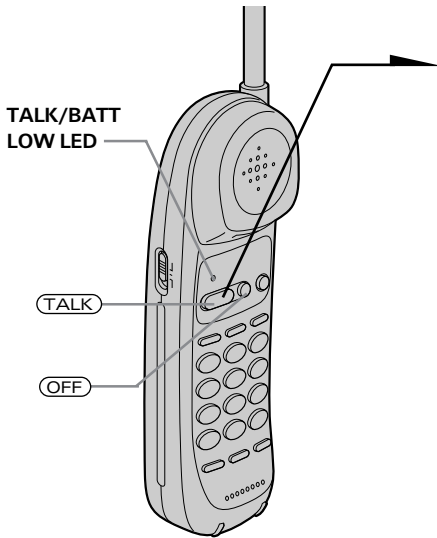

To talk from the handset to the base phone

Press **(INTERCOM)** on the handset. The TALK/BATT LOW LED lights up, and INTERCOM LED on the base flashes.

The base phone rings. You will be connected automatically after 3 seconds.

When a person at the base phone answers, you can talk.

The IN USE LED on the base and the TALK/BATT LOW LED on the handset will light up. The INTERCOM LED on the base will light up.


When you are done talking or if no one answers the phone, Press **(OFF)**.

Tips

- You can receive an intercom call on the base phone even when the RINGER switch on the base phone is set to OFF. The base phone will ring at a low level.
- When a person at the base phone want to answer the intercom call within 3 seconds, press **(INTERCOM)** on the base phone. If a person at the base phone press **(INTERCOM)** after the intercom call is automatically connected, the intercom call will be disconnected.

continued

Talking between the handset and the base phone (Intercom) (continued)

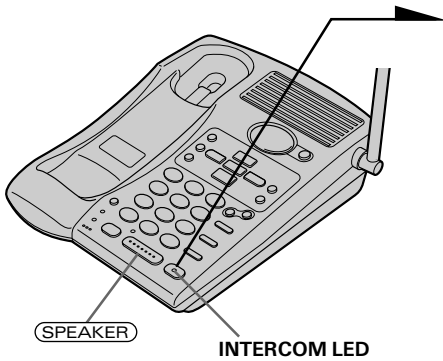

To talk from the base phone to the handset

Press **INTERCOM** on the base phone. The handset rings. TALK/BATT LOW LED flashes.

When the person at the handset presses **INTERCOM**, you can talk. The call to the handset will stop by pressing **OFF** on the handset.

The IN USE LED on the base and the TALK/BATT LOW LED on the handset will light up. The INTERCOM LED on the base phone will light up.

When you are done talking or if no one answers the phone

Press **INTERCOM** again.

Notes

- If there is an incoming call while on the intercom, only the base phone rings at a low level. To answer the call, press **TALK** on the handset or **SPEAKER** on the base phone. The intercom is canceled and you can talk to the outside caller.
- While conversing with an outside caller via the base phone or handset, you cannot make an intercom call. If you press **INTERCOM** on the handset, you will hear a busy tone. If you press **INTERCOM** on the base phone, it is invalid.


Tip

You can receive an intercom call on the handset even when the ringer is set to off. The handset will ring at a high level.

Transferring a call

You can transfer a call between the handset and base phone without disconnecting the call.

To transfer from the base phone to the handset

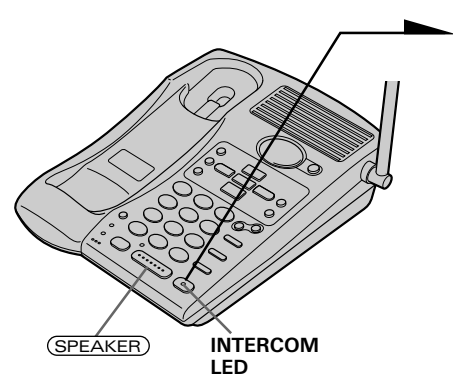


1 Press **(INTERCOM)** .
The call is put on hold, the handset rings.
The TALK/BATT LOW LED on the handset flashes.

2 Press **(INTERCOM)** on the handset.
The TALK/BATT LOW LED on the handset and INTERCOM LED on the base phone light up.
You can talk between the base phone and the handset.

3 Press **(TALK)** on the handset to talk to the caller with the handset.

If no one answers the phone
Press **(SPEAKER)** on the base phone.

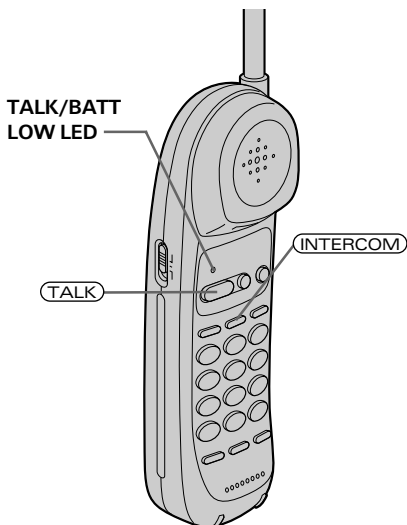


Tip


You can receive an intercom call on the handset even when the ringer is set to off. The handset will ring at a high level.

continued

To transfer from the handset to the base phone

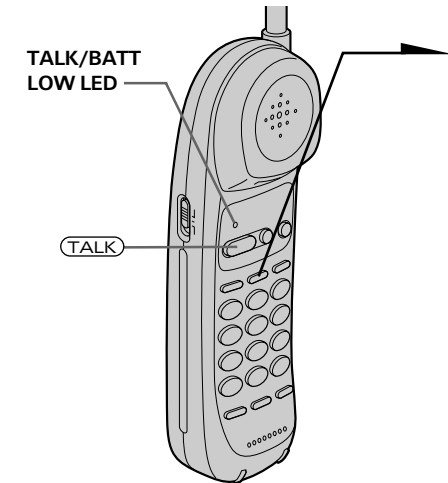

- 1** Press **INTERCOM** .
The call is put on hold, the base phone rings.
The INTERCOM LED on the base phone flashes.
You will be connected automatically after 3 seconds.
The TALK/BATT LOW LED on the handset lights up.
When a person at the base phone answers, you can talk.

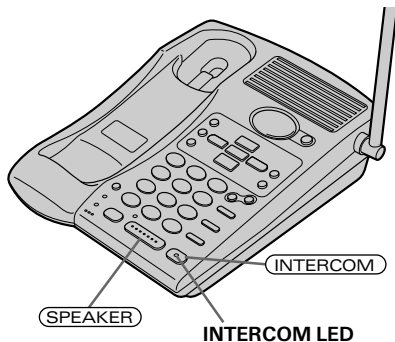

- 2** Press **SPEAKER** on the base phone to talk to the caller with the base phone.

If no one answers the phone


Press **TALK** on the handset.

Tips

- You can receive an intercom call on the base phone even when the RINGER switch on the base phone is set to OFF. The base phone will ring at a low level.
- When a person at the base phone want to answer the intercom call within 3 seconds, press **INTERCOM** on the base phone. If a person at the base phone press **INTERCOM** after the intercom call is automatically connected, the intercom call will be disconnected.

Having a three-way conference

The handset and the base phone operate like two extensions on the same line. Both phones can operate at the same time, so that you, the outside caller, and the person at the other phone can engage in a three-way conversation.

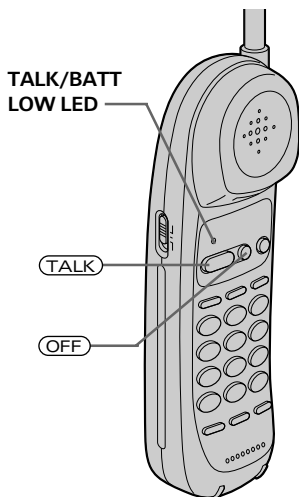


To join the phone conversation

Press **TALK**.

The TALK/BATT LOW LED on the handset lights up.

If you are at the base phone, simply press **SPEAKER**.

The SPEAKER LED on the base phone lights up.

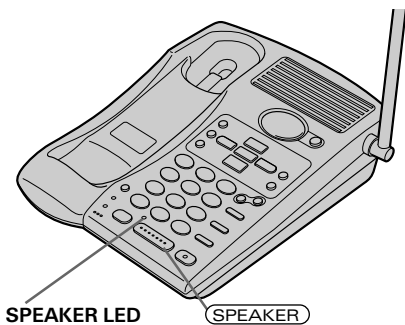

When you are done talking


Press **OFF** on the handset (or press **SPEAKER** if you're at the base phone).

Tip

While talking through the speakerphone on the base phone, if you pick up the handset, the conversation will be continued between the handset and outside caller.

Setting up the answering machine

Setting the time and day of the week

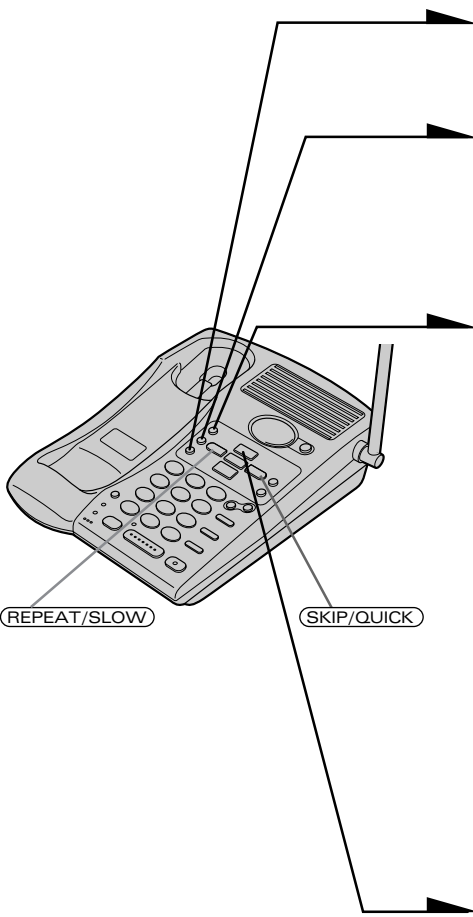

- 1** Press **(MENU)** repeatedly until you hear “Set day and time”. “- -” appears on the display.
- 2** Press **(SELECT)**, and you’ll hear voice guidance.
- 3** Press **(REPEAT/SLOW)** or **(SKIP/QUICK)** repeatedly to select the day of the week.
- 4** Press **(TIME/SET)**. The day is set and the hour is announced.
- 5** Press **(REPEAT/SLOW)** or **(SKIP/QUICK)** repeatedly to select the hour.
- 6** Press **(TIME/SET)**. The hour is set and the minute is announced.
- 7** Press **(REPEAT/SLOW)** or **(SKIP/QUICK)** repeatedly to select the minute.
- 8** Press **(TIME/SET)**. The day and time you just entered is announced and the clock restarts.
- 9** Press **(PLAY/STOP)** to exit the menu setup mode.

Notes

- The time and day are preset to Monday, 12:00 AM.
- “PF” flashes when the day and time is cleared or delayed due to a power interruption, or when you connect the base phone to the AC outlet for the first time.
- Do not allow more than 20 seconds (or 60 seconds when setting the day and time) to elapse between each step of the procedure.
- If a power interruption occurs, the day and time will be erased.
- If the current day and time are not set, you will not hear a time stamp when you play back recorded messages. If you try to check the current time, you will hear five short error beeps.

Tip

All the mailbox buttons (MAIL BOX 1), (MAIL BOX 2) and (MAIL BOX 3) work as the (PLAY/STOP) button; press any of the three in this case.

To hear the current time

Press (TIME/SET). The current time setting is announced.


Recording the greeting

This answering machine has prerecorded greetings (see page 34). However, you can record your own greeting.

The greeting must be between 2 seconds and 90 seconds long.

You can record two greetings for the answering mode (“normal” and “announcement only” modes. See page 42). One greeting can be assigned in each mode, so you record a new greeting to match for each mode.

When you have already recorded two greetings, and you want to use a prerecorded greeting for one of the modes, erase your own greeting in the mode you want to change. Your own greeting in the mode you select is erased, and a prerecorded greeting is set automatically.

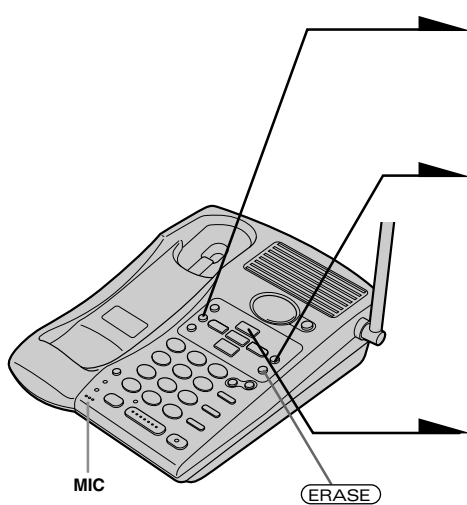

- 1** Press (MENU) repeatedly until “Set greeting message” is announced.
“- -” appears on the display.
- 2** Press (REC/MEMO).
“Now recording” is announced and a long beep sounds.
- 3** Speak into the base phone microphone (MIC). The display starts counting. You can record up to 90 seconds.
- 4** To stop recording, press (PLAY/STOP).
Your greeting replays automatically.

continued

Setting up the answering machine (continued)

Notes

- If you do not record your own greeting, the prerecorded greeting will be assigned automatically (see page 35).
- If your greeting is less than two seconds, the greeting is not recorded. The prerecorded greeting will be assigned automatically.
- If a call comes in during recording, recording stops automatically.
- If 90 seconds have passed or memory becomes full in step 3, recording stops automatically.
- “Memory full” is announced if no recording space is available when you press **(REC/MEMO)**. Erase unnecessary messages (see page 40).

Tips

- To record the greeting from a touch-tone phone, see “Operating from an outside phone” on page 46.
- Even if a power interruption occurs, your own greeting is not erased.

To check the greeting

Press **(MENU)** repeatedly until “Set greeting message” is announced. “- -” appears on the display. Then press **(PLAY/STOP)** to play back the greeting.

To change the greeting

Record a new greeting by following the instructions on the previous page. The new greeting replaces the old one.

To erase the greeting

- 1** Press **(MENU)** repeatedly until “Set greeting message” is announced. “- -” appears on the display.
- 2** Press **(ERASE)**, and “Greeting message has been erased” is announced.

To go back to the factory prerecorded greeting

Press **(ERASE)** while playing back the greeting. This will bring back the original greeting, but your own greeting is erased.

Notes

- You can also erase the greeting during playback.
- If you have erased your own greeting, the prerecorded greeting will be assigned automatically.

Prerecorded greetings

Normal mode: “Hello, I’m unable to answer your call right now. Please leave your name, number and message after the tone.”

Announcement only mode: “Hello, I’m unable to answer your call right now. Please call again. Thank you.”

Setting the number of rings

You can select the number of times the phone rings before it answers to take a message.

There are three modes: 2, 5, and Toll Saver.

- 1** Press **(MENU)** repeatedly until you hear “Set number of ring”.
“- -” appears on the display.
- 2** Press **(SELECT)**.
The present selected number of ring is announced.
- 3** Press **(REPEAT/SLOW)** or **(SKIP/QUICK)** repeatedly to select a ring duration (2, 5, or Toll Saver).
To answer after 2 rings, select “2”.
To answer after 5 rings, select “5”.
Select “Toll Saver” to answer after 2 rings when there are new messages, and 5 rings when there are no new messages.
- 4** Press **(TIME/SET)**.
The ring duration setting is announced.
- 5** Press **(PLAY/STOP)** to exit the menu setup mode.

Notes

- When the number of rings is set to “Toll Saver”, the phone answers after 2 rings if new messages are recorded. If no new message are recorded, it answers after 5 rings. When you hear 3 rings, you will know that there are no new messages. You can save the toll for the call when you pick up messages from an outside phone.
- The number of rings is preset to Toll Saver.

continued


Setting up the answering machine (continued)

Setting the audible message alert

You can set the answering machine to record incoming messages (normal mode), or just make an announcement without recording messages (announcement only mode). To set an announcement only mode, see page 42.

In the normal mode, you have the option of having a beep to tell you if you have received any new incoming messages.


When you use this option, set the message alert to on. If you want the caller to leave message but not to use this option, set the message alert to off.

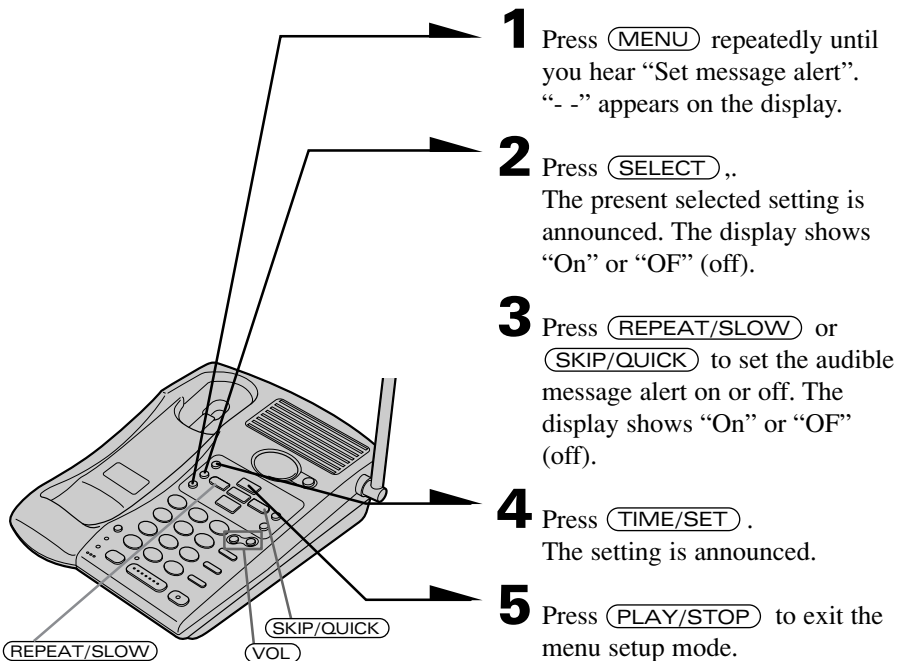

Notes

- When the audible message alert is turned on, you will hear a beep every 5 seconds if there are any new messages.
- To stop the beep, press any button related to the answering machine function or **(VOL+)** / **(VOL-)**.
- The audible message alert is preset to “On”.

Turning on the answering function

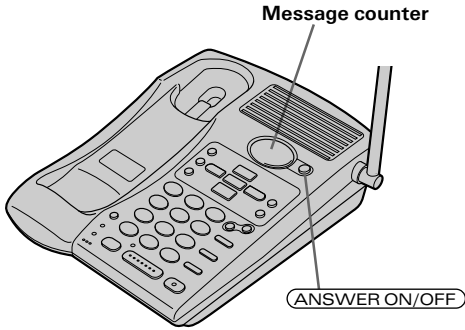

Press **ANSWER ON/OFF** on the base phone.

The ANSWER ON/OFF button lights up. “Answering function is on” is announced.

Mailbox usage

This phone offers you three voice mailboxes, providing a convenient way to share the mailbox feature with other members of your household or business.

When a caller calls

The caller can choose one of the two ways to leave a message:

- If calling from a touch-tone phone, the caller select a mailbox by pressing *** 1** (MAILBOX 1), *** 2** (MAILBOX 2) or *** 3** (MAILBOX 3) while the caller hears the greeting. The greeting stops and a beep will sound, then the caller can start recording a message.
- Wait until the greeting finishes, then start recording a message. When the caller does not select a mailbox, the message is automatically recorded to MAILBOX 1.

Notes

- If four minutes have passed while recording the incoming message, the line will be disconnected automatically.
- If the message is shorter than two seconds, it will not be recorded.

Tip

Even if a power interruption occurs, the incoming messages are not erased.

To turn off the answering function

Press **ANSWER ON/OFF** on the base phone.

The ANSWER ON/OFF button goes off. “Answering function is off” is announced.

Note

The answering function is preset to on.

Tips

- The answering machine will automatically answer a call after 10 rings, even if the answering function is off and announces greeting message to prompt the caller to turn on the answering function.
- You can also turn on or off the answering function from an outside phone, see “Operating from an outside phone” on page 46.

continued

Setting up the answering machine (continued)

When the memory is full

The total recording time of this answering machine is approximately 15 minutes (including the greeting, messages, and memo).


When the remaining recording time becomes less than 30 seconds, "FL" flashes on the display and the answering machine goes into the memory full status.

To avoid this erase unnecessary messages (see page 40). You can also erase the messages from an outside phone (see page 46).

Playing back messages

If there are new messages, the display flashes the number of new messages.

You will hear beeps if the audible message alert setting is on (see page 36).

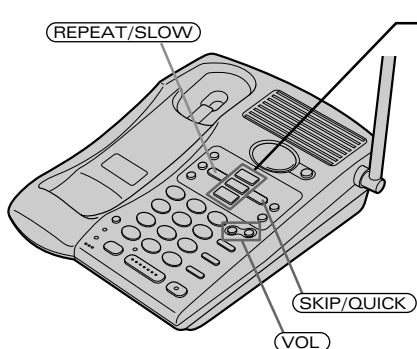

Press a mailbox button (MAIL BOX 1), (MAIL BOX 2) or (MAIL BOX 3) to play back new messages in the selected mailbox.

Additional tasks when playing back messages

To	Do this
Adjust the speaker volume	Press (VOL +) or (VOL -).
Stop playback	Press a mailbox button (MAIL BOX 1), (MAIL BOX 2) or (MAIL BOX 3).
Repeat the current message	Press (REPEAT/SLOW) during play back.
Skip the current message	Press (SKIP/QUICK).
Go back to the previous message	Press (REPEAT/SLOW) within the first 2.5 seconds of the current message playback.
Play back slowly	Press and hold (REPEAT/SLOW) during play back. Release (REPEAT/SLOW) to return to normal.
Play back quickly	Press and hold (SKIP/QUICK) during play back. Release (SKIP/QUICK) to return to normal.

Notes

- If a call comes in, the play back will stop.
- A time and day stamp is announced after each message if you set the time and day (see page 32).
- The old messages will not be played back unless all new messages are played back.


Tips

- If there are no new messages, all the previously reviewed messages are played back.
- The messages are saved even after a power failure.

continued

Playing back messages (continued)

Adjusting the speaker volume

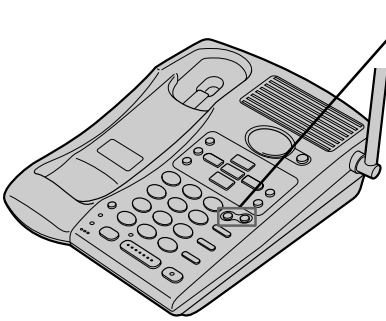

To adjust the speaker volume, press **(VOL +)** or **(VOL -)**.


Note

You cannot adjust the speaker volume while the phone is ringing.

Tip

There are 10 steps for the volume level (1 to 10). The volume level is preset to 6.

Erasing messages

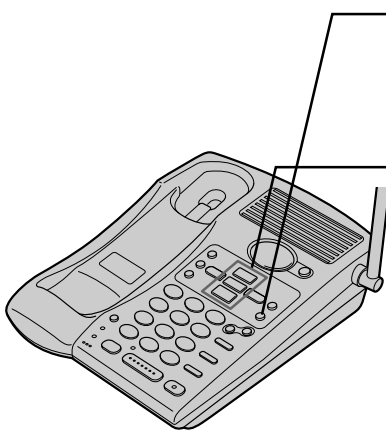

1 Press and hold **(ERASE)** for more than one second. “Please select mailbox” is announced.

2 Press a button for the mailbox you want to erase (**(MAIL BOX 1)**, **(MAIL BOX 2)** or **(MAIL BOX 3)**).

All “old” messages in the selected mailbox are erased.

“All of your messages has been erased” is announced.

To erase individual messages

Press **(ERASE)** while playing back the message that you want to erase. “Message has been erased” is announced.

Notes


- The display shows the total number of “new” (i.e. unreviewed) messages. Therefore, the display is reset to “0” when you have played back all new messages, whether they have been erased or not. Be sure to erase unnecessary messages before the memory becomes full.
- When the number of new messages exceeds 59, “FL” flashes on the display window.
- If you try to erase all messages in a mailbox with any new messages remaining. You hear five short error beeps and you cannot erase the messages.

Tip

You can also listen to the messages or erase the messages from a touch-tone phone, see “Operating from an outside phone” on page 46.

Selecting the Announcement Only Mode

You can set the answering machine to play the greeting without recording incoming messages (announcement only mode). You might want to select this mode when, for example, you expect to be away for a while and you cannot pick up messages.

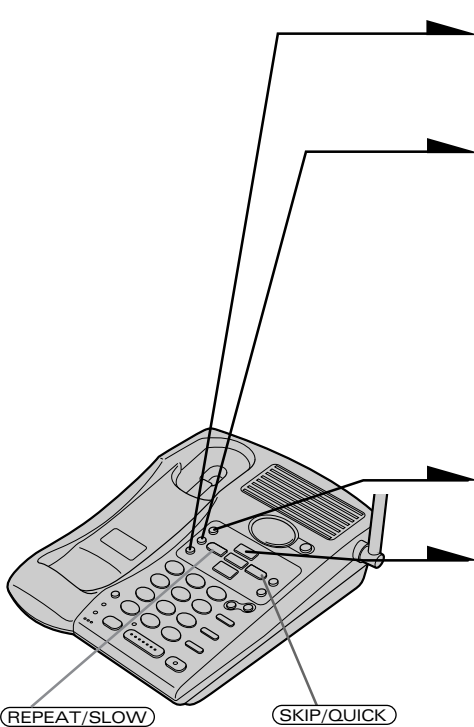

- 1** Press **(MENU)** repeatedly until you hear “Set announce only”. “- -” appears on the display.
- 2** Press **(SELECT)**. The present selected setting is announced. The display shows “On” or “OF” (off).
- 3** Press **(REPEAT/SLOW)** or **(SKIP/QUICK)** to set the announcement only mode on or off.
- 4** Press **(TIME/SET)**. The setting is announced.
- 5** Press **(PLAY/STOP)** to exit the menu setup mode. The display shows “A” when the answering machine is set to the announcement only mode.

Notes

- To activate announcement only mode, you have to turn on the answering machine.
- The announcement only mode is preset to off.

Screening calls

You can screen calls by leaving the answering machine on while you are at home. When a call is answered, you can hear the message being recorded through the base phone. You can decide either to continue recording or to answer the call.

The message will be recorded, but to hear it you will need to play back the message (see page 39).

To answer the call


Press **(TALK)** on the handset.

Notes

- Press **(VOL+)** or **(VOL-)** to adjust the speaker volume. If the speaker volume is set at its minimum level, you will not be able to hear incoming calls.
- The answering machine will stop automatically when the handset or a parallel phone is picked up. If the answering machine does not stop, press either **(PLAY/STOP)** on the base phone.
The recording will remain as a new message.

Recording a memo message

You can leave messages for other users of the phone.

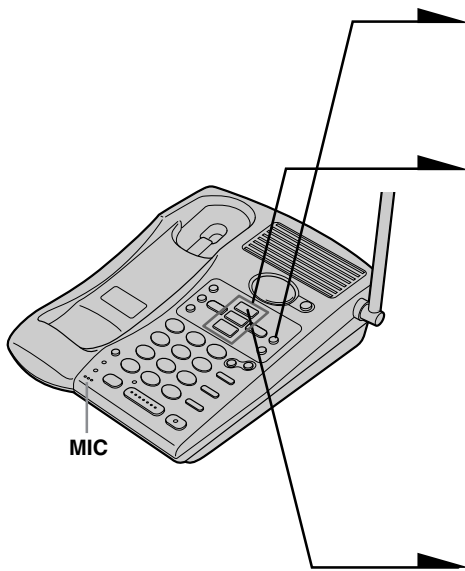

- 1** Press **REC/MEMO** .
“Please select mailbox” is announced.
- 2** Press a mailbox button **MAIL BOX 1** , **MAIL BOX 2** or **MAIL BOX 3** to which you want to leave the message.
“Now recording” is announced and counting starts.
- 3** Speak into the base phone microphone (MIC) to record your message.
A memo can be up to four minutes in length.
- 4** Press **PLAY/STOP** to stop recording.
The message number on the display increases by one.

Notes

- If the memory becomes full, the answering machine will stop recording.
- “Memory full” is announced if no recording space is available when you press **REC/MEMO** .
- If your message is shorter than two seconds, the recording will be canceled.
- The display flashes “99” if you record a memo for more than 99 seconds.
- If a call comes in during recording, the recording will be stopped.


Tips

- If four minutes have passed in step 3, recording stops automatically, and the recorded memo is counted as a new message.
- Even if a power interruption occurs, the memos are not erased.

Operating from an outside phone

Setting the remote ID code (security code)

To operate the answering machine from a touch-tone phone while you are away from home, you need to set the remote ID code (security code).

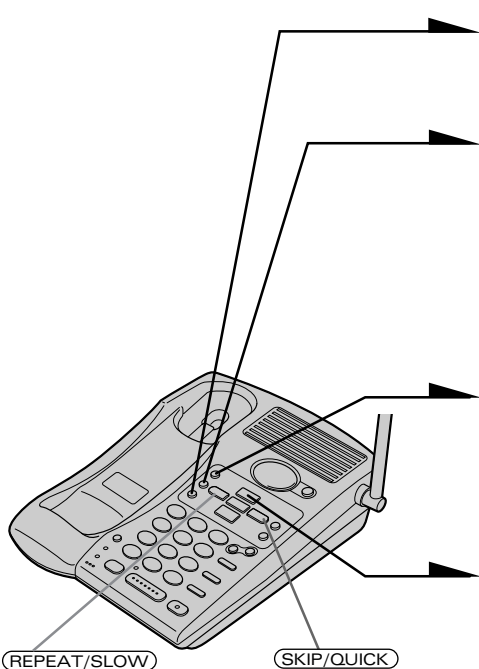

- 1** Press **MENU** repeatedly until you hear “Set security code”.
- 2** Press **SELECT**.
- 3** Press **REPEAT/SLOW** or **SKIP/QUICK** to change the remote ID code (security code) setting.
- 4** Press **TIME/SET** to confirm your choice. The new remote ID code (security code) is announced.
- 5** Press **PLAY/STOP** to exit the menu setup mode.

To change the remote ID code (security code)

Enter a new remote ID code (security code). The new code will replace the old one.

Tip

Even if a power interruption occurs, the remote ID code is erased.

continued

Operating from an outside phone (continued)

Picking up new messages

- 1 Call your telephone number from a touch-tone phone.
- 2 When you hear the greeting, press **(*)** and enter your remote ID code (security code).
You will hear a confirmation beep.
The number of new messages will be announced.
- 3 Press the keys in the “Table of control codes” below for the desired operation command.
- 4 When you finish, disconnect the line.

Notes

- Do not let two seconds elapse between each digit of the remote ID code (security code) and the control code.
- If you did not turn on the answering machine, your phone answers automatically after 10 rings.
- If you enter wrong remote ID code (security code) three times, the line will disconnect.
- If no keys are pressed within 20 seconds, the line will disconnect.




Tip

Cut off the Remote Control Card and carry it with you to see how to operate from an outside phone.


Table of control codes

To	Key	Notes
Play back messages in MAILBOX1	(*) (1)	Plays back from the first new message.
Play back messages in MAILBOX2	(*) (2)	Plays back from the first new message.
Play back messages in MAILBOX3	(*) (3)	Plays back from the first new message.
Repeat backward	(*) (4)	Press during play back to repeat a message.
Skip forward	(*) (6)	Press during play back to skip forward.
Erase individual message	(*) (9)	Press during play back.
Erase all the messages in MAILBOX1	(*) (9) (*) (1)	
Erase all the messages in MAILBOX2	(*) (9) (*) (2)	
Erase all the messages in MAILBOX3	(*) (9) (*) (3)	
Record greeting	(*) (7)	“Now recording” is announced.
Turn answering machine on	(*) (0)	Turns the system on. “Answering function is on” is announced.
Turn answering machine off	(*) (0)	Turns the system off. “Answering function is off” is announced.
Stop operation	(*) (*)	Stops every function.

Mounting the base phone on a wall

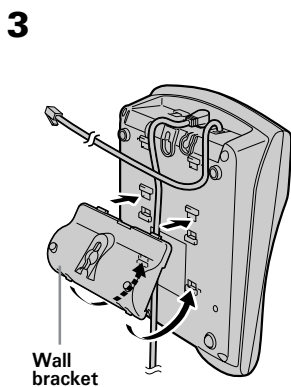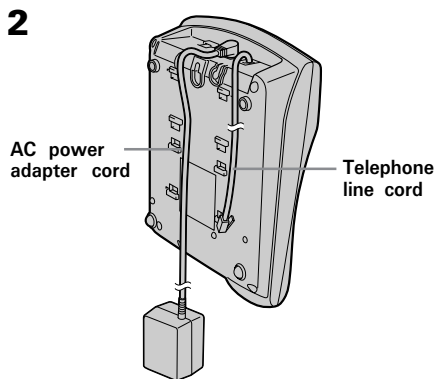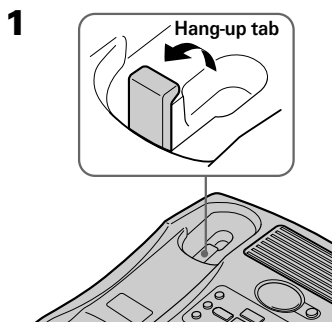

- 1** Raise the hang-up tab.
- 2** Plug the telephone line cord to the LINE jack and the AC power adapter to the DC IN 9V jack, and hook the cords.
- 3** Attach the wall bracket to the center of the base phone. Align the f marks of the wall bracket with those of the base phone.
- 4** Plug the telephone line cord to the telephone outlet, and hook the base phone to the wall plate.
- 5** Plug the AC power adapter to an AC outlet. Then raise the antenna so that it points towards the ceiling.

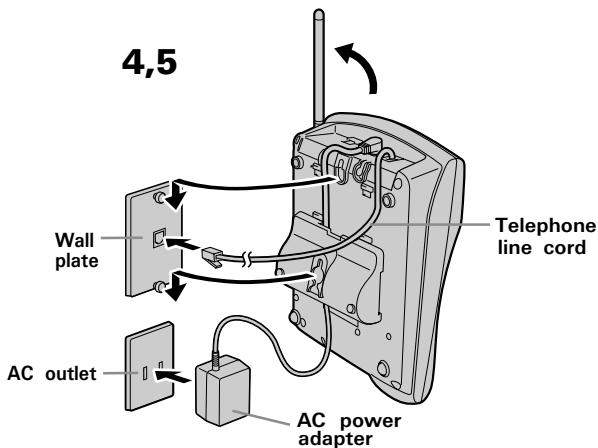

Tip
To remove the wall bracket, press the lower tabs.

continued

Troubleshooting

If you've experienced any of the following difficulties while using your phone, use this troubleshooting guide to help you remedy the problem. Should any problem persist, call our customer hotline at 1-800-297-1023.

	Symptom	Remedy
Making calls	You hear five short error beeps when you press (TALK) .	<ul style="list-style-type: none"> • Make sure you have set up the base phone correctly (page 8). • Move the handset closer to the base phone. • Replace the handset to the base phone for a while to reset the random security code.
	You hear no dial tone.	<ul style="list-style-type: none"> • Make sure the telephone line cord is securely connected to the telephone outlet. • Make sure the battery is fully charged (page 11).
	The phone does not connect at all, even though the number you have dialed is correct.	<ul style="list-style-type: none"> • Make sure the dialing mode is set correctly (page 10). • Before dialing, make sure you hear a dial tone.
	The phone does not redial correctly.	<ul style="list-style-type: none"> • Make sure the last dialed number is really the one you want to dial.
Receiving calls	The handset does not ring.	<ul style="list-style-type: none"> • Make sure the ringer is turned on (page 23). • The battery may be weak. Charge the battery for 15-20 hours (page 11). • Make sure you have set up the base phone correctly (page 8). • Move the handset closer to the base phone. • Replace the handset to the base phone for a while to reset the random security code.
	The base phone does not ring.	<ul style="list-style-type: none"> • Make sure the telephone line cord is securely connected to the telephone outlet. • Make sure the ringer is turned on (page 24).
During conversation	You hear interference during conversation.	<ul style="list-style-type: none"> • Move the handset closer to the base phone. • Place the base phone away from noise sources (page 8). • Press (CHANNEL) for a channel that gives better reception.
	You hear a beep every three seconds during the conversation.	<ul style="list-style-type: none"> • The battery is weak. Charge the battery for 15-20 hours.
Memory dialing	You cannot store a memory dialing number.	<ul style="list-style-type: none"> • Make sure you follow the procedure in storing the number correctly (page 20). • When the handset is in use, you cannot store a memory dialing number on the base phone. • Replace the handset to the base phone for a while.
	You cannot make a memory dialing call.	<ul style="list-style-type: none"> • You pressed the number button to which no phone number has been stored.
	Memory dialing is incorrect.	<ul style="list-style-type: none"> • Store a correct number (page 20).

	Symptom	Remedy
Intercom	The handset does not ring when calling from the base phone.	<ul style="list-style-type: none"> The handset may be engaged in conversation. The battery may be weak. Charge the battery for 15-20 hours (page 11). Move the handset closer to the base phone. Place the base phone away from noise sources (page 8).
	Message is not recorded.	<ul style="list-style-type: none"> The remaining recording time is less than 30 seconds or 59 messages were recorded. The answering machine becomes "Memory full" status and does not record messages. Erase messages (page 40). The message is less than two seconds. The answering machine does not record messages less than two seconds in length.
Answering machine	No sound from the speaker of the base phone.	<ul style="list-style-type: none"> Adjust the speaker volume (page 40).
	The caller's message is interrupted.	<ul style="list-style-type: none"> The caller's message is too long. The caller's voice is too low. The phone disconnects the line when it detects seven seconds of silence.
	The clock is incorrect.	<ul style="list-style-type: none"> There was a power interruption. Reset the time (page 32).
Operating from an outside phone	The phone does not accept your remote ID code (security code).	<ul style="list-style-type: none"> Make sure you call from a touch-tone phone. Make sure the remote ID code (security code) is correct. Make sure you entered the remote ID code (security code) within two seconds after you've entered (Ⓜ).
	The line is disconnected when you call your phone from a touch-tone phone.	<ul style="list-style-type: none"> You entered wrong remote ID codes (security codes) three times.
Power source/battery	The CHARGE LED does not light up when you place the handset to charge.	<ul style="list-style-type: none"> Wipe the charge terminals of the base phone and the handset with a soft cloth for better contact of the charge terminals. Make sure the handset is placed on the base phone properly.
	The battery duration is short.	<ul style="list-style-type: none"> The battery pack was charged for 15-20 hours (due to power failure, etc.). The usage life of the battery has expired and needs replacement.

continued

Troubleshooting (continued)

Message counter

The message counter on the base phone shows the following information.

When the counter shows	It means
Flashing number	Number of messages not yet played back.
PF	Flashes when the day and time is cleared due to a power interruption. Reset the time correctly (page 32).
A	The announcement only mode is selected (page 42).
FL	The recording area is full. Erase unnecessary messages (page 41).

Maintenance

- Clean the cabinets with a soft cloth slightly moistened with water or a mild detergent solution. Do not use any type of abrasive pad, scouring powder or solvent such as alcohol or benzine as they may damage the finish of the cabinet.
- If the charge terminals of the base phone and handset are soiled, wipe them with a soft cloth.

If you have any questions or problems concerning your phone, please call our customer hotline at 1-800-297-1023.

Specifications

General

Frequency band

902 - 928 MHz

Operating channel

40 channels

Dial signal

Tone, 10 PPS (pulse) selectable

Supplied accessories

See page 7.

Handset

Power source

Rechargeable battery pack BT-905

Battery charging time

Approx. 15-20 hours

Battery life

Standby: Approx. 7 days

Talk: Approx. 7 hours

Dimensions

Approx. 54 x 178 x 46 mm (w/h/d),
antenna excluded

(approx. 2 ¹/₄ x 7 ¹/₈ x 1 ¹³/₁₆ inches)

Antenna: Approx. 35 mm

(approx. 1 ⁷/₁₆ inches)

Mass

Approx. 210 g

(approx. 7.4 oz), battery included

Base phone

Power source

DC 9V from AC power adapter

AD-314

Dimensions

Approx. 170 x 65 x 220 mm (w/h/d),
antenna excluded

(approx. 6 ³/₄ x 2 ⁵/₈ x 8 ³/₄ inches)

Antenna: Approx. 150 mm

(approx. 6 inches)

Mass

Approx. 600 g

(approx. 1 lb 5 oz), wall bracket excluded

Answering machine

Maximum recording time

About 15 minutes, using incorporated IC

Greeting message

Up to 90 seconds per each

Incoming and Memo message

Up to 4 minutes per message

Design and specifications are subject to
change without notice.

continued

Index

A

- Adjusting volume
 - handset volume 16, 19
 - speaker volume 17, 19, 40
- Announcement only mode 42
- Answering machine
 - playing back messages 39
 - setting up 32
 - turning on 37
- Audible message alert 36

B

- Battery pack
 - charging 11
 - duration 12

C

- Connection 9
- Control codes for remote operations 46

D

- Day and time stamp 32, 39
- Dialing mode
 - choosing 10
 - switching to the tone temporarily 16, 19

E, F

- Erasing
 - messages 40

G, H

- Greeting 33

I, J, K

- Identifying the parts 13
- Intercom 27

L

- Location, base phone 8

M

- Mailbox 37
- Making calls 16
- Memo 44
- Memory dialing 20
- Messages
 - pick up from an outside phone 46
 - playing 39
- Mounting the base phone on a wall 47

N

- Number of rings 35

O

- Operating from an outside phone 45

P, Q

- Package contents 7
- Playing back 39
- Pulse dialing 10

R

- Receiving calls 19
- Recording
 - greeting 33
 - memo 44
- Redialing 18
- Remote ID code (security code) 45
- Ringer
 - adjusting the base ringer 24
 - setting the ringer type 23
 - turning on/off 23

S

- Screening calls 43
- Setting up
 - answering machine 32
 - base phone 8
 - handset 11
- Speaker 17, 19, 40
- Stamping messages with day and time 32, 39
- Switching the phones during a call 25

T, U

- Talking between the phones 27
- Three-way conference 31
- Toll saver 35
- Tone dialing
 - dialing mode 10
 - switching to 16, 19
- Transferring a call 29
- Troubleshooting 48

V, W, X, Y, Z

- Volume
 - handset 16, 19
 - speaker 17, 19, 40

Note

Note

One Year Limited Warranty

Important: Evidence of original purchase is required for warranty service.

WARRANTOR: UNIDEN AMERICA CORPORATION ("Uniden")

ELEMENTS OF WARRANTY: Uniden warrants, for one year, to the original retail owner, this Uniden Product to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below.

WARRANTY DURATION: This warranty to the original user shall terminate and be of no further effect 12 months after the date of original retail sale. The warranty is invalid if the Product is (A) damaged or not maintained as reasonable or necessary, (B) modified, altered, or used as part of any conversion kits, subassemblies, or any configurations not sold by Uniden, (C) improperly installed, (D) serviced or repaired by someone other than an authorized Uniden service center for a defect or malfunction covered by this warranty, (E) used in any conjunction with equipment or parts or as part of any system not manufactured by Uniden, or (F) installed or programmed by anyone other than as detailed by the Instruction manual for this product.

STATEMENT OF REMEDY: In the event that the product does not conform to this warranty at any time while this warranty is in effect, warrantor will either, at its option, repair or replace the defective unit and return it to you without charge for parts, service, or any other cost (except shipping and handling) incurred by warrantor or its representatives in connection with the performance of this warranty. Warrantor, at its option, may replace the unit with a new or refurbished unit. **THE LIMITED WARRANTY SET FORTH ABOVE IS THE SOLE AND ENTIRE WARRANTY PERTAINING TO THE PRODUCT AND IS IN LIEU OF AND EXCLUDES ALL OTHER WARRANTIES OF ANY NATURE WHATSOEVER, WHETHER EXPRESS, IMPLIED OR ARISING BY OPERATION OF LAW, INCLUDING, BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THIS WARRANTY DOES NOT COVER OR PROVIDE FOR THE REIMBURSEMENT OR PAYMENT OF INCIDENTAL OR CONSEQUENTIAL DAMAGES.** Some states do not allow this exclusion or limitation of incidental or consequential damages so the above limitation or exclusion may not apply to you.

LEGAL REMEDIES: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This warranty is void outside the United States of America.

PROCEDURE FOR OBTAINING PERFORMANCE OF WARRANTY: If, after following the instructions in the Instruction manual you are certain that the Product is defective, pack the Product carefully (preferably in its original packaging). The Product should include all parts and accessories originally packaged with the Product. Include evidence of original purchase and a note describing the defect that has caused you to return it. The Product should be shipped freight prepaid, by traceable means, to warrantor at:

Uniden America Corporation

Parts and Service Division

4700 Amon Carter Blvd.

Fort Worth, TX 76155

(800) 297-1023, 7 a.m. to 7 p.m. Central, Monday through Friday

4,511,761	4,523,058	4,595,795	4,797,916	5,381,460	5,426,690
5,434,905	5,491,745	5,533,010	5,574,727	5,650,790	5,660,269
5,661,780	5,663,981	5,671,248	5,717,312	5,754,407	5,768,345
5,787,356	5,838,721	5,864,619	5,893,034	5,912,968	5,915,227
5,929,598	5,930,720	5,960,358	5,987,330	6,044,281	6,070,082
6,125,277					

© 2001 Uniden America Corporation, Fort Worth, TX
All right reserved

UCZZ01361ZZ
Printed in China

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>