

# XC800 Series



**uniden**  
*Owner's Manual*

*Cordless Extend-A-Phone®*

# Contents

Introduction . . . . .	2	Setting the Pulse/Tone Switch . . . . .	8
Features . . . . .	2	Adjusting Ringer Controls . . . . .	8
Included with the XC800 Series Phone . . . . .	3	Adjusting Handset Receiver Volume . . . . .	8
Controls and Functions . . . . .	4	Automatic Digital Code Security . . . . .	8
Installation . . . . .	5	Using Your Phone . . . . .	9
Selecting a Location . . . . .	5	Making and Receiving Calls . . . . .	9
Applying Power to the Base . . . . .	5	Changing Channels, Flash, and Page/Find . . . . .	9
Desk or Tabletop Installation . . . . .	5	Programming Your Phone . . . . .	10
Wall Installation . . . . .	5	Storing a Number in Memory . . . . .	10
Direct Wall Mounting . . . . .	6	Storing a Mixed Number . . . . .	10
Setting Up Your Phone . . . . .	7	Dialing a Stored Number . . . . .	10
Extending the Antenna . . . . .	7	Chain Dialing . . . . .	10
Installing the Handset Battery Pack . . . . .	7	Erasing a Stored Number . . . . .	10
Cleaning the Battery Contacts . . . . .	7	Troubleshooting . . . . .	11
Charging the Battery Pack . . . . .	7	Specifications . . . . .	11
Low Battery Indicator . . . . .	8		

## Introduction

Congratulations on your purchase of the Uniden XC800 Series Cordless Telephone. These phones are designed to exacting standards which provide reliability, long life, and outstanding performance.

*This series of phones is available in designer colors which are designated by different model numbers. This manual describes the operation of the XC810 and the XC815.*

### Features

- 25 Channels (43/49 MHz)
- *AutoSecure*<sup>™</sup>
- *Random Code*<sup>™</sup> Digital Security
- Handset Ringer/Volume Controls
- UltraClear Plus
- *AutoTalk*<sup>™</sup>
- *AutoStandby*<sup>™</sup>
- 10-Number Memory
- 1-way Page/Find Button
- Redial/Flash Key
- 14 Day Battery Life

*AutoTalk*<sup>™</sup> allows you to answer a call by just removing the handset from the base so you don't have to waste time pushing buttons or flipping switches. *AutoStandby*<sup>™</sup> allows you hang up by simply returning the handset to the base.

The *UltraClear Plus* innovative technology, together with 25 different channels, virtually eliminates background noise and provides you with the best possible reception during all of your conversations.

To protect you against misbilled calls which might result from your phone being activated by other equipment, *Random Code*<sup>™</sup> digital security automatically selects one of over 65 thousand digital security codes for the handset and base. Also, the *AutoSecure*<sup>™</sup> feature electronically locks your phone when the handset is in the base.


To get the most from your phone, please read this owner's manual thoroughly. Also be sure to complete the product registration form and mail it in.

Be sure to visit our web site at: [www.uniden.com](http://www.uniden.com).


# Included with the XC800 Series Phone

---


If any of these items are missing or damaged, contact Uniden Parts Department at: (800) 554-3988, 8:00 am to 5:00 p.m. Central, Monday through Friday.

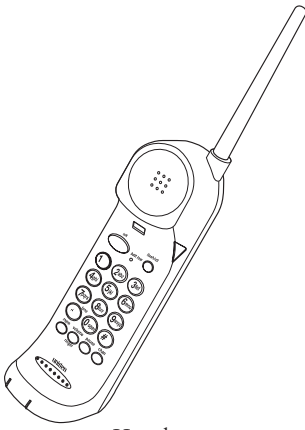


Handset

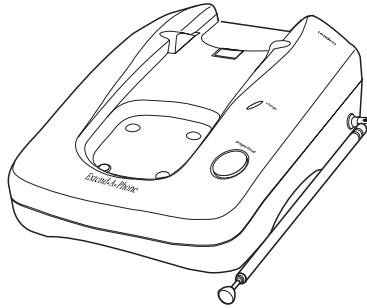


Base

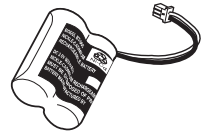


Rechargeable Battery

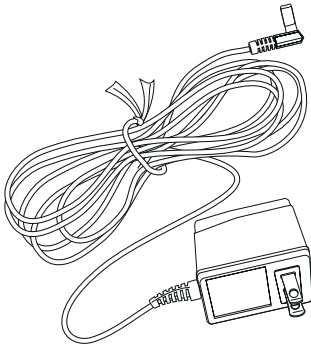

AC Adapter

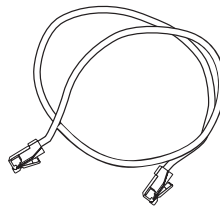


Short Telephone Cord

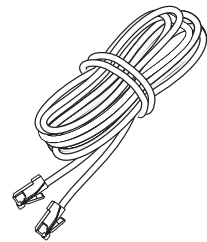


Long Telephone Cord

- Precautions and Important Safety Instructions
- This Owner's Manual

# Controls and Functions

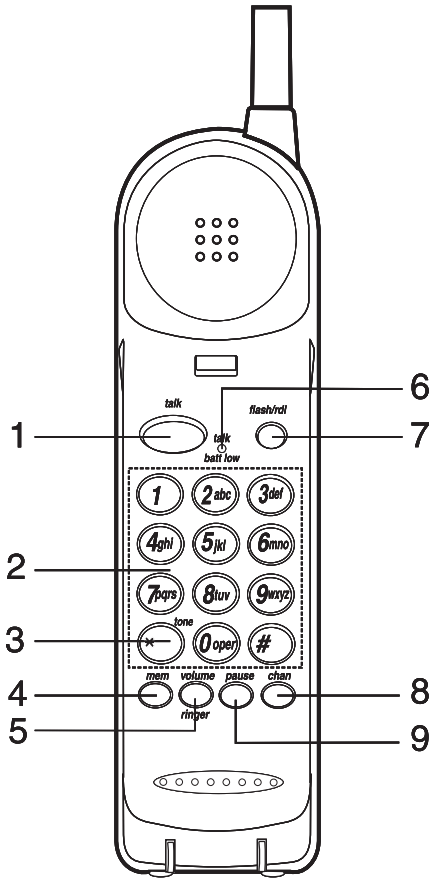

1. Talk Button **talk**
2. Numeric Keypad
3. Tone Key **\* tone**
4. Memory Key **●**
5. Ringer and Earpiece Volume **●** and Ringer Key **ringer**
6. Talk/Batt Low Indicator
7. Flash/Redial Key **flash/redial**
8. Channel Select Key **●**
9. Pause **pause**
10. Tone Pulse switch
11. Telephone Jack In
12. AC Adapter Jack In
13. Status (in use) Indicator
14. Page/Find Key

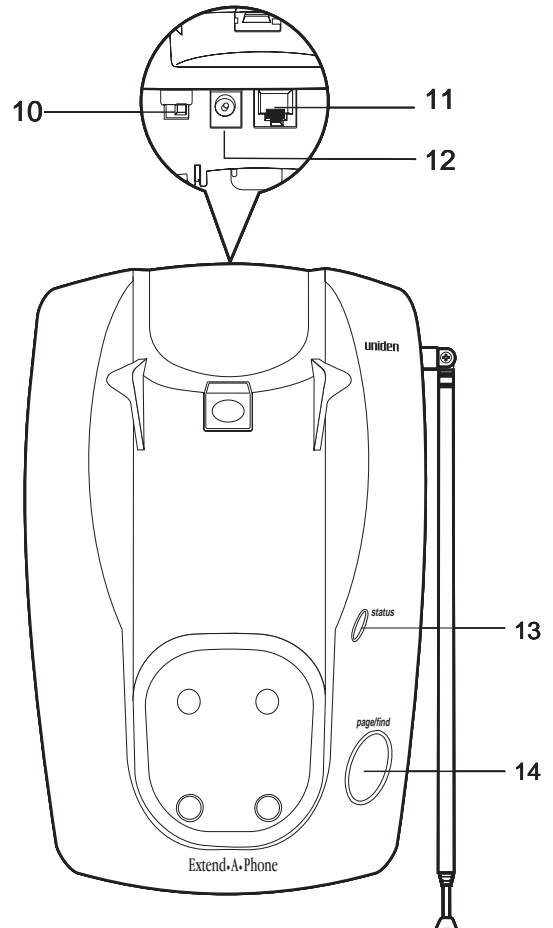

# Installation

## Selecting a Location


Before choosing a location for your new phone, read the "Installation Considerations" included in the "Precautions and Important Safety Instructions" brochure.

## Applying Power to the Base

All the *XC800 Series* phones require the included AC adapter and an AC outlet that is not controlled by a wall switch. To relieve strain on the DC plug when the phone is placed on a desk or table, connect the adapter as shown below.


Wrap the power cord around the convenient notch on the bottom.

**Important:** Place the power cord so that it does not create a trip hazard, or where it could become chafed and create a fire or other electrical hazards.

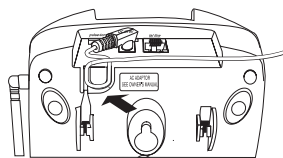


## Desk or Tabletop Installation


1. Place the base on a desk or tabletop.
2. Plug the AC adapter cord into the 9V DC input jack on the base.

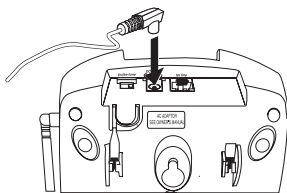

3. Place the AC adapter cord around the strain relief.

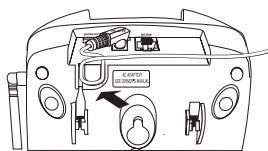

4. Plug one end of the long telephone cord into the TEL LINE jack on the base.

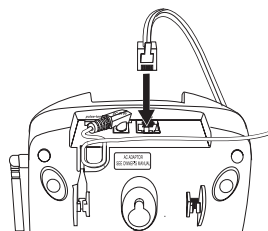

5. Plug the other end of the cord into the wall telephone jack.

6. Plug the AC adapter into a standard 120 VAC wall outlet.

**Note:** Do not use an outlet controlled by a wall switch.




Use only the Uniden AC adapter supplied with this phone.

## Wall Installation


### Standard Wall Plate Mounting

These phones are designed to be mounted on a standard AT&T or GTE wall plate.


1. Plug the AC adapter into the base.

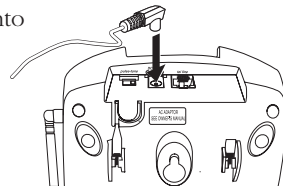


2. Place the AC adapter cord inside the molded channel.

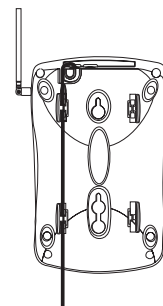

3. Plug one end of the short telephone cord into the TEL LINE jack on the base.

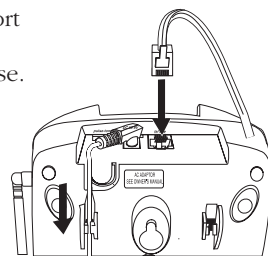

4. Place the telephone cord inside the molded channel on the bottom of the base. Then plug the other end of the telephone cord into the modular jack on the wall.

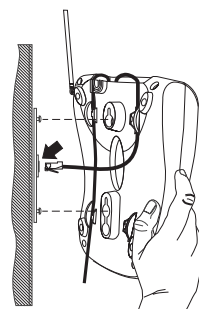

5. Place the base on the posts of the wall plate and push down until it's firmly seated.
6. Plug the AC adapter into a standard 120 VAC wall outlet.


**Note:** Do not use an outlet controlled by a wall switch.

### Direct Wall Mounting


If you do not have a standard wall plate, you can mount your phone directly on a wall. Before mounting your phone, consider the following:

- Select a location away from electrical cables, pipes, or other items behind the mounting location that could cause a hazard when inserting screws into the wall.
- Make sure the wall material is capable of supporting the weight of the base and handset.
- Use #10 screws with anchoring devices suitable for the wall material where the base will be placed.


1. Insert two mounting screws  $3\frac{1}{16}$  inches apart. Allow about  $\frac{3}{16}$  of an inch between the wall and screw heads for mounting the phone.

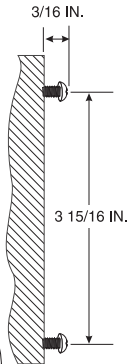


2. Plug the AC adapter into the base.

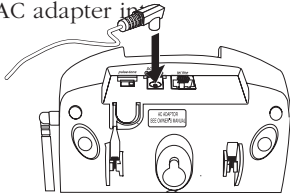


3. Place the AC adapter cord inside the molded channel.

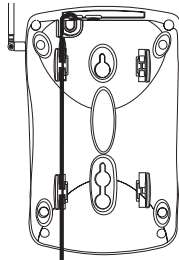


4. Plug one end of the long telephone cord into the TEL LINE jack on the base.

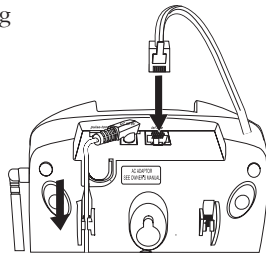

5. Place the cord inside the molded channel on the bottom of the base.

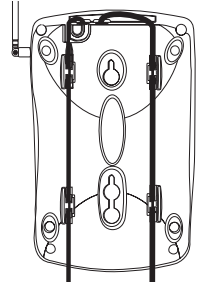

6. Place the base on the screws and push down until it's firmly seated.

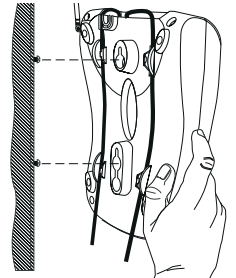

7. Plug the other end of the telephone line cord into the wall jack.


8. Plug the AC adapter into a standard 120 VAC wall outlet.

**Note:** Do not use an outlet controlled by a wall switch.


### Setting the Handset Retainer

The handset retainer holds the handset in place if your phone is mounted on a wall. The steps below describe how to remove and replace the retainer so that the tab faces up.


1. Push up on the handset retainer on the base, and slide the tab out.

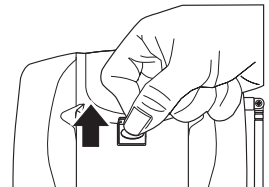


2. Flip the retainer over so the tab faces up.

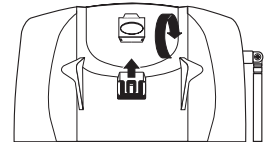

3. Put the retainer back into its slot on the base.

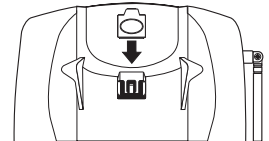

4. Push down on the handset retainer until it snaps into place.

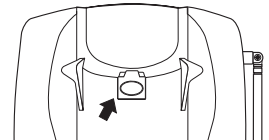

# Setting Up Your Phone

## Extending the Antenna


Before using your phone, be sure to raise its antenna to the vertical position. Then, fully extend the antenna.

## Installing the Handset Battery Pack

1. Press in on the battery cover release.




2. Slide the battery compartment cover down.

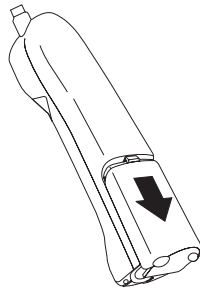


3. Align the plastic connector of the Nickel-Cadmium battery pack with its socket and plug it in.

**Note:** The black lead will be on the right when the plug is properly aligned.

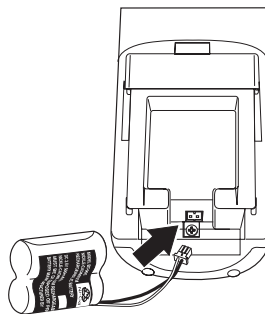


4. Place the battery pack inside the battery compartment, and slide the battery cover back on.

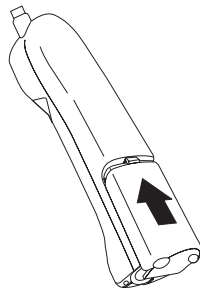

**Note:** The built-in memory backup feature allows up to 3 minutes to disconnect the old battery pack and install a new one without losing any numbers stored in memory.

## Cleaning the Battery Contacts

To maintain a good charge, it is important to clean all charging contacts on the handset and base about once a month. Use a pencil eraser or other contact cleaner. **Do not use any liquids or solvents.**

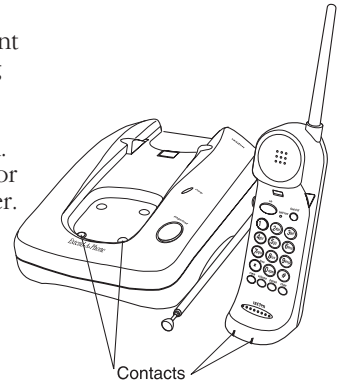


## Charging the Battery Pack

### Initial Battery Charging

The rechargeable Nickel-Cadmium battery pack must be fully charged before using your phone for the first time. We recommend that the battery pack charge for approximately 15-20 hours, without interruption, before plugging the phone line into your new phone.

Place the handset on the base. Either place the handset with the earpiece in the cradle.

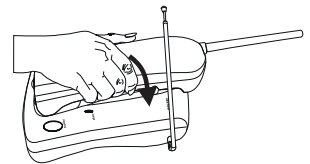

—OR—

Place the handset in the cradle with it standing on end (desk mount only).

**Note:** Make sure to change the handset retainer before hanging up the phone (wall mounted bases).



### Battery Memory Effect


Rechargeable batteries can develop a “memory” (reduced charge capacity) caused by repeated charge and discharge cycles. The battery life will seem to be shorter every time you use the unit.

## To Avoid this Memory Effect

At least once a month, operate the unit until the “Battery Low” indicator appears. Then recharge the battery for a full 15 - 20 hours. Avoid putting the handset back in the base after using the phone for a short time. This could cause “topping off” the charge.

## Low Battery Indicator

When the battery pack in the handset is very low and needs to be charged, the **talk/batt low** LED flashes.

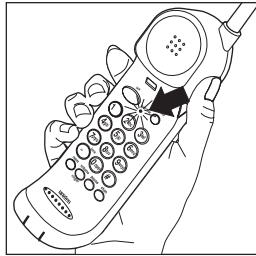


If the **talk/batt low** LED begins to flash, the phone is programmed to eliminate its functions to save power. The table below describes how to return your phone to normal operation.

During a Call	In Standby Mode
Only the <b>talk</b> button operates.	None of the buttons will operate.
The handset beeps and the <b>talk/batt low</b> LED flashes once every 3 seconds.	The handset <b>talk/batt low</b> LED flashes once every 3 seconds.
Complete your call as quickly as possible.	You will not be able to make a call.
Return the handset to the base for charging.	Return the handset to the base for charging.

**Note:** Allow 15 to 20 hours without any interruption for the handset to fully recharge.

## Setting the Pulse/Tone Switch

Be sure the **PULSE/TONE** switch is in the **TONE** position.

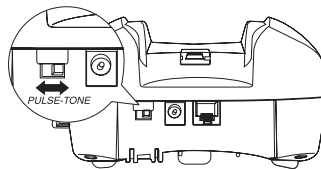

**Note:** Most phone systems are tone dialing. Check with your local phone company if you are not sure whether your system is tone or pulse dialing.

## Adjusting Ringer Controls

To adjust the ringer volume of your handset, press **ringer** when the phone is not in use.

You can also select one of two different ringer tones for the handset.

Press **ringer** to select a different ringer tone when the phone is not in use.

## Adjusting Handset Receiver Volume

Volume settings are “normal” and “high.” When the handset is first picked up, the volume will be at the “normal” setting. Pressing the **volume** will change the volume to “high.” This can be done during a call.

## Automatic Digital Code Security

To avoid unauthorized calls on your phone, a digital code feature was added to all *XC800 Series* phones. This digital code is shared only between the handset and base. The code is set *automatically* when you first use the phone.

To change the digital code, be sure the handset is on the base, then:

1. Press the **page/find** button on the base.
2. After the handset stops beeping, remove it from the base.
3. Wait 5 seconds, then place the handset on the base.
4. The **status** LED blinks to indicate that the digital security code is set.

If the base loses power while the handset is off the base, the digital code may be erased. When this happens, the handset will not function. To reestablish communication between the handset and base:









1. Restore power to the base.
2. Place the handset back on the base.
3. The **status** LED will blink to indicate that the digital security code is set.


 


# Using Your Phone

## Making and Receiving Calls




The following features of the *XC800 Series* phones are different depending on the handset's location when you make or receive a call.

	Handset On Base	Handset Off Base
<b>Answer Call</b>	Pick up handset (AutoTalk).	Press  .
<b>Make Call</b>	<ol style="list-style-type: none"> <li>1) Pick up handset.</li> <li>2) Press .</li> <li>3) Listen for dial tone.</li> <li>4) Dial the number.</li> </ol>	<ol style="list-style-type: none"> <li>1) Press .</li> <li>2) Listen for dial tone.</li> <li>3) Dial the number.</li> </ol>
<b>Hang up,</b>	Return handset to base (AutoStandby).	Press  .
<b>Redial,</b>	<ol style="list-style-type: none"> <li>1) Pick up handset.</li> <li>2) Press .</li> <li>3) Listen for dial tone.</li> <li>4) Press .</li> </ol>	<ol style="list-style-type: none"> <li>1) Press .</li> <li>2) Listen for dial tone.</li> <li>3) Press .</li> </ol>

**Note:** Sometimes when you press  to hang up the phone, you may get an error tone and the phone will not disconnect. If this happens, place the handset on the base or press  again while holding the handset close to the base.

## Changing Channels, Flash, and Page/Find

To change channels or access call waiting while the phone is in use, or to use the one-way page to locate the handset, follow these steps:

	Press These Keys	You Will Hear
<b>Changing Channels</b>	Press  . <b>Note:</b> Change channels to help eliminate background noise.	A click similar to when  is pressed. There may be a brief pause as your phone searches for a clear channel.
<b>FLASH</b>	If the call waiting tone sounds, press  to accept the waiting call.	A click, a short pause, then the caller (if you were on a call).
<b>Page/Find</b>	Press <b>page/find</b> on the base to locate the handset.	The handset beeps about 15 times.

# Programming Your Phone


All programming functions must be completed when your phone is in the standby mode because programming keys do not function while you are on the phone.

## Storing a Number in Memory

Use these keys to store a number in memory.


**Note:** An error tone will sound and the programming procedure will be canceled if more than 20 seconds elapse between each keystroke entry or step.

1. Remove the handset from the base.



2. Press .  
The talk/batt low LED blinks.

3. Enter the number you want to store (up to 16 digits).



4. If a pause is needed during dialing to access a long distance service, press .



**Note:** The  button counts as one digit. Pressing  more than once increases the length of the pause between numbers.

5. Press  again.

6. Enter the memory location (0-9).  
A tone indicates that the number is stored.

## Storing a Mixed Number

If your phone is set up for pulse dialing, you can store a mixed mode number so that you can easily access long distance services.

Use these keys to store a mixed mode number in memory.


**Note:** An error tone will sound and the programming procedure will be canceled if more than 20 seconds elapse between each keystroke entry or step.

1. Remove handset from the base.

2. Press .  
The talk/batt low LED blinks.


3. Enter the number to be dialed in pulse mode.





4. Press  on the handset.

5. Enter the number to be dialed in tone mode.



6. If a pause is needed during dialing to access a long distance service, press .



**Note:** The  button counts as one digit. Pressing  more than once increases the length of the pause between numbers.

7. Press  again.

8. Enter the memory location (0-9).  
A tone indicates that the number is stored.

## Dialing a Stored Number

To dial a number previously stored in memory, follow these steps:

1. Remove the handset from the base.

2. Press .

3. Press .


4. Press the memory location number (0-9).

## Chain Dialing

On certain occasions, after dialing a number, you may be requested by the party or service you are calling to enter a special access code, such as when performing a banking transaction. To do this, follow these steps:

1. Store the access code into one of the memory numbers.

2. Dial the main number.

3. At the appropriate time, press  followed by the memory location number where the access code is saved.

## Erasing a Stored Number

To erase a number previously stored in a memory location (0-9), follow these steps:

1. Remove the handset from the base.


2. Press  twice.

3. Press the memory location number (0-9).

**Note:** An error tone will sound and the erase procedure will be canceled if more than 20 seconds elapse between each keystroke entry or step.

# Troubleshooting

If your *XC800 Series* Cordless Telephone is not performing to your expectations, please try these simple steps. If you are still unable to resolve the problems, contact Uniden Customer Service at (800) 297-1023, 8:00 a.m. to 5:00 p.m. Central, Monday through Friday.

Problem	Suggestion
Status light won't come on when handset is placed in base.	<ul style="list-style-type: none"> <li>● Make sure AC adapter is plugged into the base and wall outlet.</li> <li>● Make sure handset is properly seated in base.</li> <li>● Make sure that the charging contacts on the handset and base are clean.</li> </ul>
Audio sounds weak and/or scratchy.	<ul style="list-style-type: none"> <li>● Make sure that the base antenna is fully extended and vertical.</li> <li>● Move the handset and/or base to different locations and try again.</li> <li>● Press the  button to select another channel.</li> </ul>
Can't make or receive calls.	<ul style="list-style-type: none"> <li>● Check both ends of the base telephone line cord.</li> <li>● Make sure the AC adapter is plugged into the base and wall outlet.</li> <li>● Disconnect the AC adapter for a few minutes, and then reconnect it.</li> </ul>
Handset doesn't ring or receive a page.	<ul style="list-style-type: none"> <li>● Nickel-Cadmium battery pack may be weak. Charge the battery on the base for 15–20 hours.</li> <li>● Extend the base antenna vertically.</li> <li>● The handset may be too far away from the base.</li> <li>● Place the base away from noise sources.</li> <li>● The digital security code may be erased. Set the digital code.</li> </ul>
Hear only continuous static from handset and phone will not turn off.	<ul style="list-style-type: none"> <li>● The power has been interrupted during a call.</li> <li>● Restore power to the base. Make sure the phone is not plugged into an outlet controlled by a wall switch.</li> <li>● If a power failure has occurred and power will be out for some time, remove the battery from the handset. This will prevent the battery from completely discharging.</li> </ul>

# Specifications

## General

The XC800 Series complies with FCC Parts 15 and 68.

Frequency Control PLL

Modulation FM

Operating Temperature -10° to 50° C

## Base

Receive Frequency 48.76 to 49.99 MHz

Transmit Frequency 43.72 to 46.97 MHz

Power Requirements 120 VAC 60 Hz ± 3 VAC

Size 7-1/4 in. (H) x 4-3/4 in. (W) x 2-1/2 in. (D)

Weight Approx. 11.1 oz.

## Handset

Receive Frequency 43.72 to 46.97 MHz

Transmit Frequency 48.76 to 49.99 MHz

Power Requirements Rechargeable Ni-Cd Battery Pack

Size 7-1/4 in. (H) x 2-1/4 in. (W) x 2 1/2 in. (D) (w/o antenna)

Weight Approx. 10 oz. (including battery)

Battery (BT-801) Capacity 300 mAh, 2.4V

Talk Mode 8 hours

Standby Mode 14 days

*Specifications, features, and availability of optional accessories are all subject to change without prior notice.*

*Covered under one or more of the following U.S. patents:*

*4,511,761*

*4,523,058*

*4,595,795*

*4,797,916*

*5,426,690*

*5,650,790*

*5,660,269*

*5,661,780*

*and other patents pending*

**uniden<sup>®</sup>**

©1998 Uniden America Corporation.

All rights reserved.

Printed in China.

UDZZ01518ZB

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>