



DSS 2405

Optional Handset
and Charge Base

For use with Multi
Handset Cordless
Systems: DSS2415,
DSS2455/2465

Owner's Manual

Uniden®

Uniden Company Philosophy

To bring outstanding wireless communication products to people's lives throughout the world.

Welcome

Congratulations on your purchase of this Uniden DSS2405 optional handset and charger. This additional handset is for use with the Uniden DSS2415, DSS2455, or DSS2465 base. You can place a fully featured cordless handset anywhere in your home where AC power is available to connect the handset charging cradle. THE DSS2415 SERIES WILL SUPPORT UP TO 8 HANDSETS. THE DSS2455 SERIES AND DSS2465 SERIES WILL SUPPORT UP TO 4 HANDSETS.

IMPORTANT

The DSS2405 will not operate unless it has been registered to a Uniden DSS2415 series, DSS2455 series, or DSS2465 series. Before the additional handset can be used, the battery must be charged and it must be registered with the base.

This manual describes only the instructions specific to the additional handset. For detailed operation, refer to the owner's manual supplied with the original unit.

To purchase additional handsets (DSS2405) contact your local Uniden Dealer or visit our web site at www.uniden.com.au or www.uniden.co.nz

Checking the Package Contents

Make sure you have received the following items in the package. If any of these items are missing or damaged, contact your retailer.

- Cordless Handset
- Charger
- Battery (2)
- AC Adapter
- Beltclip
- This Owner's Manual
- Other Printed Material

Installation & Safety

Choosing the best location for your phone.

When choosing a location for your phone there are a number of appliances the phone should not be near, and areas you should avoid.

AVOID -
Television sets and
other electronic
appliances

AVOID -
Microwave ovens

AVOID - moisture

AVOID - Computers

 
CHOOSE -
a central location
and rise the Antenna

AVOID -
other cordless telephones


AVOID - Moisture




CHARGE -
the new phone
for 17 - 20 hrs.



Don't -
overload the
power outlet.

 

AVOID -
multi power boards.

 

AVOID - connecting more than
3
phones as ringing may be impaired

 
Note: Ringing will not be impaired by adding extra cordless handsets.



- This symbol indicates important operating and servicing instructions.
- The earcap of this telephone may attract and retain small metallic objects.

Connect the Charger

- 1 Connect the AC adapter to the DC IN 9V jack and to a standard AC wall outlet.
- 2 Set the charger on a desk or tabletop, and place the handset in the charger with the keypad facing forward.

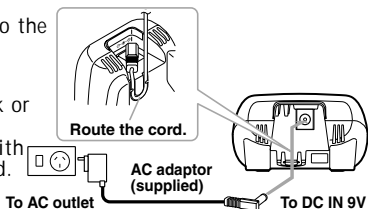


- 3 Make sure the **charge** LED illuminates. If the LED does not illuminate, check to see that the AC adapter is plugged in and that the handset makes good contact with the charger charging contacts.



Use only the supplied AAD-600S AC adapter. Do not use any other AC adapter.

Installing the AA Batteries

 
- 1 Press down on the battery cover release and slide the cover down until it comes off.
- 2 Install the batteries supplied with your phone. Check for correct (+ -) polarity.

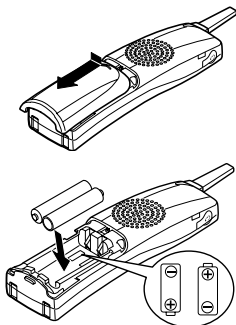


- 3 Securely close the battery compartment cover by sliding it until it snaps into place.

"Please Register" appears in the display.

 The DSS2405 will only work with "AA" Ni-MH rechargeable batteries. If you use any other type of batteries, the display will show "Use rechargeable battery only".

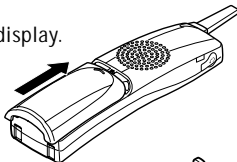

 Use only "AA" rechargeable Ni-MH batteries. Do Not use Alkaline, Lithium, or non-rechargeable batteries. Using incorrect batteries could damage or limit the performance of the handset and could cause bodily injury.

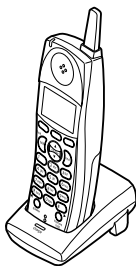

Battery Information

Battery use time (per charge)

From fully charged (17-20 hours charge time)

- Up to 7 hours continuous use (up to 5 hours when the Clarity Booster is On)
- Up to 14 days when the handset is in the standby mode (up to 24 hours in the DirectLink mode)




Recharge your handset on a regular basis by returning the handset to the charger after each phone call.

Low battery alert

When the batteries are very low and need to be charged, the phone is programmed to eliminate functions in order to save power.

 
The batteries need to be charged when :

- The empty battery icon  appears.
- "Low Battery" appears in the display.

If the phone is in the standby mode, none of the keys will operate. If you are on a call, complete your conversation as quickly as possible, and return the handset to the charging cradle.


Cleaning the battery charging contacts

To maintain a good charge, it is important to clean the charging contacts on both the handset and the charger once a month. Use a dry cloth or pencil eraser to clean.

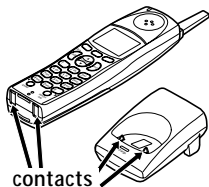


Register the Handset

 YOU NEED TO REGISTER THE DSS2405 TO THE MAIN BASE BEFORE USE!

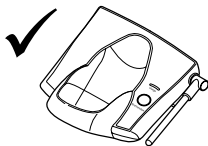

DSS2415
Main Base

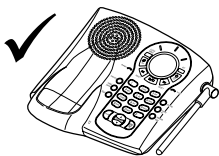 

DSS2455/2465
Main Base



Charger

- 1 After placing the batteries in the handset, charge for 10 minutes. Then remove the handset from the charger and place it in the main base (DSS2415, DSS2455, or DSS2465).
- 2 Registration starts automatically. While registering, "Handset Registering" appears in the display.
- 3 When the registration is complete, "Registration Complete" appears in the display.

If the registration fails, "Registration Failed" appears in the display. Try the above steps again.

- 4 Once registration is complete, place the handset back in the charger for 17 to 20 hours to ensure the batteries are fully charged.



- An extra handset can be registered when the main base is in the standby mode.
- In some cases you may need to attempt registration a few times.

WARRANTY

One Year Limited Warranty

Important : Evidence of original purchase is required for warranty service.

Warrantor : Uniden Australia Pty Limited A.B.N. 58 001 865 498
Uniden New Zealand Limited

ELEMENT OF WARRANTY : Uniden warrants to the original retail owner for the duration of this warranty, its DSS2405 (herein after referred to as the Product), to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below. Warranty is only valid in original country of purchase.

WARRANTY DURATION : This warranty to the original retail owner only, shall terminate and be of no further effect 12 months after the date of original retail sale. This warranty will be deemed invalid if the product is:

- (A) Damaged or not maintained as reasonable and necessary,
- (B) Modified, altered or used as part of any conversion kits, subassemblies, or any configurations not sold by Uniden,
- (C) Improperly installed,
- (D) Repaired by someone other than an authorised Uniden Repair Agent for a defect or malfunction covered by this warranty,
- (E) Used in conjunction with any equipment or parts or as part of a system not manufactured by Uniden.

PARTS COVERED : This warranty covers for one (1) year, the Base Unit and Handset only. All accessories (AC Adaptor etc) are covered for 90 days only.

STATEMENT OF REMEDY : In the event that the product does not conform to this warranty at any time while this warranty is in effect, the warrantor at its discretion, will repair the defect or replace the product and return it to you without charge for parts or service. THIS WARRANTY DOES NOT COVER OR PROVIDE FOR THE REIMBURSEMENT OR PAYMENT OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. THIS GUARANTEE IS IN ADDITION TO AND DOES NOT IN ANY WAY AFFECT YOUR RIGHTS UNDER THE CONSUMER GUARANTEE ACT.

PROCEDURE FOR OBTAINING PERFORMANCE OR WARRANTY : In the event that the product does not conform to this warranty, the Product should be shipped or delivered, freight pre-paid, with evidence of original purchase (eg. a copy of the sales docket), to the warrantor at :

UNIDEN AUSTRALIA PTY LIMITED
SERVICE DIVISION
345 Princes Highway, Rockdale NSW 2216
Ph 1300 366 895
Fx (02) 9599 3278

www.uniden.com.au

UNIDEN NEW ZEALAND LIMITED
SERVICE DIVISION
150 Harris Road, East Tamaki, Auckland
Ph 0800 4 UNIDEN (4 864 336)
Fx (09) 274 4253

www.uniden.co.nz

Customers in other States should ship or deliver the Product freight pre-paid to their nearest Uniden Authorised Repair Centre (Contact Uniden for the nearest Warranty Agent to you).

THANK YOU

FOR PURCHASING A UNIDEN PRODUCT

© 2003

Uniden Australia Pty Limited

Uniden New Zealand Limited

Printed in China

UUZZ01827BZ

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>