

Uniden[®]

DSS7805

ADDITIONAL HANDSET

OWNER'S MANUAL

OWNER'S MANUAL



Welcome

Congratulations on your purchase of the Uniden DSS7805 optional handset and charger. This additional handset is for use with the Digital Spread Spectrum series (DSS7815, DSS7815+1, DSS7855 and DSS7855+1), model numbers may vary. Each model within this series will support up to 10 handsets. You can place a fully featured cordless handset anywhere in your home as long as you have AC power is available to connect the handset charging cradle.

IMPORTANT

The DSS7805 additional handset will not operate unless it has been registered to your DSS7800 series main base unit. This manual describes how to set up and connect your new handset; for instructions on operating your new handset, refer to the owner's manual that supplied with your main base unit.

To purchase additional handsets (DSS7805), Please contact your retailer for replacement adaptors or batteries or visit our website at www.uniden.com.au or www.uniden.co.nz

Checking the Package Contents

Make sure you have received the following items in the package. If any of these items are missing or damaged, contact your retailer.

- Cordless Handset
- Charging Cradle
- Battery Pack (BT-446)
(Capacity: 800 mAH, 3.6V)
- AC adaptor (AAD-210)
(INPUT: 240V AC 50Hz) (OUTPUT: 9V DC 210 mA)
- Beltclip
- This Owner's Manual
- Other Printed Material



(1)



 
Installing Your Expansion Handset

Follow these three easy steps to get your new handset ready to use:


- 1 Install the battery pack.
- 2 Connect the charger and charge your new handset for 15-20 hours.
- 3 Register your new handset to the main base unit.

Step 1: Install the Battery Pack

- 1 Press down on the handset battery case cover (use the finger indentation for a better grip) and slide the cover downward to remove.
- 2 Plug the battery pack connector (red & black wires) into the jack inside the battery compartment. (The connector notches fit into the grooves of the jack only one-way.) Match the wire colours to the polarity label in the battery compartment, and push the connector in until you hear a click.
- 3 Make sure you have a good connection by slightly pulling on the battery wires. If the connection is secure, the battery jack will remain in place.
- 4 Place the battery case cover back on the handset by sliding it upwards until it clicks into place.
- 5 Place the handset in the charging cradle with the keypad facing forward.

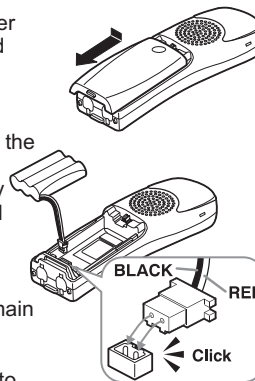

 - **Use only the Uniden battery (BT-446) supplied with your phone.** Replacement batteries are also available. Visit our web site at www.uniden.com.au or www.uniden.co.nz.
- Recharge your handset on a regular basis by returning the handset to the charger after each phone call.

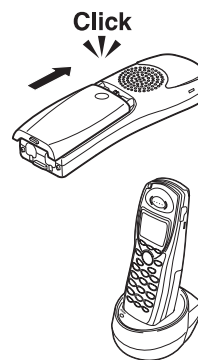


Rechargeable Nickel-Metal-Hydride Batteries Must Be Recycled or Disposed of Properly



Step 2: Connect the Charger

 - 1 Connect the AC adaptor to the **DC IN 9V** jack and to a standard **240V AC** wall outlet.
- 2 Set the charger on a desk or tabletop, and place the handset in the charger with the keypad facing forward.
- 3 Make sure the **charge** LED illuminates. If the LED does not illuminate, check to see that the AC adaptor is plugged in and that the handset makes good contact with the charger charging contacts.

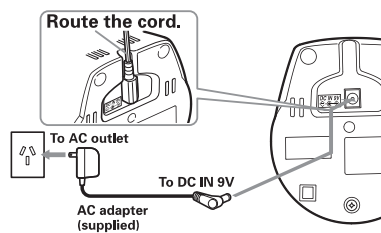


- Use only the supplied AAD-210AC adapter. Do not use any other AC adapter.
- Place the charger close to the AC outlet so that you can unplug the AC adaptor easily.

- 4 Charge the handset for 15-20 hours before using.

Step 3: Register the Handset

YOU NEED TO REGISTER THE DSS7805 TO THE MAIN BASE BEFORE USE!

 - 1 Be sure the handset battery is fully charged.
- 2 With the main base in standby mode (i.e., not being used), place the extra handset in the main base unit to begin *registration*.
- 3 While the handset is registering, *Handset Registering* will appear in the LCD. When *Registration Complete* is displayed, the handset has been registered to the base. If *Registration Failed* appears, please try these steps again.

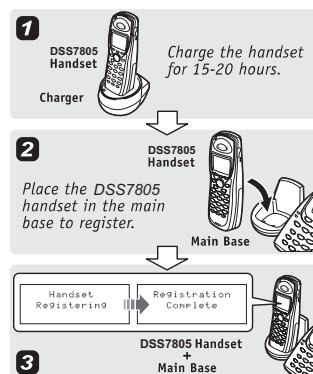

(3)



Using Your Expansion Handset

Now that your new handset is registered, it can perform all the same functions as the handsets originally included with your phone. With your new handset, you can

- Transfer calls between handsets
- Use two handsets as walkie-talkies in DirectLink mode
- Use two handsets as a baby/room monitor
- Hold 3- or 4- conference calls (depending on model)
- Access your main base's integrated answering device (if available)

See the owner's manual that came with your main base unit for complete instructions on operating your new expanded digital phone.

Battery Information

Low battery alert

When the batteries are very low and need to be charged, the phone is programmed to eliminate functions in order to save power.

 
The batteries need to be charged when:

- The empty battery icon  appears.
- Low Battery appears in the display.

If the phone is in standby mode, none of the keys will operate. If you are on a call, complete your conversation as quickly as possible, and return the handset to the charging cradle.




Cleaning the battery charging contacts

To maintain a good charge, it is important to clean the charging contacts on the handset once a month. Using water only, dampen a cloth to clean the charging contacts. Then make sure to go back over the charging contacts with a dry cloth before returning the handset to the charger to charge.

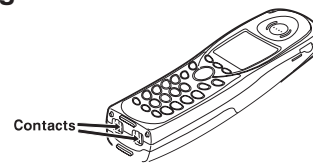


   Caution: Do not use paint thinner, benzene, alcohol, or other chemical products. Doing so may discolour the surface of the telephone and damage the finish.





 (5)





Warranty

UNIDEN DSS7805 Cordless Phone

Limited One Year Warranty

Note: Please keep your sales docket as it provides evidence of warranty.

Warrantor: Uniden Australia Pty Limited ABN 58 001 865 498
Uniden New Zealand Limited

Warranty only available in original country of purchase

Elements of Warranty: Uniden warrants to the original retail owner for the duration of this warranty, its DSS7805 Cordless Phone (hereinafter referred to as the Product) to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below.

Warranty Duration: This warranty to the original retail owner only, shall terminate and be of no further effect ONE (1) Year after the date of original retail sale. This warranty will be deemed invalid if the product is; (A) Damaged or not maintained as reasonable and necessary, (B) Modified, altered or used as part of any conversion kits, subassemblies, or any configurations not sold by Uniden, (C) Improperly installed, (D) Repaired by someone other than an authorized Uniden Repair Agent for a defect or malfunction covered by this warranty, (E) Used in conjunction with any equipment or parts or as part of a system not manufactured by Uniden, (F) Installed, programmed or serviced by anyone other than an authorized Uniden Repair Agent, or (G) Where the Serial Number label of the product has been removed or damaged beyond recognition.

Parts Covered: This warranty covers for 1 year, the Handset and Charge Unit only.

Accessories: Batteries, AC adaptor etc are covered for 90 days.

 
Statement of Remedy: In the event that the product does not conform to this warranty at any time while this warranty is in effect, the warrantor at its discretion, will repair the defect or replace the product and return it to you without charge for parts and service. THIS WARRANTY DOES NOT COVER OR PROVIDE FOR THE REIMBURSEMENT OR PAYMENT OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. THIS GUARANTEE IS IN ADDITION TO AND DOES NOT AFFECT YOUR RIGHTS UNDER THE CONSUMER GUARANTEES ACT.

Procedure for obtaining performance or warranty: In the event that the Product does not conform to this warranty, the Product should be shipped or delivered, freight prepaid, with evidence of original purchase, (eg. a copy of the sales docket), to the warrantor at:

UNIDEN AUSTRALIA PTY LTD
Service Division
345 Princes Highway,
Rockdale, NSW 2216
Fax (02) 9599 3278
www.uniden.com.au

UNIDEN NEW ZEALAND LTD
Service Division
150 Harris Road, East Tamaki,
Auckland
Fax (09) 274 4253
www.uniden.co.nz



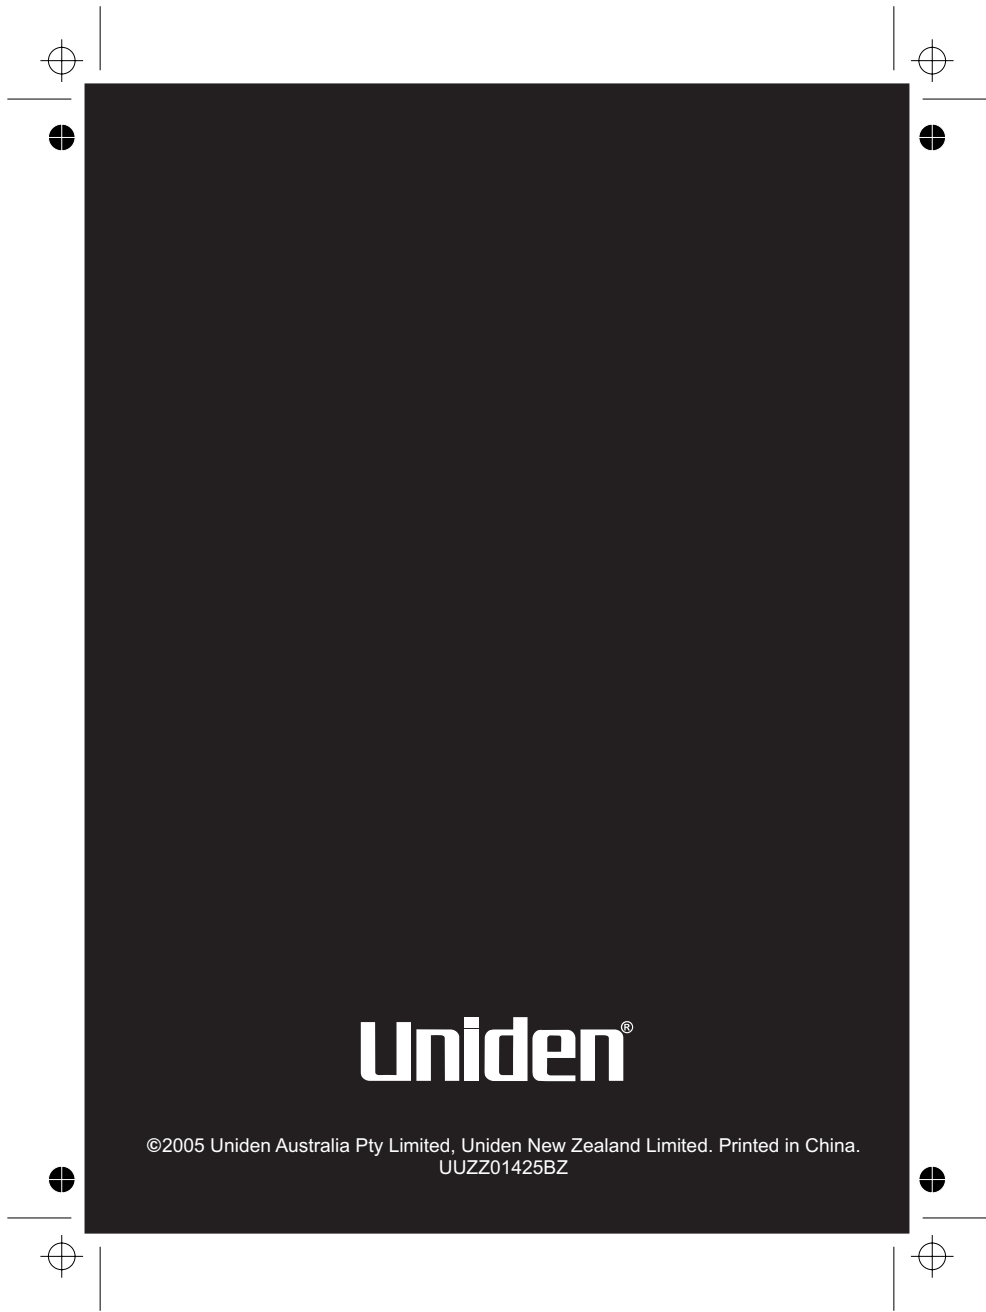

Uniden[®]

©2005 Uniden Australia Pty Limited, Uniden New Zealand Limited. Printed in China.
UZZ01425BZ

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>