

Uniden®

FP204

LCD Display
Caller ID
Speaker Phone

For more exciting new products please visit our website:

Australia: www.uniden.com.au

New Zealand: www.uniden.co.nz

OWNER'S MANUAL

CONTENTS

Introduction	1
Features	1
Included in your package	1
Location and Controls	2
Setup	2
Connecting Line Cords and AC Adaptors	3
Setting Time and Date	3
Optional Backup Battery Installation	3
Telephone Key and Switch Functions	5
Display Messages	6
Caller ID	7
Caller ID Operation	7
Speed Dial Numbers	8
Storing One-Touch Speed Dial Numbers	8
Phonebook	8
Storing name and Number	8
To Review Phonebook	8
To Edit a Phonebook Entry	8
To Delete a Phonebook Entry	8
Troubleshooting	9
Warranty	10

INTRODUCTION

Features

Caller Display
Up to 99 Caller ID memory
Call Back Function
NEW CALL light
Speaker Phone
Last number redial
Last 10 numbers call back
FLASH button
REDIAL/PAUSE button
Message waiting function
3 one-touch memories
Up to 70 Phonebook memories
Clock

Included in your package

1 - Handset with curly cord and phone base
1 - Telephone line cord
1 - Owner's manual
1 - AC Adaptor
1 - Wall Mount Bracket

Optional extras

4 - AAA size 1.5V batteries

TIP

To get the most from your phone, please read the Owner's Manual thoroughly.

 
LOCATION OF CONTROLS

NOTE


This unit is not waterproof. Do not expose this product to rain, water, moisture or any other liquid.

NOTE

The earcap of this telephone may attract and retain small metallic objects.

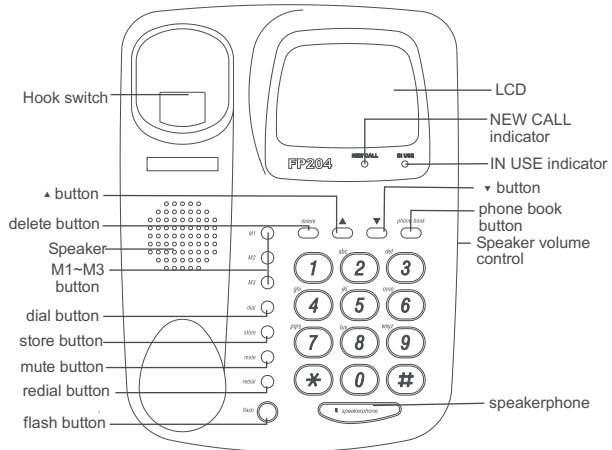

SETUP

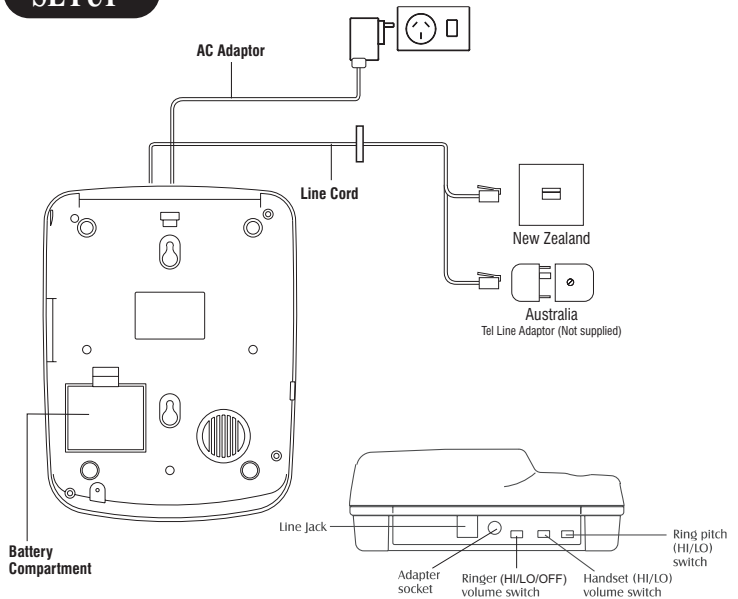 

Connecting Line Cords and AC Adaptor

1. Plug one end of the supplied telephone cord into the telephone line socket located at the rear of the phone.
2. Plug the other end into the telephone line wall jack.
3. Plug the AC Adaptor lead into the power socket at the rear of the phone.
4. Plug AC Adaptor into a standard wall outlet and switch it on.

Setting Time and Date

If you subscribe to a Caller ID Service, your time and date will automatically be set for you when you receive your first call to this unit.

1. Press and hold **FLASH**, display shows **SET TIME**.
2. Use **▼** and **▲** to select the correct number, press **DIAL** to confirm and move to the next digit, HH:MM DD/MM.
3. Press **DEL** to exit.

NOTE

If using the AC Adaptor, Batteries are not required for normal operation.

Always ensure telephone cord is disconnected before opening the battery compartment door and installing batteries.

 
OPTIONAL BACKUP BATTERY INSTALLATION

Batteries may be used instead of the supplied AC Adaptor.


1. Remove the battery compartment cover.
2. Fit 4 x AAA alkaline batteries.
3. Replace the cover.

Based on ½ hour use per day, good alkaline batteries should last 2-3 months.

4x AA Batteries

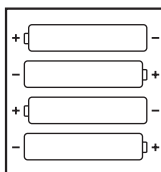

Battery Compartment

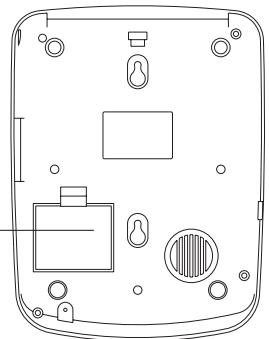 



NOTE

Telecom New Zealand

Customers: this code is already set to "ON".

Australian Customers:

This code is already set to "OFF".

Digit Insert 0 Caller ID

To correctly display and dial Call ID numbers, you may need to insert a digit at the beginning of your telephone number. (eg: in New Zealand, Telecom requires a '0' to be inserted.)

New Zealand:

If you subscribe to Telecom New Zealand, this code has already been set for you to 'ON'. If you subscribe to another telephone company, please set the insert 0 to "ON".





If this phone is used with a business PABX - consult the PABX manufacturer for the correct setting.

Australia:

For private household telephone lines, set insert 0 to **OFF**.

If this phone is used with a business PABX - consult the PABX manufacturer for the correct setting.

While the handset is on the base:

1. Press  button twice quickly. **INSERT 0 OFF** or **INSERT 0 ON** will be displayed.
2. Use  and  to choose on or off.
3. Press  to store.

TELEPHONE KEY and SWITCH FUNCTIONS

Ring Volume (Hi/Lo/Off)

Set the ring volume switch to the desired level (Hi, Lo or Off). The maximum level is Hi. The switch is located at the back of the unit.

Ring Pitch (Hi/Lo)

Set the ring pitch switch to the desired level (Hi or Lo). The switch is located at the back of the unit.





Regular dialling

Lift the handset and listen for dial tone. Then enter the telephone number you wish to call. The dialled number will appear on the display screen whenever you make a call.



 


Redial function

To redial the previous number you called. Lift the handset or press  and then press .



Last 10 number redial

1. With the handset on the cradle press .
2. Press  or  to review the last 10 numbers dialled.
3. Pick up the handset or press  to dial the selected number.

Pause function

To insert a temporary pause. Press the /pause button during a dialling sequence. For example, in some cases when dialling an international number you need to place a pause between the clusters of numbers to allow the telephone company, relaying the call, time to process it. The number 011-886-22-795-1234 would need to be dialled 011 /pause 886, /pause 22, /pause 795, /pause 1234.

Mute button


For privacy when you are required to consult with a person standing next to you and do not wish the party on the line to hear your conversation, press . MUTE will be displayed. Press  again to resume the conversation.



Handset Volume (Hi/Lo)

Set the handset volume switch to the desired position (Hi or Lo). The switch is located at the back of the unit.

Flash button - Call Waiting

If the Call Waiting tone sounds while you are on a call -

New Zealand: Press the  button to switch between callers.

Australia: Press  then  to switch between callers.

Speaker Button

To switch your call to speaker phone, press  and hang up the handset. To switch back, simply pick up the handset and speak. You can make, receive and dial in the speaker mode.

Speaker Volume

During the conversation, you can move the slide control on the right hand side of the unit to adjust the speaker volume.

NOTE

For 'Call Waiting' to operate you must subscribe to this service through your local telephone company.

If you do not have this service, then pressing the flash button during a call may disconnect the caller.

DISPLAY MESSAGES



For LCD messages to operate, you must first subscribe to the Caller ID service through your local telephone company.

 
Message Waiting MSG

If you have arranged a voice mail service with your telephone company, the LCD screen will display **MESSAGE WAITING** for a few seconds after a call is received. The screen will then display **MSG** in the upper left corner until you retrieve the message from the voice mail service. **MESSAGE WAITING** will be saved as a Caller ID record. The **MSG** function may not be available in all areas.



Total & New Calls

This displays the total calls received and which of those are new calls.



No Calls

When all calls have been deleted the screen will display **NO CALL**.



 
Private

If a caller has exercised the option which prevents the caller's name and number from being sent, the screen will display **PRIVATE**.






Repeat Calls

If the same call is received again on the same day, **REPEAT** will be displayed in the top right of the LCD screen.



End of List

 This is displayed when you use the **review**  or  and have reached the top end of the call history list. If there are no calls in the list the LCD screen displays **NO CALL**.




Out of Area

This will be displayed when the caller's telephone company does not provide Caller ID services or does not provide name and number services via the long distance network.



Battery Low Indicator

 If you are using batteries, this icon is displayed when the batteries require replacing.






The LCD display will not operate if the AC Adaptor is not connected or if the batteries are flat or not installed.



For Caller ID features to operate you must first subscribe to this service through your local telephone company.

CALLER ID

 A Caller ID record consists of the following information:

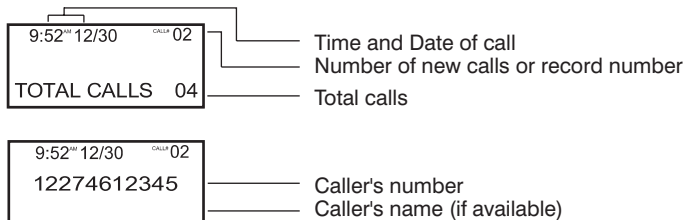

CALLER ID OPERATION

New Call Indicator

The red indicator light of your phone will flash when you have New Calls. It will continue to flash until you have reviewed the calls displayed on the LCD screen.

Review Call Records

Use the **review** (▼) or (▲) buttons to scroll through the caller list. At the end of the call record list, **END OF LIST** will be displayed.

Call Records

Your phone stores up to 99 Call records. When the list is full a new incoming call will automatically delete the oldest call record.

Call Back feature

You can automatically dial the number of a person who has recently called.

1. Select the caller that you wish to call back by pressing the **review** (▼) or (▲) button.
2. Pick up the handset of press (◀) and the number will be dialed.

Del button - for deleting Caller ID records

Individual Delete

1. With the handset in its cradle, press (▼) or (▲) buttons or select the number you wish to delete.
2. Now press the (DEL) button. The LCD screen will show **DEL?**
3. To confirm the number chosen is to be deleted, press (DEL) again. The number will be deleted.

Delete All

1. With the handset in its cradle, press (▼) or (▲) buttons or select the number you wish to delete.
2. Press and hold (DEL) and **ALL DEL?** will be displayed.
3. Press (DEL) to delete all records.

SPEED DIAL NUMBERS

NOTE

A Speed Dial label has been provided to record Speed Dial names. You may wish to stick it on the inside of the handset.


Three speed dial numbers can be programmed into the memory of your telephone (**M1** - **M3**). Each memory location can store a maximum of 16 digits.

Storing One-Touch Speed Dial Numbers

1. Press **STORE**. The LCD shows -->
2. Enter phone number using the keypad (up to 16 digits).
3. Press **STORE**. The LCD shows --> ?.
4. Press the speed dial location you wish to store the number to (**M1** - **M3**).
5. The LCD shows **SAVE OK**.

Dialing One-Touch Numbers

To dial a stored memory number:



1. Pick up the handset or press .
2. Press the desired speed dial button, (**M1** - **M3**).

PHONEBOOK

Storing Name and Number

1. Press and hold **PHONEBOOK** until a new entry appears with the cursor at the second line.
2. Enter the number using the keypad (up to 20 digits). Press **REDIAL** to insert a pause P. Use **DEL** to delete previous digit. Press **PHONEBOOK** to confirm number.
3. Enter the name using the keypad. Press **DIAL** to move the cursor to the right. Use Delete to delete previous digit. Press **PHONEBOOK** to confirm name. Number and Name are stored and cursor appears at new entry.

To Review Phonebook

Press **PHONEBOOK**. Use  or  to review. You can quickly review an entry by pressing the first letter of the name, the LCD will display the matching name(s).

To Edit a Phonebook Entry

Review an entry as per instructions above. Press and hold **PHONEBOOK** until the first character of the name flashes. Edit the name or press **DEL** to move cursor to edit the number.

To Delete a Phonebook Entry

During review process select the entry you wish to delete. Press **DEL** once, the LCD shows DEL? Press **DEL** again to delete the entry.

TROUBLESHOOTING

Blank or faint screen

Check the line cord, AC Adaptor or replace batteries.

Batteries not lasting

Review **new calls** immediately to prevent the **new call** light flashing for extended periods.

Based on ½ hour use per day, good alkaline batteries should last 2-3 months.

Caller ID will not work properly

Your phone stores up to 99 Call records. When the list is full a new incoming call will automatically delete the oldest call record.

Phone will not ring

You may have too many communication devices connected to a single line.

A communication device can be a phone, a modem or fax machine. Disconnect some devices.

Check that Ring Volume switch at rear of phone is not set to OFF.

How can the listening volume be increased?

Adjust the handset volume switch at the rear of the phone OR adjust the speaker volume control on the right side of the phone.

No dial tone

Verify that you are using the correct line cord and that it is plugged in correctly.

Caller ID

Please check with your service provider that your subscription to this service is active. If the screen is blank check the AC adaptor or replace batteries.

Please refer to our website for further information and frequently asked questions.

New Zealand - www.uniden.co.nz

Australia - www.uniden.com.au

WARRANTY

One Year Limited Warranty

UNIDEN FP204 CORDED PHONE

IMPORTANT Satisfactory evidence of the original purchase is required for warranty service

Please refer to our Uniden website for any details or warranty durations offered in addition to those contained below.

Warrantor

The warrantor is either Uniden Australia Pty Limited ABN 58 001 865 498 ("Uniden Aust") or Uniden New Zealand Limited ("Uniden NZ") as the case may be.

Terms of Warranty

Uniden Aust/NZ warrants to the original retail purchaser only that the FP204 ("the Product"), will be free from defects in materials and craftsmanship for the duration of the warranty period, subject to the limitations and exclusions set out below.

Warranty Period

This warranty to the original retail purchaser is only valid in the original country of purchase for a Product first purchased either in Australia or New Zealand and will expire one (1) year from the date of the original retail sale.

If a warranty claim is made, this warranty will not apply if the Product is found by Uniden to be:

- (A) Damaged or not maintained in a reasonable manner or as recommended in the relevant Uniden Owner's Manual;
- (B) Modified, altered or used as part of any conversion kits, subassemblies or any configurations not sold by Uniden Aust or Uniden NZ;
- (C) Improperly installed contrary to instructions contained in the relevant Owner's Manual
- (D) Repaired by someone other than an authorized Uniden Repair Agent in relation to a defect or malfunction covered by this warranty; or
- (E) Used in conjunction with any equipment, parts or a system not manufactured by Uniden.

Parts Covered

This warranty covers the Product and included accessories.

User-generated Data

This warranty does not cover any claimed loss of or damage to user-generated data (including but without limitation phone numbers, addresses and images) that may be stored on your Product.

Statement of Remedy

If the Product is found not to conform to this warranty as stated above, the Warrantor, at its discretion, will either repair the defect or replace the Product without any charge for parts or service. This warranty does not include any reimbursement or payment of any consequential damages claimed to arise from a Product's failure to comply with the warranty.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law.

You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

This warranty is in addition to and sits alongside your rights under either the COMPETITION AND CONSUMER ACT 2010 (Australia) or the CONSUMER GUARANTEES ACT (New Zealand) as the case may be, none of which can be excluded.

Procedure for Obtaining Warranty Service

Depending on the country in which the Product was first purchased, if you believe that your Product does not conform with this warranty, you should deliver the Product, together with satisfactory evidence of your original purchase (such as a legible copy of the sales docket) to Uniden at the addresses shown below. You should contact Uniden regarding any compensation that may be payable for your expenses incurred in making a warranty claim. Prior to delivery, we recommend that you make a backup copy of any phone numbers, images or other data stored on your Product, in case it is lost or damaged during warranty service.

UNIDEN AUSTRALIA PTY LTD

Service Division
345 Princes Highway,
Rockdale, NSW 2216
Phone number: 1300 366 895
Email address: custservice@uniden.com.au

UNIDEN NEW ZEALAND LTD

Service Division
150 Harris Road, East Tamaki
Auckland 2013
Phone number: (09) 273 8377
Email address: service@uniden.co.nz

Uniden®

© 2011 Uniden Australia Pty Limited Uniden New Zealand Limited

Download from Www.Somanuals.com. All Manuals Search And Download.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>