



Uniden®

WDECT2380

**Wide Band Digital Technology
Expansion Handset**

Owner's Manual

OWNER'S MANUAL



Welcome

Congratulations on your purchase of the Uniden WDECT2380 handset and charger. This expansion handset is for use with the WDECT series (e.g., WDECT2300, 2315, 2315+1, 2355, 2355+1, 2355+2 and WDECT2385 [WDECT2310NZ not included]). Each main base model in this series can support up to four handsets (WDECT2300 - up to two handsets). You can place a fully-featured cordless handset anywhere as long as there is AC power to connect the handset charging cradle.

IMPORTANT

The WDECT2380 expansion handset will not operate unless it has been registered to your main base. This manual describes how to set up and connect your new handset; for instructions on operating your new handset, refer to the owner's manual supplied with your main base.

Backward / Forward Compatibility

Your phone may be compatible with other Uniden Digital Expandable Systems. Please visit our website at www.uniden.com.au www.uniden.co.nz

Checking the Package Contents

Make sure you have received the following items in the package
If any of these items are missing or damaged, contact your retailer.

- Cordless Handset
- Charging Cradle
- Battery Pack (BT-0001) (pre-installed)
(Capacity: 650 mAh, 3.7V)
- AC Adapter
(INPUT: 240V AC 50Hz) (OUTPUT: 9V DC 210 mA)
- Audio Recording Cable
- Holster
- This Owner's Manual
- Other Printed Material

www.uniden.com.au

www.uniden.co.nz

– 2 –

 


Step 1: Connect the Charger

1 Connect the AC adapter to the **DC IN 9V** jack and to a standard AC wall outlet.

2 Set the charger on a desk or tabletop, and place the handset in the charger with the keypad facing forward.

3 Make sure the **charge** LED illuminates. If the LED does not illuminate, check to see that the AC adapter is plugged in and that the handset makes good contact with the charger charging contacts.

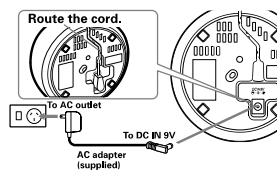

- note**
- Use only the supplied AC adapter. Do not use any other AC adapter.
 - Place the charger close to the AC outlet so that you can unplug the AC adapter easily.

4 Charge the handset for 15-20 hours before using. Recharge your handset on a regular basis by returning the handset to the charger after each phone call.



Step 2: Register the Handset 'TO REGISTER THE WDECT2380 TO A WDECT2385 MAIN BASE!'

- 1** Be sure the handset battery is fully charged.
- 2** With the main base in standby mode (i.e., not being used), place the handset in the main base to begin registration.
For compatible models in the WDECT2315 and WDECT2355 series:
 - 1) Disconnect the AC adapter.
 - 2) While holding the following key, connect the AC Adapter:
WDECT2300/2315/2315+1 models - **find handset key**
WDECT2355/2355+1/2355+2 models - **intercom key**Keep pressing the key until the **CHARGE** LED starts to blink.
 - 3) On the handset, press and hold **#** until you hear a beep.
- 3** While the handset is registering, **Handset Registering** will appear in the handset LCD. When **Registration Complete** is displayed, the handset has been registered to the base.
If **Registration Failed** appears, please try these steps again.

De-register the handset

- 1) Press and hold **end** and **#** for more than 5 seconds.
- 2) Select the handset ID to be de-registered from the list.
The phone will ask you to confirm the deregistration. Select **Yes**.



Using Your Expansion Handset

 
Now that your new handset is registered, it can perform all the same functions as the handsets originally included with your phone. With your new handset, you can

- Transfer calls or intercom between handsets
- Use two handsets as 2-way radios in DirectLink mode
- Use two handsets as a baby/room monitor
- Hold 3 or 4 way conference calls (depends on the model)
- Access the integrated answering device or voice mail using Handset
- Send Text Messages between Handsets (WDECT238x Series Only)
- Record Distinctive Ringer Tones
- Customize Handset with Animations and Wall Paper Displays
- Customize Reminder Displays using Calendar

See the owner's manual that came with your main base for complete instructions on operating your new expanded digital phone (You can download owner's manual from our website at www.uniden.com.au, www.uniden.co.nz).


Using the joystick

The joystick makes it easy to use your phone. The four most commonly used functions are accessible just by moving the joystick:

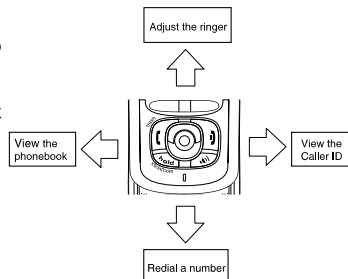

You will also use the joystick to make menu selections. Highlight the option you want by moving the joystick up, down, right, or left. This will move the cursor; the option currently highlighted appears in reversed out text:

 
- 1) Press the center of the joystick.
- 2) Select the MENU soft Keys.

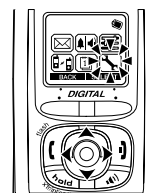

To exit the **MENU** and return to standby, press the **end** key.



 Select the highlighted option by pressing the center of the joystick. (You can also press the **OK** soft key.) Anytime the display prompts you to press OK or Enter, you can press the center of the joystick.

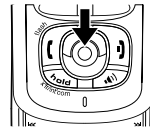

You can go back to the previous menu at any time by pressing the **BACK** soft key.

Using your handset with compatible **WDECT2315** and **WDECT2355** series phones



 
- To get more information on **WDECT2380** handset features, download **WDECT2385** series owner's manual from our web site at www.uniden.com.au, www.uniden.co.nz.
- Not all features are available when this handset is used with the **WDECT2315** or **WDECT2355** series main base. If you want to use all of this handset's features, use it with a **WDECT2385** series base.

 
The **WDECT2380** has many new features. You can record a ringer from any audio source, select animation on the display, and set alarms to remind you of important events.




Customize Your Own Distinctive Ringer Tones

Your phone can store up to 20 different recordings to use as ringer tones (a total of 3 minutes, 15 seconds). Each recording must be between 5 and 60 seconds long.

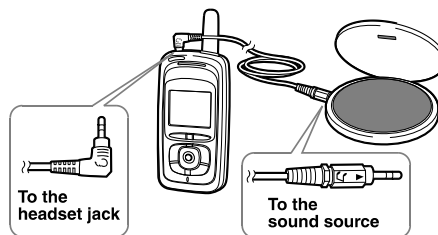


- 1) Connect the audio recording cable to the handset and sound source (e.g. stereo or cd player). Insert one end of the audio recording cable into the handset's headset jack and the other end into the sound source. You can also simply use the handset's microphone by holding the handset close to the sound source.
- 2) Select menu option .
- 3) Go to **Record Ringer**.
- 4) To start recording, press the **RECORD** soft key. The message counter displays **60** and then begins to count down.
- 5) When you are finished recording, press the **STOP** soft key. The phone will play the recorded ringer.
- 6) To store the ringer, press the Joystick or the **SAVE** soft key.
- 7) Enter the title of this ringer. If you don't enter a title, the phone will store it as "Recorded ring."
- 8) Press the center of the joystick.

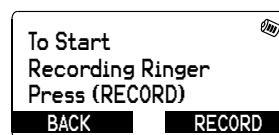 





Set Animation Displays

- 1) Select menu option .
- 2) Scroll to **Animations** and select.
- 3) To preview Animations press the **VIEW** soft key.
- 4) Press the **OK** soft key.

Set Wallpaper Displays

- 1) Select menu option .
- 2) Scroll to **Themes** and select.
- 3) To preview wallpaper press the **VIEW** soft key.
- 4) Press the **SELECT** soft key.

Set Keypad Lock

- 1) Select menu option .
- 2) Scroll to **Keypad Lock** and select.
- 3) Select **Lock**, and press the **OK**.

You'll hear a confirmation tone, and your keypad is locked.

 
Unlock your keypad by going to **Keypad Lock** and selecting **Unlock**.

To unlock the keypad temporarily, press any key on the upper part of the handset, and press **tone/*** in 5 seconds.


Set Backlight Display Color

- 1) Select menu option .
- 2) Scroll to **Backlight Colour** and select.
- 3) Press the **OK** soft key.

Scheduling Reminders

- 1) Select menu option .
- 2) Press the **SKDL** soft key, then press the **OPTION** soft key.
- 3) Scroll to **New Entry** and select.
- 4) Use the cursor to select the date and time of the reminder.
- 5) Press the center of the joystick.
- 6) To set reminder tone, go to the second line and select.
- 7) To enter a name or reminder text, go to the third line and enter. You can enter up to 32 characters.
- 8) Press the center of the joystick when you're finished.
- 9) Press the **DONE** soft key.

 Editing/Deleting Reminders

- 1) Select menu option .
 - 2) Press the **SKDL** soft key and select the reminder.
 - 3) Edit the date, time, reminder tone, and text the same way you entered them for a new entry.
- To delete reminder, select the reminder and press the **OPTION** soft key, and select **Delete Entry** To delete all reminders, select **Delete All**. Press the **OK** soft key.





Creating and Editing Phonebook Entries

To go to the phonebook, press the joystick to the left and press the **OPTION** soft key.


Select **New Entry**. Enter the name, number, unique ring, unique display, phonebook group, and speed dial as you want. Press the center of the joystick to enter each entry and confirm the selection. When you're finished, press the **DONE** soft key to save this phonebook entry.

Battery Information

Low battery alert

When the batteries are very low and need to be charged, the phone is programmed to eliminate functions in order to save power.

The batteries need to be charged when:

- The empty battery icon  appears.
- **Low Battery** appears in the display.

If the phone is in standby mode, none of the keys will operate.

If you are on a call, complete your conversation as quickly as possible, and return the handset to the charging cradle.

Cleaning the battery charging contacts

To maintain a good charge, it is important to clean the charging contacts on the handset once a month.

Using water only, dampen a cloth to clean the charging contacts. Then make sure to go back over the charging contacts with a dry cloth before returning the handset to the charger to charge.



 
Caution: Do not use paint thinner, benzene, alcohol, or other chemical products. Doing so may discolor the surface of the telephone and damage the finish.



Installing a Replacement Battery

Follow the steps if you need to replace a battery.

- 1** Press down on the handset battery case cover (use the finger indentation for a better grip) and slide the cover downward to remove.
- 2** Remove the existing battery and unplug the connector from the jack.
- 3** Plug the battery pack connector (red, black, and white wires) into the jack inside the battery compartment. (The connector notches fit into the grooves of the jack only one-way.) Match the wire colors to the polarity label in the battery compartment, and push the connector in until you hear a click.
- 4** Make sure you have a good connection by slightly pulling on the battery wires. If the connection is secure, the battery jack will remain in place.
- 5** Place the battery case cover back on the handset by sliding it upwards until it clicks into place.

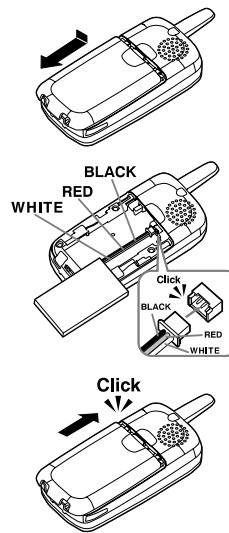

note • **Use only the Uniden battery BT-0001 supplied with your phone.** Replacement batteries are available through your retailer. (See page 2.)

- Don't place the charger in direct sunlight or subject it to high temperatures. The battery may not charge properly.

Rechargeable Lithium Ion Batteries
Must Be Recycled or Disposed of Properly





Warranty

One Year Limited Warranty

Important : Evidence of original purchase is required for warranty service.

Warrantor : Uniden Australia Pty Limited A.B.N. 58 001 865 498
Uniden New Zealand Limited

ELEMENT OF WARRANTY : Uniden warrants to the original retail owner for the duration of this warranty, its **WDECT2380** (herein after referred to as the Product), to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below. Warranty is only valid in original country of purchase.

WARRANTY DURATION : This warranty to the original retail owner only, shall terminate and be of no further effect 12 months after the date of original retail sale. This warranty will be deemed invalid if the product is:

- (A) Damaged or not maintained as reasonable and necessary,
- (B) Modified, altered or used as part of any conversion kits, subassemblies, or any configurations not sold by Uniden,
- (C) Improperly installed,
- (D) Repaired by someone other than an authorized Uniden Repair Agent for a defect or malfunction covered by this warranty,
- (E) Used in conjunction with any equipment or parts or as part of a system not manufactured by Uniden.

PARTS COVERED : This warranty covers for one (1) year, the Charger Unit and Handset only. All accessories (AC Adapter etc) are covered for 90 days only.

STATEMENT OF REMEDY : In the event that the product does not conform to this warranty at any time while this warranty is in effect, the warrantor at its discretion, will repair the defect or replace the product and return it to you without charge for parts or service. **THIS WARRANTY DOES NOT COVER OR PROVIDE FOR THE REIMBURSEMENT OR PAYMENT OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. THIS GUARANTEE IS IN ADDITION TO AND DOES NOT IN ANY WAY AFFECT YOUR RIGHTS UNDER THE CONSUMER GUARANTEE ACT.**

PROCEDURE FOR OBTAINING PERFORMANCE OR WARRANTY : In the event that the product does not conform to this warranty, the Product should be shipped or delivered, freight pre-paid, with evidence of original purchase (eg. a copy of the sales docket), to the warrantor at :

UNIDEN AUSTRALIA PTY LIMITED
SERVICE DIVISION
345 Princes Highway, Rockdale NSW 2216
Fx (02) 9599 3278

www.uniden.com.au

UNIDEN NEW ZEALAND LIMITED
SERVICE DIVISION
150 Harris Road, East Tamaki, Auckland
Fx (09) 274 4253

www.uniden.co.nz

Customers in other States should ship or deliver the Product freight pre-paid to their nearest Uniden Authorized Repair Centre (Contact Uniden for the nearest Warranty Agent to you).



THANK YOU FOR BUYING A UNIDEN PRODUCT.

Uniden[®]

(c) 2005 Uniden Australia Pty Limited. Uniden New Zealand Ltd. Printed in China.
UUZZ01898BZ

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>