

**Uniden**<sup>®</sup>

**XS1215/XS1215 +1**

**Series Owner's Manual**

**OWNER'S MANUAL**

## Contents

<b>WELCOME/ FEATURES</b>	<b>2</b>	<b>Using the Speed Dial Memory</b>	<b>23</b>
<b>CONTROLS &amp; FUNCTIONS</b>	<b>3</b>	Storing Names and Numbers in Speed Dial Memory	23
<b>TERMS USED IN THIS MANUAL</b>	<b>5</b>	Storing Caller ID Messages in Speed Dial Memory Locations	26
<b>Installing the Phone</b>	<b>6</b>	Making Calls from Speed Dial Memory	27
A. Choose the Best Location	6	Easy Dial (New Zealand only)	27
B. Install the Rechargeable Battery Packs into the Handsets	7	<b>Caller ID and CIDCW (Caller ID on Call Waiting )</b>	<b>28</b>
C. Connect the Main Base and Charging Cradle, and Charge the Handsets	8	Viewing the Caller ID Message List	29
D. Mount the Main Base on a Wall	9	Deleting Information from the Caller ID List	30
Installing the Beltclip	10	Making a Call from the Caller ID List	31
Headset Installation	11	Caller ID on Call Waiting (CIDCW)	31
<b>Register Handsets to the Main Base before Using!</b>	<b>12</b>	<b>Changing the Digital Security Code</b>	<b>32</b>
<b>When to Re-register Handsets</b>	<b>13</b>	<b>Note on Power Sources</b>	<b>33</b>
<b>Basic Setup</b>	<b>14</b>	<b>General Information</b>	<b>35</b>
Activating AutoTalk	14	<b>Troubleshooting</b>	<b>36</b>
Activating Caller ID on Call Waiting	14	Liquid Damage	39
Setting Name Tag (POP ID)	15	<b>Index</b>	<b>40</b>
Setting Insert 0	16	<b>Memory List</b>	<b>41</b>
Selecting the Ring Tone and Volume	17	<b>Warranty</b>	<b>42</b>
<b>Using Your Phone</b>	<b>18</b>		
Making and Receiving Calls	18		
Transferring a Call	19		
Redialing the Last Dialed Number	19		
Adjusting the Earpiece Volume	20		
Traveling Out-of-Range	20		
Selecting a Different Channel	21		
Find Handsets	21		
Using Call Waiting	21		
RocketDial	22		
Voice Mail Waiting Indicator	22		



## Welcome

Congratulations on your purchase of the Uniden single handset (XS1215) or dual handset (XS1215+1) cordless telephone. This phone is designed and engineered to exacting standards for reliability, long life, and outstanding performance.

**Note: Illustrations in this manual may differ from the actual unit for explanation purposes. The color of your cordless phone may vary.**


## Features

- Dual Handset System (Extra Handset & Charger Included - XS1215+1 only)
- Call Transfer from Handset to Handset (XS1215+1 only)
- Caller ID\*
- Caller ID on Call Waiting\*
- 3-Line Backlit LCD
- 30 Caller ID Memory
- 10 Number Memory Dialing
- Last Number Redial
- Voice Mail Waiting Indicator
- Tone Dialing
- Find Handset Key
- Earpiece/Ringer Volume Controls
- Mute or Turn Ringer Off
- Hearing Aid Compatible
- 20 Channel Auto Scan
- Desk or Wall Mountable


\* Requires subscription to service provided by your network supplier. There is usually a fee for this service. Caller ID on Call Waiting service is currently only available in Australia.




## Controls & Functions XS1215+1 Handset

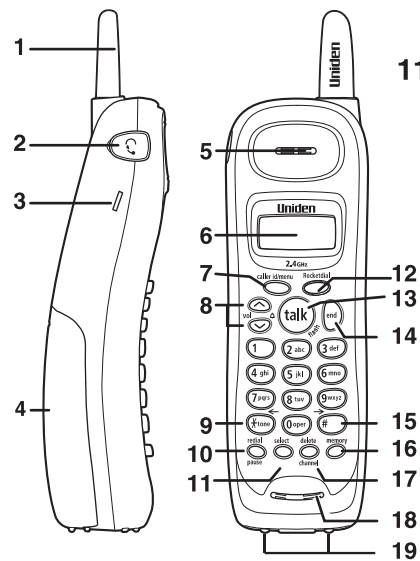


## XS1215 Handset

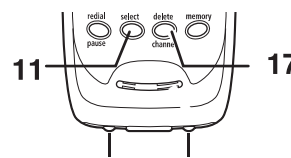


1. Handset Antenna
2. Jack for optional headset
3. Beltclip hole
4. Handset Battery Compartment
5. Handset Earpiece
6. LCD Display
7. **caller id/menu** key (P. 14 & 29)
8. **▲ / ▼/vol/ ▲** (volume up/down earpiece volume, ringer volume and scroll) key (P. 15, 17 & 20)
9. **\* /tone/ ←** key (left cursor) key (P. 24)
10. **redial/pause** key (P. 19 & 25)
11. **select** key (P. 14 & 23) (XS1215)  
**select/channel** key (P. 14, 21 & 23) (XS1215+1)
12. **Rocketdial** key (P. 22)
13. **talk/flash** key (P. 18 & 21)
14. **end** key (P. 18 & 20)
15. **#/→** (right cursor) key (P. 24)
16. **memory** key (P. 23)
17. **delete/channel** key (P. 21 & 24) (XS1215)  
**delete/transfer** key (P. 19 & 24) (XS1215+1)
18. Handset Microphone
19. Handset Charging Contacts

 

### Main Base

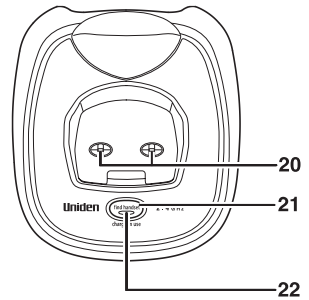


- 20. Main base charging contacts
- 21. find handset key (P. 21 & 32)
- 22. Charge/in use and VMWI (Voice Mail Waiting Indicator) LED



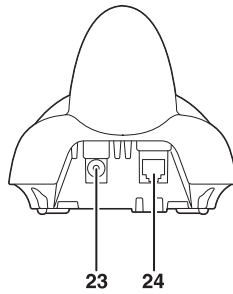



- 23. DC IN 9V jack
- 24. Telephone line jack

### Extra Charging Cradle (XS1215+1 only)

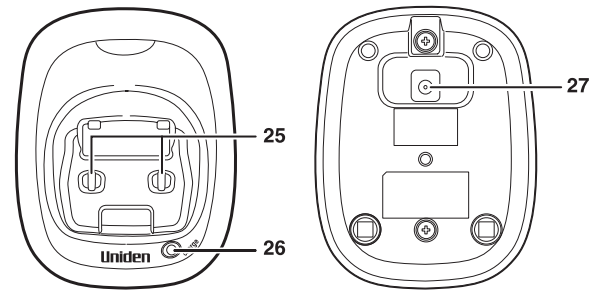

   
 
- 25. Charging contacts
- 26. Charge LED
- 27. DC IN 9V jack





### Terms Used in this Manual

  - Standby Mode - The handset may be sitting in or off the cradle, but is NOT in use. The **talk/flash** key has not been pressed and there is no dial tone.
- Talk Mode - The handset is off the cradle and the **talk/flash** key has been pressed, enabling a dial tone.
- CID - Caller ID
- CIDCW - Caller ID on Call Waiting
- RocketDial - One touch speed dial
- POP ID (Name Tag) - Name is shown when Caller ID matches a phonebook entry where a name is stored.






## Installing the Phone

### Do the following steps:

- Choose the best location
- Install the rechargeable battery pack into the handset
- Connect the base unit and charging cradle (XS1215+1 only), and charge the handset
- Mount the base unit on a wall
- Choose the dialing mode

### A. Choose the best location

When choosing a location for your new phone, here are some important guidelines you should consider:

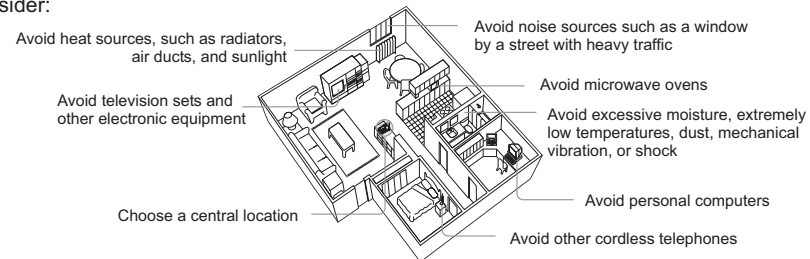

- The location should be close to both a phone jack and a continuous power outlet (one which is not connected to a switch).
- The base and handset should be kept away from sources of electrical noise such as motors and fluorescent lighting.
- The base can be placed on a desk, tabletop, or mounted on a standard wall plate. For better reception, place the base as high as possible.
- The base should be placed in an open area for optimum range and reception.

[6]



- If your home has specially wired alarm equipment connected to the telephone line, be sure that installing the system does not disable your alarm equipment.
- If you have questions about what will disable your alarm equipment, contact your telephone company or a qualified installer.

INSTALLING THE PHONE






Use only the Uniden (BT-905) rechargeable battery pack supplied with your cordless telephone.

## B. Install the Rechargeable Battery Pack into the Handset

The handset(s) are powered by rechargeable battery packs. The battery recharges automatically when the handset is placed in the charging cradle.

- 1) Press down on the handset battery case cover (use the finger indentation for a better grip) and slide the cover downward to remove.
- 2) Plug the battery pack connector (red & black wires) into the jack inside the battery compartment. (The connector notches fit into the grooves of the only one way.) Match the wire colors to the polarity label in the battery compartment, connect the battery and listen for a click to insure connection.
- 3) Make sure you have a good connection by slightly pulling on the battery wires. If the connection is secure, the battery jack will remain in place.
- 4) Place the battery case cover back in the handset by sliding it upwards until it clicks into place.

Repeat process for second handset (XS1215+1 only).

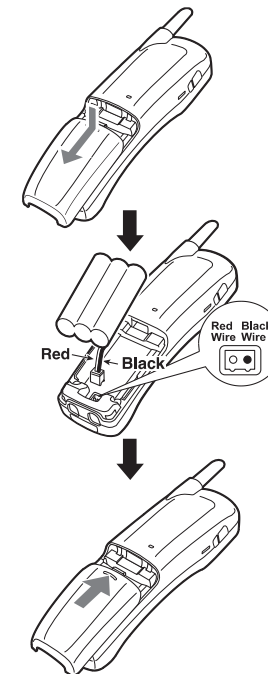






### C. Connect the Main Base and Charging Cradle (XS1215+1 only), and Charge the Handsets

- 1) Connect each AC adapter to the **DCIN 9V** jack and to each standard **240V AC** wall outlet.
- 2) Place one handset in the main base (and the other in the charging cradle - XS1215+1 only) with the keypad facing forward.
- 3) Make sure the **charge/in use** LED (and **charge** LED - XS1215+1 only) illuminate. If the LED does not illuminate, check to see that the AC adapter is plugged in and the handset makes good contact with the cradle's charging contacts.



- Connect each AC adapter to a continuous power supply.
- Place each cradle close to the AC outlet to avoid long extension cords.

 - 4) Charge your handset(s) at least 15-20 hours before plugging the phone line.
- 5) Once the handset battery pack(s) are fully charged, connect the telephone line cord to the **TEL LINE** jack and a telephone outlet. If your telephone outlet isn't modular, contact your telephone company for assistance.

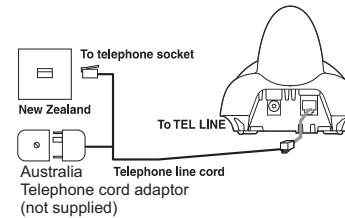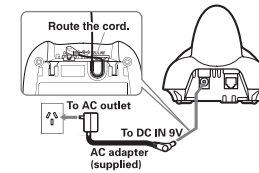

[8]




- Use only the supplied AAD-210 AC adapter. Do not use any other AC adapter.
- Do not place the power cord where it creates a trip hazard or where it could become chafed and create a fire or electrical hazard.

INSTALLING THE PHONE

#### D. Mount the Main Base on a Wall Standard wall plate mounting

This phone can be mounted on any standard wall plate.

- 1) Locate the base unit on the wall mount adapter as shown and slide the wall mount adapter into the notches on the base bottom with the tab pressed.
- 2) Plug the AC adapter to the **DC IN 9V** jack.
- 3) Route the AC adapter cord through the molded wiring channel as shown.
- 4) Plug the AC adapter into a standard **240V** AC wall outlet.
- 5) Plug the telephone line cord into the **TEL LINE** jack. Route the cord through the molded wiring channel as shown.
- 6) Plug the telephone line cord into the telephone outlet.
- 7) Align the mounting slots on the main base with the mounting posts on the wall. Then push in and down until the phone is firmly seated.

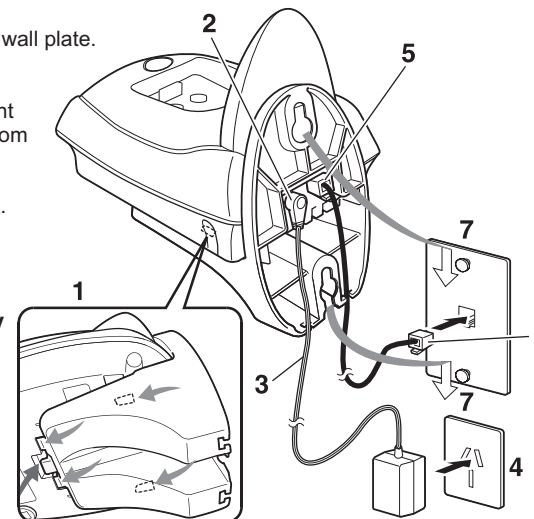

[9]



## Direct wall mounting

If you don't have a standard wall plate, you can mount your phone directly to the wall. Before doing this, consider the following:

- Avoid electrical cables, pipes, or other items behind the mounting location that could cause a hazard when inserting screws into the wall.
- Try to mount your phone within 1.5m of a working phone jack to avoid excessive cord lengths.
- Make sure the wall material is capable of supporting the weight of the main base and handset.
- Use #10 screws (minimum length of 35mm) with anchoring devices suitable for the wall material where the main base will be placed.

- 1) Insert two mounting screws into the wall, (with their appropriate anchoring device), 100mm apart. Allow about 3mm between the wall and screw heads for mounting the phone.
- 2) Refer to steps 1 through 7 on page 9 to mount the telephone.


## Installing the Beltclip

### To attach the beltclip

Insert the beltclip into the holes on each side of the handset. Press down until it clicks.



### To remove the beltclip

Pull both sides of the beltclip to release the tabs from the holes.

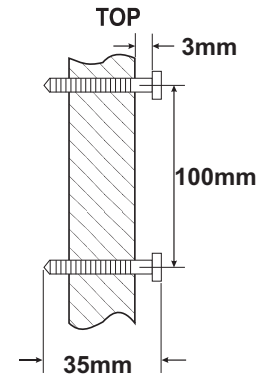




INSTALLING THE PHONE



  

### Headset Installation

  Your phone may be used with an optional headset . To use this feature, insert the headset plug into the headset jack. Your phone is ready for hands-free conversations. (Headsets may be purchased by visiting our website at [www.uniden.com.au](http://www.uniden.com.au) or [www.uniden.co.nz](http://www.uniden.co.nz).)

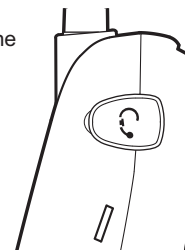

## Register Handsets to the Main Base before Using! (XS1215+1 only)

Whichever handset you choose to charge in the main base will automatically register to the main base.

The second handset (charging in the extra charging cradle) MUST also be registered to the main base before use. Follow the steps below to register the second handset.

- 1) Be sure both handsets are fully charged.
- 2) Remove the handset from the charging cradle, and place it in the main base. The **charge/in use** LED light on the main base will begin to flash, indicating that the registration is taking place.
- 3) Wait for at least 5 seconds, then remove the handset from the main base.
- 4) Press the **talk/flash** key on one handset. If TALK appears on the display, the handset is registered, press the **end** key. Then, try with the second handset. If each handset displays TALK, a new security code is set. Otherwise, return to step 1 and try again.
- 5) Once both handsets are registered, it doesn't matter which handset is placed in the main base or the charger.



- When you charge the handsets, Caller ID summary screen and the name of the handset, Handset No.1 appears. If Handset No.2 appears, you are charging the handset No.2.

```
Handset No.1  
New :01  
Total:02
```

- The charging cradle can be used to charge either handset.

REGISTER HANDSETS



Make sure to return the handsets to the cradles after each phone call.

### When to Re-register Handsets (XS1215+1 only)

- 1) You'll need to re-register the second handset (follow steps on page 12) each time the digital security code is changed. Refer to page 32 for details regarding the Digital Security Code.
- 2) When there is a power failure for more than one hour: If power failure occurs (e.g. due to electrical storm or if the unit is unplugged during a move), both handsets will need to be re-registered. To re-register, follow the same registration process on page 12.
- 3) If the second handset's battery becomes very low, the handset must be recharged for 15-20 hours and re-registered to main base. Make sure to return the handsets to the cradles after each phone call.





## Basic Setup

There are four basic options that you will need to set up: AutoTalk, CIDCW (Caller ID on Call Waiting), Name Tag and Insert 0.

CIDCW option can only be set by using Handset 1. If you try to set by using Handset 2, you will not see these options listed on the LCD screen. (Handset 1 shows Handset No. 1 in the display while the phone is charging XS1215+1 only).

AutoTalk, Name Tag and Insert 0 options can be set by using either Handset 1 or Handset 2 (XS1215+1 only).

```
#Auto Talk :Off
CIDCW      :On
Name Tag   :On
```

### Activating AutoTalk

AutoTalk allows you to answer the phone simply by removing the handset from the cradle. You do not have to press any keys.

- 1) When the phone is in standby mode, press and hold the **caller id/menu** key. The following screen appears.
- 2) Press the **select** key (XS1215) or the **select/channel** key (XS1215+1) to turn AutoTalk on.
- 3) Press the **end** key or return the handset to charging cradle to complete the setting. The handset returns to standby mode.

```
#Auto Talk :Off
CIDCW      :On
Name Tag   :On
```

### Activating Caller ID on Call Waiting

 
 
Caller ID allows you to see the name and number of the calling party before you answer the phone. Caller ID on Call Waiting (CIDCW) lets you see the name and number of a call that comes in when you are on the line.



Caller ID on Call Waiting is currently unavailable in New Zealand.

BASIC SETUP





You must subscribe to Caller ID service through your local telephone provider to use this feature.

- 1) When the phone is in standby mode, press and hold the **caller id/menu** key. The following screen appears.
- 2) Press the **▼ /vol/▲** key to select CIDCW.
- 3) Press the **select** key (XS1215) or the **select/channel** key (XS1215+1) to toggle and turn on Caller ID on Call Waiting.
- 4) Press the **end** key or return the handset to charging cradle to complete the setting. The handset returns to standby mode.

```
# Auto Talk :Off
CIDCW      :On
Name Tas   :On
```

```
Auto Talk :Off
#CIDCW    :On
Name Tas  :On
```



### Setting Name Tag (POP ID)

  The Name Tag feature works with the Caller Display number from Caller ID. You must subscribe to Caller ID service through your local telephone provider to use this feature. There is usually a fee for this service. When the phone rings the caller display number, when received will be compared to numbers stored in the dial memory. If there is a match any name stored with the dial memory number will be displayed (see page 23).

- 1) When the phone is in standby mode, press and hold the **caller id/menu** key. the following screen appears.
- 2) Press the **▼ /vol/▲** key twice to select Name Tas.
- 3) Press the **select** key (XS1215) or the **select/channel** key (XS1215+1) to toggle and turn Name Tag on or off.
- 4) Press the **end** key or return the handset to charging cradle to complete the setting. The handset returns to standby mode.

```
# Auto Talk :Off
CIDCW      :On
Name Tas   :On
```

```
Auto Talk :Off
CIDCW    :On
# Name Tas :On
```







## Setting Insert 0

This feature adds '0' or '00' to the number, when you receive Caller ID messages. The default setting for New Zealand is On. The default setting for Australia is Off.

- 1) When the phone is in standby mode, press and hold the **caller id/menu key**. The following screen appears.
- 2) Press the **V/vol/▲** key three times to select **Insert 0**.
- 3) Press the **select** key (XS1215) or the **select/channel** key (XS1215+1) to toggle and turn Insert 0 **on** or **off**.
- 4) Press the **end** key or return the handset to charging cradle to complete the setting. The handset returns to standby mode.

 
 
```

▶ Auto Talk   :Off
  CIDCW      :On
  Name Tas   :On
  
```

```

  CIDCW      :On
  Name Tas   :On
▶ Insert 0   :On
  
```







### Selecting the Ring Tone and Volume

Your phone has five different ringer tone/volume combinations you can choose from.

  - 1) With the phone in standby mode, press the **▼/vol/▲** or **▲/vol/▲** key.
- 2) The phone will sound the different ring tones at different volumes. To turn the ringer off, select **Ringer Off**.
- 3) When the phone sounds the ring tone and volume you wish to use, press the **end** key.





## Using Your Phone Making and Receiving Calls

### Making a call

- 1) Remove the handset from the cradle.
- 2) Press the **talk /flash** key.
- 3) Listen for the dial tone.
- 4) Dial the number.

OR

- 1) Remove the handset from the cradle.
- 2) Dial the number.
- 3) Press the **talk /flash** key.

### Receiving a call

- 1) Remove the handset from the cradle. (If AutoTalk is on, the phone will automatically answer the call when you pick it up.)
- 2) Press the **talk /flash** key.

OR

- 1) If the handset is off the cradle, press the **talk/flash**, **\* /tone/←**, **#/→** key or any number key. (AutoTalk is on.)

### Hanging up

Press the **end** key or return the handset to the cradle.

[18]



To turn on the AutoTalk feature, see "Activating Auto Talk" on page 14.



USING YOUR PHONE



If you transfer a call and it is not picked up after 5 minutes, the call will be disconnected.

### Transferring a Call (XS1215+1 only)

Your cordless phone allows you to transfer outside calls from handset to handset; only one handset at a time can talk with an outside caller. The second handset cannot go off hook to listen to conversations or make an outgoing call while the other handset is in use.

#### To transfer a call

- 1) During a call, press the **delete/transfer** key. The call will automatically be placed on hold and the transfer tone sounds.
- 2) When the other handset receives the call, the transfer tone stops. To cancel the transfer and return to the caller, press the **delete/transfer** or **talk/flash** key on the handset.

Hold  
Transfer Call

#### To receive a transfer call

Pick up the handset from the cradle (when AutoTalk is set to on), or pick up the handset and press the **talk/flash** key to answer the transferred call. Additionally, you can answer the transferred call by pressing **\* /tone/←, #/→** or any number key (when AutoTalk is set to on).

Transfer Call

### Redialing the Last Dialed Number

- 1) Remove the handset from the cradle.
- 2) Press the **talk/flash** key.
- 3) Listen for the dial tone.
- 4) Press the **redial/pause** key.

OR

- 1) Remove the handset from the cradle.
- 2) Press the **redial/pause** key.
- 3) Press the **talk/flash** key.

[19]



### Adjusting the Earpiece Volume


To change the earpiece volume, press the **∇/vol/▲** or **▲/vol/▲** key during a call.

### Temporarily Mute Ringer

If the handset is off the cradle while an incoming call is ringing, simply press the **end** key to temporarily mute the incoming ring . The ringer will sound with the next incoming call.

### Traveling Out-of-Range

During a call, as you begin to move your handset too far from your main base, noise increases. If you pass the range limits of the main base, your call will terminate within one minute.

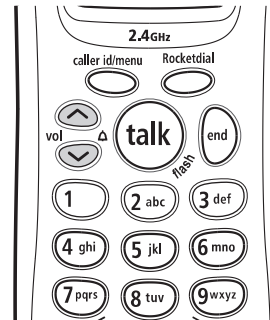

You can only mute the handset ringer if the handset is off the cradle when the phone starts ringing.

USING YOUR PHONE





The **UltraClear Plus** true compander circuitry virtually eliminates background noise. This innovative technology, together with 20 different channels, provides you with the best possible reception during all your conversations.

### Selecting a Different Channel

If you encounter interference while using your phone, you can manually change the phone's channel for clear operation. While using your phone, press the **delete/channel** key (XS1215) or the **select/channel** key (XS1215+1). **Scanning** appears on the display, indicating the phone is changing to another channel.

### Find Handsets

To locate the handsets, press the **find handset** key on the main base. The handsets beep for 60 seconds. To cancel paging, press any key on either handset or the **find handset** key on the main base. Paging is also canceled when the phone receives an incoming call.

### Using Call Waiting



If you have Call Waiting service, you can receive calls while on the line. If a call comes in while you are on the phone, you will hear a call waiting tone. If you have CIDCW activated, you will see the name and number of the incoming caller.

Australia: Press to **talk/flash** key and then 2 key to switch between callers.

New Zealand: Press to **talk/flash** key to switch between callers.



You must subscribe to Call Waiting through your local telephone company.

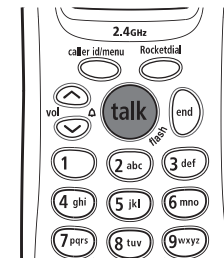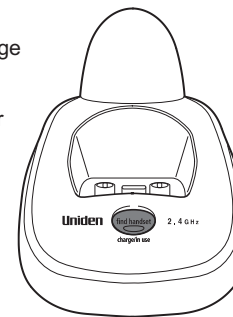



### Voice Mail Waiting Indicator

If you subscribe to voice mail service, you can use your cordless telephone to access your voice mailbox. The **charge/in use** LED on the main base of your phone flashes whenever you have messages waiting in your voice mailbox.

Just dial the access number supplied by your voice mail provider to enter your mailbox. You can program your voice mail access number to a speed dial number. If the voice mail waiting indicator remains on after you have retrieved your messages, press and hold the **find handset** key for 5 seconds. This will reset the indicator.

### RocketDial

RocketDial is a one-touch speed dial key. Store your most important or most frequently called number as your RocketDial number. Then, simply press the **Rocketdial** key, and your phone will automatically dial the number.

#### Storing the RocketDial

- 1) When the phone is in standby mode, press and hold the **Rocketdial** key. The following display appears. If the Rocketdial number is already programmed, the Edit screen appears. You can select **Edit** to edit this entry, select **Delete** to erase this entry or select **Go Back** to return to standby mode.
- 2) Store the number by following step 6 under "Storing Names and Numbers in Speed Dial Memory" on page 25.
- 3) Press the **select** key (XS1215) or the **select/channel** key (XS1215+1). You hear a confirmation tone, and **Number Stored** appears. Memory storage is complete.



[22]



You must subscribe to voice mail service from your telephone company in order to use this feature.

The voice mail company will provide you with the access number.





- When editing the speed dial memory, you must press a key within 30 seconds or the phone will return to standby mode. If you return the handset to the cradle, the phone will return to standby mode also.
- For New Zealand: Telecom access numbers are pre-programmed into speed dial locations as follows.
  - Divert On: SPD1
  - Divert Off: SPD2
  - Block CID: SPD3
  - Messages: SPD4
  - Directory: SPD6

## Using the Speed Dial Memory

The speed dial memory allows you to store up to 10 names and numbers in the handset(s). You can dial these numbers with just a few key presses.

The speed dial memory is not limited to phone numbers. You can store any number (up to 20 digits) that you need to enter once your call connects. This is referred to as Chain Dialing. For example, you can save your bank account number to speed dial memory. When you call your bank's telephone teller service and are prompted to enter your account number, simply press the **memory** key and the speed dial number where you stored your account number. Then press the **select** key (XS1215) or the **select/channel** key (XS1215+1).

## Storing Names and Numbers in Speed Dial Memory

- 1) With the phone in standby mode, press the **memory** key.
- 2) Enter **0-9** to select the speed dial number where you would like to store this entry. You can also scroll through the list with the **▼/vol/▲** and **▲/vol/▲** keys. Press the **select** key (XS1215) or the **select/channel** key (XS1215+1) twice.
- 3) **Store Name** appears and a cursor flashes indicating that the phone is ready for the name to be entered.

If the selected speed dial number is already assigned, the **Edit** screen appears. You can select **Edit** to edit this entry, select **Delete** to erase this entry, or select **Go Back** to choose another speed dial number.

```
Select Memory
01
02 JOHN DOE
```

```
Store Name
█
```

```
#Edit Memory01
Delete Memory01
Go Back
```





- 4) Enter a name according to the instructions below, then press the **select** key (XS1215) or the **select/channel** key (XS1215+1). If no name is required, go to step 5.
  - The name can be up to 13 characters.
  - Use the **#/→** and **\* /tone/←** keys to move the cursor to the desired location.
  - Use the **delete/channel** key (XS1215) or the **delete/transfer** key (XS1215+1) to delete characters as needed.
  - Press and hold the **delete/channel** key (XS1215) or the **delete/transfer** key (XS1215+1) to delete all the characters.

Refer to the letters on the number keys to select the desired characters. With each press of a numeric key, the displayed character appears in the following order: upper case letters first, lower case letters next and finally the number corresponding to the key. If you make a mistake while entering a name Use the **\* /tone/←** or **#/→** key to move the cursor to the incorrect character. Press the **delete/channel** key (XS1215) or the **delete/transfer** key (XS1215+1) to erase the wrong character. Then enter the correct character. To delete all characters, press and hold the **delete/channel** key (XS1215) or the **delete/transfer** key (XS1215+1).

For example, to enter **Movies**.

 
 
- 1) Press **6**. Then press the **#/→** key to move the cursor to the right.
- 2) Press **6** six times.
- 3) Press **8** six times.
- 4) Press **4** six times.
- 5) Press **3** five times.
- 6) Press **7** eight times.

keys	Number of times key is pressed								
	1	2	3	4	5	6	7	8	9
1	i								
2abc	A	B	C	a	b	c	2		
3def	D	E	F	d	e	f	3		
4ghi	G	H	I	g	h	i	4		
5jkl	J	K	L	j	k	l	5		
6mno	M	N	O	m	n	o	6		
7pqrs	P	Q	R	S	p	q	r	s	7
8tuv	T	U	V	t	u	v	8		
9wxyz	W	X	Y	Z	w	x	y	z	9
0opar	*	#	-	&	(	)	(blank)	0	



If the next character uses the same number key, you must press the **#/→** key to move the cursor over. Otherwise the next time you press the number key, it changes the character that was previously set.







- 5) Store Number is displayed. The cursor flashes indicating that the phone is ready for the number to be entered.
  - 6) Use the keypad to enter the phone number; each number can be up to 20 digits. If you need the phone to pause during the dialing sequence, press the **redial/pause** key to insert a two-second delay between the numbers. You can enter multiple pauses to increase the delay. Each pause counts as a digit. The display shows a P for every pause.
- note** When storing numbers into memory, if the handset is idle (i.e., no key is pressed) for more than 30 seconds, it will beep rapidly, and the phone will return to standby mode.
- 7) Press the **memory** key. You will hear a confirmation tone, and the following screen appears. Memory storage is complete. After about 2 seconds, the following screen displays all the speed dial memory entries.
  - 8) Press the **end** key to exit memory set up mode. The phone returns to standby.

```
Store Number  
█
```

```
Store Number  
8007303456█
```

```
Memory01 Stored
```
  
```
01 Movies  
02 JOHN DOE  
03 MOM AND DAD
```



## Storing Caller ID Messages in Speed Memory Locations

Messages (Caller ID names/numbers) shown in the Caller ID list can be stored in memory dialing. For instructions on viewing the Caller ID Message list, see page 29.

- 1) Press the **caller id/menu** key. Select the phone number to be stored from the Caller ID list by pressing the **^/vol/▲** or **▼/vol/△** key.

```
17/05 12:30PM  
Jane Smith  
2145551234
```

- 2) Press the **memory** key.

```
Select Memory  
01  
02 JOHN DOE
```

- 3) Enter a number (0-9) or press the **^/vol/▲** or **▼/vol/△** key to select the memory location to be stored.

```
17/05 12:30PM  
Jane Smith  
2145551234
```

- 4) Press the **select** key (XS1215) or the **select/channel** key (XS1215+1). You hear a confirmation tone, and the number is stored in memory. The display returns to the Caller ID list.

```
Replace Memory?  
Yes  
▶ No
```

 
 
**note** If a message has already been stored in the selected memory number location, a confirmation screen is displayed.

Press the **^/vol/▲** key to select **Yes**. Press the **select** key (XS1215) or the **select/channel** key (XS1215+1) to overwrite. The display returns to the Caller ID list.

**note**

You cannot store a Caller ID message if no phone number appears in the message.

USING THE SPEED DIAL MEMORY



### Making Calls from Speed Dial Memory

- 1) Press the **memory** key. The handset displays your programmed speed dial number.
- 2) Enter the number (0-9), or press the **^/vol/▲** or **∇/vol/▼** key to select the speed dial number you would like to dial.
- 3) Press the **talk/flash** key. Talk and the number selected appear on the display. Then the displayed number is dialed.

```
Select Memory
01 Movies
02 JOHN DOE
```

```
Talk
8007303456
```

#### To cancel speed dialing

 
 
To cancel speed dialing, press the **end** key, the handset returns to standby mode. The handset will also return to standby mode if the handset is idle (i.e., no key is pressed) for 30 seconds.

### Easy Dial (New Zealand only)

Numbers stored in the speed dial memory can be accessed directly from standby mode as follows.

- 1) Press and hold a key from memory location for 1.5 seconds. The details of the memory location will appear on the display.
- 2) Press **talk/flash** key. The displayed number is dialed.

```
01: DIVERT ON
161
```



## Caller ID and CIDCW (Caller ID on Call Waiting)

You must subscribe to Caller ID service through your local telephone provider to use this feature. CIDCW (Caller ID on Call Waiting) is currently available in Australia only. When the telephone rings, the Caller ID feature allows you to view the caller's phone number, date and time of call, and Name Tag (POP ID) feature allows you to view the caller's name (see pages 15 and 23). The incoming call information is stored in the Caller ID record. If the Caller ID service includes the caller's name, the name will appear in the display (up to 15 characters).

**Caller ID information may take up to 2 to 3 rings before appearing on the display.**

The date and time received	11/05 12:30PM
Caller's name	Jane Smith
Caller's phone number	2145551234

You may receive any one of the following messages:

When a private name is received: Private

When a private number is received: Private

When a unknown name is received: Unavailable

When a unknown number is received: Unavailable

When invalid data is received: Incomplete Data

When an overseas call(0000) is received (New Zealand only): overseas call

When a call is coming from a payphone (Australia only): Payphone

**note** Data errors appear as "■."



- If you answer a call before the Caller ID message is received, the Caller ID message will not appear.
- When the call is received via a Telephone company that does not offer Caller ID service, the caller's phone number and name does not appear. (This includes some international Calls.)
- When the call is received via a private branch exchange (PBX), the caller's phone number and name may not appear.

CALLER ID & CIDCW



- In Caller ID operation, if no key is pressed for more than 30 seconds, an error tone sounds and the telephone returns to standby mode. Each message can be up to 15 characters for the name and 15 digits for the phone number .
- The number of calls from the same Caller ID appears next to the received time. Once you view the new message, the number will be cleared and disappear.
- During a call, don't press the **end** key, or the call will be disconnected.

### Viewing the Caller ID Message List

The Caller ID list stores information for up to 30 incoming calls - even unanswered calls. You can also view the Caller ID list during a call.

- 1) Press the **caller id/menu** key. The summary screen displays the number of new messages and total messages.
- 2) Use the **▼/vol/▲** key to scroll through the messages from the latest to the earliest, or use the **▲/vol/▼** key to scroll through the messages from the earliest to the latest.
- 3) Press the **caller id/menu** key to return to talk mode, or press the **end** key to return to standby mode.

```
Caller ID
New :01
Total:02
```

```
17/05 12:30PM
Jane Smith
2145551234
```

## Deleting Information from the Caller ID List

If the phone receives more Caller ID messages than it can store, the oldest one in the list is automatically deleted. Caller ID data can also be deleted manually.

### Deleting a Caller ID message

- 1) Press the **caller id/menu** key in standby mode. Find the message to be deleted from the Caller ID list by pressing the **▼/vol/▲** or **▲/vol/▲** key.
- 2) Press the **delete/channel** key (XS1215) or the **delete/transfer** key (XS1215+1).
- 3) Press the **▼/vol/▲** or **▲/vol/▲** key to select **Yes**, and then press the **select** key (XS1215) or the **select/channel** key (XS1215+1).

```
17/05 12:30PM
Jane Smith
214 555 1234
```

```
Delete Message?
Yes
No
```

### Deleting all Caller ID names/numbers

 
 
- 1) With the phone in standby mode, press the **call id/menu** key.
- 2) Press the **delete/channel** key (XS1215) or the **delete/transfer** key (XS1215+1).
- 3) Press the **▼/vol/▲** or **▲/vol/▲** key to select **Yes**, and then press the **select** key (XS1215) or the **select/channel** key (XS1215+1). You hear a confirmation tone and all stored Caller ID messages are deleted.

```
Caller ID
New :01
Total:02
```

```
Caller ID
Total:00
```



- While using the **Delete All?** or **Delete Message?** screen, if no key is pressed for more than 30 seconds, an error tone sounds, and the handset returns to standby mode.
- If you get an incoming call or page, the deleting operation is cancelled, and you can answer the call or page.



note

You cannot make a call from the Caller ID list if your cordless phone is connected to a private branch exchange (PBX).

### Making a Call from the Caller ID List

 
 
You can place a call from the Caller ID list.

- 1) Press the **caller id/menu** key in standby mode. Select the phone number that you want to dial by pressing the **▼/vol/▲** or **▲/vol/▲** key.
- 2) Press the **talk/flash** key.  
The displayed phone number dials automatically.

```
17/05 12:30PM  
Jane Smith  
2145551234
```

### Caller ID on Call Waiting (CIDCW)

With CIDCW, you will hear a Call Waiting tone while you are on a call, and the Caller ID data is displayed. To accept the waiting call, press the **talk/flash** key (see page 21).





## Changing the Digital Security Code

To protect you against misbilled calls which might result from your phone being activated by other equipment, the cordless phone provides **AutoSecure** (which electrically locks your phone when each handset is in the cradle) and **Random Code** digital security which automatically selects one of over 262,000 digital security codes for each handset and the main base.

If the handset battery pack is completely discharged or the battery pack is removed, the digital security code will be lost. If this happens, a new security code is set automatically the next time the battery pack is charged. In the rare situation that you suspect another cordless telephone is using the same security code, you can change the code.

### For XS1215;

 
 
- 1) Remove the handset from the cradle. Press and hold the **find handset** key on the main base.
- 2) While holding the **find handset** key, place the handset in the main base, and leave the handset in the main base for more than three seconds. A new random security code is set.

### For XS1215+1;

- 1) Remove the handset from the cradle. Press and hold the **find handset** key on the main base.
- 2) While holding the **find handset** key, place the handset in the main base, and leave the handset in the main base for more than three seconds.
- 3) Remove the handset from the main base. Then place the second handset in the main base and wait for more than three seconds. No need to hold the **find handset** key this time.
- 4) Press the **talk/flash** key on one handset. Once you make sure **Talk** appears on the display, press the **end** key. Then, try with the second handset. If each handset displays **Talk**, a new security codes set. Otherwise, return to step 1 and try again.

[32]

CHANGING THE DIGITAL  
SECURITY CODE



## Note on Power Sources

### Low battery alert

When the battery pack is very low and needs to be charged, the phone is programmed to eliminate functions in order to save power. If the phone is not in use, `Low Battery` appears on the LCD and none of the keys will operate. If the phone is in use, `Low Battery` flashes and the handset beeps. Complete your conversation as quickly as possible and return the handset to the cradle for charging.

Low Battery



Information stored in the phone's memory will be retained for 30 minutes after the battery pack is removed. This includes all setup information, last number dialed, speed dial memory, RocketDial programming, and the CID list.

Even when the battery pack is not being used, it will gradually discharge over a long period of time. For optimum performance, be sure to return the handset to the cradle after a telephone call.

### Battery replacement and handling

When the operating time becomes short even after a battery is recharged, please replace the battery. With normal usage, your battery should last about one year. A replacement battery may be purchased by visiting our website [www.uniden.com.au](http://www.uniden.com.au) or [www.uniden.co.nz](http://www.uniden.co.nz)

 
 
**Warning:** To avoid the risk of personal injury or property damage from fire or electrical shock, only use the Uniden battery model and Uniden adapter model specifically designated for this product.

### Power Failure

During the period that the power is off, you will not be able to make or receive calls with the telephone.

### Caution

- Use only the specified Uniden battery pack (BT- 905).
- Do not remove the batteries from the handset to charge them.
- Never throw the batteries into a fire, disassemble them, or heat them.
- Do not remove or damage the battery casing.






### Cleaning the battery charging contacts


To maintain a good charge, clean the charging contacts on the handset once a month. Dampen a cloth with plain water. Gently rub the damp cloth over the charging contacts until all visible dirt is removed. Dry the contacts thoroughly before returning the handset to the base.

**Caution:** Do not use paint thinner, benzene, alcohol, or other chemical products. Doing so may discolour the surface of the telephone and damage the finish.

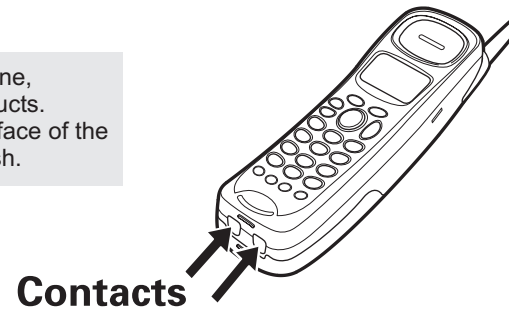

[34]



 

## General Information

**Operating temperature:**  
0 °C to +50 °C (+ 32 °F to +122 °F)

### AC Adapter Information

AC Adapter part number: AAD-210  
Input Voltage: 230-240VAC 50Hz  
Output Voltage: 9V DC 210mA

### Battery Information

Battery part number: BT-905  
Capacity: 600mAh, 3.6V

 
 


- To avoid damage to the phone use only Uniden AAD-210 and BT-905 with your phone.
- If the handset is left off of the base, the actual Talk mode duration will be reduced respective to the amount of time the handset is off the base.

Recharge your phone on a regular basis by returning the handset to the base after each phone call. When the operating time becomes short even after the battery is recharged, please replace the battery. With normal usage, the battery should last about one year.

Please contact your retailer for replacement adapters or batteries or visit our website at [www.uniden.com.au](http://www.uniden.com.au) or [www.uniden.co.nz](http://www.uniden.co.nz).

Specifications, features, and availability of optional accessories are all subject to change without prior notice.





## Troubleshooting

If your phone is not performing to your expectations, please try these simple steps first. If these steps do not solve your problem, visit our website for further information ([www.uniden.com.au](http://www.uniden.com.au) or [www.uniden.co.nz](http://www.uniden.co.nz)).

Symptom	Suggestion
Symptom Suggestion The <b>charge/ in use</b> LED or <b>charge</b> LED won't illuminate when the handset is placed in the cradle.	<ul style="list-style-type: none"> <li>• Make sure the AC adapter is plugged into the cradle and wall outlet.</li> <li>• Make sure the handset is properly seated in the cradle.</li> <li>• Make sure the charging contacts on the handsets are clean.</li> </ul>
The audio sounds weak and/ or scratchy.	<ul style="list-style-type: none"> <li>• Move the handset and/ or main base away from metal objects or appliances and try again.</li> <li>• Press the <b>select</b> key (XS1215) or the <b>select/channel</b> key (XS1215+1) in the talk mode to help eliminate background noise.</li> <li>• Make sure that the handset is not too far from the main base.</li> </ul>
Can't make or receive calls.	<ul style="list-style-type: none"> <li>• Re- register both handsets (see page 12) (XS1215+1 only).</li> <li>• Check both ends of the telephone line cord.</li> <li>• Make sure the AC adapter is plugged into the main base and wall outlet.</li> <li>• Disconnect the AC adapter for a few minutes. Then reconnect it.</li> <li>• Change the digital security code (see page 32).</li> <li>• Make sure that the handset is not too far from the main base.</li> <li>• Check the dialing mode used by your telephone company.</li> </ul>



Symptom	Suggestion
The handset doesn't ring or receive a page.	<ul style="list-style-type: none"> <li>• Re- register both handsets (see page 12) (XS1215+1 only).</li> <li>• The battery pack may be weak. Charge the battery for 15- 20 hours.</li> <li>• The handset may be too far from the main base.</li> <li>• Place the main base away from appliances or metal objects.</li> <li>• Change the digital security code (see page 32).</li> <li>• Check the battery pack to ensure there is a secure connection.</li> <li>• Make sure ringer volume isn't set to "off."</li> </ul>
Severe noise interference.	<ul style="list-style-type: none"> <li>• Keep both handsets away from microwave ovens, computers, remote control toys, wireless microphones, alarm systems, intercoms, room monitors, fluorescent lights, and electrical appliances.</li> <li>• Move the main base to another location or turn off the source of interference.</li> </ul>
The Caller ID does not display.	<ul style="list-style-type: none"> <li>• The call was answered before the second ring.</li> <li>• The call was placed through a switchboard.</li> <li>• Charge the handset.</li> <li>• Your Caller ID service may not be active; contact your local telephone service provider.</li> </ul>
Handset No. 1 or No. 2 is not working (XS1215+1 only).	<ul style="list-style-type: none"> <li>• Make sure the battery pack is connected to the handset and fully charged.</li> <li>• Re- register the non- functional handset.</li> </ul>
Unavailable message is displayed on the LCD screen of the handset (XS1215+1 only).	<ul style="list-style-type: none"> <li>• Make sure the other handset is not already in use. Both handsets cannot be in talk mode at the same time.</li> <li>• Place the handset in the main base for at least 5 seconds to re- register to the main base.</li> <li>• Make sure the handset is not too far from the main base when trying to use.</li> </ul>



Symptom	Suggestion
The handset doesn't communicate with the main base or the other handset (XS1215+1 only).	<ul style="list-style-type: none"><li>• Re- register both handsets (see page 12).</li></ul>
No 3- way conversation	<ul style="list-style-type: none"><li>• Only one handset at a time can talk with an outside caller. To allow the other handset to talk to the caller, transfer the call.</li></ul>
Voice Message Indication does not work.	<ul style="list-style-type: none"><li>• Contact your local telephone company to make sure that your telephone receives FSK message signaling.</li><li>• Reset the indicator by pressing and holding the <b>find handset</b> key for 5 seconds.</li></ul>

## TROUBLESHOOTING



## Liquid Damage

Moisture and liquid can damage your cordless phone. In case of accidental submersion, please read the following steps.

Case	Action
If the handset or base is exposed to moisture or liquid, but it only affects the exterior plastic housing.	Wipe off the liquid, and use as normal.
If moisture or liquid has entered the plastic- housing (i. e. liquid can be heard in the phone or liquid has entered the handset battery compartment or vent openings on the base).	<p><b>Handset:</b></p> <ol style="list-style-type: none"><li>1) Remove the battery cover and leave it off for ventilation.</li><li>2) Remove the battery pack by disconnecting.</li><li>3) Leave the battery cover off and the battery pack disconnected for at least 3 days.</li><li>4) Once the handset is completely dry, reconnect the battery pack and the battery cover.</li><li>5) Recharge the handset's battery pack for 20 hours before using again.</li></ol> <p><b>Base:</b></p> <ol style="list-style-type: none"><li>1) Disconnect the AC adapter from the base unit, cutting off electrical power.</li><li>2) Disconnect the telephone cord from the base unit.</li><li>3) Let dry for at least 3 days.</li></ol> <p><b>IMPORTANT:</b> You must unplug the telephone line while recharging the battery pack to avoid charge interruption.</p> <p><b>CAUTION:</b> DO NOT use a microwave oven to speed up the drying process. This will cause permanent damage to the handset, base and the microwave oven. After following these steps, if your cordless telephone does not work, please visit our website for further information (<a href="http://www.uniden.com.au">www.uniden.com.au</a> or <a href="http://www.uniden.co.nz">www.uniden.co.nz</a>).</p>





## Index

### A

AC adapter information 35

### B

Basic setup 14

Battery pack

Information 35

Installing 7

Preparing and charging 7

Replacement

and handling 33

Beltclip installation 10

### C

Call transfer feature 19

Call waiting 21

Caller ID service 28

Deleting 30

Making a call 31

Viewing 29

Channel 21

Charging the battery pack 8

Cleaning contacts 34

Connect the cradle 8

Controls and functions 3,4

### D

Digital security code 32

### E, F, G, H, I, J, K, L

Earpiece volume 20

Find handset 21

General information 35

Headset installation 11

Installing the phone 6

Liquid damage 39

### M, N, O, P, Q

Making a call 18

### R

Receiving a call 18

Redial 19

Register 12

Ringer tone 17

### S

Second Handset 12

Speed Dial Memory

Making Calls 27

Storing names and numbers 23

### T, U

Technical information 35

Transferring a call 19

Traveling out-of-range 20

Troubleshooting 36

### V, W, X, Y, Z

Voice mail waiting indicator 22

Wall mounting 9

Warranty 42



## Memory List

MEMORY LOCATION MEMO			MEMORY LOCATION MEMO		
Memory Location	Name	Phone Number	Memory Location	Name	Phone Number
1			6		
2			7		
3			8		
4			9		
5			10		

MEMORY LOCATION MEMO			MEMORY LOCATION MEMO		
Memory Location	Name	Phone Number	Memory Location	Name	Phone Number
1			6		
2			7		
3			8		
4			9		
5			10		

[41]



## One Year Limited Warranty

**Important:** Evidence of original purchase is required for warranty service.

**Warrantor:** Uniden Australia Pty Limited A.B.N. 58 001 865 498 Uniden New Zealand Limited

**Warranty is only valid in the original country of purchase.**

**ELEMENT OF WARRANTY:** Uniden warrants to the original retail owner for the duration of this warranty, its XS1215/XS1215+1 (herein after referred to as the Product), to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below.

**WARRANTY DURATION:** This warranty to the original retail owner only, shall terminate and be of no further effect 12 months after the date of original retail sale. This warranty will be deemed invalid if the product is;

- (A) Damaged or not maintained as reasonable and necessary,
- (B) Modified, altered or used as part of any conversion kits, subassemblies, or any configurations not sold by Uniden,
- (C) Improperly installed,
- (D) Repaired by someone other than an authorized Uniden Repair Agent for a defect or malfunction covered by this warranty,
- (E) Used in conjunction with any equipment or parts or as part of a system not manufactured by Uniden.

**PARTS COVERED:** This warranty covers for one (1) year, the Base unit and handset (XS1215) or base, charger and handsets (XS1215+1). All accessories (AC adapter etc) are covered for 90 days only.

**STATEMENT OF REMEDY:** In the event that the product does not conform to this warranty at any time while this warranty is in effect, the warrantor at its discretion, will repair the defect or replace the product and return it to you without charge for parts or service.

THIS WARRANTY DOES NOT COVER OR PROVIDE FOR THE REIMBURSEMENT OR PAYMENT OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. THIS GUARANTEE IS IN ADDITION TO AND DOES NOT IN ANY WAY AFFECT YOUR RIGHTS UNDER THE CONSUMER GUARANTEE ACT.

**PROCEDURE FOR OBTAINING PERFORMANCE OR WARRANTY:** In the event that the product does not conform to this warranty, the Product should be shipped or delivered, freight pre-paid, with evidence of original purchase (eg. a copy of the sales docket), to the warrantor at:

### UNIDEN AUSTRALIA PTY LIMITED SERVICE DIVISION

345 Princes Highway,  
Rockdale,  
NSW 2216,  
AUSTRALIA  
Fax: (02) 9599 3278  
www.uniden.com.au

### UNIDEN NEW ZEALAND LIMITED SERVICE DIVISION

150 Harris Road,  
East Tamaki,  
Auckland,  
NEW ZEALAND  
Fax: (09) 274 4253  
www.uniden.co.nz

[42]



WARRANTY



**THANK YOU FOR BUYING A UNIDEN PRODUCT.**

**Uniden®**

(c) 2005 Uniden Australia Pty Limited. Uniden New Zealand Ltd. Printed in China UPZZ01060ZZ

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>