

Please fill-out and return this card within 10 days!



039 Q

1 First name: Initial: Last name: Address: Apt number: City: State: Zip code:

2 E-mail address: 1. I want to receive offers or communications from Uniden via e-mail. 2. Yes! I want to receive offers or communications that may interest me from other companies via e-mail.

3 Date of purchase: Month Day Year

4 Purchase Price: \$.00 (excluding tax)

5 Serial Number: (Located on the back of each unit)

6 Model Number: (Example: GMRS540-2, WX500)

7 Which Uniden product did you purchase? 1. FRS/GMRS Radio 2. Weather Radio

8 Store Name:

9 Check the two (2) most important reasons influencing your purchase of this Uniden Product: 1. Uniden reputation 2. Previous experience 3. Features 4. Value for price 5. Quality/durability 6. Style/appearance 7. Warranty 8. Received as a gift 9. Other

10 Check the two (2) most important features to you on this Uniden product: 1. Range 2. Low battery alert 3. Clarity 4. Number of channels 5. Auto squelch 6. Color 7. Design 8. Channel scan 9. LCD backlight

11 How did you first become aware of this product? 1. Previous Use 2. Comparison Shopping 3. In-Store Display 4. Newspaper Ad 5. Magazine Ad 6. TV Ad 7. Recommendation of Salesperson 8. Recommendation of Friend/Family 9. Direct Mail

12 Your gender: 1. Male 2. Female

13 Your marital status: 1. Married 2. Single

14 Date of your birth: Month Day Year

15 Including yourself, how many people live in your household? (Examples: 01, 02, etc.) Children (18 and younger) Adults

16 Date of birth of children in your household 18 years of age and younger: Gender Male Female Birth Date Month Year Child #1 Child #2

17 For your primary residence, do you: 1. Own 2. Rent

18 Education: (Please check which category applies to you): 1. Some high school 2. Completed high school 3. College degree 4. Graduate degree

19 I/we buy these things through the mail, over the Internet, or from television: 1. Books/magazines 2. Checks (not from a bank) 3. Children's products 4. Clothing 5. Computer products 6. Cosmetics/jewelry 7. Crafts/hobbies 8. Gardening supplies 9. Gifts 10. Housewares/furnishings 11. Insurance/financial products 12. Music/video/DVD 13. Sports equipment 14. Travel 15. Other A. Mail B. Internet C. TV

20 I/we have these credit cards: 1. American Express/Diners Club 2. Discover 3. Retail/Gas 4. Visa/MasterCard 5. Other 6. None

21 Someone in my home enjoys: 1. Astrology 2. Auto racing 3. Automotive work 4. Books 5. Camping/hiking 6. Casino gambling 7. Cigars 8. Collecting 9. Computers/Internet 10. Cooking/recipes 11. Crafts/needlework 12. Cultural art/events 13. Cycling 14. Dieting/weight control 15. Do-it-yourself 16. Donating to charity 17. Fishing 18. Fitness/exercise 19. Gardening 20. Golf 21. Gourmet food/cooking 22. Grandchildren 23. Home decorating 24. Hunting/shooting 25. Investing 26. Lottery/sweepstakes 27. Pets-cats 28. Pets-dogs 29. Pets-other 30. Photography 31. Play sports 32. Self improvement 33. Skiing/snowboarding 34. Travel-Foreign 35. Travel-U.S. 36. Vacation cruises 37. Vitamins/natural foods 38. Wines 39. Woodworking 40. Worship/Bible

USING THE WEATHER RADIO

Your GMR1448-2CK radio can receive weather broadcasts from the NOAA National Weather Service. When in the Weather Radio Alert mode, the system functions as it does in GMRS mode but also monitors the selected weather channel for alerts when not communicating. While using the Weather Radio, you are not able to receive GMRS communications.

- 1) To turn ON the Weather Radio Broadcast mode, press the wx/alert key. The icon appears on the display. 2) Press the chan tone/scan key, and press the up or down key to increase or decrease the number to the desired Weather Channel. 3) To exit the Weather Radio Broadcast mode, press the wx/alert key. The icon disappears from the display.

To change the channel continuously, press and hold the up or down key for more than 1 second.

When in the Weather Radio Broadcast mode, you can only set the Key Lock from the Menu mode.

Choosing an Emergency/Weather Channel

There are 7 NOAA channel frequencies available and these frequencies are common between the US and Canada. You will need to know what frequency is being transmitted in your location.

- 1) Press and hold the wx/alert key. The alert icon appears on the display. 2) When the unit receives a warning signal, it beeps for 5 seconds. The alert icon, the icon and channel indicator blinks. 3) To turn OFF Weather Alert, press and hold the wx/alert key. The alert icon disappears from the display.

When Weather Alert is activated, the highest priority is given to this function. It checks the weather alert signals every 7 seconds and switches to the warning receive mode automatically.

Weather Alert is activated even if key beep is turned off.

NOAA Weather Radio Frequency List

Table with 2 columns: Channel number and Frequency (MHz). Channels 1-6 listed.

SPECIFICATIONS

Table with 2 columns: Specification and Value. Includes Channels, Sub Codes, Operating Frequency, Power Source, Range, and Battery Life.

Frequency Chart

Table with 4 columns: Ch., Freq., Cross Ref., Ch., Freq., Cross Ref. Lists NOAA channel frequencies.

CTCSS Chart (Hz)

Table with 4 columns: Code, Freq., Code, Freq. Lists CTCSS codes and their corresponding frequencies.

DCS Code List

Table with 6 columns: Tone No., Octal Code, Tone No., Octal Code, Tone No., Octal Code. Lists DCS codes and their corresponding tones.

REGULATORY INFORMATION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference. (2) This device must accept any interference received, including interference that may cause undesired operation.

Important: Changes or modifications to this unit not expressly approved by Uniden could void your authority to operate this unit. Your radio is set up to transmit a regulated signal on an assigned frequency. It is against the law to alter or adjust the settings inside the radio to exceed those limitations. Any adjustments to your radio must be made by qualified technicians.

To be safe and sure:

- Never open your radio's case. Never change or replace anything in your radio except the batteries.

Your radio might cause TV or radio interference even when it is operating properly. To determine whether your radio is causing the interference, turn it off. If the interference goes away, your radio is causing it. Try to eliminate the interference by moving your radio away from the receiver. If you cannot eliminate the interference, the FCC requires that you stop using the radio.

Hazardous Environments: Do not operate the radio in hazardous environments. Explosion or fire may result. Do not operate the radio near unshielded electrical blasting caps.

Under certain conditions, radios can interfere with blasting operations and may cause an explosion. Turn your radio OFF to prevent accidental transmission when in a blasting area or in areas posted: "Turn off two-way radio." Construction crews often use remote control RF devices to set off explosives.

Care and Safety: To clean the radio, use a soft cloth dampened with water. Do not use cleaners or solvents because they can harm the body of the unit and leak inside, causing permanent damage. Use a dry, lint-free cloth to clean the battery contacts. Do not submerge the unit in water. If the unit gets wet, turn it off and remove the batteries immediately.

Dry the battery compartment with a soft cloth to minimize potential water damage. Leave the battery compartment cover off overnight to ensure complete drying. Do not use the radio until the unit is completely dry.

RF EXPOSURE INFORMATION

WARNING! Read this information before using the radio. In August 1996 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC regulated transmitters.

Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of the radio complies with the FCC guidelines and these international standards.

Never allow children to operate the radio without adult supervision and the knowledge of the following guidelines.

WARNING! It is up to the user to properly operate this radio transmitter to insure safe operation. Please adhere to the following:

Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the radio, or result in violation of FCC regulations. Do not use the radio with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for a replacement antenna.

Body-worn Operation This device was tested for typical body-worn operations using the supplied belt-clip. To maintain compliance with FCC RF exposure requirements, Body-worn operations are restricted to the supplied belt-clip.

For hand-held operation, the radio should be held 1 inch from the user's face. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements and should be avoided.

For more information about RF exposure, please visit the FCC web site at www.fcc.gov.

ONE YEAR LIMITED WARRANTY

Important: Evidence of original purchase is required for warranty service. WARRANTOR: UNIDEN AMERICA CORPORATION ("Uniden") ELEMENTS OF WARRANTY: Uniden warrants, for one year, to the original retail owner, this Uniden Product to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below.

WARRANTY DURATION: This warranty to the original user shall terminate and be of no further effect 12 months after the date of original retail sale. The warranty is invalid if the Product is: (A) damaged or not maintained as reasonable or necessary, (B) modified, altered, or used as part of any conversion kits, sub-assemblies, or any configurations not sold by Uniden, (C) improperly installed, (D) serviced or repaired by someone other than an authorized Uniden service center for a defect or malfunction covered by this warranty, (E) used in any conjunction with equipment or parts or as part of any system not manufactured by Uniden, or (F) installed or programmed by anyone other than as detailed by the owner's manual for this product.

STATEMENT OF REMEDY: In the event that the product does not conform to this warranty at any time while this warranty is in effect, warrantor will either, at its option, repair or replace the defective unit and return it to you without charge for parts, service, or any other cost (except shipping and handling) incurred by warrantor or its representatives in connection with the performance of this warranty. Warrantor, at its option, may replace the unit with a new or refurbished unit.

THE LIMITED WARRANTY SET FORTH ABOVE IS THE SOLE AND ENTIRE WARRANTY PERTAINING TO THE PRODUCT AND IS IN LIEU OF AND EXCLUDES ALL OTHER WARRANTIES OF ANY NATURE WHATSOEVER, WHETHER EXPRESS, IMPLIED OR ARISING BY OPERATION OF LAW, INCLUDING, BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THIS WARRANTY DOES NOT COVER OR PROVIDE FOR THE REIMBURSEMENT OVERPAYMENT OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow this exclusion or limitation of incidental or consequential damages so the above limitation or exclusion may not apply to you. LEGAL REMEDIES: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This warranty

is void outside the United States of America and Canada.

PROCEDURE FOR OBTAINING PERFORMANCE OF WARRANTY: If, after following the instructions in the owner's manual you are certain that the Product is defective, pack the Product carefully (preferably in its original packaging). Disconnect the battery from the Product and separately secure the battery in its own separate packaging within the shipping carton. The Product should include all parts and accessories originally packaged with the Product. Include evidence of original purchase and a note describing the defect that has caused you to return it. The Product should be shipped freight prepaid, by traceable means, to warrantor at:

Uniden America Service 4700 Amon Carter Blvd. Fort Worth, TX 76155 (800) 297-1023, 7:00 a.m. to 7:00 p.m. CST, Monday through Friday: 9:00 a.m. to 5:00 p.m. CST, Saturday, Sunday and Holidays (except Thanksgiving and Christmas).

Covered under one or more of the following U.S. patents: 4,684,870 4,734,049 5,203,015 5,214,789 5,491,745 5,497,508 5,517,677 5,557,606 5,574,994 5,610,946 5,613,201 5,625,870 5,627,876 5,628,059 5,634,196 5,634,205 5,678,176 5,697,096 5,717,312 5,722,070 5,787,345 5,901,341 6,021,326 6,084,861 6,163,691 6,195,415 6,353,730 6,839,550 6,980,770



© 2007 Uniden America Corporation All rights reserved Printed in China UTZZ01026ZZ(0)

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>