

Please fill-out and return this card within 10 days!



039 Q

1 First name: Initial: Last name: Address: Apt number: City: State: Zip code:

2 E-mail address: (EXAMPLE: yourname@yourhost.com)

- 1. Yes! I want to receive offers or communications from Uniden via e-mail.
2. Yes! I want to receive offers or communications that may interest me from other companies via e-mail.

3 Date of purchase: Month Day Year

4 Purchase Price: \$.00 (excluding tax)

5 Serial Number: (Located on the back of each unit)

6 Model Number: (Example: GMRS540-2, WX500)

7 Which Uniden product did you purchase? 1. FRS/GMRS Radio 2. Weather Radio

8 Store Name:

9 Check the two (2) most important reasons influencing your purchase of this Uniden Product:

10 Check the two (2) most important features to you on this Uniden product:

11 How did you first become aware of this product?

12 Your gender: 1. Male 2. Female

13 Your marital status: 1. Married 2. Single

14 Date of your birth: Month Day Year

15 Including yourself, how many people live in your household? Children (18 and younger) Adults

To select a call tone: 1) Enter the menu. Advance through the menu until CALL appears. The current call tone number (1-10) flashes. 2) Press up or down to increase or decrease the number to the desired call tone. Each tone will be heard through the speaker.

To transmit the selected call tone, press d-call. The selected tone is transmitted for a fixed length of time. Call Tone is cancelled if you press PTT or Power boost.

Setting Silent Mode When you turn on the silent mode, all incoming calls are muted: the radio blinks the display backlight, the channel indicator, SLNT and call icon to alert you to an incoming call.

Education: (Please check which category applies to you): 1. Some high school 2. Completed high school 3. College degree 4. Graduate degree

17 For your primary residence, do you: 1. Own 2. Rent

18 I/we buy these things through the mail, over the Internet, or from television:

19 I/we have these credit cards: 1. American Express/Diners Club 2. Discover 3. Retail/Gas 4. Visa/MasterCard 5. Other 6. None

20 Someone in my home enjoys:

21 How did you first become aware of this product? 1. Previous Use 2. Comparison Shopping 3. In-Store Display 4. Newspaper Ad 5. Magazine Ad 6. TV Ad 7. Recommendation of Salesperson 8. Recommendation of Friend/Family 9. Direct Mail 10. Astrology 11. Auto racing 12. Automotive work 13. Books 14. Camping/hiking 15. Casino gambling 16. Cigars 17. Collecting 18. Computers/Internet 19. Cooking/recipes 20. Crafts/needlework 21. Cultural art/events 22. Cycling 23. Dieting/weight control 24. Do-it-yourself 25. Donating to charity 26. Fishing 27. Fitness/exercise 28. Gardening 29. Golf 30. Gourmet food/cooking 31. Grandchildren 32. Home decorating 33. Hunting/shooting 34. Investing 35. Lottery/sweepstakes 36. Pets-cats 37. Pets-dogs 38. Pets-other 39. Photography 40. Play sports 41. Self improvement 42. Skiing/snowboarding 43. Travel-foreign 44. Travel-U.S. 45. Vacation cruises 46. Vitamins/natural foods 47. Wines 48. Woodworking 49. Worship/Bible

Note: If you exit the setting mode before confirming your selection by pressing menu/grp, Key Lock is set to oF (OFF).

To unlock the keypad: 1) Turn off the radio by rotating vol/off counterclockwise until it clicks. 2) Turn on the radio again by rotating vol/off clockwise until it clicks. The keypad is unlocked.

Automatic Power Save Feature Your GMR1588-2CK/GMR1595-2CK radio has a unique circuit designed to dramatically extend the life of the batteries. If there is no transmission nor an incoming call within 3 seconds, your radio switches to the Power Save mode. The radio is still able to receive transmissions in this mode.

LCD Backlight The LCD Backlight automatically turns on when any key (except the PTT and Power boost button) is pressed. The LCD remains lit for 10 seconds before turning off.

Roger Beep Roger beep is a beep that is sent to notify the end of transmission (both PTT and VOX transmission). You can hear the roger beep can be heard through the speaker when both roger beep and key beep are on. When roger beep is on and key beep is off, you do not hear the roger beep, but it is transmitted to your party.

To turn the roger beep OFF, press and hold up while turning ON the radio. Repeat this step to turn the beep ON.

USING THE WEATHER RADIO

Your GMR1588-2CK/GMR1595-2CK radio can receive weather broadcasts from the NOAA National Weather Service. When in the Weather Radio Alert mode, the system functions as it does in standard mode but also monitors the selected weather channel for alerts when not communicating. While using the Weather Radio, you are not able to receive GMRS communications.

The GMR1595 will additionally remind you of a missed call by vibrating every minute after the call for 3 minutes.

Key Lock To lock the keypad: 1) Enter the menu. Advance through the menu until LOCK appears. The radio displays oF LOCK. 2) To switch Key Lock from oF (OFF) to on (ON), press up. 3) To confirm the setting, press menu/grp. The radio returns to the current mode.

Note: If you exit the setting mode before confirming your selection by pressing menu/grp, Key Lock is set to oF (OFF).

Choosing an Emergency/Weather Channel There are 7 NOAA channel frequencies available and these frequencies are common between the US and Canada. You need to know what frequency is being transmitted in your location.

1) Press and hold wx/alert. The alert icon appears. 2) When the unit receives a warning signal, it beeps for 5 seconds. The alert icon, WX and channel indicator blinks. 3) To turn off Weather Alert, press and hold wx/alert. The alert icon disappears.

When Weather Alert is activated, the highest priority is given to this function. It checks the weather alert signals every 7 seconds. When the unit finds a warning signal, it switches to the warning receive mode automatically. Weather Alert is activated even if key beep is turned off.

NOAA Weather Radio Frequency List Channel 1 162.550 MHz Channel 5 162.450 MHz Channel 2 162.400 MHz Channel 6 162.500 MHz Channel 3 162.475 MHz Channel 7 162.525 MHz Channel 4 162.425 MHz

SPECIFICATIONS

Channels 15 GMRS/7 FRS/7 Weather Sub Codes 38 Sub-Audible Tones 104 DCS Codes

Operating Frequency GMRS/FRS: 462.5500 - 467.7125 MHz WX: 162.4000 - 162.5500 MHz Power Source NiMH Battery Pack (BP38) or 4 AAA Alkaline Batteries

Range Channel 1-7 up to 10 miles (15 miles with Power boost button) Channel 8-14 up to 5 miles Channel 15-22 up to 10 miles (15 miles with Power boost button)

Battery Life 12 Hours typ. - NiMH Battery Pack (5/5/90 duty cycle)

Frequency Chart

Table with columns: Ch, Freq, Cross Ref., Ch, Freq, Cross Ref. listing various frequencies and their cross-references.

CTCSS Chart (Hz)

Table with columns: Code, Freq, Code, Freq. listing CTCSS codes and their corresponding frequencies.

Table with columns: Channels, 15 GMRS/7 FRS/7 Weather, 17 118.8, 18 123.0, 19 127.3

Table with columns: Sub Codes, 38 Sub-Audible Tones, 104 DCS Codes

Table with columns: Operating Frequency, GMRS/FRS: 462.5500 - 467.7125 MHz, WX: 162.4000 - 162.5500 MHz, Power Source: NiMH Battery Pack (BP38) or 4 AAA Alkaline Batteries

Table with columns: Range Channel, 1-7 up to 10 miles (15 miles with Power boost button), Channel 8-14 up to 5 miles, Channel 15-22 up to 10 miles (15 miles with Power boost button)

Table with columns: Battery Life, 12 Hours typ. - NiMH, Battery Pack (5/5/90 duty cycle)

REGULATORY INFORMATION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference. (2) This device must accept any interference received, including interference that may cause undesired operation.

Important: Changes or modifications to this unit not expressly approved by Uniden could void your authority to operate this unit. Your radio is set up to transmit a regulated signal on an assigned frequency. It is against the law to alter or adjust the settings inside the radio to exceed those limitations. Any adjustments to your radio must be made by qualified technicians.

To be safe and sure: Never open your radio's case. Never change or replace anything in your radio except the batteries.

Your radio might cause TV or radio interference even when it is operating properly. To determine whether your radio is causing the interference, turn it off. If the interference goes away, your radio is causing it. Try to eliminate the interference by moving your radio away from the receiver. If you cannot eliminate the interference, the FCC requires that you stop using the radio.

Hazardous Environments: Do not operate the radio in hazardous environments. Explosion or fire may result. Do not operate the radio near unshielded electrical blasting caps. Under certain conditions, radios can interfere with blasting operations and may cause an explosion. Turn your radio OFF to prevent accidental transmission when in a blasting area or in areas posted: "Turn off two-way radio." Construction crews often use remote control RF devices to set off explosives.

Care and Safety: To clean the radio, use a soft cloth dampened with water. Do not use cleaners or solvents because they can harm the body of the unit and leak inside, causing permanent damage. Use a dry, lint-free cloth to clean the battery contacts. Do not submerge the unit in water. If the unit gets wet, turn it off and remove the batteries immediately. Dry the battery compartment with a soft cloth to minimize potential water damage. Leave the battery compartment cover off overnight to ensure complete drying. Do not use the radio until the unit is completely dry.

REGULATORY INFORMATION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference. (2) This device must accept any interference received, including interference that may cause undesired operation.

Important: Changes or modifications to this unit not expressly approved by Uniden could void your authority to operate this unit. Your radio is set up to transmit a regulated signal on an assigned frequency. It is against the law to alter or adjust the settings inside the radio to exceed those limitations. Any adjustments to your radio must be made by qualified technicians.

To be safe and sure: Never open your radio's case. Never change or replace anything in your radio except the batteries.

Your radio might cause TV or radio interference even when it is operating properly. To determine whether your radio is causing the interference, turn it off. If the interference goes away, your radio is causing it. Try to eliminate the interference by moving your radio away from the receiver. If you cannot eliminate the interference, the FCC requires that you stop using the radio.

Hazardous Environments: Do not operate the radio in hazardous environments. Explosion or fire may result. Do not operate the radio near unshielded electrical blasting caps. Under certain conditions, radios can interfere with blasting operations and may cause an explosion. Turn your radio OFF to prevent accidental transmission when in a blasting area or in areas posted: "Turn off two-way radio." Construction crews often use remote control RF devices to set off explosives.

Care and Safety: To clean the radio, use a soft cloth dampened with water. Do not use cleaners or solvents because they can harm the body of the unit and leak inside, causing permanent damage. Use a dry, lint-free cloth to clean the battery contacts. Do not submerge the unit in water. If the unit gets wet, turn it off and remove the batteries immediately. Dry the battery compartment with a soft cloth to minimize potential water damage. Leave the battery compartment cover off overnight to ensure complete drying. Do not use the radio until the unit is completely dry.

RF EXPOSURE INFORMATION

WARNING! Read this information before using the radio. In August 1996 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC regulated transmitters.

Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of the radio complies with the FCC guidelines and these international standards.

Never allow children to operate the radio without adult supervision and the knowledge of the following guidelines.

WARNING! It is up to the user to properly operate this radio transmitter to insure safe operation. Please adhere to the following:

Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the radio, or result in violation of FCC regulations. Do not use the radio with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for a replacement antenna.

Body-worn Operation This device was tested for typical body-worn operations using the supplied belt-clip. To maintain compliance with FCC RF exposure requirements, Body-worn operations are restricted to the supplied belt-clip.

For hand-held operation, the radio should be held 1 inch from the user's face. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements and should be avoided.

For more information about RF exposure, please visit the FCC web site at www.fcc.gov.

ONE YEAR LIMITED WARRANTY

Important: Evidence of original purchase is required for warranty service. WARRANTOR: UNIDEN AMERICA CORPORATION ("Uniden")

ELEMENTS OF WARRANTY: Uniden warrants, for one year, to the original retail owner, this Uniden Product to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below.

WARRANTY DURATION: This warranty to the original user shall terminate and be of no further effect 12 months after the date of original retail sale. The warranty is invalid if the Product is:

(A) damaged or not maintained as reasonable or necessary, (B) modified, altered, or used as part of any conversion kits, sub-assemblies, or any configurations not sold by Uniden, (C) improperly installed, (D) serviced or repaired by someone other than an authorized Uniden service center for a defect or malfunction covered by this warranty, (E) used in any conjunction with equipment or parts or as part of any system not manufactured by Uniden, or (F) installed or programmed by anyone other than as detailed by the owner's manual for this product.

STATEMENT OF REMEDY: In the event that the product does not conform to this warranty at any time while this warranty is in effect, warrantor will either, at its option, repair or replace the defective unit and return it to you without charge for parts, service, or any other cost (except shipping and handling) incurred by warrantor or its representatives in connection with the performance of this warranty. Warrantor, at its option, may replace the unit with a new or refurbished unit.

THE LIMITED WARRANTY SET FORTH ABOVE IS THE SOLE AND ENTIRE WARRANTY PERTAINING TO THE PRODUCT AND IS IN LIEU OF AND EXCLUDES ALL OTHER WARRANTIES OF ANY NATURE WHATSOEVER, WHETHER EXPRESS, IMPLIED OR ARISING BY OPERATION OF LAW, INCLUDING, BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THIS WARRANTY DOES NOT COVER OR PROVIDE FOR THE REIMBURSEMENT OVERPAYMENT OF INCIDENTAL OR CONSEQUENTIAL DAMAGES.

Some states do not allow this exclusion or limitation of incidental or consequential damages so the above limitation or exclusion may not apply to you. LEGAL REMEDIES: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This warranty

is void outside the United States of America and Canada.

PROCEDURE FOR OBTAINING PERFORMANCE OF WARRANTY: If, after following the instructions in the owner's manual you are certain that the Product is defective, pack the Product carefully (preferably in its original packaging). Disconnect the battery from the Product and separately secure the battery in its own separate packaging within the shipping carton. The Product should include all parts and accessories originally packaged with the Product. Include evidence of original purchase and a note describing the defect that has caused you to return it. The Product should be shipped freight prepaid, by traceable means, to warrantor at:

Uniden America Service 4700 Amon Carter Blvd. Fort Worth, TX 76155 (800) 297-1023, 7:00 a.m. to 7:00 p.m. CST, Monday through Friday: 9:00 a.m. to 5:00 p.m. CST, Saturday, Sunday and Holidays (except Thanksgiving and Christmas).

Covered under one or more of the following U.S. patents:

Table with columns: Patent numbers: 4,684,870, 4,734,049, 5,203,015, 5,214,789, 5,491,745, 5,497,508, 5,517,677, 5,557,606, 5,574,994, 5,610,946, 5,613,201, 5,625,870, 5,627,876, 5,628,059, 5,634,196, 5,634,205, 5,678,176, 5,697,096, 5,717,312, 5,722,070, 5,787,345, 5,901,341, 6,021,326, 6,084,861, 6,163,691, 6,195,415, 6,353,730, 6,839,550

© 2006 Uniden America Corporation All rights reserved Printed in China UTZZ01018ZZ(0)

Thank you for completing this questionnaire. Your answers will help us and other companies reach you with offers that may interest you. If you prefer not to receive these offers, please check here []

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>