


RH767 RFID Handheld Reader

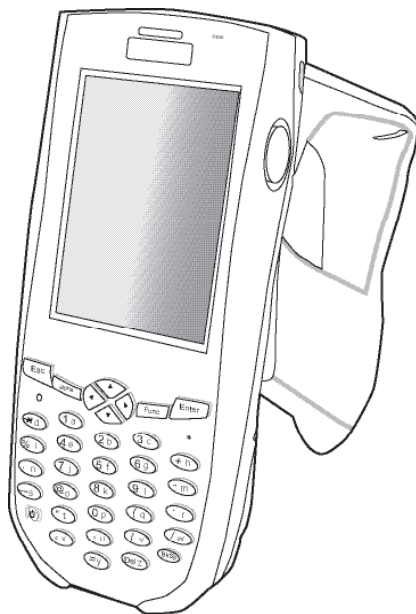

POWERED BY

ORACLE



 





Unitech is a member of the Oracle Embedded Software Licensing Program.

Quick Reference Guide

400558G Rev. B


Package Contents

Make sure the following items are in the RH767 box:

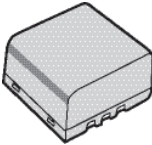		
<p>RH767 Terminal</p>	<p>AC Power Adapter Cable</p>	<p>AC Power Adapter</p>
		
<p>Stylus</p>	<p>Synchronization and Power Cable</p>	<p>Unitech CD-ROM</p>
		
<p>Cradle (Optional)</p>	<p>Battery Pack</p>	

If anything appears missing or damaged, please contact a regional Unitech representative.

Front View

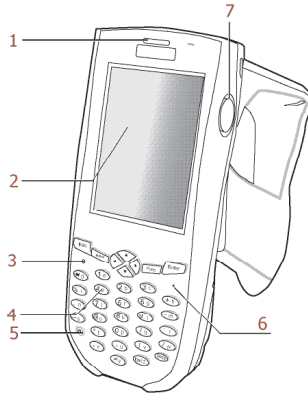

1 Status Indicator.

2 LCD Touch-screen.

3 Alpha Mode Indicator.


4 Keypad.

5 Power Button.

6 Microphone.


7 Right Scanner Trigger Button.

Back View

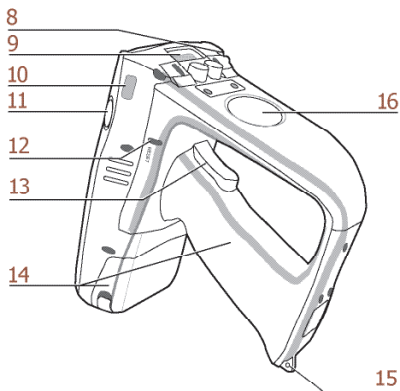

- | | |
|--|-------------------------------------|
| 8 Stylus. | 13 Bar Code Scanner Trigger. |
| 9 Bar Code Scanner Window. | 14 Battery Compartment. |
| 10 Infrared (IR) Port. | 15 Strap Hook. |
| 11 Left Scanner Trigger Button. | 16 RFID Antenna. |
| 12 Reset Button. | |

Bottom View

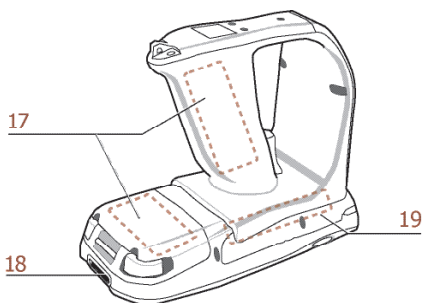


- | | |
|--------------------------------|------------------------|
| 17 Battery Pack. | 19 PCMCIA Slot. |
| 18 Universal Connector. | |


Installing the Battery

The RH767 is embedded with a Backup Battery cell to prevent data loss when the main Battery disconnects from the device. However, the Backup Battery will only store data for a maximum of 72 hours.

1. Open the Battery Compartment by sliding the tabs in the direction as shown below:

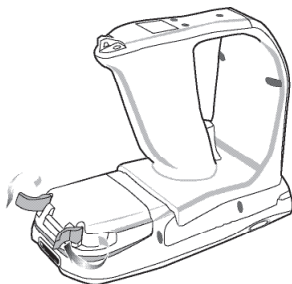


2. Locate the Backup Battery Switch and turn it to the **ON** position as shown below:

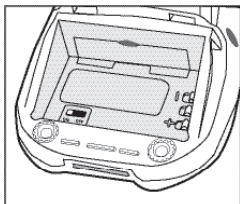


Backup Battery & Grip Battery Switch

3. Align the Battery Contacts with the Battery Compartment Contacts as shown below:

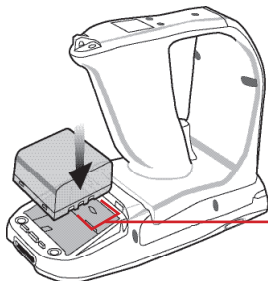


Battery Contacts

- Place the Battery Pack into the Battery Compartment and press the battery securely into place.
- Replace the Battery Compartment cover, push down the tabs and slide them back into the lock position as shown below:

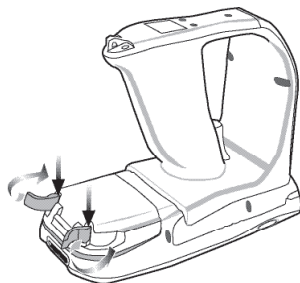


Charging the Battery

- Connect the Synchronization Power Cable connector to the RH767 (1).
- Plug the AC Adapter cable into the USB Connector's power jack (2).
- Connect the AC Adapter into an electrical outlet (3).

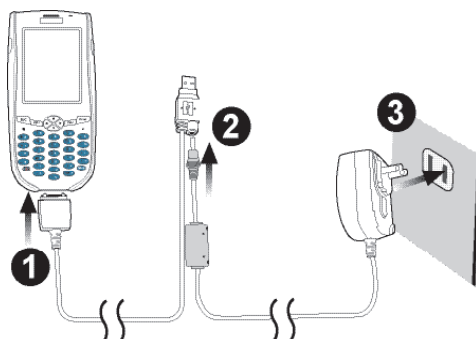

Keypads and Function Buttons

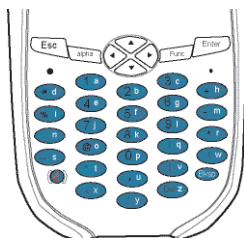

Key	Main Function
	Power button.
	Escape key.
	Backspace key.
	Function key.
	Tab key.
	Enter key.
	4 way cursor keys, brightness +/-.
	Alpha key, toggle between numeric and alphabetic entry modes.
	Numbers keys, characters keys.
	Punctuation key.

Using Function keys

Key	Function
[FUNC]+	Toggle Display Backlight.
[FUNC]+	Toggle Keypad LED Backlight.
[FUNC]+	Increase screen brightness.
[FUNC]+	Decrease screen brightness.

Toggle to Alpha Mode and CAPS

Numeric Mode is the RH767's default function. In Alpha Mode, CAPS mode is the default condition. Use **alpha** and **Func** to toggle into CAPS.

Key	Alpha OFF		Alpha ON	
	FUNC UP	FUNC DOWN	FUNC UP	FUNC DOWN
ESC	ESC	ESC	ESC	ESC
Backspace	Backspace	Backspace	Backspace	Backspace
Enter	Enter	Enter	Enter	Enter
1/F1/a	1	F1	a	A
2/F2/b	2	F2	b	B
3/F3/c	3	F3	c	C
TAB/d	TAB	`	d	D
4/F4/e	4	F4	e	E
5/F5/f	5	F5	f	F
6/F6/g	6	F6	g	G
+/^/h	+	^	h	H
%/BL/i	%	Backlight	i	I
7/F7/j	7	F7	j	J
8/F8/k	8	F8	k	K
9/F9/l	9	F9	l	L
-/_/m	-	_	m	M
./;/n	.	;	n	N
@/!/o	@	!	o	O
0/\$/p	0	\$	p	P
(/)/q	()	q	Q
*/#/r	*	#	r	R
SPACE/s	SPACE	SPACE	s	S
"/'/t	"	'	t	T
./?/u	,	?	u	U
[/]/v	[]	v	V
/\w	/	\	w	W
</>/x	<	>	x	X
=/&/y	=	&	y	Y
DEL/z	DEL	~	z	Z

Turning the RH767 on for the First Time

Charge the RH767 for at least 16 hours before initial use. Once the RH767 starts, it is time to adjust the screen brightness, calibrate the display and setup the system time zone date and time.

1. Start the RH767 by pressing the power button on the front panel.

Using the Stylus


CAUTION! Never use anything other than the RH767 Stylus on the screen.

1. Remove the Stylus from its holder.
2. Hold the stylus like a pencil.
3. Lightly tap the tip of the Stylus to make a menu choice.
4. Double-tap to open programs.
5. Use the Stylus to print letters or numbers.




Calibrating the RH767 Screen

The calibration screen automatically appears when the unit powers on for the first time or after the system is reset.

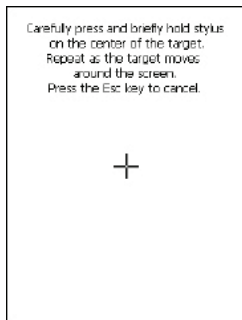


Use a stylus to tap a sequence of target marks on the RH767's screen. Firmly hold the stylus on top of the target mark for a moment, and then remove. Continue to tap the target mark as it stops along the corners of the screen.

Press Enter to confirm the calibration or press **ESC** to cancel.

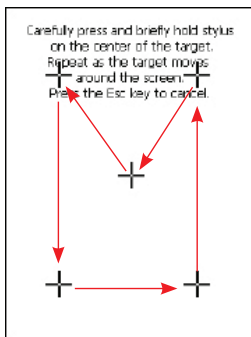


Setting the Time and Date

In the Date/Time Properties window, use the stylus to select the current date and time, time zone and daylight saving time option.

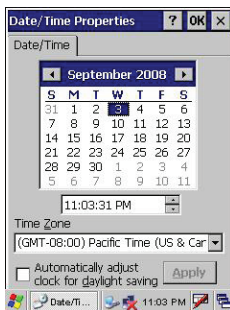

Adjusting the Screen Brightness

Adjust the screen brightness by pressing **Func** to enable the soft key function and press the left arrow (decrease brightness) or right arrow (increase brightness) cursor buttons.

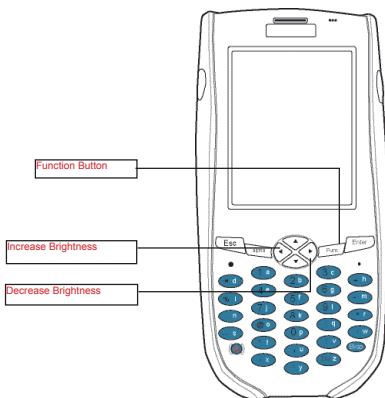

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>