

ViewSonic®

N1750w

LCD TV

User Guide



English

Français



Español

Thank you very much for choosing the ViewSonic LCD TV Display.

We recommend that you take a few minutes to read carefully through this manual before installing and switching on the TV. Please keep this manual in a safe place for your future reference.

TABLE OF CONTENTS

INSTALLATION -----	2
For Your Safety -----	2
Product Registration-----	2
IMPORTANT SAFETY INSTRUCTUONS -----	3
Quick Installation -----	5
Using the Display (PC) -----	6
PREPARATION -----	7
OPERATING INSTRUCTIONS -----	9
Use of the remote control -----	9
To use the menus -----	10
Main menu -----	10
CONNECT PERIPHERAL EQUIPMENT -----	17
Front Panel Control Knobs -----	17
Preparation -----	17
Video recorder -----	18
Camera, camcorder, Video Game set -----	19
DVD player -----	19
Digital Set TOP box -----	20
Headphone -----	21
Tips -----	21
PRODUCT SPECIFICATION -----	22
Compatibility Modes -----	24
BEFORE CALLING SERVICE -----	25
Customer support -----	26
Glossary -----	27
Limited Warranty -----	28

SYMBOL	SYMBOL DEFINITION
 SA 1965	DANGEROUS VOLTAGE: The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electrical shock to persons.
 SA 1966	INSTRUCTIONS: The exclamation point within an equilateral triangle to alert the User to the presence of important operating and maintenance (servicing) instruction in the literature accompanying the appliance.

Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, Such as vases, Shall be placed on the apparatus.

FOR YOUR SAFETY

Before operating the TV please read this manual thoroughly. This manual should be retained for future reference.

FCC Class B Radio Frequency Interference Statement WARNING: (FOR FCC CERTIFIED MODELS)

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

NOTICE

1. The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
2. Shielded interface cables and AC power cord, if any, must be used in order to comply with the emission limits.
3. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modification to this equipment. It is the responsibilities of the user to correct such interference.

WARNING:

To prevent fire or shock hazard, do not expose the TV to rain or moisture. Dangerously high voltages are present inside the TV. Do not open the cabinet. Refer servicing to qualified personnel only.

Copyright © ViewSonic Corporation, 2004. All rights reserved.

Macintosh and Power Macintosh are registered trademarks of Apple Computer, Inc.

Microsoft, Windows, Windows NT, and the Windows logo are registered trademarks of Microsoft Corporation in the United States and other countries.

ViewSonic, the three birds logo, OnView, ViewMatch, and ViewMeter are registered trademarks of ViewSonic Corporation.

VESA is a registered trademark of the Video Electronics Standards Association. DPMS and DDC are trademarks of VESA.

Disclaimer: ViewSonic Corporation shall not be liable for technical, editorial errors, or omissions contained herein; nor for incidental or consequential damages resulting from furnishing this material, or the performance or use of this product.

In the interest of continuing product improvement, ViewSonic Corporation reserves the right to change product specifications without notice. Information in this document may change without notice. For the most recent version of this document, please check www.viewsonic.com.

No part of this document may be copied, reproduced, or transmitted by any means, for any purpose without prior written permission from ViewSonic Corporation.

Product Registration

To meet your future needs, and to receive any additional product information as it becomes available, please register your product on the Internet at: www.viewsonic.com. The ViewSonic® Wizard CDROM also provides an opportunity for you to print the registration form, which you may mail or fax to ViewSonic.

For Your Records	
Product Name:	ViewSonic 1750w
Model Number:	VS10621
Document Number:	VS-N1750w-M
Serial Number:	_____
Purchase Date:	_____

Product disposal at end of product life

ViewSonic is concerned about the preservation of our environment. Please dispose of this product properly at the end of its useful life. Your local waste disposal company may provide information about proper disposal.


IMPORTANT SAFETY INSTRUCTIONS

Read before operating equipment

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any of the ventilation openings. Install in accordance with the manufacturers instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and third grounding prong. The wide blade or third prong is provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. The TV should be operated only from the type of power source indicated on the label. If you are not sure of the type of power supplied to your home, consult your dealer or local power company.
14. Unplug this apparatus during lightning storms or when unused for long periods of time.
15. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
16. This product may contain lead or mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance: www.eiae.org
17. **Damage Requiring Service** – The appliance should be serviced by qualified service personnel when:
 - A. The power supply cord or the plug has been damaged; or
 - B. Objects have fallen, or liquid has been spilled into the appliance; or
 - C. The appliance has been exposed to rain; or
 - D. The appliance does not appear to operate normally or exhibits a marked change in performance; or
 - E. The appliance has been dropped, or the enclosure damaged.
18. **Tilt/Stability** – All televisions must comply with recommended international global safety standards for tilt and stability properties of its cabinets design.
 - Do not compromise these design standards by applying excessive pull force to the front, or top, of the cabinet, which could ultimately overturn the product.
 - Also, do not endanger yourself, or children, by placing electronic equipment/toys on the top of the cabinet. Such items could unsuspectingly fall from the top of the set and cause product damage and/or personal injury.
19. **Wall or Ceiling Mounting** – The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
20. **Power Lines** – An outdoor antenna should be located away from power lines.
21. **Outdoor Antenna Grounding** – If an outside antenna is connected to the receiver, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static charges.

Section 810 of the National Electric Code, ANSI/NFPA No. 70-1984, provides information with respect to proper grounding of the masts and supporting structure grounding of the lead-in wire to an antenna-discharge unit, size of grounding connectors, location of antenna-discharge unit, connection to grounding electrodes and requirements for the grounding electrode. See Figure below.

22. **Objects and Liquid Entry** – Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.

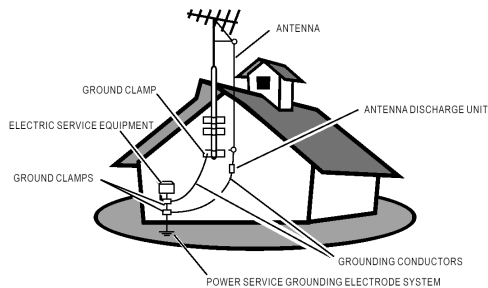

EXAMPLE OF ANTENNA GROUNDING AS PER NATIONAL ELECTRICAL CODE

Note to the CATV system installer: This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

Quick Installation

1 Remove two rear panel covers

2 Connect power cord.

3 Connect video cable

Make sure both the LCD display and computer are turned OFF

Connect the video cable from the LCD display to the computer

Macintosh users: Models older than G3 require a Macintosh adapter. Attach the adapter to the computer and plug the video cable into the adapter. To order a ViewSonic® Macintosh adapter, contact ViewSonic Customer Support.

4 Turn ON LCD display and computer

Turn ON the LCD display, then turn ON the computer.

NOTE: Windows users may receive a message asking them to install the INF file.
Note: go to www.ViewSonic.com

5 Audio Installation (optional)

Speakers Connect the audio cable (line color) to the AUDIO OUT port of your computer's sound card, then to the LCD display's AUDIO IN (line color) port (see illustration below).


6 **Windows users:** Set the timing mode (resolution and refresh rate)

Example: 1280 x 768 @ 60 Hz.

For instructions on changing the resolution and refresh rate, see the graphic card's user guide.

7. Installation is complete. Enjoy your new ViewSonic, LCD display.

You can register your product online at the website for your region. See the Customer Support table in this guide. (page 32)

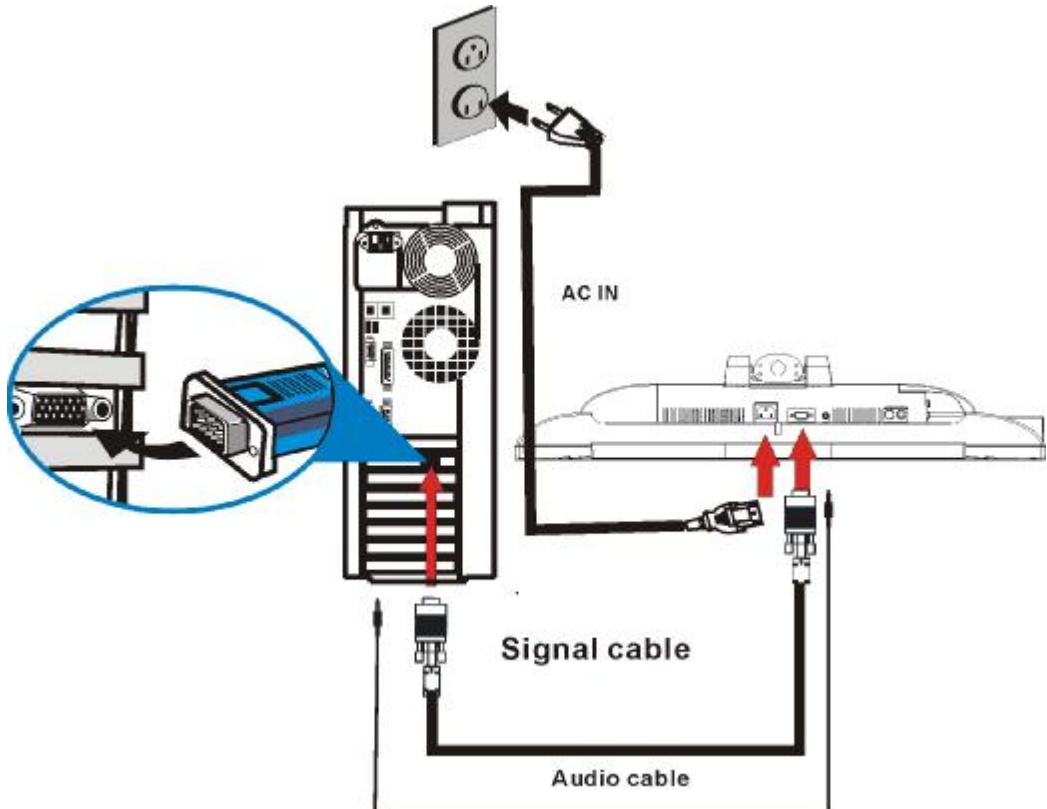

Using the Display (PC)

Setting the Timing Mode (PC RGB Input)

Setting the timing mode is important for maximizing the quality of the screen image and minimizing eye strain. The **timing mode** consists of the **resolution** (example 1280 x 768) and **refresh rate** (or vertical frequency; example 60 Hz). After setting the timing mode, use the OSD controls to adjust the screen image.

NOTE: For the best picture quality set your LCD display timing mode to: **1280 x 768 @ 60Hz**.

To set the Timing Mode:


1. Set the resolution: Right-click on the Windows desktop > Properties > Settings > set the resolution.
2. Set the refresh rate: See your graphic card's user guide for instructions.

WARNING: Do not set the graphics card in your computer to exceed the maximum refresh rate of 60Hz; doing so may result in permanent damage to your Display.

PREPARATION


Please, make sure to connect the power plug to the wall outlet socket after connecting the TV to the adapter!

1. Place the TV on a solid surface.

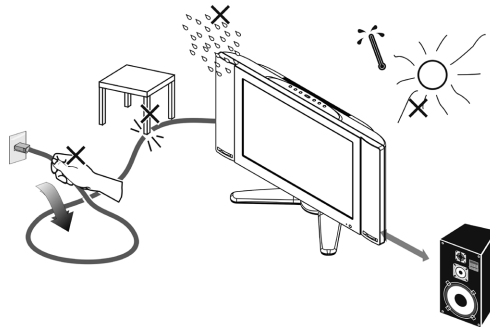


Ensure that the TV is placed in a position to allow free flow of air. Do not cover the ventilation openings on the back cover. To prevent any unsafe situations, no naked flame sources, such as lighted candles, should be placed on or in the vicinity. Avoid heat, direct sunlight and exposure to rain or water. The equipment shall not be exposed to dripping or splashing.

2. Insert the aerial plug firmly into the aerial socket **ANT IN** 75Ω at the back of the TV.

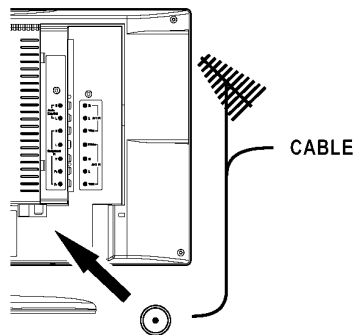

3. Remote control:

Remove the cover of the battery compartment. Insert the 2 batteries supplied (Type AAA 1.5V).

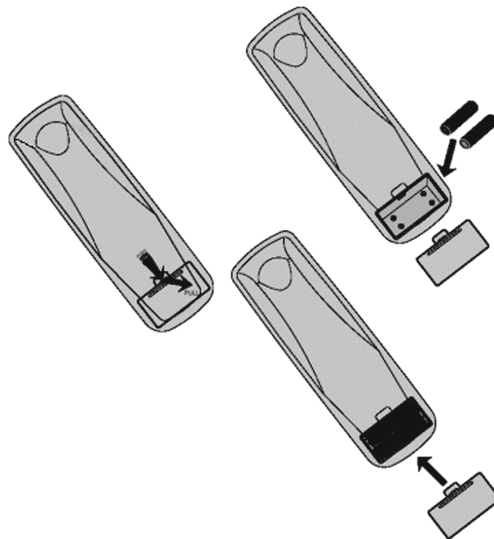

4. Power:

Insert the power cord in the wall socket having an AC power supply.

5. Turn the TV on:

Press the power button at the bottom of the bezel to turn it on.
If the TV is in power off, the indicator in front of the TV illuminates amber.

OPERATING INSTRUCTIONS

USE OF THE REMOTE CONTROL

POWER:

Press to turn on/off the TV. The TV is never completely powered off unless it is physically unplugged.

0-9/100 Digit buttons

To select a TV channel.

CH

Press ▲ or ▼ to brows through the TV channels which are not erased. To view a blocked channel, use the digit buttons to access the channel and enter your access code.

VOL

Press + or – to adjust the volume.

PC


select your input source to PC

SLEEP

With this key you can set a time period after which the TV should switch itself to standby. Press the key repeatedly to select the number of minutes. The counter runs from 0,30,60,90,120 minutes. The timer begins to count down from the number of minutes selected after the display has disappeared.

PIP

Press this button to display PC input and other input on the screen at same time.

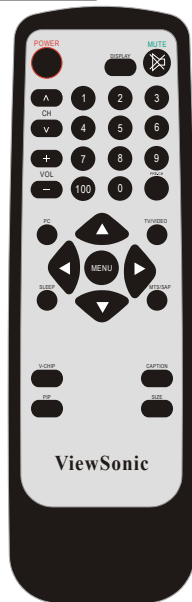

MENU

Press repeatedly to display OSD menu.

V-CHIP

Press this button to setup parental control.

SWAP

Not Supported. (for the model with this function only)

SIZE

Includes 3 modes. Press repeatedly to select 4:3/16:9(Linear)/16:9(non-Linear)

POP

Not Supported. (for the model with this function only)

MUTE

Temporarily interrupt the sound or restore it.

DISPLAY

Press this button to Display Channel number on the right-top corner.

MTS /SAP

Press this key to activate Multichannel Television Sound, Stereo or Mono

PRE-CH

To display the previously selected TV channel.

TV/VIDEO

Select your input source: press repeatedly to select **TV, AV1, AV2, S-VIDEO** or **COMPONENT** mode, according to where you connected your external source.

- **AV1/AV2** for a VCR connected to the AV connectors of the TV.
- **S-VIDEO** for a S-Video VCR connected to the S-VIDEO connector of the TV.
- **COMPONENT** for a DVD/DTV Set Top Box or another component video device connected to **Y, Pb, Pr** and to the **AV AUDIO** inputs **L** and **R**.

CAPTION

Press this button to turn **Closed Caption** on. Be sure you have selected Caption On in the Setup menu.

TO USE THE MENU


1. Press the **MENU** button to display each menu
2. Use the cursor up/down to select a menu item.
3. Use the cursor left/right to enter a submenu or enable/disable the function.
4. Press the **MENU** button to exit the menu.

MAIN MENU


Press the **MENU** button into the main OSD (On Screen Display). Adjust item include **VIDEO ADJUST**, **AUDIO ADJUST**, **CLOSED CAPTION**, **V-CHIP**, **SLEEP TIMER**, **SET UP** and **PC ADJUST**.



Video Adjust

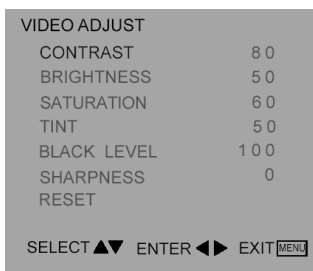


1. **Contrast**, **Brightness** and **Saturation** are adjusted from 0 to 100.
2. **Tint** is adjusted from 0 to 100.
3. **Black Level** is adjusted from 0 to 100.
4. **Sharpness** is adjusted from 0 to 10.
You can adjust picture contrast, brightness, color, tint and sharpness to the levels you prefer.
5. **Reset** is set up to default value.

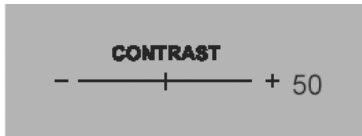


When adjust any item sub-OSD will show up like this.

Audio Adjust

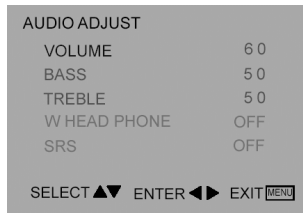

1. **Volume** is adjusted from 0 to 100.
2. **Bass** and **Treble** are adjusted from 0 to 100.
3. **W-Head Phone** (optional) is the function for wireless headphone enable or disable. You can adjust audio Volume, Balance, Bass and Treble to the levels you prefer.

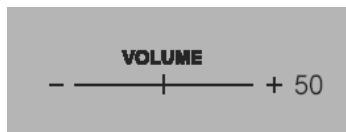


When adjust any item sub-OSD will show up like this.

CLOSED CAPTION

It's allows you to read the dialog of television programs on the TV screen. Designed to help the hearing impaired, this feature uses on screen " text boxes" to show dialogue and conversations while the TV program is in progress. Captions will appear on the screen only during captioned broadcasts.

Remark: the captions do not always use correct spelling and grammar.

Not all TV programs and product commercials are made for broadcast with Closed Caption information included. Refer to your area's TV program listings for the TV channels and times of closed Caption shows. The captioned programs are usually noted in the TV listings with serviceMarks such as "CC".

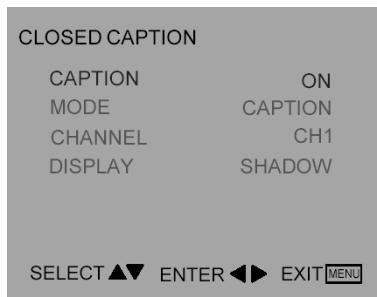

- **Caption Mode:**
Dialogue (and descriptions) for the action on the captioned TV program shows on screen. Usually CH1 is the most used channel. CH2 may be used for alternate languages if they are being transmitted.
- **Text Mode:**
Often used for channel guide, schedules, bulletin board information for Closed Caption programs, news, weather information or stock marker reports.
Not all Closed Caption modes are necessarily being use by a TV channel during the transmission of a Closed Caption program.


V-CHIP SETUP

Select V-Chip on OSD then enter 4 digits of pin number.

- Initial pin number is "0000".
- If you enter an incorrect pin number "Incorrect" message will be displayed.



It is the parental control function (V-chip). It is used to block program viewing based on the ratings by the broadcaster. The default setting is to allow all programs to be viewed. Viewing can be blocked by the type of program and by the categories chosen to be blocked. It is also possible to block all program viewing for a time period.

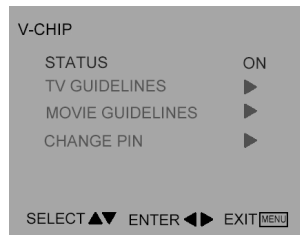


- A. There are two items that could be defined. One is **TV Guidelines** another one is **Movie Guidelines**.
- B. Setting up **TV Guidelines**
- Use Up/Down arrow buttons to move around the matrix and press **Right arrow** button to change the value from "U" to "B" or "B" to "U"
 - **U**: Unblock
 - **B**: Block

A screenshot of the 'TV GUIDELINES' OSD menu. It shows a matrix of ratings for different TV categories. The columns are labeled ALL, FV, V, S, L, D. The rows are labeled TV-Y, TV-Y7, TV-G, TV-PG, TV-14, and TV-MA. The current ratings are: TV-Y (U), TV-Y7 (U, U), TV-G (U), TV-PG (U, U, U, U), TV-14 (U, U, U, U), and TV-MA (U, U, U). At the bottom, there are navigation instructions: 'SELECT ▲▼ ENTER ◀▶ EXIT [MENU]'.


	ALL	FV	V	S	L	D
TV-Y	U					
TV-Y7	U	U				
TV-G	U					
TV-PG	U		U	U	U	U
TV-14	U		U	U	U	U
TV-MA	U		U	U	U	

C. Setting up **Movie Guidelines**

- Use Up/Down arrow buttons to move around the matrix and press **Right arrow** button to change the value from “U” to ‘B” or “B” to “U”

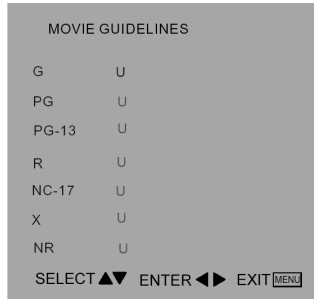

- D. **CHANGE PIN** Personal Identification Number is for change password to control the V-chip setup; it's included three steps. ENTER PIN to enable this function, then ENTER NEW PIN to change a new one. After that CONFIRM NEW PIN.

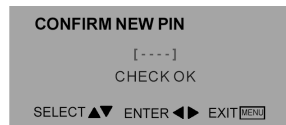

Sleep Timer

It is for set a time period after which the TV should switch itself to standby. The counter runs from 0 > 30 > 60 > 90 > 120 minutes.

The timer begins to count down from the number of minutes selected after the display has disappeared.

Note: To view the remaining time, press the **SLEEP** button once. To cancel the sleep time, repeatedly press the **SLEEP** button until... appears. If you turn the TV off after setting the sleep time, the setting will be erased. Set it again.


Set up




1. **Blue screen** for when no video input screen will be blue or blank. If it's ON, the screen will be in blue. If it's OFF, the screen will be blank. Pre-set is ON.
2. **Language** for different language OSD MENU includes English / French / Spanish. Pre-set is English.
3. **AIR/CATV** for different TV input solution, RF and cable.
4. **CH Search** is for auto memorizes all receiving channels of air TV or CATV programs.
5. **CH DEL. /ADD** is for add ">" or delete "<" the current channel for memorizes.
6. **RESET** is set up to default value.

PC Adjust

1. **Auto Adjust** is the function auto-sizing for VGA input.
2. **Contrast, Brightness, Focus, Clock, H-Position, V-Position** and **Color Temp** are the functions for PC adjustment.

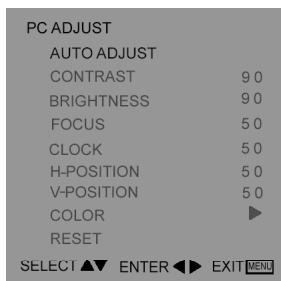

Color Temp for you can adjust the color temperature you prefer.

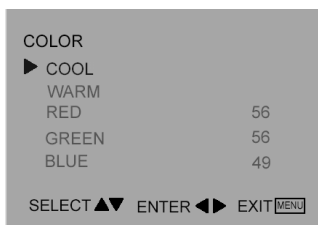


CONNECT PERIPHERAL EQUIPMENT

FRONT PANEL CONTROL KNOBS



- Power Key:** Press to turn on or off the TV.
MENU Key: Press to show the OSD menu and exit OSD menu at the TV.
Down / Up Key: Press to perform select function and channel.
- / + Key: Press to confirm your function selection and adjustment.
Source Key: Press to select your input source.

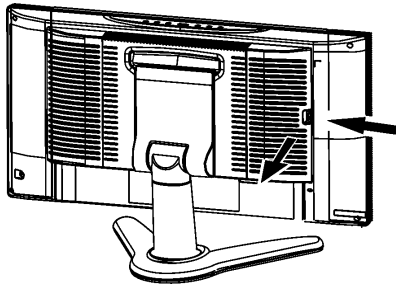

There is a wide range of video and audio equipment that can be connected to your TV. The following connection diagrams show you how to connect them.


PREPARATION

Remove the back plate at the back of the TV as shown on the illustration opposite. Lay the LCD TV with the screen down on a table, as it will be easier to connect your peripheral equipment. Please take your precautions not to damage the screen.

VIDEO RECORDER

How to connect

1. Connect the antenna cable ① to the **RF IN** port of your VCR.

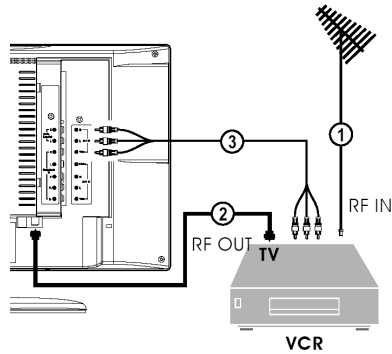

2. Connect another RF cable ② from the output **RF** of your VCR to the Antenna input of your TV. Better quality when playing from your **VCR** can be obtained if you also connect the Video, Audio LEFT AND right (only for stereo equipment) cables ③ to the **VIDEO, AUDIO L** and **R** inputs **AV**.

If you are using only mono equipment, connect only the **VIDEO** and the **AUDIO L (Mono)** ports.

If your VCR has an S-VHS video jack:

For improved picture quality, connect a **S-Video** cable with the S-VIDEO input on the TV instead of connecting the VCR to the **VIDEO** port of **AV2**.

S-Video does not provide audio, audio cables must still be connected to provide sound. (S-Video and AV2 has the same audio input port)


Watching VCR

1. If you use connection ②, select the TV channel 3 or 4.
2. If you use connection ③, select **VIDEO** or **S-VIDEO**, (see P7 TV/ VIDEO)
3. Insert videotape in the VCR and press the **PLAY** button.

CAMERA, CAMCORDER, VIDEO GAME SET, ...

How to connect

1. Composite Video:
Connect your camera, camcorder, videogame set,... to **Audio port** ② (Audio L for mono) and **Video port** ③.

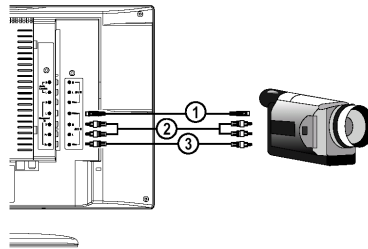

2. S-Video Connection
S-VHS quality with an S-VHS camcorder is obtained by connecting the S-VHS cable with the S-VIDEO input ① and **AUDIO** input ②.


How to use

1. Select **VIDEO** or **S-VIDEO** input source (see P7 TV/ VIDEO)
2. Turn on the external AV equipment.

DVD PLAYER

How to connect

1. Connect the three separate component video cables ① to the DVD player's **Y, Pb** and **Pr** ports and to the **Y, Pb** and **Pr** ports on the TV.

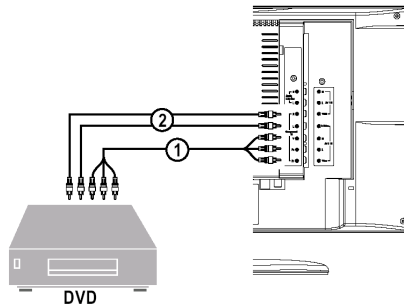


2. Connect the audio cables ② to the DVD player's **AUDIO L** and **R** ports and to the **L** and **R AUDIO** AV ports on the TV.

How to use

1. Select **COMPONENT**, (see P7 TV/ VIDEO)
2. Turn on the DVD set.

DIGITAL SET TOP BOX

Connect DTV set top box RF output to TV Antenna input (TV channel set to CH3 or CH4). If your DTV set top box has component (Y, Pb, Pr) video ports, use them for better picture.

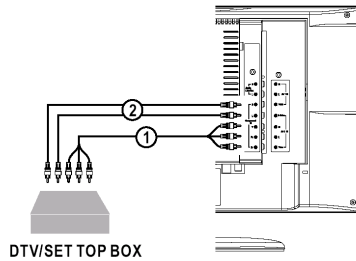

How to connect component video:


1. Connect the three separate component video cables ① to the DTV set-top box **Y**, **Pb** and **Pr** ports and to the **Y**, **Pb** and **Pr** ports on the TV.
2. Connect the audio cables ② to the DTV player's **AUDIO L** and **R** ports and to the **L** and **R AUDIO** AV ports on the TV.


How to use

1. Select **COMPONENT**, (see P7 TV/ VIDEO)
2. Turn on the DTV set-Top box set.

Warning: In case you notice scrolling images, wrong colors or no color, no picture or even combinations of these, on your screen, check if the connections are done in the right way. Check if the cable colors match with the Input connector colors.

HEADPHONE

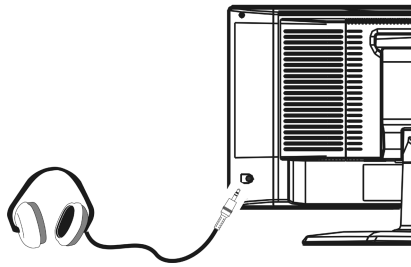

1. The earphone jack is located at the rear corner of the TV.
2. The  MUTE key on the remote control works on both internal speaker and the earphone.
3. Use volume key to adjust the volume.

Note: When a TV channel or external AV source is blocked because of a rating set via the Parental control menu, also the headphone is muted.

TIPS

Care of the screen

Do not rub or strike the screen with anything hard as this may scratch, mar, or damage the screen permanently.

Unplug the screen before cleaning the screen. Dust the TV by wiping the screen and the cabinet with a soft, clean cloth. If the screen requires additional cleaning, use a clean, damp cloth. Do not use liquid cleaners or aerosol cleaners.

Mobile telephone warning

To avoid disturbances in picture and sound, malfunctioning of your TV or even damage to the TV, keep away your mobile telephone from the TV.

End of life directives

We are paying a lot of attention to produce environmentally friendly in green focal areas. Your new receiver contains materials which can be recycled and reused.

At the end of its life specialized companies can dismantle the discarded receiver to concentrate the reusable materials and to minimize the amount of materials to be disposed of.

Please ensure you dispose of your old receiver according to local regulations.

PRODUCT SPECIFICATION

Feature	17" screen WXGA (1280 x 768) Resolution Wide Viewing Angle (170° H / 170° V) Built-in 181 channel Tuner with MTS, SAP, Closed Caption & V-chip PC Input (Max. Resolution : 1280 x 768/60Hz)
----------------	--

Items	Specification		
LCD Panel	Screen Size	17" TFT-LCD Panel	
	Aspect Ratio	15:9	
	Resolution	1280 x 768 (WXGA)	
	Display Area (opening) H x V	372mm x 223mm	
	Pixel Pitch	0.291mm x 0.291mm	
	Display colors	16.7 million	
	Contrast Ratio	600:1	
	Brightness	450cd / m ²	
	Viewing Angle	170°(Horizontal)/170°(Vertical)	
	Response Time	25ms	
	Lamp Type/Life	50000 hr	
Color Temperature	Cool / Warm		
TV Function	TV Tuning System	NTSC 181 Channel with Electronic PLL Tuner	
	Sound System	MTS / SAP	
	Closed Caption, V-chip	Yes	
	Color Systems	NTSC	
Video Inputs	AV1	RCA x 1	Audio L/R x 1
	AV2	RCA x 1	Audio L/R x 1 (Share)
		S-Video x 1	
	Component	YPbPr x 1	Audio L/R x 1

PC Input	Signal Input	Analog: D-Sub 15 pin (detachable cable)
	PnP compatibility	DDC 2B
	Input frequency	Analog: FH: 31.5KHz to 49KHz FV: 56Hz to 75Hz
	Recommended	Analog: 1280 x 768 (60Hz)
	Input Audio	Headphone Mini-jack for stereo (3.5ø)
Audio Output	Audio Output: L / R	Speaker (built-in): Two 5 watt speakers
		Headphone Mini-jack for stereo (3.5ø)
		Line Output (RCA L/R)
OSD language	English / French / Spanish	
Table Stand	Included	
Wall Mount	VESA 100 x 100 mm	
Power	Power Supply	AC100V~120V, 60Hz
	Power Consumption	<70W
Environment	Operating Temp.	+ 0°C ~ + 40°C
	Storage Temp.	- 25°C ~ + 60°C
	Operating Humidity.	10 % ~ 85 %
Panel Tilt	Forwards/Backwards/Rotation	-4° / +18° / ±25°
Dimension	W x H x D (with stand)	560 x 340 x 233 (mm)
Weight (net)	Kg (w/o Accessories)	6.8 Kg
Accessories	Remote Controller, Batteries (x2), AC Power Cord, D-sub Signal Cable, Audio line, User's Manual, QSG	

Compatibility Modes

VESA VGA	640 x 480	60	31,5	60	31,5
VESA VGA	640 x 480	72	37,9	72	37,9
VESA VGA	640 x 480	75	37,5	75	37,5
VESA VGA	720 x 400	70	31,5	70	31,5
SVGA	800 x 600	60	37,9	60	37,9
SVGA	800 x 600	72	48,1	72	48,1
SVGA	800 x 600	75	46,9	75	46,9
VESA XGA	1024 x 768	60	48,4	60	48,4
VESA XGA	1024 x 768	75	60,0	75	60,0
MAC 16"	832 x 624	74,55	49,725	-	-
MAC 19"	1024 x 768	75	60,24	-	-
SVGA CVT	1280x768	60	47,8	-	-

BEFORE CALLING SERVICE

Please make these simple checks before calling service. These tips may save you time and money since charges for receiver installation and adjustments of customer controls are not covered under your warranty.

Symptoms	Items to Check and Actions to follow
"Ghost" or double image	*This may be caused by obstruction to the antenna due to high rise buildings or hills. Using a highly directional antenna may improve the picture.
No power	*Check that the TV's AC power cord is plugged into the mains socket. *Unplug the TV, wait for 60 seconds. Then re-insert plug into the mains socket and turn on the TV again.
No picture	*Check antenna connections at the rear of the TV to see if it is properly connected to the TV. *possible broadcast station trouble. Try another channel. *Adjust the contrast and brightness settings. *Check the Closed Captions control. Some TEXT modes could block the screen,
Good picture but no sound	*Increase the VOLUME. *Check that the TV is not muted; press the button on the remote control.
Good sound but poor color	*Adjust the contrast, color and brightness settings.
Poor picture	*Sometimes, poor picture quality occurs when having activated an A-VHS camera or camcorder connected and having connected another peripheral at the same time. In this case switch off one of the other peripherals
Snowy picture and noise	*Check the antenna connection
Horizontal dotted line	*This may be caused by electrical interference (e.g. hairdryer, nearby neon lights, etc.) *Turn off the equipment.
Television not responding to remote control	*Check whether the batteries are working. Replace if necessary *Clean the remote control sensor lens on the TV. *You can still use the buttons at the front of your TV. *Select the TV mode to be sure your remote control is in the TV mode.

Customer Support

For technical support or product service, see the table below or contact your reseller.

NOTE: You will need the product serial number.

Country/ Region	Web site	T = Telephone F = FAX	Email
United States	www.viewsonic.com/ support	T: (800) 688-6688 F: (909) 468-1202	service.us@ viewsonic.com
Canada	www.viewsonic.com/ support	T: (800) 688-6688 F: (909) 468-1202	service.ca@ viewsonic.com
United Kingdom	www.viewsoniceurope.com	T: 0800 833 648 F: (01293) 643910	service.eu@ viewsoniceurope.com
Europe, Middle East, Baltic countries, and North Africa	www.viewsoniceurope.com	Contact your reseller	service.eu@ viewsoniceurope.com
Australia and New Zealand	www.viewsonic.com.au	T: +61 2 9906 6277 F: +61 2 9906 6377	service@au. viewsonic.com
Singapore/ Malaysia/Thailand	www.viewsonic.com.sg	T: 65 273 4018 F: 65 273 1566	service@sg. viewsonic.com
South Africa/ Other countries	www.viewsonic.com	T: 886 2 2246 3456 F: 886 2 8242 3668	service@sd. viewsonic.com
Hong Kong	www.hk.viewsonic.com	T: 886 2 2246 3456 F: 886 2 8242 3668	service@hk. viewsonic.com

GLOSSARY

Audio / Video Inputs

Located on the rear and the front of the receiver these connectors (RCA phono type plug) are used for the input of audio and video signals. Designed for use with VCRs (or other accessories) in order to receive higher picture resolution and offer sound connection options.

Menu

An on-screen listing of features shown on the TV screen is made available for user adjustments.

MPAA

Motion Picture Association of America

Multichannel Television sound (MTS)

The broadcasting standard which allows stereo sounds to be transmitted with the TV picture.

Programming

The procedure of adding or deleting channel numbers into the TV's memory.

In this way the TV remembers only the locally available or desired channel numbers and skips over any unwanted channel numbers.

RF

Radio Frequency or modulated signal design used as the carrier for television broadcasts.

Second Audio Program (SAP)

Another or additional audio channel provided for in the Multichannel Television Sound (MTS) broadcast standard. A monaural soundtrack included within the recorded or video signal (usually containing a second language translation for the displayed program).

Sleep Timer

You can set a time period for which the TV will automatically turn itself off.

S-Video Input

You can connect your TV set to a high-resolution video source (such as Super VHS video-cassette recorder, Laser Disc player and DVD Home Theater Set) in-order to provide maximum consumer viewing satisfaction.

Limited Warranty

VIEWSONIC LCD DISPLAY

What the warranty covers:

ViewSonic® warrants its products to be free from defects in material and workmanship during the warranty period. If a product proves to be defective in material or workmanship during the warranty period, **ViewSonic** will, at its sole option, repair or replace the product with a like product. Replacement product or parts may include remanufactured or refurbished parts or components.

How long the warranty is effective:

Viewsonic N1750w TV is warranted for one (1) year for all parts including the light source and one (1) year for all labor from the date of the first consumer purchase.

Who the warranty protects:

This warranty is valid only for the first consumer purchaser.

What the warranty does not cover:

1. Any product on which the serial number has been defaced, modified or removed.
2. Damage, deterioration or malfunction resulting from:
 - a. Accident, misuse, neglect, fire, water, lightning, or other acts of nature, unauthorized product modification, or failure to follow instructions supplied with the product.
 - b. Repair or attempted repair by anyone not authorized by **ViewSonic**.
 - c. Any damage of the product due to shipment.
 - d. Removal or installation of the product.
 - e. Causes external to the product such as electrical power fluctuations or failure.
 - f. Use of supplies or parts not meeting **ViewSonic's** specifications.
 - g. Normal wear and tear.
 - h. Any other cause which does not relate to a product defect.
3. Removal, installation, and set-up service charges.

How to get service:

1. For information about receiving service under warranty, contact **ViewSonic Customer Support**. You will need to provide your product's serial number.
2. To obtain service under warranty, you will be required to provide (a) the original dated sales slip, (b) your name, (c) your address, (d) a description of the problem, and (e) the serial number of the product.
3. Take or ship the product freight prepaid in the original container to an authorized **ViewSonic** service center or **ViewSonic**.
4. For additional information or the name of the nearest **ViewSonic** service center, contact **ViewSonic**.

Limitation of implied warranties:

THERE ARE NO WARRANTIES, EXPRESSED OR IMPLIED, WHICH EXTEND BEYOND THE DESCRIPTION CONTAINED HEREIN INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Exclusion of damages:

VIEWSONIC'S LIABILITY IS LIMITED TO THE COST OF REPAIR OR REPLACEMENT OF THE PRODUCT. VIEWSONIC SHALL NOT BE LIABLE FOR:

1. DAMAGE TO OTHER PROPERTY CAUSED BY ANY DEFECTS IN THE PRODUCT, DAMAGES BASED UPON INCONVENIENCE, LOSS OF USE OF THE PRODUCT, LOSS OF TIME, LOSS OF PROFITS, LOSS OF BUSINESS OPPORTUNITIES, LOSS OF GOODWILL, INTERFERENCE WITH BUSINESS RELATIONSHIPS, OR OTHER COMMERCIAL LOSS, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.
2. ANY OTHER DAMAGES, WHETHER INCIDENTAL, CONSEQUENTIAL OR OTHERWISE.
3. ANY CLAIM AGAINST THE CUSTOMER BY ANY OTHER PARTY.

Effect of state law:

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. Some states do not allow limitations on implied warranties and/or do not allow the exclusion of incidental or consequential damages, so the above limitations and exclusions may not apply to you.

Sales outside the USA and Canada:

For warranty information and service on ViewSonic products sold outside of the USA and Canada, contact ViewSonic or your local ViewSonic dealer.

Safety Guidelines

Warning: This device must be operated with the original power supply, part number: 12VDC LSE9901B1250, 12VDC UP06031120.

CAUTION: The socket-outlet should be installed near the equipment and should be accessible.



CAUTION: Use a power cable that is properly grounded. Always use the appropriate AC cord that is certified for the individual country. Some examples are listed below:

USA.....UL	Switzerland SEV
CanadaCSA	Britain.....BASE/BS
GermanyVDE	Japan Electric Appliance Control Act

IMPORTANT NOTICE CONCERNING POWER CORD SELECTION

The power cord set for this unit is enclosed and has been selected according to the country of destination and must be used to prevent electric shock. Use the following guidelines if it is necessary to replace the original cord set or if the cord set is not enclosed.

  The female receptacle of the cord set must meet IEC-60320 requirements and may look like figure A1 below:



For the United States and Canada

In the United States and Canada the male plug is a NEMA5-15 style (Figure A2), IL Listed, and CSA labeled. For units, which are mounted on a desk or table, type SVT or SJT cord sets may be used. For units which sit on the floor, only SJT type cord sets may be used. The cord set must be selected according to the current rating for you unit. Consult the table below for the selection criteria for power cords used in the United States and Canada.

Cord Type	Size of Conductors in Cord	Maximum Current Rating of Unit
SJT	18 AWG	10 Amps
	16 AWG	12 Amps
	14 AWG	12 Amps
SVT	18 AWG	10 Amps
	17 AWG	12 Amps

Compliance Information for USA

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorientate or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Warning

To assure continued FCC compliance, the user must use a grounded power supply cord and the provided shielded video interface cable with bonded ferrite cores. If a BNC cable is going to be used, use only a shielded BNC(5) cable. Also, any unauthorized changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

ViewSonic Corporation

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>