

# ViewSonic®

**N3251w**

**LCD TV**

- User Guide

- Guide de l'utilisateur

- Guía del usuario



**ViewSonic®**

**Model No. : VS11335-1M**

# Contents

Compliance Information .....	1
Important Safety Instructions .....	2
Copyright Information .....	3
Product Registration.....	3
Antenna Installation Instructions .....	4
Cleaning the LCD TV .....	4

## Getting Started

Package Contents .....	5
Front View of the Product.....	6
Rear View of the product.....	7
Remote Control .....	8
Installation .....	10
Basic Operation.....	15

## OSD Functions

Video Menu .....	18
Audio Menu .....	18
TV Menu.....	19
Setup Menu .....	19
DTV Menu .....	21
VGA Menu.....	24
V-Chip Menu .....	24
PIP/POP .....	27

## Other Information

Specifications .....	29
Troubleshooting .....	30
Customer Support .....	31
Limited Warranty .....	32

## Compliance Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning


the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### FCC Warning

To assure continued FCC compliance, the user must use grounded power supply cord and the cables which are included with the equipment or specified. Also, any unauthorized changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

## Important Safety Instructions

1. Read these instructions completely before using the equipment.
2. Keep these instructions in a safe place.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this equipment near water. **Warning:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
6. Clean with a soft, dry cloth. If further cleaning is required, see “Cleaning the LCD TV” in this guide for further instructions.
7. Do not block any ventilation openings. Install the equipment in accordance with the manufacturer’s instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other devices (including amplifiers) that produce heat.
9. Do not attempt to circumvent the safety provisions of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade and the third prong are provided for your safety. If the plug does not fit into your outlet, consult an electrician for replacement of the outlet.
10. Protect the power cord from being tread upon or pinched, particularly at the plug, and the point where it emerges from the equipment. Be sure that the power outlet is located near the equipment so that it is easily accessible.
11. Only use attachments/accessories specified by the manufacturer.
12.  Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this equipment when it will be unused for long periods of time.
14. Refer all servicing to qualified service personnel. Service is required when the unit has been damaged in any way, such as: if the power-supply cord or plug is damaged, if liquid is spilled onto or objects fall into the unit, if the unit is exposed to rain or moisture, or if the unit does not operate normally or has been dropped.
15. This product is only to perform the useful function of entertainment and visual display tasks are excluded.

# Copyright Information

Copyright © ViewSonic® Corporation, 2006. All rights reserved.

ViewSonic, the three birds logo, OnView, ViewMatch, and ViewMeter are registered trademarks of ViewSonic Corporation.

Disclaimer: ViewSonic Corporation shall not be liable for technical or editorial errors or omissions contained herein; nor for incidental or consequential damages resulting from furnishing this material, or the performance or use of this product.

In the interest of continuing product improvement, ViewSonic Corporation reserves the right to change product specifications without notice. Information in this document may change without notice.

No part of this document may be copied, reproduced, or transmitted by any means, for any purpose without prior written permission from ViewSonic Corporation.

# Product Registration

To meet your future needs, and to receive any additional product information as it becomes available, please register your product on the Internet at: [www.viewsonic.com](http://www.viewsonic.com).

<b>For Your Records</b>	
<b>Product Name:</b>	<b>N3251w ViewSonic LCD TV</b>
<b>Model Number:</b>	<b>VS11335-1M</b>
<b>Document Number:</b>	<b>N3251w-1M_UG_ENG Rev. 1A 03-31-06</b>
<b>Serial Number:</b>	_____
<b>Purchase Date:</b>	_____

## Product disposal at end of product life

ViewSonic is concerned about the preservation of our environment. Please dispose of this product properly at the end of its useful life. Your local waste disposal company may provide information about proper disposal.

The lamp in this product contains mercury. Please dispose of properly in accordance with environmental laws of your location.

# Antenna Installation Instructions

## 1. Outdoor Antenna Grounding


If an outside antenna or cable system is connected to the product be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges, Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

## 2. Lightning

For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges. Do not disconnect the antenna or the power cord during a heavy storm lightning may strike while you are holding the cable cord, causing serious injury; turn off your LCD TV and wait for the weather to improve.

## 3. Power Lines

An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits, When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

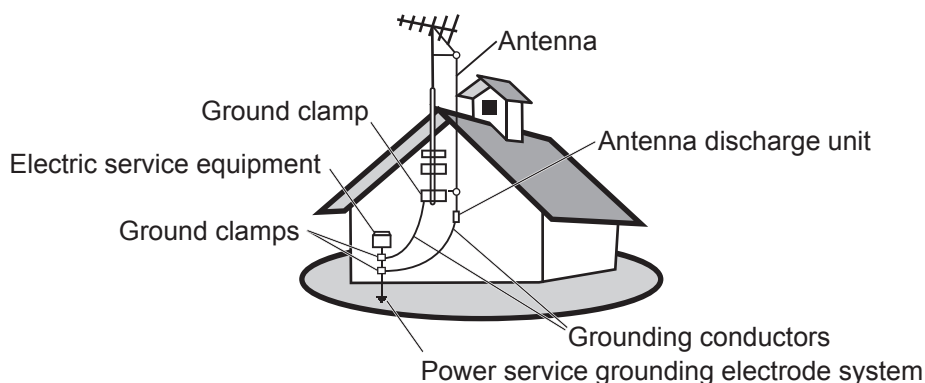

## Cleaning the LCD TV

- Make sure the LCD TV is turned off.
- Never spray or pour any liquid directly onto the screen or case.

### To clean the screen:

1. Wipe the screen with a clean, soft, lint-free cloth. This removes dust and other particles.
2. If still not clean, apply a small amount of non-ammonia, non-alcohol based glass cleaner onto a clean, soft, lint-free cloth, and wipe the screen.

### To clean the case:

1. Use a soft, dry cloth.
2. If still not clean, apply a small amount of a non-ammonia, non-alcohol based, mild non-abrasive detergent onto a clean, soft, lint-free cloth, then wipe the surface.

## Disclaimer

ViewSonic® does not recommend the use of any ammonia or alcohol-based cleaners on the LCD TV screen or case. Some chemical cleaners have been reported to damage the screen and/or case of the LCD TV. ViewSonic will not be liable for damage resulting from use of any ammonia or alcohol-based cleaners.

# Getting Started

Congratulations on your purchase of a ViewSonic® LCD TV.


*Important! Save the original box and all packing material for future shipping needs.*

## Package Contents

Your LCD TV package includes:

- LCD TV
- Power Cord
- VGA Cable
- Quick Start Guide
- 44-Key Remote Control with batteries
- RCA Cable
- ViewSonic User Guide

## Front View of the Product

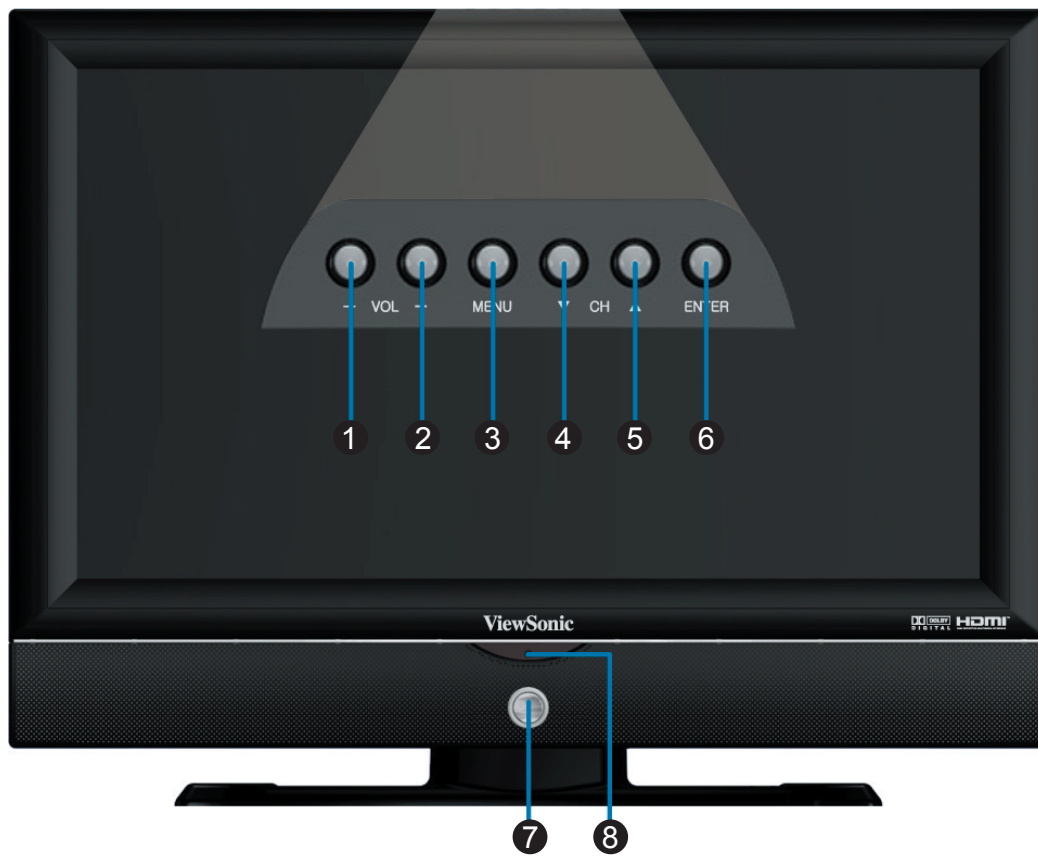

- 1 Volume Down**  
Decrease sound volume or adjust a highlighted control while in OSD menu.
- 2 Volume Up**  
Increase sound volume or adjust a highlighted control while in OSD menu.
- 3 Menu**  
Turn OSD menu ON/OFF.
- 4 CH Down**  
Channel down when source is at TV/DTV or select a control while in OSD menu.
- 5 CH Up**  
Channel up when source is at TV/DTV or select a control while in OSD menu.
- 6 ENTER**  
To highlight a control in OSD menu.
- 7 Power ON/OFF button**
- 8 Power LED Indicator / Remote Control Receiver**



Dolby and the double-D symbol are registered trademarks of Dolby Laboratories.


(Only for DTV source in this model.)

### **Note:**

1. Press **VOL+** and **MENU** buttons at the same time to lock power button, and press **VOL+** and **MENU** buttons again to unlock it.
2. Press **VOL-** and **VOL+** buttons at the same time to lock OSD menu, and press **VOL-** and **VOL+** buttons again to unlock it.




## Rear View of the Product

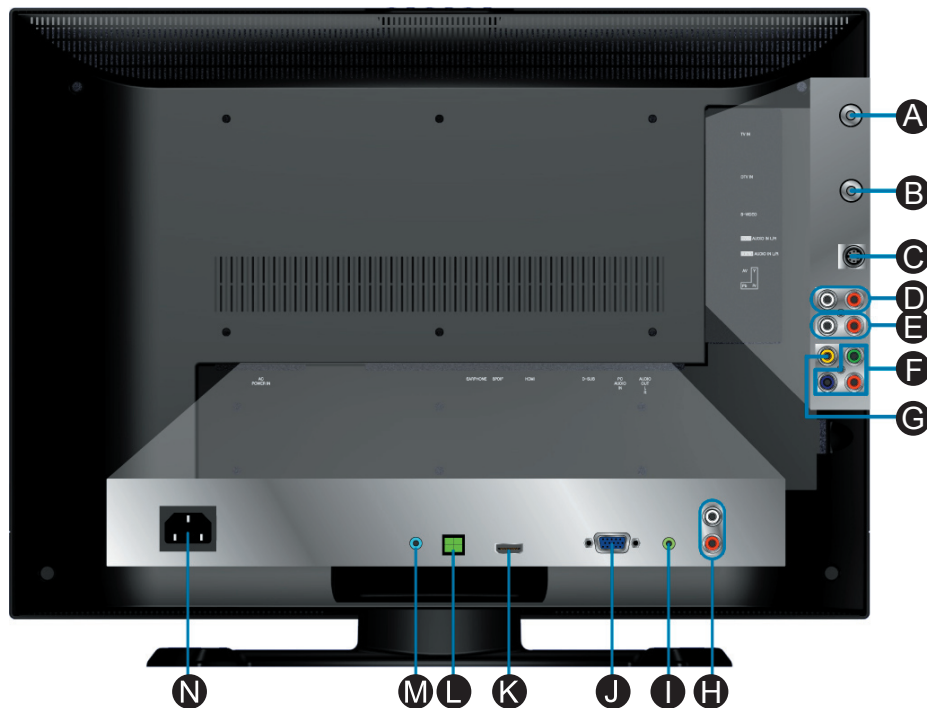

- A Analog TV input**  
Connect to NTSC TV source.
- B Digital TV input**  
Connect to ATSC TV source.
- C S-Video input**  
Connect this port to the S-Video output of A/V device.
- D AV/ S-Video signal Audio input (left/right)**  
Connect this port to the RCA audio output connectors of your A/V device.
- E YPbPr signal Audio input (left/right)**  
Connect this port to the RCA audio output connectors of your A/V device.
- F YPbPr signal input**  
Connect this port to the YPbPr output of A/V device.
- G Composite Video input**  
Connect this port to the composite video output of A/V device.
- H Audio output**  
Connect this port to your A/V device with audio in (RCA) connectors or to audio amplifier.
- I PC Audio input**  
Connect this port to PC line out jack.
- J VGA signal input**  
Connect this port to the VGA output of your PC.
- K HDMI Input Terminal**  
Connect this port to the HDMI output of A/V device.
- L SPDIF Optical output**  
Connect this port to the SPDIF input of A/V device.
- M Headphone Jack**  
Connect this port to your headphone.
- N Power (AC input)**  
Using power cord provided, connect to a power source.

# Remote Control

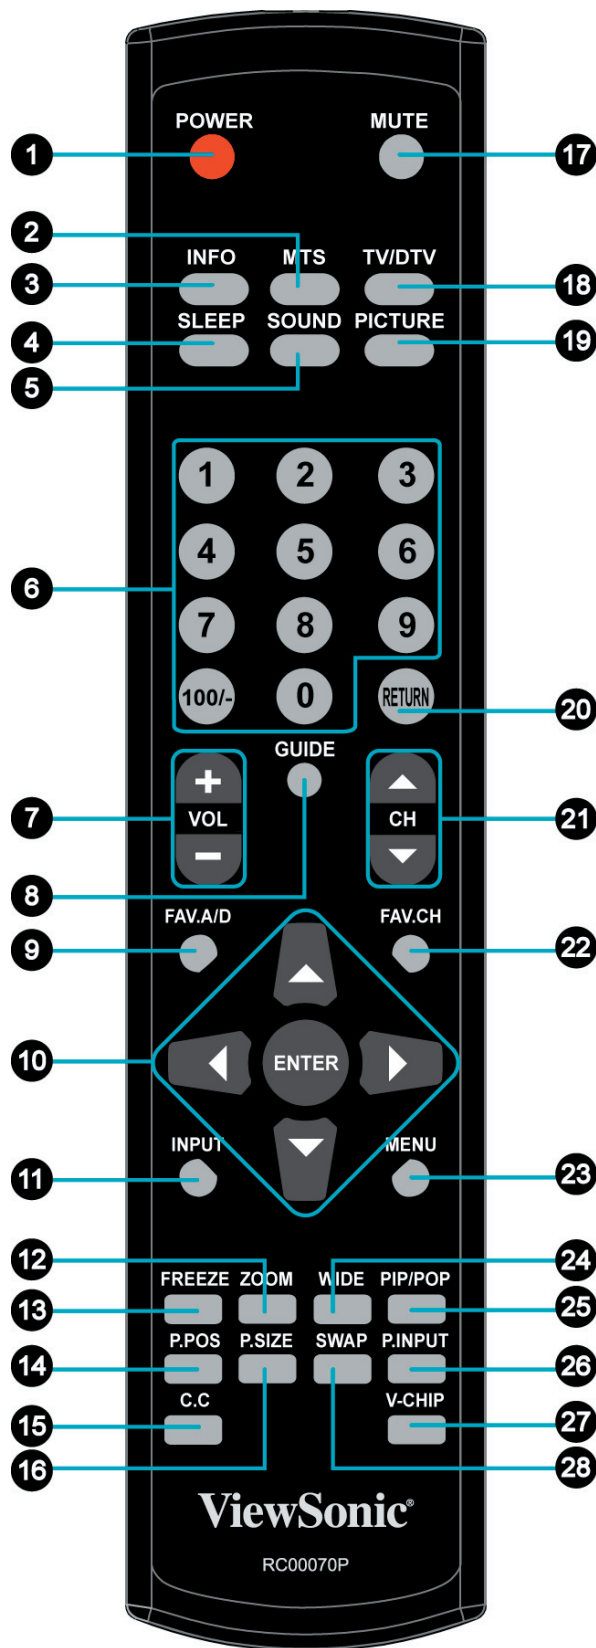


## Remote control button function as follow

1	<b>POWER</b>	Power ON/OFF
2	<b>MTS</b>	Select Mono, Stereo or SAP in TV / Select audio language in DTV
3	<b>INFO</b>	Display current information
4	<b>SLEEP</b>	Set TV Sleep timer
5	<b>SOUND</b>	Select sound modes
6	<b>0~9, 100/- number button</b>	Directly channel select
7	<b>VOL+ and VOL-</b>	Adjust volume UP/DOWN
8	<b>GUIDE</b>	Show electronic program guide (EPG)
9	<b>FAV.A/D</b>	To skip or restore Favorite Channels
10	<b>UP/ DOWN /LEFT/ RIGHT/ ENTER</b>	UP/ DOWN/ LEFT/ RIGHT: Navigate and adjust OSD function ENTER: Enter the function setting
11	<b>INPUT</b>	Input source select
12	<b>ZOOM</b>	Adjust window size
13	<b>FREEZE</b>	“Freeze-Frame” the current screen
14	<b>P. POS</b>	Adjust sub-screen window position
15	<b>C.C</b>	Displaying captions during closed caption source and closed caption mode select
16	<b>P.SIZE</b>	Adjust sub-screen window size
17	<b>MUTE</b>	Volume mute ON/OFF
18	<b>TV/DTV</b>	Swap between TV/DTV. Swap to TV when in other source
19	<b>PICTURE</b>	Select picture modes
20	<b>RETURN</b>	Return to previous channel
21	<b>CH▲ and CH▼</b>	Adjust Channel UP/DOWN
22	<b>FAV. CH</b>	Select from preset Favorite Channels
23	<b>MENU</b>	On Screen Display (OSD) menu ON/OFF
24	<b>WIDE</b>	Change the image size
25	<b>PIP/POP</b>	Toggle to enable/disable Picture in Picture/Picture Out of Picture function
26	<b>P.INPUT</b>	POP/PIP input source select
27	<b>V-CHIP</b>	Set V-Chip rating
28	<b>SWAP</b>	Switch between main screen and sub-screen

**Note:** PIP means Picture In Picture. POP means Picture Out Of Picture.

# Installation

## 1. Insert Remote Control Batteries

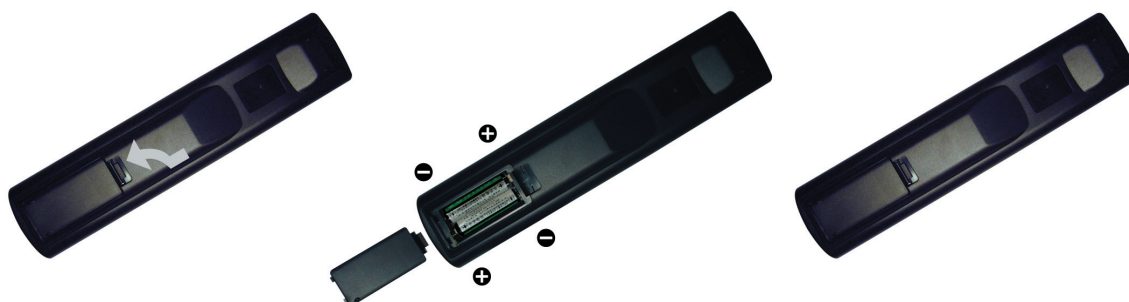

- 1 Remove the battery cover by pulling then lifting the knob on the cover.
- 2 Insert the batteries, corresponding to the (+) and (-) markings on the battery compartment.
- 3 Reattach the battery cover.




### CAUTION

- Only use the specified AAA batteries.
- Do not mix new and old batteries. This may result in cracking or leakage, which may pose a risk of fire or lead to personal injury.
- Insert batteries according to (+) and (-) markings. Inserting the batteries incorrectly may result in cracking or leakage, which may pose a risk of fire or lead to personal injury.
- Dispose of the battery in accordance with local laws and regulations.
- Keep the battery away from children and pets.
- When the remote control will not to be used for an extended period, remove the batteries.

## 2. Connecting RF antenna, Cable TV Wire or DTV cable

Make sure the power is OFF before installing your LCD TV.

- 1) **TV:** Connect the LCD TV to TV antenna or set-top-box with 75-ohm coaxial cable. Preset the TV channels into memory with **Auto Scan** function when using an antenna or cable TV system without a cable connector box (See page 19).

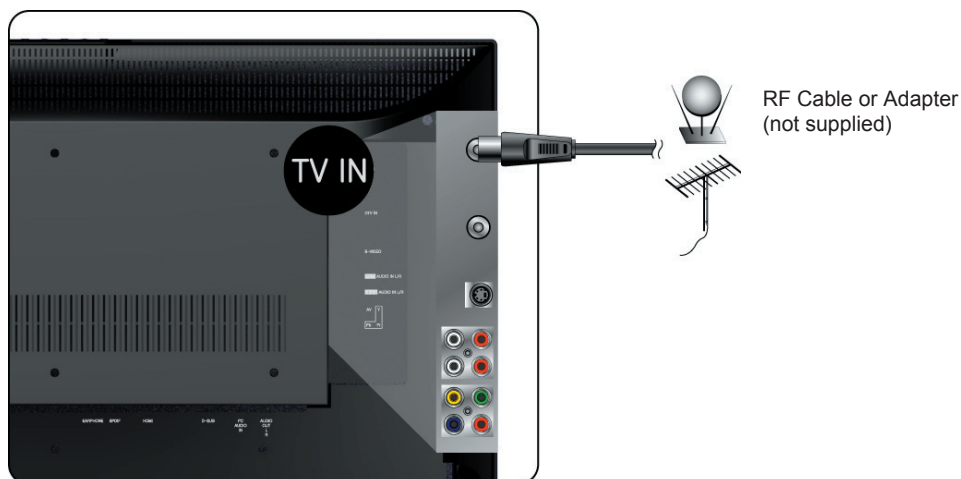


2) **DTV:** Connect the LCD TV to the cable with DTV signals and preset DTV channels into memory with AUTO SCAN function in DTV menu (see page 21).




### 3. Connecting to DVD / Set Top Box

Connect Video/ Audio cables from compatible devices into the back panel of LCD TV.


1) With AV cable:

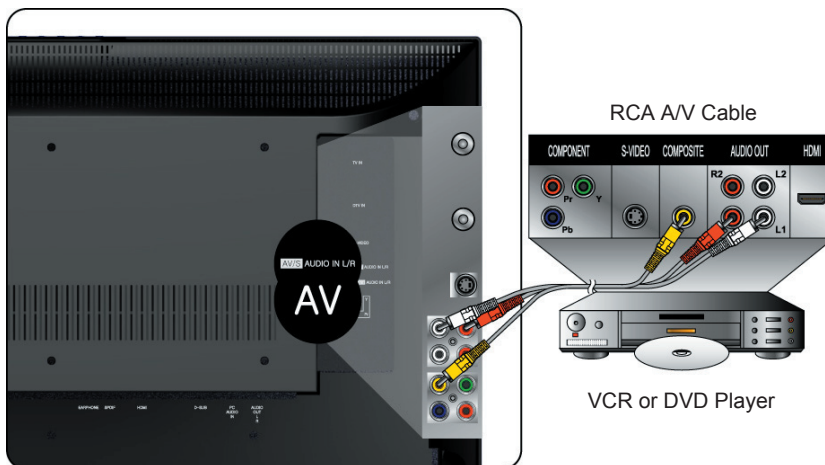


2) With S-Video cable:

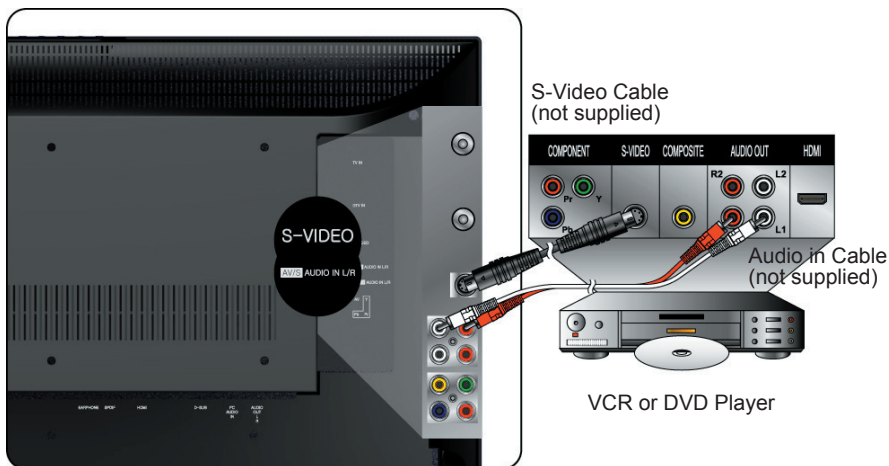

### 3) With YPbPr cable:

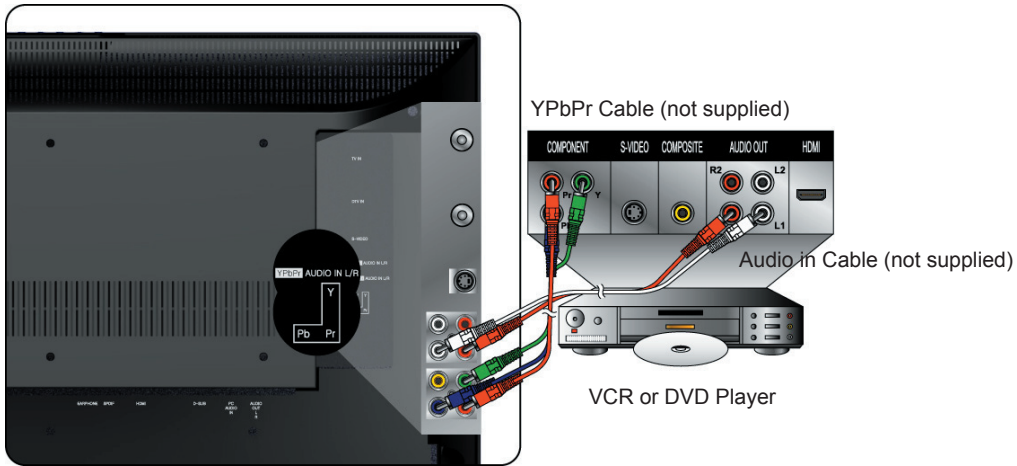


### 4) With HDMI cable:

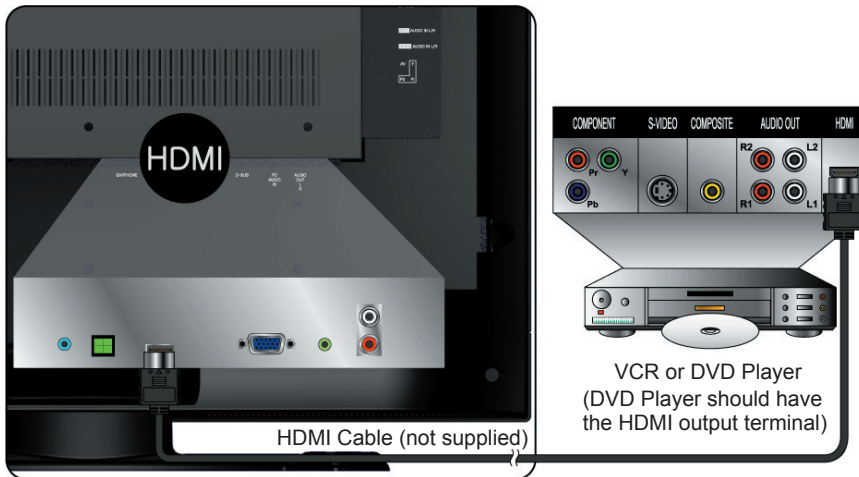

## 4. Connecting to External Stereo System to Listen to LCD TV Sound

Connect the audio output terminal of the LCD TV to audio in terminal of the stereo system (stereo system sold separately).

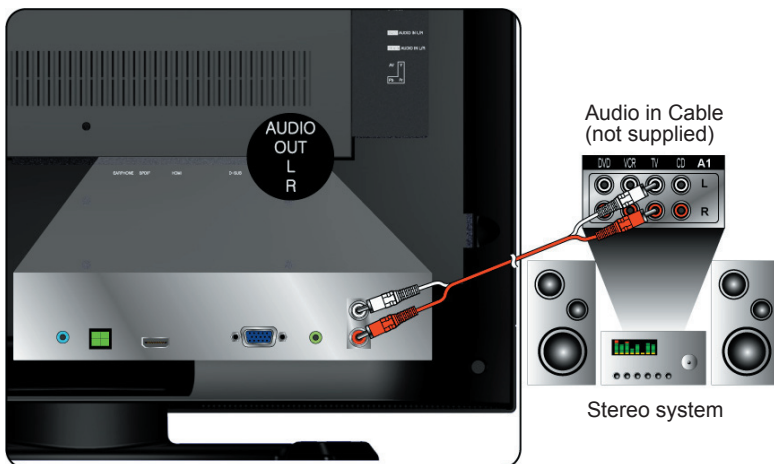


### 5. Connecting to the Headphone

Connect the headphone to the headphone output terminal of the LCD TV. (Headphone sold separately).




### 6. Connecting to a Computer

Connect the VGA cable from VGA output of computer to the VGA terminal input of your LCD TV.

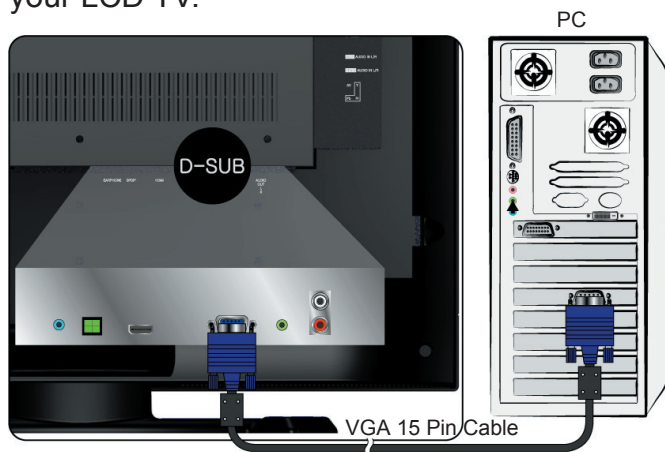


### 7. PC Audio In

Connect the Audio cable (green) from audio output of your computer to the audio input terminal (green) of the LCD TV.

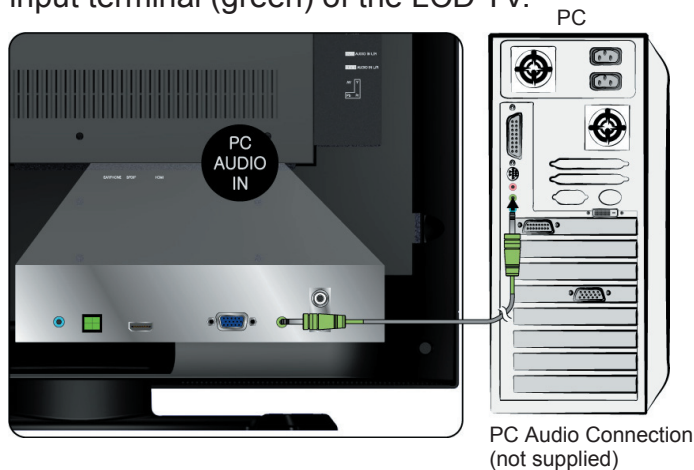

## 8. Connecting to A/V Device with SPDIF input

Connect SPDIF optical cable from A/V device into the SPDIF output connector of LCD TV.

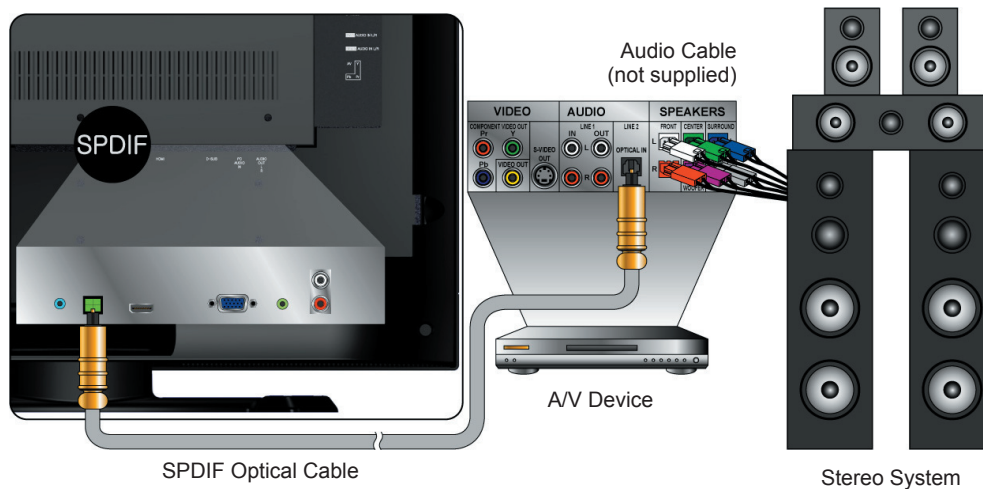

## 9. Connecting with the power cord

Connect the power cord to the AC inlet on the back of your LCD TV, after all connections have been completed, and plug the other end of the power cord into a correctly grounded electrical outlet.





# Basic Operation

To operate your LCD TV, you may use the TV remote control or top panel buttons to select input source, change channels, or adjust volume.

## Turning the LCD TV

Before using the LCD TV:

1. Connect external equipment properly.
2. Insert the power plug, and the power LED indicator will light red.

## Power On/Off

To turn the LCD TV on/off:


Press the **POWER** button under the LCD TV, or press the **POWER** button on your remote control to turn on/off the TV. The power LED indicator lights green when the LCD TV is on.

## Selecting input source

To select the required input source:

Press the **INPUT** button on the remote control, Use ◀▶ to select the required input source between TV, DTV, HDMI, YPbPr, AV, S-Video, and VGA.

To confirm the selection, press **ENTER**.

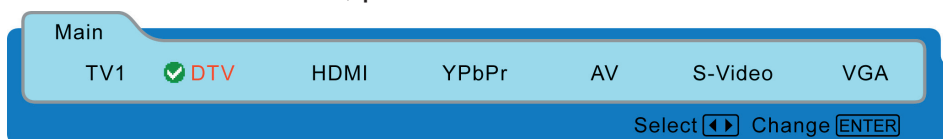

## Volume adjusting

Press **VOL+/-** to adjust the volume.

To silence volume, press **MUTE**.

If you want to restore volume, press **MUTE** again, or press **VOL+/-** directly.




## INFO


To display the current information of the LCD TV:

Press **INFO**, and the current state will be displayed on the screen. (It shows all or some of the information about Input, Channel, Resolution, Audio Type, Smart Sound Modes, and Smart Picture Modes, depending on what input source it is in.)

TV

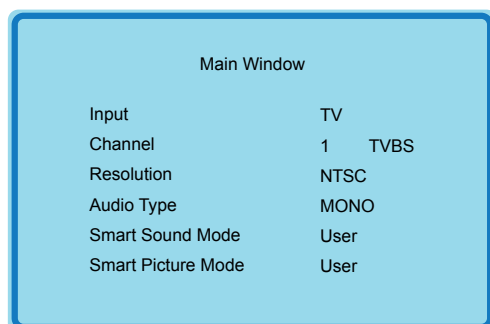


DTV

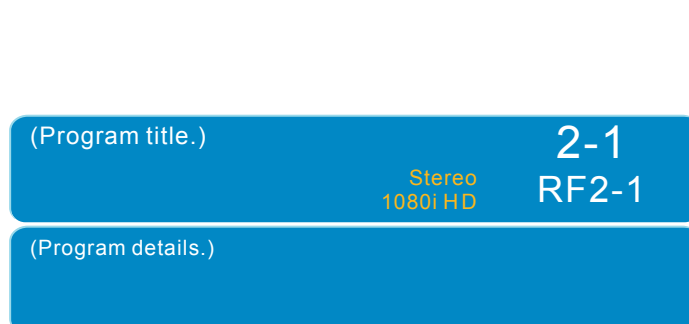

## DTV Guide

To see the electronic program guide of the channel, press the **GUIDE** button on your remote control. It will display the background information related to the channel program.

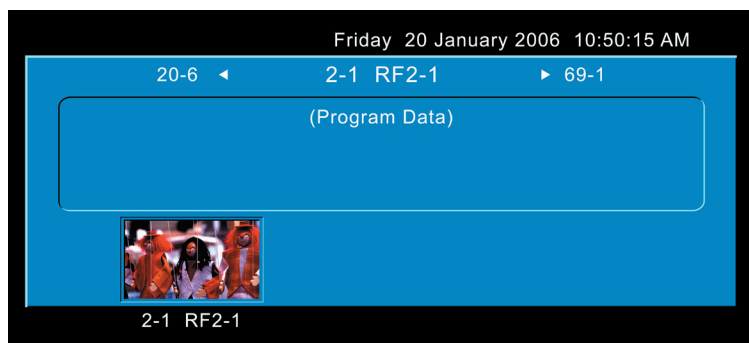


---

## Picture

Press the **PICTURE** button on the remote control to switch between the **Smart Picture** modes of User, Cinema, Sport, Vivid, and Hi-Bright.

---

## Sound

Press the **SOUND** button on the remote control to switch between the **Smart Sound** modes of User, Rock, POP, Live, Dance, Techno, Classic, and Soft.

---

## Channel Select

Press number key or **CH ▲/▼** button to select your desired channel.

### 1. In TV mode

The **100/-** button functions as "100".

If your desired channel is below 100, directly press number buttons. If your desired channel is over 100, press **100/-** button first, and then press the other two number buttons.

Ex: Your desired number is 8.

Press **0** → press **8**, or press **8** only.

Ex: Your desired number is 110.

Press **100/-** → press **1** → press **0**.

\* Return to the previous channel, press **RETURN** button.

### 2. In DTV mode

The **100/-** button functions as "-". Use **100/-** button to select the sub channel in DTV.

Ex: Your desired number is 80-3.

Press **8** → press **0** → press **100/-** → press **3**.

---

## Sleep Time Setting

Repeatedly press **SLEEP** button to set the off timer. The function is used to automatically shut off the LCD TV after a preset period of time passed. There are several times for choice – OFF, 30min, 60min, 90min, or 120min.

## Zoom

Press **ZOOM** button repeatedly to select the screen size. You can select from 1/8, 1/4, 1/2, 1, x2, x4, and x8.

---

## Favorite Channel

You can press **FAV.CH** button to watch your favorite channels.

Use **FAV.A/D** button to add the current channel to your favorite channels, or to delete it from your favorite channels. You can add up to 10 favorite channels.

---

## Freeze Picture

Press **FREEZE** button to freeze picture. However, the sound still continues.

---

## Using the OSD function

You can use the OSD menus and options to adjust various settings by using the remote control.

The basic operation is as following:


- Press **MENU** to display OSD Menu.
- Press ◀▶ to select your desired top Menu.
- Use ▲▼ to select the control you want to adjust.
- When selecting the control with **Press <Enter>**, press **ENTER** to enable the function.
- Press ◀▶ to adjust the settings.
- Press **MENU** to exit from the OSD menu.

## OSD Functions

### ADVANCED OPERATION — OSD MENU

#### Video Menu — Adjusting the picture quality

Video Menu is active in all but the VGA input source.

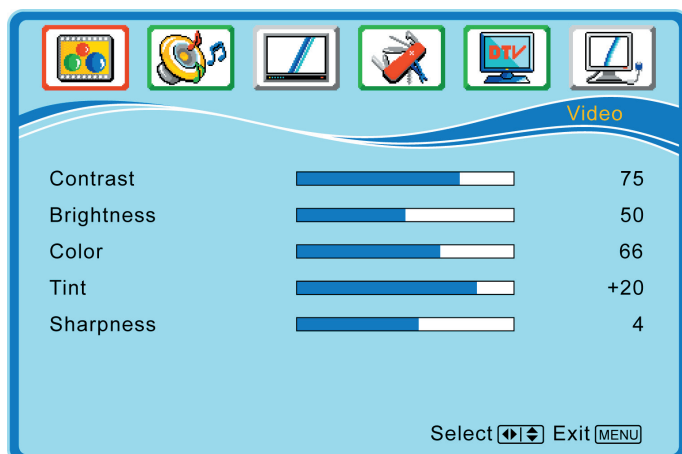

- **Contrast:** To adjust contrast of video. (right: Max, left: Min).
- **Brightness:** To adjust luminance of video. (right: Max, left: Min).
- **Color:** To adjust color. (right: brilliant color, left: pale color).
- **Tint:** To adjust tint level. (right: greenish tone, left: reddish tone).
- **Sharpness:** To adjust picture sharpness. (right: sharper, left: softer).

**Note:** To adjust the Video settings, Smart Picture must be set to the User mode. (Select through the Picture button on the remote control)

#### Audio Menu — To set the audio quality and status

Audio Menu is active in all but the VGA input source.



- **Bass:** To adjust bass.
- **Treble:** To adjust the treble
- **Balance:** To adjust left and right audio balance.
- **Surround:** To enjoy a concert hall effect, select **On** when stereo is playing.
- **Audio Out:** To control sound output ON/OFF from the RCA audio out connectors.

 
**Note:** To adjust the Audio settings, Smart Sound must be set to the User mode. (Select through the Sound button on the remote control)

## TV Menu — To set up for TV

It is only active in TV source.



- **Tuner Mode:** To select Cable or Air as the TV source.
- **Auto Scan:** To auto scan the TV channels. Press **ENTER** to start auto scanning TV channels. Press **ENTER** again at any time to interrupt scanning.



- **TV:** To select the TV channel to be skipped. Press ◀▶ to change channel.
- **Channel Add/Del.:** Select **Delete** to skip the channel appointed, or select **Add** to restore the channel appointed.
- **Channel Edit:** Press **ENTER** to edit a name for the channel appointed. Use ▲▼◀▶ to select the letters you want, and use **BackSpace** key to delete backwards. Move the cursor to **OK** and then press **ENTER** to complete and save the channel name. To cancel editing, choose **Cancel** or exit without pressing **OK**.


## Setup Menu — To set up OSD window

Setup Menu is active in all input sources.



- **Language:** To select a OSD language from English, French or Spanish.
- **Parental:** To set up parental control.

When you enter this control, the screen below will be displayed.

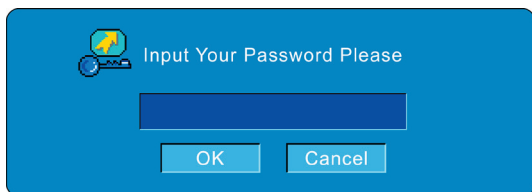

The factory default of the password is "0000".


To enable parental control, input the password, press ▼ button to focus on "ok" key, and press **ENTER**. (select **Cancel** if you want to exit)

After entering, the following screen will be shown.



**Channel Lock:** To lock channels. Use ◀▶ to select the channel you want to lock, and then press **ENTER** to lock or unlock it.

**Change Password:** To change the password, press **ENTER** and enter the password again. Press **ENTER**, and the following screen appears.

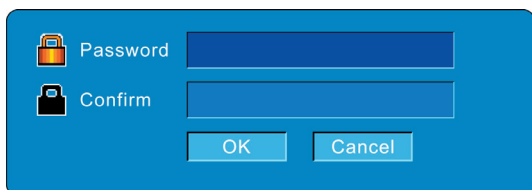

Enter the new password, use ▼ to move the cursor down, and then enter the new password again, press **OK** to confirm or **Cancel** to exit.

**Note:** Please make sure you remember your new password after changing, because you cannot recall the default setting of the password by any selection.

**Clear All:** To clear all the locks set before, press **ENTER**.

Press **MENU** to return to the previous page.


- **Color Temperature:** To select the color temperature from Warm, Cold, Normal or User. (If you select User, you can adjust the degree of R, G, B in Color Temp. to suit your personal preference.)
- **Back Light:** To adjust the luminance of the back light.
- **Aspect Ratio:** To select image size between Normal, Full, Wide1, Wide2, Wide3, 4:3, 16:9, and No scale.
- **OSD Timeout:** To setup the display time of OSD. (5, 15, 45, and 60 seconds)
- **Memory Recall:** To restore the factory default settings.

## DTV Menu — To set up DTV settings


It is only active in DTV sources.




- **Audio Language:** To select an audio language from English, French, or Spanish.
- **Time Zone:** To select Time Zones.
- **SPDIF Type:** To select the type of audio transfer file format.
- **Auto Scan:** Press **ENTER** to start scanning DTV channels automatically. Press **MENU** at any time to cancel Auto Scan.

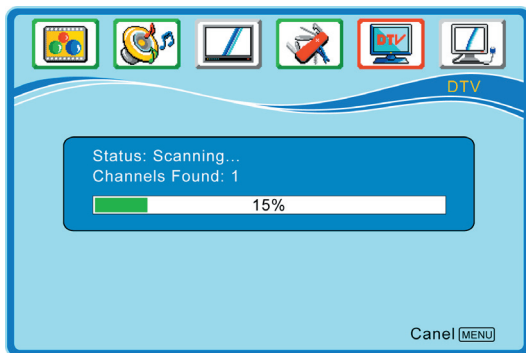


- **Manual Scan:** To scan the DTV channels manually. Press **ENTER** and select Scan Mode with ◀▶.

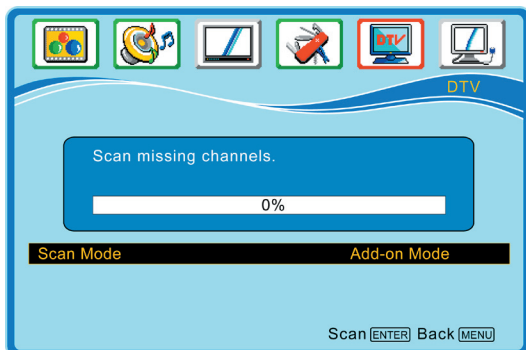


When in **Add-on Mode**, Press **ENTER** to start scanning all channels, and press **MENU** at anytime to cancel scanning.

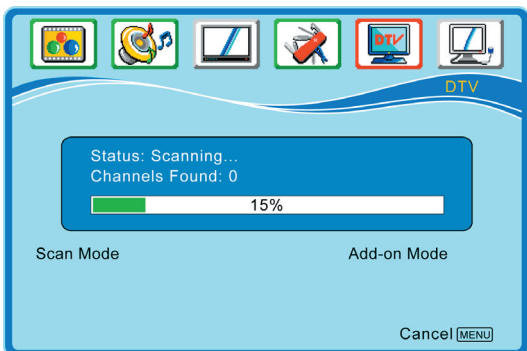


When in **Range Mode**, use **▲▼** and number buttons to set the scanning range.

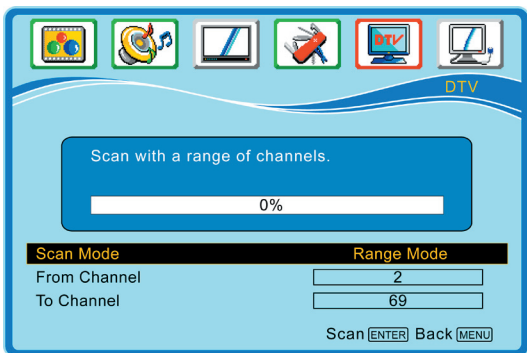

Press **ENTER** to start scanning, and press **MENU** at anytime to cancel scanning.

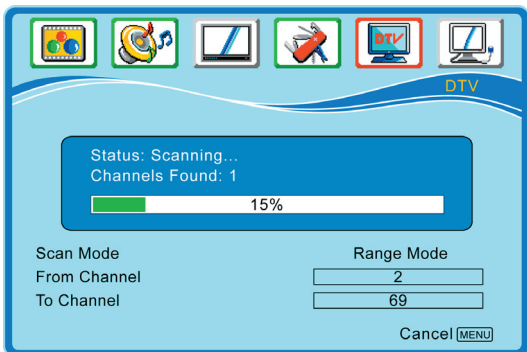


- **Channel Skip:** To skip channels when viewing channels with **CH ▲** and **▼**. Press **ENTER**, and then use **ENTER** to check/uncheck the channel you want to skip.

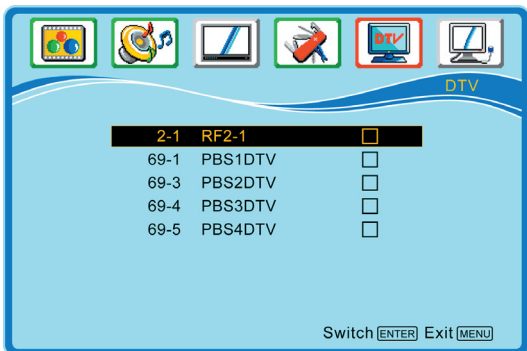




- **Channel Block:** Press **ENTER** to enter the password and block/unblock the channel(s).
- **Caption:** To select closed caption signal formats and set up caption modes. (CC1~CC4, Service1~Service 6)  
Use **▲▼** to select **Analog Closed Caption** or **Digital Closed Caption**, and then use **◀▶** to select caption types.  
Move the cursor to **Caption Style**, and press **ENTER**.

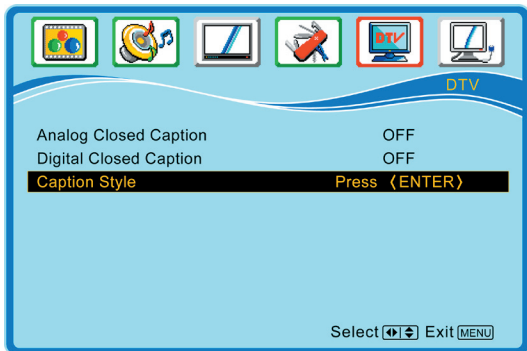

Use **◀▶** to select **Caption Style** from **As Broadcaster** or **Custom**.  
When **Custom** is selected, use **▲▼** to select the desired controls, **◀▶** to adjust detailed settings.

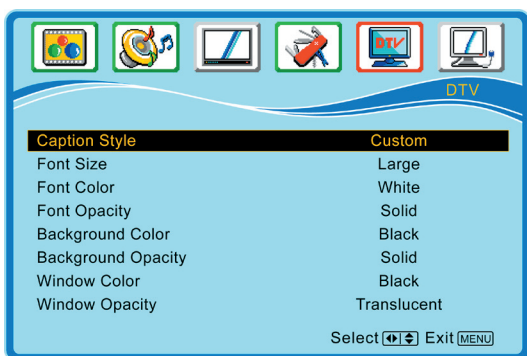

- Font Size:** To select a font size from Large, Small, or Medium.
- Font Color:** To select a font color from Black, White, Green, Blue, Red, Cyan, Yellow, or Magenta.
- Font Opacity:** To select font opacity from Solid, Translucent, or Transparent.
- Background Color:** To select background color.
- Background Opacity:** To select background opacity.
- Window Color:** To select window color.
- Window Opacity:** To select window opacity.

## VGA Menu — To set up for computer

It is only active in VGA sources.



- **Auto Adjust:** Press **ENTER** to auto adjust picture's horizontal position, vertical position, fine tune and H-Size.
- **Contrast:** To adjust contrast of the video.
- **Brightness:** To adjust luminance of the video.
- **Fine Tune:** To adjust the delay time of data and clock to reduce noise in picture.
- **Manual Clock:** To adjust the horizontal pixel clock of the video.
- **H Position:** To adjust the horizontal position of the picture.
- **V Position:** To adjust the vertical position of the picture


## ADVANCED OPERATION — REMOTE CONTROL

### V-Chip Menu

V-Chip is transmitted from TV station to help parents monitor what their children watch. According to the pre-set of factory, viewers can see all of the channels. However, setting V-Chip can block the appointed channels.

**To set up V-CHIP function:** Press **V-CHIP** button → enter the password → press **ENTER**, and the following screen will be displayed.

**Note:** The factory default of the password is "0000". If you have changed the password, please make sure you remember the new password, because you cannot recall the default setting of the password by any selection.

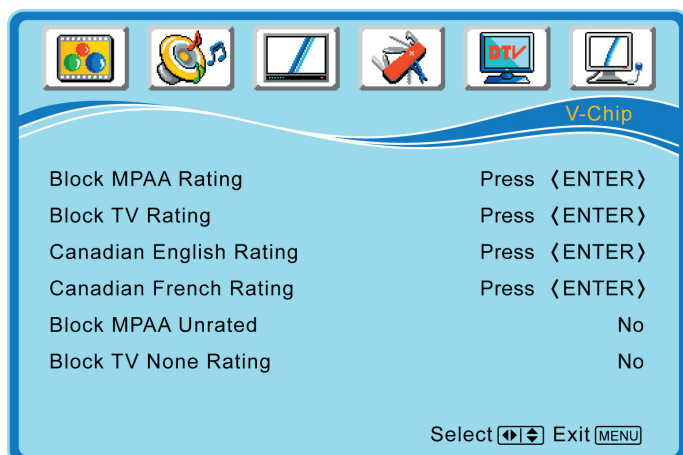

Use ▲ ▼ to select your desired optional item, and press **ENTER**.

- **Block MPAA Rating:** To adjust movie blocking level in the US. You can select between **NONE, G, PG, PG-13, R, NC-17, or X.**




The movie Ratings in the US are defined as following.

<b>G</b>	General audience	<b>R</b>	Restricted
<b>PG</b>	Parental guidance suggested	<b>NC-17</b>	No one 17 and under limited
<b>PG-13</b>	Parents strongly cautioned	<b>X</b>	Adult audience only

Use **ENTER** button to block or unblock the ratings, and use **MENU** to exit.

- **Block TV Rating:** To adjust TV blocking level in the US. You can select between **TV-Y, TV-Y7, TV-G, TV-PG, TV-14, or TV-MA.**

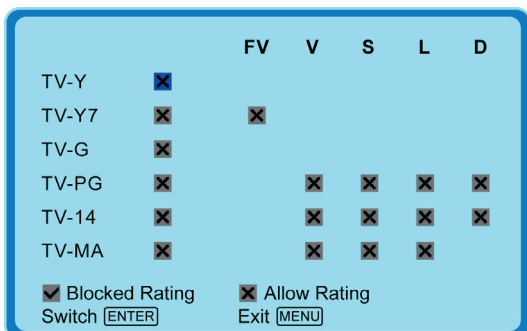


The TV Rating in the US are defined as following.

<b>TV-Y</b>	All children	<b>TV-PG</b>	Parental guidance suggested
<b>TV-Y7</b>	Directed to older children: this program is designed for children age 7 and above	<b>TV-14</b>	Parents strongly cautioned: this program contains some material that is unsuitable for children under 14 years of age
<b>TV-G</b>	General audience	<b>TV-MA</b>	Mature audience only

Use **ENTER** button to block or unblock the ratings, and use **MENU** to exit.

- **Canadian English Rating:** To adjust blocking level in English-speaking region of Canada. You can select between **CE\_E**, **CE\_C**, **CE\_C8**, **CE\_G**, **CE\_PG**, **CE\_14**, and **CE\_18**.

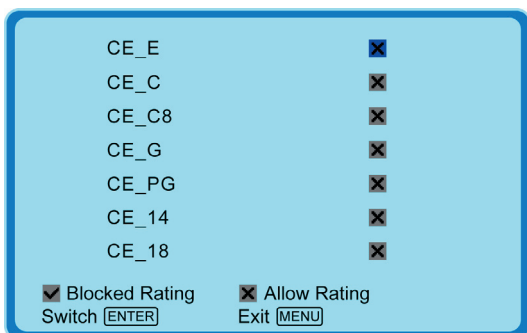

The TV Ratings in English-speaking region of Canada are defined as following.

<b>CE_E</b>	Exempt	<b>CE_PG</b>	Parental guidance
<b>CE_C</b>	Children	<b>CE_14</b>	Viewers 14 years and older
<b>CE_C8</b>	Children eight years and older	<b>CE_18</b>	Adult programming
<b>CE_G</b>	General programming, suitable for all audiences		

Use **ENTER** button to block or unblock the ratings, and use **MENU** to exit.

- **Canadian French Rating:** To adjust blocking level in French-speaking region of Canada. You can select between **CF\_E**, **CF\_G**, **CF\_8ANS**, **CF\_13ANS**, **CF\_16ANS**, and **CF\_18ANS**.



The TV Ratings in French-speaking region of Canada are defined as following.

<b>CF_E</b>	Exempt	<b>CF_13ANS</b>	This emission can not be appropriate to the children of less than 13 years
<b>CF_G</b>	General	<b>CF_16ANS</b>	This emission is not appropriate for less than 16 years
<b>CF_8ANS</b>	General-Disadvised to the young children	<b>CF_18ANS</b>	This emission is reserved to the adults

Use **ENTER** button to block or unblock the ratings, and use **MENU** to exit.

- **Block MPAA Unrated:** To block unrated movies.
- **Block TV None Rating:** To block unrated TV programs.

## PIP/POP

PIP/POP button allows you to watch two screens from different sources at the same time. (PIP is picture in picture; POP is picture out of picture)

Press **PIP/POP** on the remote control repeatedly.

The screen will change from normal screen → PIP screen → POP screen.



- **PIP Input Source Select**


1. Press **P.INPUT** button to select input source for sub-screen as following.

Main Screen	Available Sub-Screen Input Source
TV	DTV / HDMI / YPbPr / VGA
DTV	TV / YPbPr / AV / S-Video / VGA
HDMI	TV / YPbPr / AV / S-Video / VGA
YPbPr	TV / DTV / HDMI / AV / S-Video
AV	DTV / HDMI / YPbPr / VGA
S-Video	DTV / HDMI / YPbPr / VGA
VGA	TV / DTV / HDMI / AV / S-Video

2. Use ◀▶ to select the sub-input source and press **ENTER** to confirm.

**Note:** To select the input source for main screen, press **INPUT** button.

- **SWAP:** Press **SWAP** to exchange main screen to sub-screen, including video and sound. The function is available both in PIP and POP.

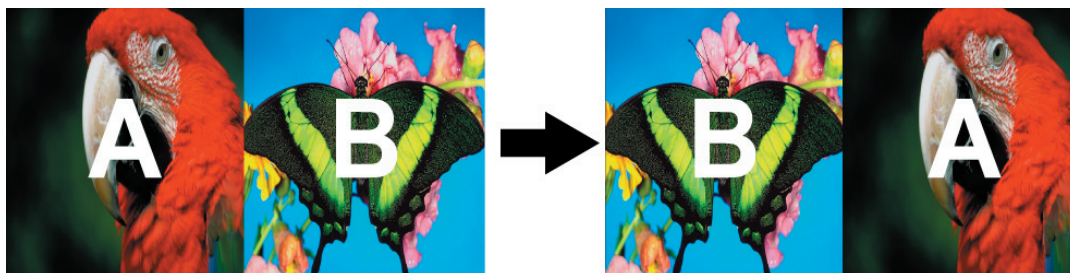

- **PIP Size Select:** Press **P.SIZE** to select the size of sub-screen. The function only acts on PIP.
- **PIP Position Select:** Press **P.POS** to select the position of sub-screen. The function only acts on PIP.



Note that the screen indexed with the pink frame is the screen you select to set up.  
Use ◀▶ to move the index between the main screen and the sub-screen.

# Other Information

## Specifications

<b>LCD</b>	Type	31.51" TFT Active Matrix RGB 0.51075 (H) x 0.51075 (V) mm pixel
	Color Filter	RGB vertical stripe
	Glass surface	Anti-Glare
<b>Input signal</b>	RGB	RGB analog (0.7/1.0 Vp-p, 75 ohms) Separate Sync, f <sub>h</sub> : 30-80 kHz, f <sub>v</sub> : 50-75 Hz
	RF	TV system Antenna / NTSC+ATSC
	Video	1 composite RCA, 1 S-Video, 1 YPbPr component, 1 HDMI
	Audio	1 mini-stereo, 2 pair of RCA (L/R) stereo
<b>Compatibility</b>	PC	Up to 1360 x 768 Non-interlaced
<b>Resolution</b>	Recommended and supported	1360 x 768 @ 60 Hz
		1280 x 1024 @ 60 Hz
		1024 x 768 @ 60, 75 Hz
		800 x 600 @ 60, 75 Hz
		640 x 480 @ 60, 75 Hz
<b>Speaker Output</b>		10W x 2 @ THD=10%
<b>Audio Output</b>		1 composite RCA (L/R), 1 SPDIF (optical), 1 Headphone jack, 1 stereo jack
<b>Power</b>	Voltage	100-240 VAC, 50/60 Hz (auto switch)
<b>Display area</b>	Full Scan	697.68mm (H) x 392.25mm (V) 27.5" (H) x 15.4" (V)
<b>Operating conditions</b>	Temperature	32°F to + 104°F ( 0°C to + 40°C)
	Humidity	10% to 65% (no condensation)
	Altitude	To 10,000 feet (3,000m)
<b>Storage condition</b>	Temperature	-4°F to + 140°F (-20°C to + 60°C)
	Humidity	10% to 90% (no condensation)
	Altitude	To 40,000 feet (12,000m)
<b>Dimensions</b>	Physical	807.7mm (W) x 626.6mm (H) x 242.4mm (D) 31.8" (W) x 24.7" (H) x 9.5" (D)
<b>Weight</b>	Net	21.7 kg (47.7 lb)
<b>Regulations</b>		UL, FCC-B (Doc-B), NOM, BEST-7
<b>Power consumption</b>	On	< 150 W (green LED)
	Stand by	< 3 W (red LED)

**Preset Timing Mode** (Pre-adjusted to GTF® 1360 x 768 @ 60 Hz)

**Warning:** Do not set the graphics card in your computer to exceed these refresh rates; doing so may result in permanent damage to the LCD TV.

**Note:** Product Specifications are subject to change without notice.

# Troubleshooting

## No power

- Make sure the LCD TV is properly connected.
- Make sure the AC power cord is properly connected.
- Make sure the AC power is ON, DC power button is ON (Green LED).
- Plug another electrical device (like a radio) to the power outlet to verify that the outlet is supplying the proper voltage.

## Poor or no picture

- The TV station may be experiencing problems. Try another channel.
- The Cable TV signal may be scrambled or encoded. Please contact your local cable operator.
- Make sure that connection to other components are correct.
- Make sure that setup has been done correctly after connections.
- Make sure the correct input is selected and the input signal is compatible.

## Strange color, light color, or color misalignment

- Ensure that the video cable is securely connected.
- The picture may appear dim in a brightly lit room.
- Adjust brightness and contrast.
- Check the input signal setting.

## No sound

- Check your audio connections
- The MUTE button may have been pressed, try pressing this button again.
- Check your audio settings, your TV audio may be set to minimum.
- Press the Volume + (Up) button on the remote control.

## Remote control unit does not operate

- Make sure batteries are inserted correctly.
- Batteries could be weak or dead. Replace batteries.
- Is a fluorescent light illuminated near the remote control sensor?
- The path of the remote control beam may be blocked. Make sure the path is clear and that the remote control is aimed at the remote control sensor on the TV.
- Press only one button at a time and it is the correct one for the operation you want to perform.

## Unit cannot be operated

- External influences such as lightning or static electricity may cause improper operation. In this case, operate the unit after first turning on the power of the LCD TV and the AVC System, or unplug the AC cord for 1 to 2 minutes, then replug again.

## Power is cut off suddenly

- Is the sleep timer set?
- The internal temperature of the unit has increased. Remove any objects blocking the vent or clean as necessary.

## No CATV reception (or no reception above CH13)

- Is the AIR/CABLE option set correctly? Please set the AIR/CABLE option to CABLE.
- CATV is connected improperly or not connected; please check all the CATV connections.
- The cable TV service is interrupted; please contact your cable operator.

## Picture is cut off/with sidebar screen

- Is the image positioned correctly?
- Are screen mode adjustments such as picture size set correctly?



# Customer Support

For technical support or product service, see the table below or contact your reseller.

**Note:** You will need the product serial number.

Country/ Region	Web Site	T=Telephone F=Fax	Email
United States	<a href="http://www.viewsonic.com/support/">www.viewsonic.com/support/</a>	T= (800) 688 6688 F= (909) 468 1202	<a href="mailto:service.us@viewsonic.com">service.us@viewsonic.com</a>
Canada	<a href="http://www.viewsonic.com/support/">www.viewsonic.com/support/</a>	T= (866) 463 4775	<a href="mailto:service.ca@viewsonic.com">service.ca@viewsonic.com</a>

ENGLISH

# Limited Warranty

## VIEWSONIC® LCD TV

### What the warranty covers:

ViewSonic warrants its products to be free from defects in material and workmanship, under normal use, during the warranty period. If a product proves to be defective in material or workmanship during the warranty period, ViewSonic will at its sole option repair or replace the product with a like product. Replacement product or parts may include remanufactured or refurbished parts or components.

### How long the warranty is effective:

ViewSonic LCD TVs are warranted for one (1) year for all parts excluding the light source and one (1) year for labor from the date of the first customer purchase.

### Who the warranty protects:

This warranty is valid only for the first consumer purchaser.

### What the warranty does not cover:

1. Any product on which the serial number has been defaced, modified or removed.
2. Damage, deterioration or malfunction resulting from:
  - a. Accident, misuse, neglect, fire, water, lightning, or other acts of nature, unauthorized product modification, or failure to follow instructions supplied with the product.
  - b. Repair or attempted repair by anyone not authorized by ViewSonic.
  - c. Any damage of the product due to shipment.
  - d. Removal or installation of the product.
  - e. Causes external to the product, such as electric power fluctuations or failure.
  - f. Use of supplies or parts not meeting ViewSonic's specifications.
  - g. Normal wear and tear.
  - h. Any other cause which does not relate to a product defect.
3. Any product exhibiting a condition commonly known as "image burn-in" which results when a static image is displayed on the product for an extended period of time.
4. Removal, installation, and set-up service charges.

### How to get service:

1. For information about receiving service under warranty, contact ViewSonic Customer Support at 800-888-8583. You will need to provide your product's serial number.
2. To obtain warranted service, you will be required to provide (a) the original dated sales slip, (b) your name, (c) your address, (d) a description of the problem, and (e) the serial number of the product.
3. Take or ship the product freight prepaid in the original container to an authorized ViewSonic service center or ViewSonic.
4. For additional information or the name of the nearest ViewSonic service center, contact ViewSonic.

### Limitation of implied warranties:

There are no warranties, express or implied, which extend beyond the description contained herein including the implied warranty of merchantability and fitness for a particular purpose.

### Exclusion of damages:

ViewSonic's liability is limited to the cost of repair or replacement of the product. ViewSonic shall not be liable for:

1. Damage to other property caused by any defects in the product, damages based upon inconvenience, loss of use of the product, loss of time, loss of profits, loss of business opportunity, loss of goodwill, interference with business relationships, or other commercial loss, even if advised of the possibility of such damages.
2. Any other damages, whether incidental, consequential or otherwise.
3. Any claim against the customer by any other party.

### Effect of state law:

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow limitations on implied warranties and/or do not allow the exclusion of incidental or consequential damages, so the above limitations and exclusions may not apply to you.

### Sales outside the U.S.A. and Canada:

For warranty information and service on ViewSonic products sold outside of the U.S.A. and Canada, contact ViewSonic or your local ViewSonic dealer.



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>