

# ViewSonic®

**N2060w**

**LCD TV**

- User Guide
- Guide de l'utilisateur
- Guía del usuario



**ViewSonic®**

**Model No. : VS11287-1M**

# CONTENTS

Compliance information -----	1
Important Safety Instructions -----	2
Copyright Information-----	3
Product Registration-----	3
Antenna Installation Instructions-----	4
PREPARATION -----	6
OPERATING INSTRUCTIONS -----	7
Use of the remote control -----	7
To use the menus -----	11
Main menu -----	11
Appendix -----	20
Troubleshooting -----	22
Customer Support-----	23
Limited Warranty -----	24

## Compliance Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning


the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### FCC Warning

To assure continued FCC compliance, the user must use grounded power supply cord and the cables which are included with the equipment or specified. Also, any unauthorized changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

## Important Safety Instructions

1. Read these instructions completely before using the equipment.
2. Keep these instructions in a safe place.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this equipment near water. **Warning:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
6. Clean with a soft, dry cloth. If further cleaning is required, see “Cleaning the LCD TV” in this guide for further instructions.
7. Do not block any ventilation openings. Install the equipment in accordance with the manufacturer’s instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other devices (including amplifiers) that produce heat.
9. Do not attempt to circumvent the safety provisions of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade and the third prong are provided for your safety. If the plug does not fit into your outlet, consult an electrician for replacement of the outlet.
10. Protect the power cord from being tread upon or pinched, particularly at the plug, and the point where it emerges from the equipment. Be sure that the power outlet is located near the equipment so that it is easily accessible.
11. Only use attachments/accessories specified by the manufacturer.
12.  Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this equipment when it will be unused for long periods of time.
14. Refer all servicing to qualified service personnel. Service is required when the unit has been damaged in any way, such as: if the power-supply cord or plug is damaged, if liquid is spilled onto or objects fall into the unit, if the unit is exposed to rain or moisture, or if the unit does not operate normally or has been dropped.

# Copyright Information

Copyright © ViewSonic® Corporation, 2006. All rights reserved.

ViewSonic, the three birds logo, OnView, ViewMatch, and ViewMeter are registered trademarks of ViewSonic Corporation.

Disclaimer: ViewSonic Corporation shall not be liable for technical or editorial errors or omissions contained herein; nor for incidental or consequential damages resulting from furnishing this material, or the performance or use of this product.

In the interest of continuing product improvement, ViewSonic Corporation reserves the right to change product specifications without notice. Information in this document may change without notice.

No part of this document may be copied, reproduced, or transmitted by any means, for any purpose without prior written permission from ViewSonic Corporation.

# Product Registration

To meet your future needs, and to receive any additional product information as it becomes available, please register your product on the Internet at: [www.viewsonic.com](http://www.viewsonic.com).

<b>For Your Records</b>	
<b>Product Name:</b>	<b>N2060w ViewSonic LCD TV</b>
<b>Model Number:</b>	<b>VS11287-1M</b>
<b>Document Number:</b>	<b>N2060w-1M_UG_ENG Rev. 1A 04-28-06</b>
<b>Serial Number:</b>	_____
<b>Purchase Date:</b>	_____

## Product disposal at end of product life

ViewSonic is concerned about the preservation of our environment. Please dispose of this product properly at the end of its useful life. Your local waste disposal company may provide information about proper disposal.

The lamp in this product contains mercury. Please dispose of properly in accordance with environmental laws of your location.

# Antenna Installation Instructions

## 1. Outdoor Antenna Grounding

 
If an outside antenna or cable system is connected to the product be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges, Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

## 2. Lightning

For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges. Do not disconnect the antenna or the power cord during a heavy storm lightning may strike while you are holding the cable cord, causing serious injury; turn off your LCD TV and wait for the weather to improve.

## 3. Power Lines

An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits, When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

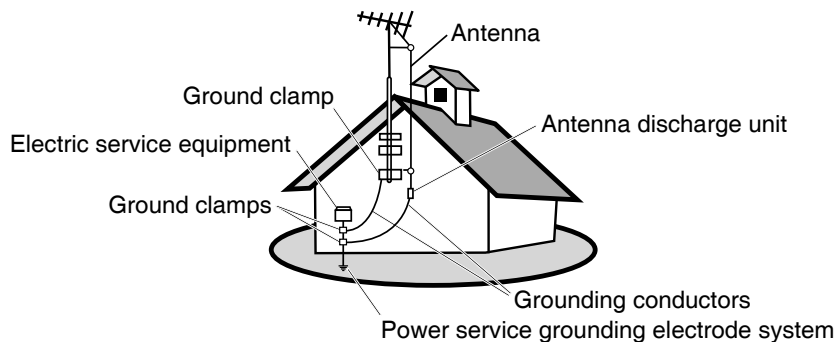

## Cleaning the LCD TV

- Make sure the LCD TV is turned off.
- Never spray or pour any liquid directly onto the screen or case.

### To clean the screen:

1. Wipe the screen with a clean, soft, lint-free cloth. This removes dust and other particles.
2. If still not clean, apply a small amount of non-ammonia, non-alcohol based glass cleaner onto a clean, soft, lint-free cloth, and wipe the screen.

### To clean the case:

 
1. Use a soft, dry cloth.
2. If still not clean, apply a small amount of a non-ammonia, non-alcohol based, mild non-abrasive detergent onto a clean, soft, lint-free cloth, then wipe the surface.

## Disclaimer

ViewSonic® does not recommend the use of any ammonia or alcohol-based cleaners on the LCD TV screen or case. Some chemical cleaners have been reported to damage the screen and/or case of the LCD TV. ViewSonic will not be liable for damage resulting from use of any ammonia or alcohol-based cleaners.

## CONNECT PERIPHERAL EQUIPMENT

### FRONT PANEL CONTROL KNOBS

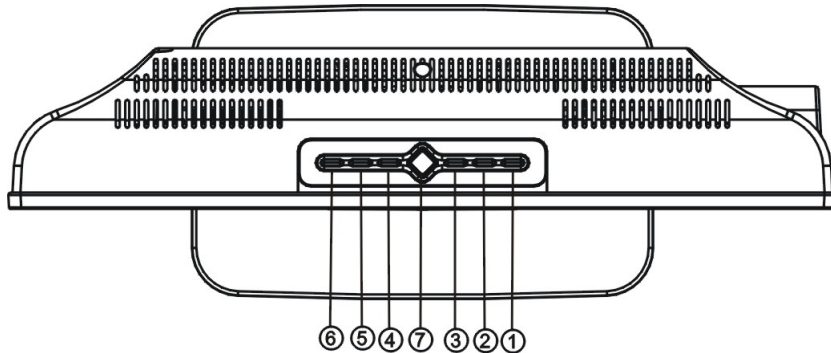

**Source**①: Press to select your input source.

**Volume**②③: Press to confirm your function selection (when the OSD main menu displayed) or adjust volume (without OSD main menu)

**Channel**④⑤: Select the intended function by pressing the two keys (when the OSD main menu displayed), or switch the channels in the TV mode (without OSD main menu)

**Menu**⑥: Press to show the OSD menu and exit OSD menu at the TV mode

**Power**⑦: Press to turn on or off the TV.

#### **Power Lock**

Press 'Source' for 10 seconds can lock the function of Power button

 
#### **OSD Lock**

Press 'Menu' for 10 seconds can lock the function of menu button

There is a wide range of video and audio equipment could connect to your TV. The following connection diagrams show you how to connect them.

## PREPARATION

Lay the LCD TV with the screen down on a table, as it will be easier to connect your peripheral equipment. Please take precaution on page9 not to damage the screen.

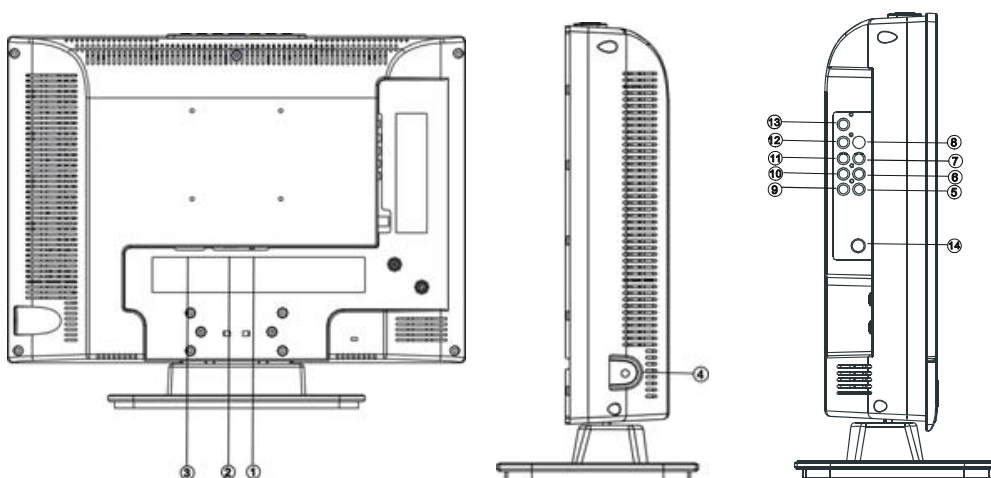

1. VGA audio input
2. VGA input
3. AC power input terminal
4. Headphone outlet
5. AV signal input
6. Left audio track input (AV/S-Video)
7. Right audio track input (AV/S-Video)
8. S-Video signal input
- 9~11. YPbPr Component signal input
12. YPbPr left audio track input
13. YPbPr right audio track input
14. TV signal input



## OPERATING INSTRUCTIONS

### USE OF THE REMOTE CONTROL

#### POWER

Press to turn on/off the TV. The TV is never completely powered off unless it is physically unplugged.

#### 0~9/100 Digit buttons

To select a TV channel.

#### CH

Press  $\wedge$  or  $\vee$  to browse through the TV channels, which are not erased. To view a blocked channel, use the digital buttons to access, the channel and enter your access code.

#### VOL

Press + or - to adjust the volume.

#### PC

Press this button to turn PC mode

#### SLEEP

With this key you can set a time period after which the TV should switch itself to standby. Press the key repeatedly to select the number of minutes. The counter runs from 5, 10, 15, 20, 25...120 minutes.

#### V-CHIP

Press this button to setup parental control.

#### PIP

This model does not have PIP function



#### MUTE

Temporarily interrupt the sound or restore it.

#### DISPLAY

Press this button to Display Channel number on the right-top corner.

#### PRE-CH

To display the previous selected TV channel.

#### TV/VIDEO

Select your input source, press repeatedly to select TV, AV, S-VIDEO, YPbPr or PC.

#### MTS /SAP

Press this key to activate Multichannel Television Sound, Stereo, SAP or Mono sound.

#### MENU

Press repeatedly to display OSD menu.

#### CAPTION

 
Press this button to turn on Closed Caption. Be sure you have selected Caption On in the Setup menu.

#### SIZE

Press this button to change display size.

3. **Remote control:**

Remove the cover of the battery compartment. Insert the 2 batteries supplied (Type AAA 1.5V).

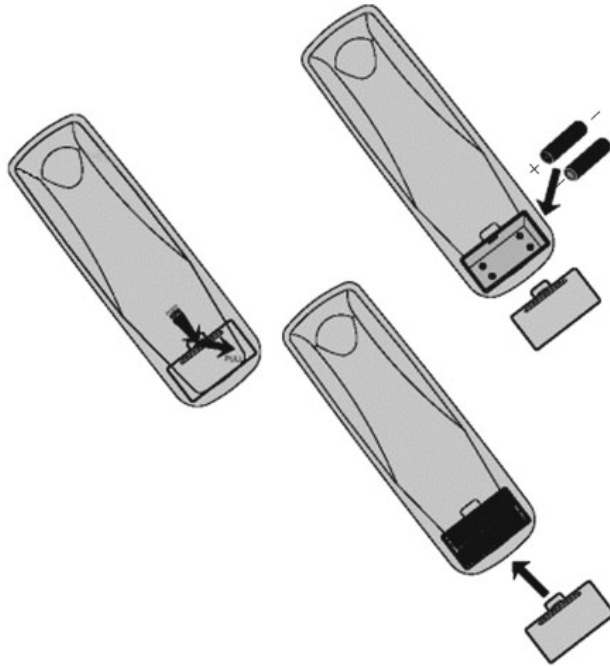


## CAUTION

- Only use the specified AAA batteries.
- Do not mix new and old batteries. This may result in cracking or leakage, which may pose a fire risk or lead to personal injury.
- Insert batteries according to the (+) and (-) markings. Inserting the batteries incorrectly may result in cracking or leakage, which may pose a fire risk or lead to personal injury.
- Dispose of batteries in accordance with local laws and regulations.
- Keep batteries away from children and pets.
- If the remote control will not be used for an extended period of time, remove the batteries.


## PREPARATION

### 1. Assembly

 Take out TV and base from carton, assembled by three pieces screws, which you could find from the accessory box. Shown in the figures below:

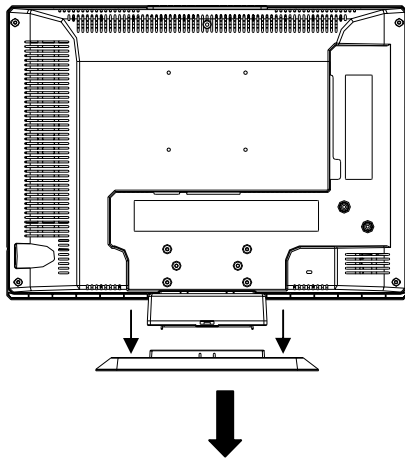


Place the base on a solid surface

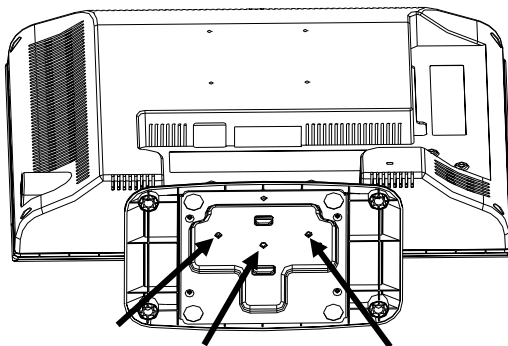 


**Note:** Lock the screw middle first, then the others, to avoid holes aiming incorrectly

**2. Place the TV on a solid surface.**

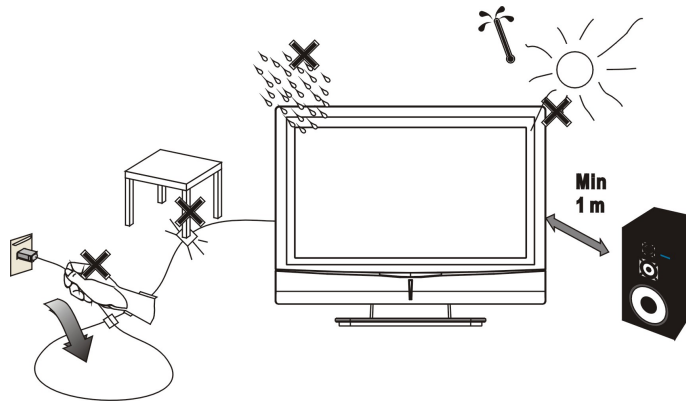 

Ensure that the TV placed in a position to allow free flow of air. Do not cover the ventilation openings on the back cover.  
To prevent any unsafe situations, no naked flame sources, such as lighted candles placed on or in the vicinity.  
Avoid heat, direct sunlight and exposure to rain or water. The equipment shall not be exposed to dripping or splashing.

**3. Insert the aerial plug firmly into the aerial socket at the back of the TV.**

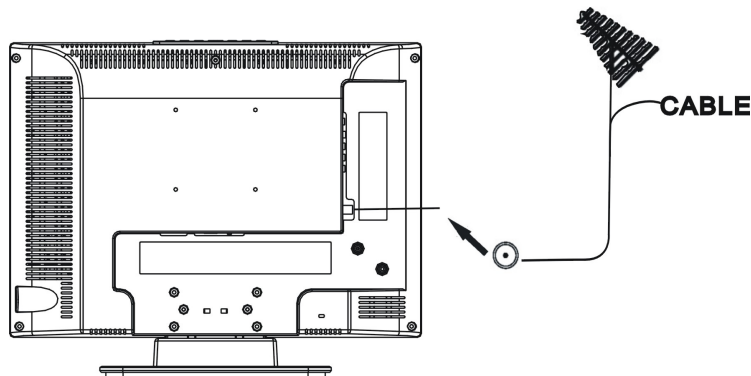 

**4. Power:**

Insert the power cord in the wall socket having an AC power supply.

**5. Turn the TV on:**

You could turn on or off TV by the power key on the peak of TV, or by the power key on remote control.

The indicator light in the front of TV is dark when the TV is 'OFF'.

 
The indicator light in the front of TV is blue when the TV is 'ON'.

## TO USE THE MENU


1. Press the **MENU** button to display or close main menu.
2. Use the cursor up/down to select a menu item.
3. Use the cursor left/right to enter a submenu or enable/disable the function.
4. Press the **MENU** button to exit the menu.

## MAIN MENU

Press the **MENU** button to enter the main OSD (On Screen Display). Adjust the items including Picture Setup, Sound setup, Child Lock Setup, Function Setup and TV setup. When the input source is PC or Component mode, could only select the Sound Setup, Picture Setup and Menu Setup. Shown in the figure below:

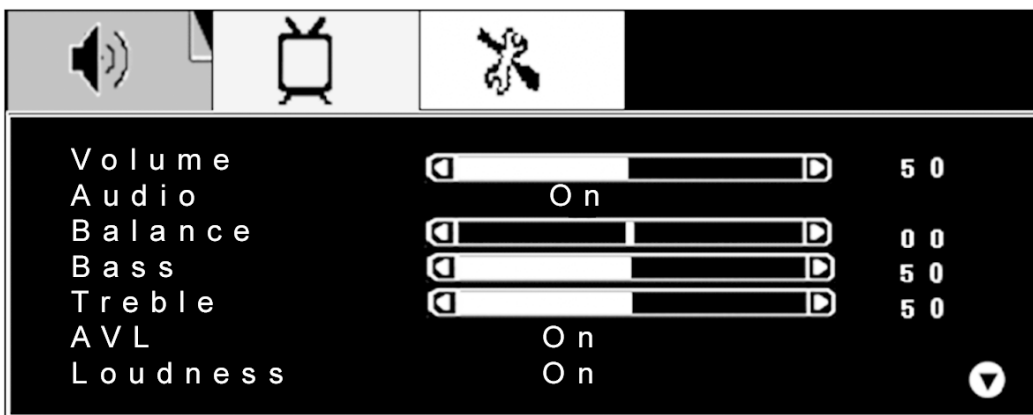

 When the input source is AV or S-Video mode, could select the Sound Setup, Picture Setup, Child Lock Setup and Function Setup. Shown in the figure below:

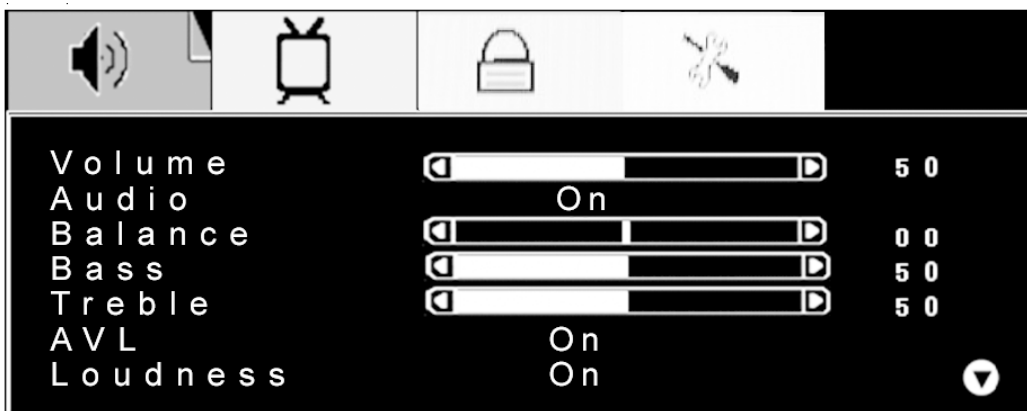


When the input source is TV mode, could select the Sound Setup, Picture Setup, Child Lock Setup, Function Setup and TV Setup. Shown in the figure below:



### Sound Setup (Same in PC, TV, AV, S-Video and Components modes)

 1. The range of volume, bass and treble is 0~100.
2. Select "ON" or "OFF" in sound selection to control the sound output.
3. The range of Balance is -50~+50. Adjusted from 0 to -50, the sound from the right track fades until silent. Adjusted from 0 to +50, the sound from the left track fades until silent.
4. AVL: you can set it to "ON" or "OFF".  
The function is adjusting the input sound automatically. You could enable this function if you found the sound in the two tracks are big difference.
5. Select "ON" or "OFF" for Loudness: the setting is a default; you could adjust it if necessary.



The menu below will appear when select continuously:

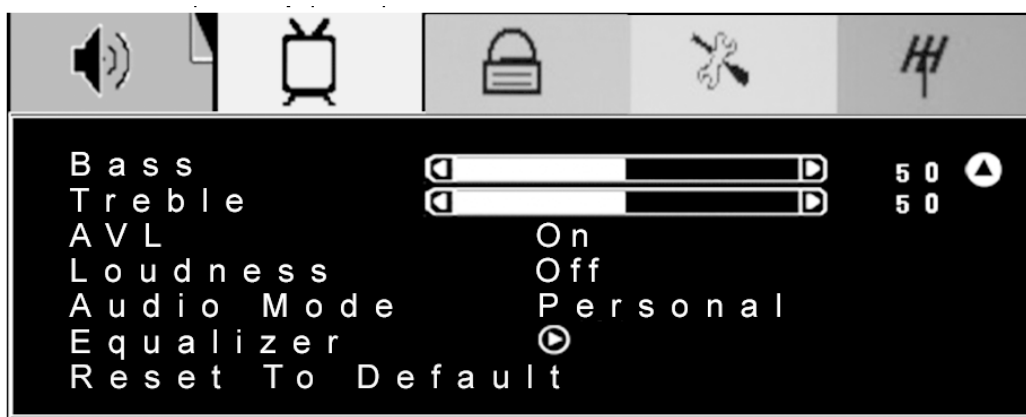

6. Audio mode: Designed for the different types of sound output, wherein, the dialogue, music and theater modes are preset; you can set Bass, Treble and Equalizer in sound output mode according to your preference.
7. Equalizer: You can select and adjust 100, 300, 1K, 3K and 8K respectively.
8. Reset To Default: Reset the sound setting to the factory default value.



## Picture Setting

  When the input source is in PC mode, you can select Brightness, Contrast, Position, Video noise, Sharpness, Auto Adjust, Info, Color Temp., ( Red, Green, Blue can be adjusted) and Reset to Default. Shown in the figure below:

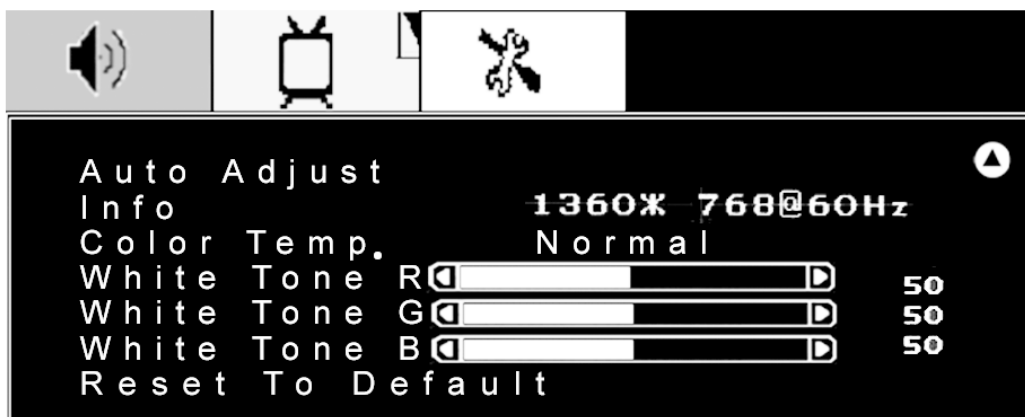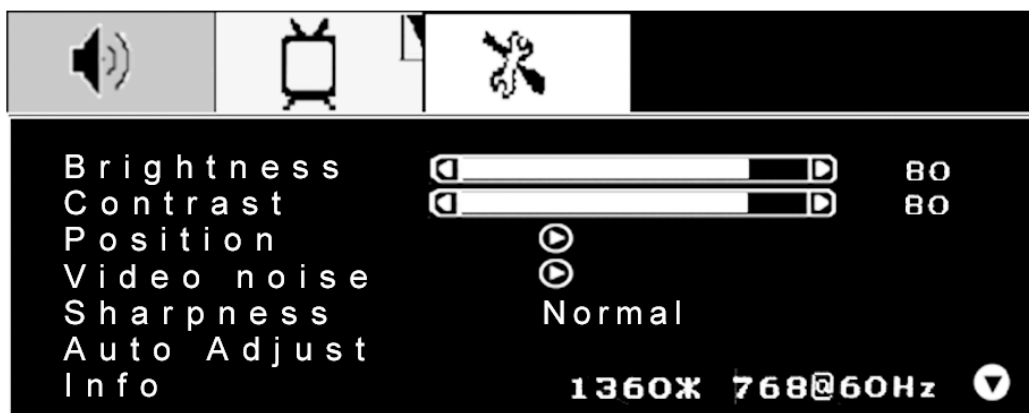

1. Brightness and Contrast: Could adjust from 0 to 100.
2. Position: There are two options, Horizontal and Vertical, could adjust from -50 to +50.
3. Video noise: There are two options, Phase and Clock, could adjust from -50 to +50.
4. Sharpness: Select from five options of Softest, Soft, Auto, Sharp and Sharpest. You may adjust it if you like.
5. Auto Adjust: Automatically adjust PC input to the optimal screen size.
6. Info: Prompt the current size for PC input resolution (only the resolution shown by this device).
7. Color Temp.: There are four options of color temperature provided for users – Warm, Normal, Cold and User. You can select the color temperatures of Warm, Normal and cold or manually adjust red, green or blue in the personal setting (you can only adjust red, green and blue in the personal setting).
8. Reset To Default: Reset the picture settings to the factory default mode.

  When the input source is in TV/AV/S-VIDEO/YPbPr mode, you can select Brightness, Contrast, Color, Sharpness, Hue, Dyn. Skin Tone, Color Temp., Zoom and Reset to Default respectively; shown in the figure below:

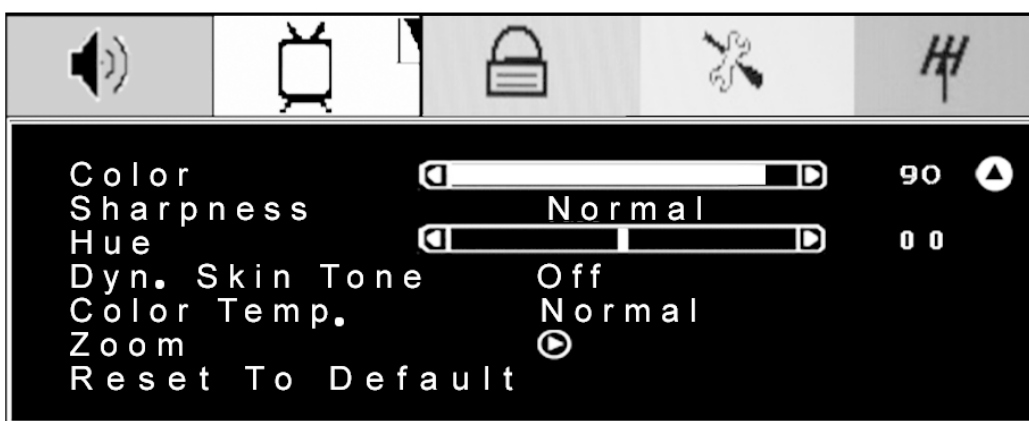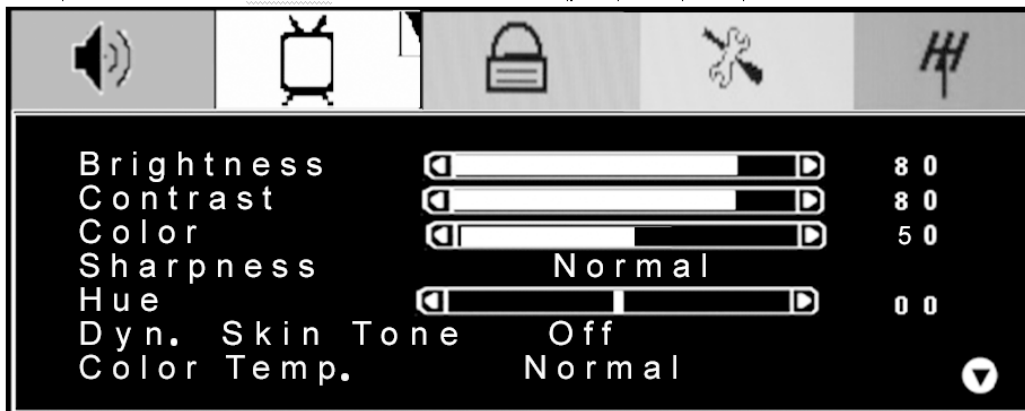


1. Brightness and Contrast: Could adjust from 0 to 100 to adjust the luminance of picture.
2. Color: Could adjust from 0 to 100 to adjust the color saturation of picture.
3. Sharpness: Five options: Softest, Soft, Auto, Sharp and Sharpest. You can adjust the sharpness of picture by any options above.
4. Hue: Could adjust from -50 to +50 to adjust the color of picture.
5. Dyn. Skin Tone: When the Dynamic skin tone is ON, the skin tone of person in the picture will be more vivid.
6. Color Temp.: There are three options of color temperature provided for users - warm, normal and cold
7. Zoom: There are three options --4: 3, fullscreen and widescreen provided for zoom in/zoom out.
8. Reset To Default: Reset the picture settings to the factory default mode.



## Function Setup

 When the input source is in TV, AV or S-Video mode, you can select OSD Time Out, Language, Child lock, Sleep Timer, CC Mode and Reset to Default. Shown in the figure below:

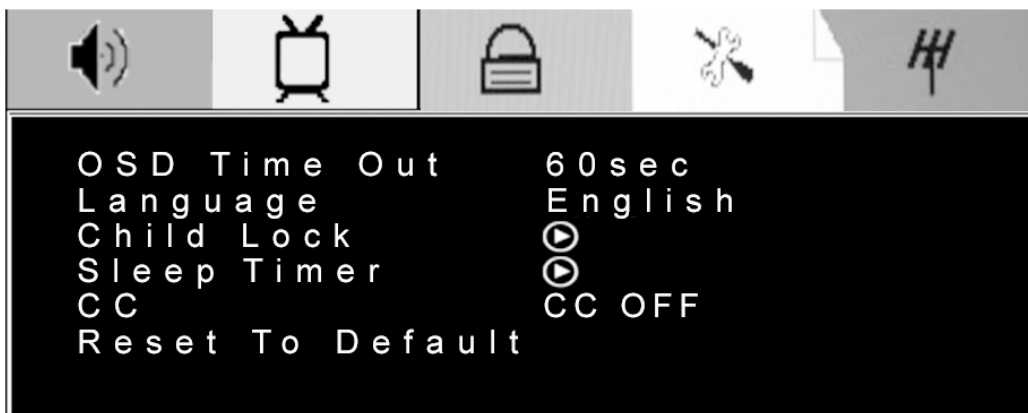

1. OSD Time Out: Could set OSD display time from 10 seconds to 60 seconds
2. OSD language setting: Three languages provided - English, French and Spanish.
3. Child Lock Setup:



- (1). Can enter the V-Chip level setting only if the Child Lock is ON to enable the V-Chip. You could not enter V-Chip level setting if the Child Lock Setup is OFF to disable the V-Chip.
- (2). Lock code: Set up V-Chip password when lock code. Enter the 4-digit password, which will be your choice. Default password is 0000.
4. Sleep Timer: Set the sleeping timer and the alert function, which will indicate the time left.
5. Closed Caption (CC) setting: Select CC1~CC4, TXT1~TXT4 or OFF.
6. Reset To Default: Reset the OSD settings.


When the input source is in PC or Component mode, you can select OSD Time Out, Language, Sleep Timer and Reset to Default; shown in the figure below:




OSD Time Out, Language, Sleep Timer and Reset to Default options are operated similarly as the above instructions

### Child Lock

 When the input source is in TV, AV or S-Video mode, V-Chip level can be set. You can enter the Child Lock setting only when the Child Lock is ON. When you enter the Child Lock setting, a message on the display will prompt you to enter password:

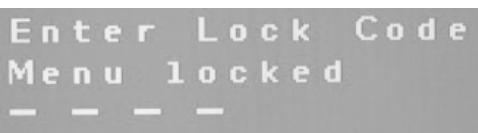

 You can enter the Child Lock setting to set up the V-Chip level when you enter the correct password:

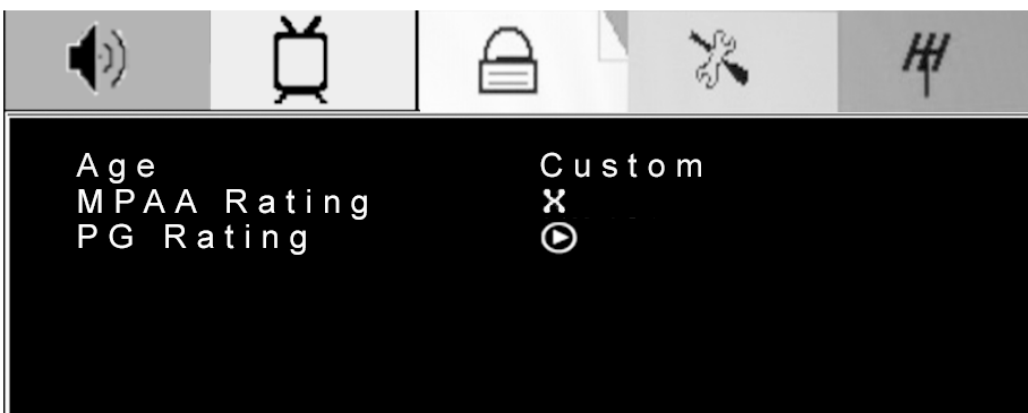



1. Age: it may be set to Child, Youth, Youth Adult, Adult Only, Custom or OFF; when you select Custom, it can be set according to you preference.
2. MPAA Rating: Select the movie ratings from low to high (alert) - G, PG, PG-13, R, NC-17, X and F.
3. PG Rating: Shown in the figure below:

TV-Y	<input type="checkbox"/>	FV	V	S	L	D
TV-Y7	<input type="checkbox"/>	<input checked="" type="checkbox"/>				
TV-G	<input type="checkbox"/>					
TV-PG	<input type="checkbox"/>		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
TV-14	<input type="checkbox"/>		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
TV-MA	<input type="checkbox"/>		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	

The empty box refers to unlocked; the solid box refers to locked.

### TV Setting

  The following menu appears only in the TV mode.

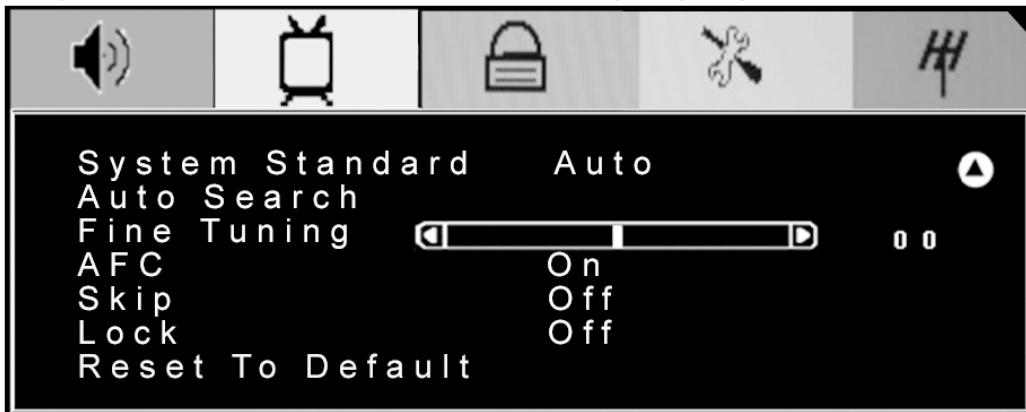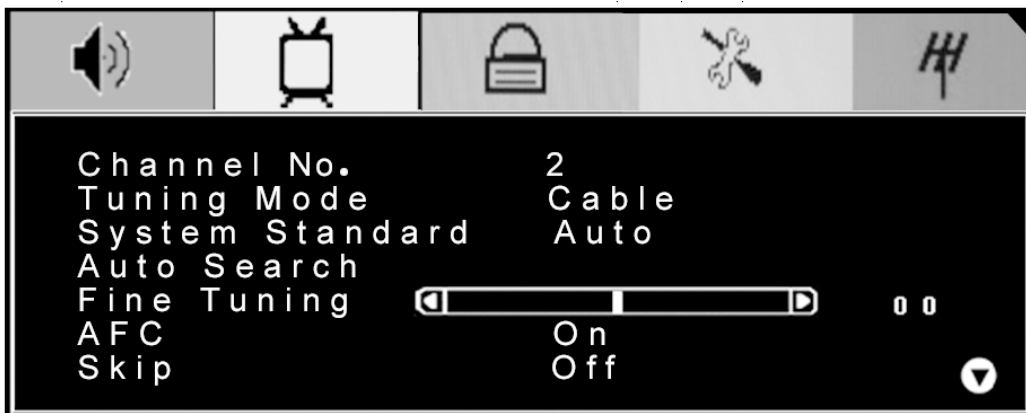

1. Channel No.: Shows the current channel number.
2. Tuning Mode: Select the mode of TV signal - Cable\HRC Cable\IRC Cable\ Broadcast.
3. System Standard: NTSC-M
4. Auto Search: Select "Auto Search" to search all signaled channel; when the search is complete, it stays at the first channel with signal and all

channels that have been located are stored. If you would like to stop "Auto Search" during the process, press the function button.

5. Fine Tuning: NTSC-M is seldom used.
6. AFC can be set to ON or OFF. When it is set to ON, the TV will search the TV signal automatically; when there is any offset in the signal, it will automatically adjust the channel to the correct position.
7. Skip can be set to ON or OFF. When it is set to ON, a channel can be skipped by pressing the switching button on the remote control or on the front panel.
8. Reset To Default: Reset to the factory default value.

## HEADPHONE

1. The headphone jack is located at the right side of the TV.
2. The MUTE key on the remote control works on both internal speaker and the headphone.
3. Use volume key to adjust the volume.

## TIPS

### Care of the screen

Do not rub or strike the screen with anything hard as this may scratch, mar, or damage the screen permanently.

Unplug the power socket before cleaning the screen. Dust the TV by wiping the screen and the cabinet with a soft, clean cloth. If the screen requires additional cleaning, use a clean, damp cloth. Do not use liquid cleaners or aerosol cleaners.

### Mobile telephone warning

To avoid disturbances in picture and sound, malfunctioning of your TV or even damage to the TV, keep away your mobile telephone from the TV.

### End of life directives

We are paying a lot of attention to produce environmentally friendly in green focal areas. Your new receiver contains materials, which can be recycled and reused.

At the end of its life, specialized companies can dismantle the discarded receiver to concentrate the reusable materials and to minimize the amount of materials to be disposed of.

Please ensure you dispose of your old receiver according to local regulations.

# Appendix

## Specifications

Panel	Type	20" TFT-LCD Active Matrix wide-XGA, 1360x 768
	Color	Anti-glare coating
Viewing angles		160° H/ 160° V
Input signal	Video	Fh: 32-48KHz, Fv: 50-60Hz VGA input*1 TV system antenna Composite Video input*1 S-Video*1 Component video*1 (YPbPr / YCbCr)
	Audio	Audio input*1 RCA*1 for AV RCA*1 for YPbPr / YCbCr
Compatibility	PC	Up to 1360x768 Non-interlaced
Resolution	Supported	640x480 @60Hz 800x600 @56Hz 800x600 @60Hz 1024x768@60Hz 1280x768@60Hz 1280x720@60Hz 1280x1024@60Hz 1360x768@60Hz
Speaker output		3W+3W
Power	Voltage	100-240VAC, 50/60Hz
Operating	Temperature	5°C to 35°C
Conditions	Humidity	10% to 85%(no condensation)
Storage	Temperature	-25°C to 60°C
Conditions	Humidity	10% to 85%(no condensation)

Dimension	Physical	521.84mm(W)x419.52mm(H)x180.83mm(D) 20.55"(W) x 16.52"(H) x 7.12"(D)
	Package	595mm(W) x 512mm(H) x 226mm(D) 23.4"(W) x 20.2"(H) x 8.9"(D)
Weight	Net	6.9Kg (15.2 lb.)
	Gross	9 Kg (19.9 lb.)
Regulation		CB, FCC,UL/cUL, NOM
Power saving	On	<90 W (Blue LED)
Modes	Active off	<3 W

**Preset timing modes** (Pre-adjusted to VESA 1360x768 at 60Hz)

**Warning:** Do not set the graphics card in your computer to exceed these refresh rates. Doing so may result in permanent damage to the LCD

**Note:** Product specifications are subject to change without notice

# Troubleshooting

## No power

- Make sure the LCD TV is properly connected.
- Make sure the AC power cord is properly connected.
- Make sure the AC power is ON, DC power button is ON (Green LED).
- Plug another electrical device (like a radio) to the power outlet to verify that the outlet is supplying the proper voltage.

## Poor or no picture

- The TV station may be experiencing problems. Try another channel.
- The Cable TV signal may be scrambled or encoded. Please contact your local cable operator.
- Make sure that connection to other components are correct.
- Make sure that setup has been done correctly after connections.
- Make sure the correct input is selected and the input signal is compatible.

## Strange color, light color, or color misalignment

- Ensure that the video cable is securely connected.
- The picture may appear dim in a brightly lit room.
- Adjust brightness and contrast.
- Check the input signal setting.

## No sound

- Check your audio connections
- The MUTE button may have been pressed, try pressing this button again.
- Check your audio settings, your TV audio may be set to minimum.
- Press the Volume + (Up) button on the remote control.

## Remote control unit does not operate

- Make sure batteries are inserted correctly.
- Batteries could be weak or dead. Replace batteries.
- Is a fluorescent light illuminated near the remote control sensor?
- The path of the remote control beam may be blocked. Make sure the path is clear and that the remote control is aimed at the remote control sensor on the TV.
- Press only one button at a time and it is the correct one for the operation you want to perform.

## Unit cannot be operated

- External influences such as lightning or static electricity may cause improper operation. In this case, operate the unit after first turning on the power of the LCD TV and the AVC System, or unplug the AC cord for 1 to 2 minutes, then replug again.

## Power is cut off suddenly

- Is the sleep timer set?
- The internal temperature of the unit has increased. Remove any objects blocking the vent or clean as necessary.

## No CATV reception (or no reception above CH13)

- Is the AIR/CABLE option set correctly? Please set the AIR/CABLE option to CABLE.
- CATV is connected improperly or not connected; please check all the CATV connections.
- The cable TV service is interrupted; please contact your cable operator.

## Picture is cut off/with sidebar screen

- Is the image positioned correctly?
- Are screen mode adjustments such as picture size set correctly?



## Customer Support

For technical support or product service, see the table below or contact your reseller.

**Note:** You will need the product serial number.

<b>Country/ Region</b>	<b>Web Site</b>	<b>T=Telephone F=Fax</b>	<b>Email</b>
United States	<a href="http://www.viewsonic.com/support/">www.viewsonic.com/support/</a>	T= (800) 688 6688 F= (909) 468 1202	<a href="mailto:service.us@viewsonic.com">service.us@viewsonic.com</a>
Canada	<a href="http://www.viewsonic.com/support/">www.viewsonic.com/support/</a>	T= (866) 463 4775	<a href="mailto:service.ca@viewsonic.com">service.ca@viewsonic.com</a>

# Limited Warranty

## VIEWSONIC® LCD TV

### What the warranty covers:

ViewSonic warrants its products to be free from defects in material and workmanship, under normal use, during the warranty period. If a product proves to be defective in material or workmanship during the warranty period, ViewSonic will at its sole option repair or replace the product with a like product. Replacement product or parts may include remanufactured or refurbished parts or components.

### How long the warranty is effective:

ViewSonic LCD TVs are warranted for one (1) year for all parts excluding the light source and one (1) year for labor from the date of the first customer purchase.

### Who the warranty protects:

This warranty is valid only for the first consumer purchaser.

### What the warranty does not cover:

1. Any product on which the serial number has been defaced, modified or removed.
2. Damage, deterioration or malfunction resulting from:
  - a. Accident, misuse, neglect, fire, water, lightning, or other acts of nature, unauthorized product modification, or failure to follow instructions supplied with the product.
  - b. Repair or attempted repair by anyone not authorized by ViewSonic.
  - c. Any damage of the product due to shipment.
  - d. Removal or installation of the product.
  - e. Causes external to the product, such as electric power fluctuations or failure.
  - f. Use of supplies or parts not meeting ViewSonic's specifications.
  - g. Normal wear and tear.
  - h. Any other cause which does not relate to a product defect.
3. Any product exhibiting a condition commonly known as "image burn-in" which results when a static image is displayed on the product for an extended period of time.
4. Removal, installation, and set-up service charges.

### How to get service:

1. For information about receiving service under warranty, contact ViewSonic Customer Support at 800-888-8583. You will need to provide your product's serial number.
2. To obtain warranted service, you will be required to provide (a) the original dated sales slip, (b) your name, (c) your address, (d) a description of the problem, and (e) the serial number of the product.
3. Take or ship the product freight prepaid in the original container to an authorized ViewSonic service center or ViewSonic.
4. For additional information or the name of the nearest ViewSonic service center, contact ViewSonic.

### Limitation of implied warranties:

There are no warranties, express or implied, which extend beyond the description contained herein including the implied warranty of merchantability and fitness for a particular purpose.

### Exclusion of damages:

ViewSonic's liability is limited to the cost of repair or replacement of the product. ViewSonic shall not be liable for:

1. Damage to other property caused by any defects in the product, damages based upon inconvenience, loss of use of the product, loss of time, loss of profits, loss of business opportunity, loss of goodwill, interference with business relationships, or other commercial loss, even if advised of the possibility of such damages.
2. Any other damages, whether incidental, consequential or otherwise.
3. Any claim against the customer by any other party.

### Effect of state law:

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow limitations on implied warranties and/or do not allow the exclusion of incidental or consequential damages, so the above limitations and exclusions may not apply to you.

### Sales outside the U.S.A. and Canada:

For warranty information and service on ViewSonic products sold outside of the U.S.A. and Canada, contact ViewSonic or your local ViewSonic dealer.

Warranty\_LCDTV

4.3: ViewSonic LCD TV Warranty Rev. 1a

1 of 1

Release Date: 03-31-05



**ViewSonic®**

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>