

The VIZIO logo is positioned in the top left corner in a white, sans-serif font. The background of the entire page is a dark, textured surface with a large, faint circular seal on the right side. The seal features a five-pointed star in the center and the words 'ENTERTAINMENT' and 'COLLEGE' around its perimeter. A glowing, wavy red ribbon-like element flows across the middle of the page, partially overlapping the seal.

VIZIO

 
RAZOR LED™ LCD HDTV

**E190VA / E220VA / E260VA** – QUICK START GUIDE

# PACKAGE CONTENTS



VIZIO Razor LED™ LCD HDTV with Stand

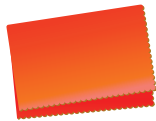

Cleaning Cloth




Remote Control with  
Batteries



User Manual and  
Quick Start Guide

# USING THE REMOTE

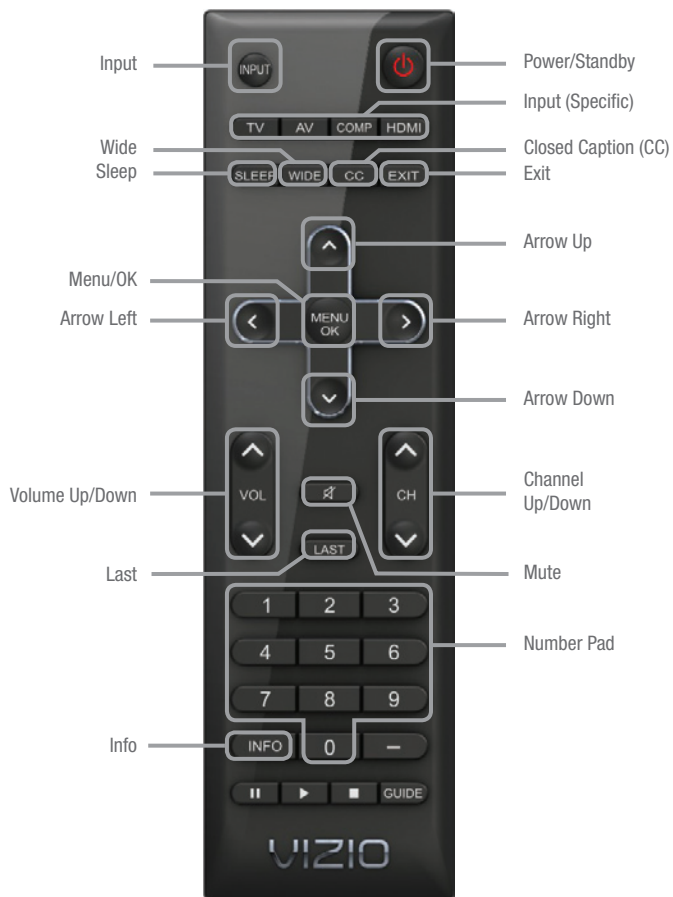 

**Input:** Change the input device. With each press of the button, the TV will display a different input.

**Input (Specific):** Change the input device. Press the button that corresponds to the input device you wish to view.

**Power/Standby:** Turn the TV on or off.

**Sleep:** Activate the sleep timer. With each press of the button, the sleep timer's duration will change.

**Wide:** Change the displayed aspect ratio.

**Closed Caption:** Activate or deactivate closed captioning. Press repeatedly to change the caption channel.

**Exit:** Close the on-screen menu.

**Arrow :** Navigate the on-screen menu and episode guide.

**Menu/OK:** Display the on-screen menu or select highlighted menu option.

**Volume Up/Down:** Increase or decrease the loudness of the TV's audio.

**Channel Up/Down:** Change the channel. With each press of the button, the channel will increase or decrease by one.

**Mute:** Turn the sound off or on. When mute is activated, the TV's audio is turned off.

**Last:** Return to the channel last viewed.

**Number Pad:** Use the number pad to manually enter a channel.

**Info:** Display the Info Window.

**Dash (-):** Use with Number Pad to manually enter a sub-channel (18-1, 18-2, etc).

# FIRST-TIME SETUP



Complete your home theater experience! The VIZIO **Blu-ray Player with Wireless Internet Apps** delivers full 1080p HD video, 7.1 surround sound and has built-in 802.11n dual-band wireless for easy access to movies, TV shows, music and more from the Internet.

- Delivers Cinematic High-Definition Picture
- Exceptional Full HD 1080p Performance
- Streams Movies, Music, and More with VIZIO Wireless Internet Apps
- Built-In Wi-Fi - 802.11n
- Up to 7.1 Channel Digital Audio
- Plays MP3s and JPEG Slideshows

Visit [www.VIZIO.com](http://www.VIZIO.com) to purchase online.

VIZIO RECOMMENDS

# 1



Connect the TV's power cable to an electrical outlet.



Connect your antenna or cable/satellite box to the coaxial port on the back of the TV.



Turn the TV on by pressing the **Power/Standby** button on the remote.

The Setup App is displayed.

Press the **Right Arrow** button on the remote to go to the next screen.

# 4



Press the **Up/Down Arrow** buttons on the remote to highlight your preferred language.

Press **Right Arrow** to go to the next screen.

# 5



Press the **Up/Down Arrow** buttons on the remote to highlight **Home**.

Press **Right Arrow** to go to the next screen.

# 6



If the TV is connected to an external antenna, select **Antenna**, then press **Right Arrow** and go to step 7.

If the TV is connected to a cable service without a set-top box (cable is connected directly from the wall outlet) select **Cable**, then press **Right Arrow** and go to step 7.

If the TV is connected to a cable or satellite set-top box, press the **EXIT** button on the remote, then select the input to which your set-top box is connected (**HDMI**, **COMP**, or **AV**).

# 7



Press the **Up/Down Arrow** buttons on the remote to highlight **Scan**.

Press **Right Arrow** to begin the channel scan.

Wait for the channel scan to finish.

When the channel scan is complete, the first-time setup is complete.

# CONNECTING YOUR DEVICES



To get the best high-resolution picture and sound on your new VIZIO TV, connect your devices with an HDMI cable.

VIZIO High Speed HDMI Cables are manufactured to produce the best picture on VIZIO TVs and feature:

- 1080p and for full HD video and future Ultra-HD video
- Great flexibility for thin wall mounts
- Stays securely connected at sharp angles
- Limited lifetime warranty

Visit [www.VIZIO.com](http://www.VIZIO.com) to purchase online.

VIZIO RECOMMENDS

# 1



HDMI



Component



Composite AV

Ensure your device has one of the above ports.

Turn your device and the TV off.

Connect your devices using the connection chart on the next page. This chart shows the most common connections. If you would like to see additional connection options, see *Connecting Your Devices* in the user manual.



 
# 2




Blu-ray/DVD Player, Game Console, or other Device




CHOOSE ONE:

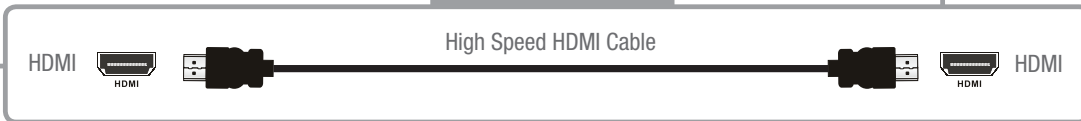

OR

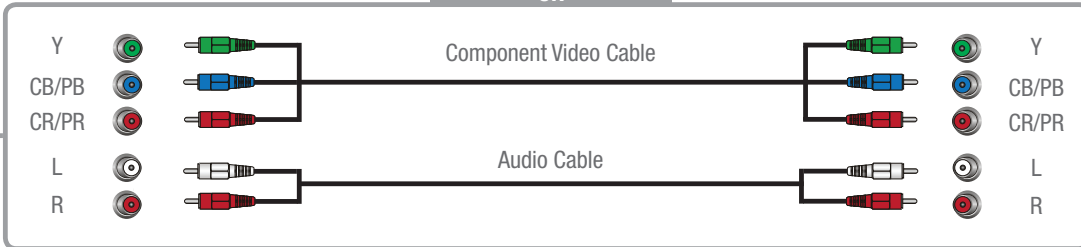 

OR

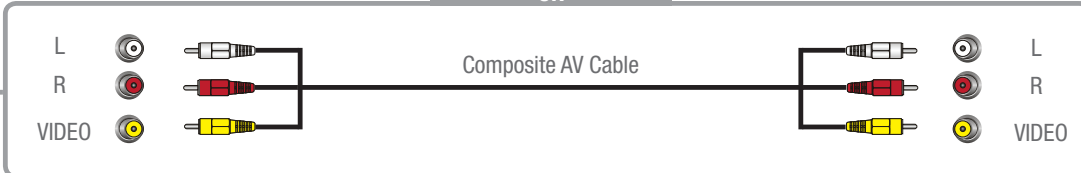 

Best Picture

Better Picture

Good Picture

# HELP TOPICS

Products are often returned due to a technical problem rather than a defective product that may result in unnecessary shipping charges billed to you. Our trained support personnel can often resolve the problem over the phone. For more information on warranty service or repair, after the warranty period, please contact our Support Department at the number below.

Customer support and quality service are integral parts of VIZIO's commitment to service excellence. For technical assistance contact our VIZIO Technical Support Department via email or phone.

Please have your VIZIO model number, serial number, and date of purchase available before your call.

**Phone:** (877) 698-4946

**Fax:** (949) 585-9563

**Email:** techsupport@vizio.com

**Web:** www.VIZIO.com

## Hours of operation:

Monday - Friday: 6 am to 9 pm (PST)

Saturday - Sunday: 8 am to 4pm (PST)

### There is no power.

- Ensure the power cord is securely connected to the AC socket on the TV and a working electrical outlet.
- Press the **Power/Standby** button on the remote or on the right side of the TV.
- Try plugging the power cord into a different electrical outlet.

### There is a picture, but there is no sound.

- Press the **Volume Up** button on the remote or on the right side of the TV.
- Press the **MUTE** button on the remote to ensure Mute is off.
- Press **MENU**, then select **TV Settings > Audio**. Ensure **TV Speakers** is set to **On**.

### The picture quality seems low.

- View high-definition (HD) programs when possible.
- Ensure all cables are securely connected.

**I cannot return to the Setup App.**

- The on-screen menu has guided setup. Press **MENU**, then select **Help > System Reset > Start Setup Wizard**. Enter your PIN (default is **0000**). Select **Yes**.

**There are black/gray bars on the top/bottom/sides of the picture.**

- Set the TV to Wide or Zoom Mode. Press **MENU**, then select **Wide**. Highlight **Wide** or **Zoom** and press **OK**.
- Adjust the video settings of your external device (Blu-ray™ or DVD player).
- If using the RGB (computer) input, ensure you are using a supported desktop resolution.
- Some television channels add black bars to the picture.

**The TV does not respond when I press buttons on the remote control.**

- Insert new batteries into the remote.
- Point the remote directly at the TV's sensor.
- Ensure nothing is blocking the TV's sensor. (The sensor is on the front of the TV, in the lower right corner.)

**The TV displays "No Signal"**

- Ensure your connected devices are turned on.
- Press the **INPUT** button on the remote and select the input to which your device is connected (HDMI, Composite, etc).
- If connected to a cable/satellite service with a set-top box via coaxial cable, press the **TV** button on the remote, then use the **Number Pad** to change the channel to 3 or 4.

**The TV displays "Please Scan Channels!"**

- Ensure your antenna or cable/satellite box is connected to the TV.
- Select the input to which your antenna or cable/satellite box is connected.
- Perform a channel scan. Press **MENU**, then select **TV > Channels > Scan Channels > On**.



ENTERTAINMENT FREEDOM FOR ALL

TRADEMARKS SHOWN ARE THE PROPERTY OF THEIR RESPECTIVE OWNERS. IMAGES USED ARE FOR ILLUSTRATION PURPOSES ONLY. VIZIO, THE V LOGO, WHERE VISION MEETS VALUE, AND OTHER VIZIO TRADEMARKS ARE THE INTELLECTUAL PROPERTY OF VIZIO INC. PRODUCT FEATURES AND SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE.  
© 2011 VIZIO INC. ALL RIGHTS RESERVED.

Download from [www.Somanuals.com](http://www.Somanuals.com) 1101035T-NC Manuals Search And Download

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>