



VOLVO S80

QUICK GUIDE




WELCOME TO YOUR NEW VOLVO!

Getting to know your new car is an exciting experience.

Please browse through this Quick Guide to enjoy your new Volvo even more. For detailed information, please refer to your Owner's Manual.

Warning texts and other important information are only provided in the regular Owner's Manual - not in this folder. The Owner's Manual contains the most up-to-date information.

Optional features are marked with an asterisk (*).

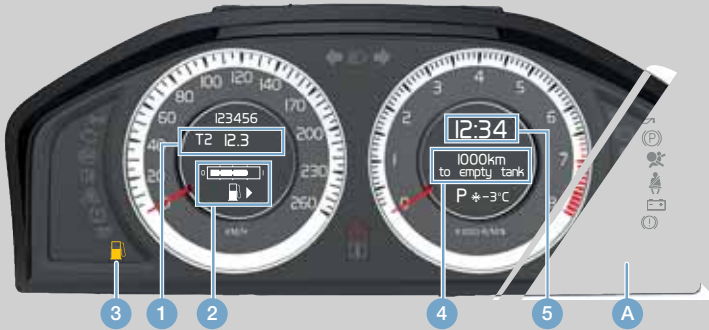

1 Trip odometer. To measure distance the car has two independent trip odometers T1 & T2 always running.

Press (A) for 2 seconds to **reset** displayed odometer.

Quickly press (A) to toggle T1/T2.

2 Fuel gauge. Fuel filler lid location arrow.

3 Fuel warning symbol. Lights in display when 8 litres fuel remain (diesel models: 7 litres).

4 Driving range on current fuel reserve
Twist control (7) to display.

i NOTE

Driving range on current fuel reserve is not a fuel gauge but an approximation of available range based on driving conditions.

5 Clock. Turn control (A) clockwise or anti-clockwise to adjust clock.



6 READ Push to access messages. Push again to confirm message.

7 Trip computer control.
Twist control to display functions.

8 Reset current function

A Multi control button.
Push to control trip odometer.
Turn L/R to adjust clock.

POWER PARKING BRAKE, PPB (V8, AWD & RHD)



To apply

1 Push the control.

P Light flashes until the brake is fully applied and then glows continuously.

To release

Ignition mode 0 or higher.
 Depress clutch or brake.

2 Pull the control.

Automatic release

Engage gear and drive away. (Automatic transmission cars require seatbelt buckled).



With a gear selected and accelerator pedal depressed the brake releases when you start driving.



1 POWER/VOLUME

Press ON/OFF.

Turn to adjust volume. Radio, TP, hands-free* and RTI volume are stored individually until next time they are used.

2 Select **AM, FM1, FM2, CD** or **MODE**. Use **MODE** to activate AUX and adjust AUX source volume.

3 Adjust sound

Adjust **BASS, TREBLE, FADER, BALANCE, Dolby Pro Logic II* and SUB-WOOFER*** by **pressing button**.

Set by turning button.

RADIO

3 Select a station by turning

4 Search stations with left or right arrow. Store up to 20 stations by press & hold 0-9 in FM1 and 0-9 in FM2, confirmed in display.

5 Autostore the 10 strongest stations.

Press **AUTO** for 2 seconds. **AUTOSTORE** is displayed during search.

Select 0-9 to play a radio station after storing.

CD

4 Change **CD track** with left or right arrow. **Select CD*** with up or down arrow.

6 Eject

Press to eject current CD.

Press and hold to eject all CDs in CD changer*.

7 **CD changer.*** Select CD 1-6.

FOLDING THE REAR SEAT BACKREST








Pull release handles separately to fold left and/or right backrest.



Make sure rear head restraints are in upright position. **Fold backrests.**



-  **Locks** door/boot and activates alarm.
-  **Unlocks** doors/boot and deactivates alarm.
-  **Unlocks** the boot.
-  **Lights up** sideview mirrors/approach lights and interior, foot, number plate, indicator and parking lights.
-  **“Panic” button.** Press for 3 seconds in an emergency situation.

Automatic relock occurs if no door/boot is opened within 2 minutes after unlock.


START



Place the remote in the ignition slot.



Gently push the remote. The remote is pulled into position.

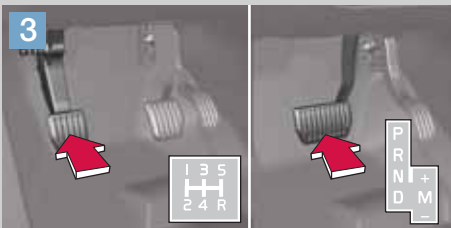

Depress clutch or brake.



Simply press START/STOP button to start the engine.

When cold starting, your engine will idle at a higher speed for a short time.

STOP & REMOVE REMOTE




Park the car and push Start/Stop button to stop the engine.



Gently push the remote. The remote ejects. Automatic transmission must be in position P.




KEYLESS DRIVE START

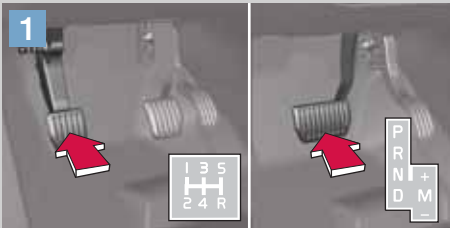

1 Enter the car with the PCC e.g. in your pocket.
Depress clutch or brake.

STOP

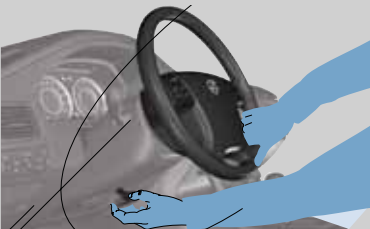



AUTOMATIC CONTROL

AUTO mode maintains all controls and makes driving easy with optimised air quality.

The power outlets in **front/rear** centre console operate in ignition mode I. The power outlet on the **right-hand side in the boot*** is always active.





LIGHT CONTROLS




	Display & instrument panel lighting
	Front fog lamps
	Rear fog lamp
	Automatic headlamps. Flash works but main beam does not operate.
	Parking lights
	Headlamps
	Headlamp height adjustment



Headlamp main beam **flash**.
Toggle between **main/dipped beams**.

ACTIVE BI-XENON LIGHTS, ABL*

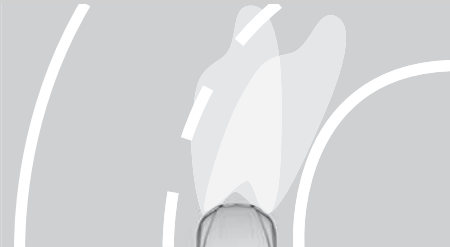


The Active Bi-Xenon lights follow the steering wheel movements.



Deactivate/Activate by pressing the button.

RAIN SENSOR* AND WINDSCREEN WIPERS

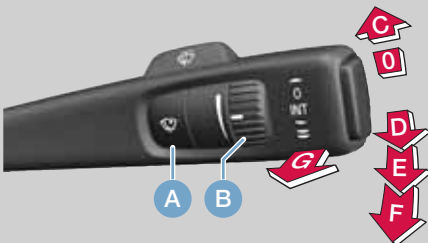

RAIN SENSOR

- A** Press to activate rain sensor with wiper lever in position **0**.
- B** Turn to **adjust sensitivity**.

Indicator rain sensor **ON**.

- C** **Single wiper sweep**
- D** **Intermittent wipers.** Turn (B) to adjust interval.
- E** **Normal speed**
- F** **High speed**
- G** **Windscreen and headlamp washer**

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>