EED EATER



Please do not return unit to retailer. Por favor, no devuelva el aparato al lugar de compra. Veuillez ne pas retourner l'outil au détaillant.

1-800-554-6723

www.weedeater.com

Operator's Manual Manual del Operador Manuel de L'utilisateur

TWIST-N-EDGE ^t





WARNING:

Read and follow all Safety Rules and Operating Instructions before using this product. Failure to do so can result in serious injury.

ADVERTENCIA:

Lea el manual del operador y siga todas las advertencias e instrucciones de seguridad. El no hacerlo puede resultar en lesiones graves.

AVERTISSEMENT:

Lire le manuel de l'utilisateur et bien respecter tous les avertissements et toutes les instructions de sécurité. Tout défaut de le faire pourrait entraîner des blessures graves.

Frigidaire Home Products, Augusta, GA 30907 WCI Outdoor Products, Inc.

530087611 2/15/00

SAFETY RULES

WARNING: When using gardening appliances, basic safety precautions shouldalways befollowed to reduce the risk of fire and serious injury. Read and follow all instructions.

This power unit can be dangerous! Operator is responsible for following unit and manual instructions and warnings. Read entire Operator's Manual before using unit! Bethoroughly familiar with the controls and the properuse of the unit. Restrict the use of this unit to persons who read, understand, and follow unit andmanualinstructions and warnings. Never allow children to operate this unit.



 
Safety information on the unit

DANGER: Never use blades, wire or flailing devices. This unit is designed for line trimmeruseonly. Useofanyother accessoriesor attachments will increase the risk of injury.



WARNING: Trimmer line throws objects violently. You and others can be blinded/injured.Wearsafetyglassesandlegprotection. Keep body parts clear of rotating line.

Safety Glasses or similar eye protection



Keep children, bystanders, and animals 50 feet(15meters)away. Ifapproached stopunit immediately.

If situations occur which are not covered in If studitoris occur which are not sover as a state this manual, usecare and good judgement. If you need assistance, contact your Authorized Service Dealer or call 1-800-554-6723.

OPERATOR SAFETY

- \$ Always wear safety eye protection.\$ Always wear long pants, long sleeves, boots, and gloves. Wearing safety leg guards is recommended. Do not go bare-foot or wear sandals. Stay clear of spinning line.
- \$ Secure hair above shoulder length. Secure or remove loose clothing or clothing

- with loosely hanging ties, straps, tassels, etc. They can be caught in moving parts.
- \$ Donotoperate this unit when you are tired, ill, upset, or under the influence of alcohol, drugs, or medication.
- \$ Wear hearing protection if you use this unit for more than 1-1/2 hours per day.
- S Never start or run inside a closed room or building. Breathing exhaust fumes can kill.
- \$ Keep handles free of oil and fuel.

UNIT / MAINTENANCE SAFETY

- \$ Disconnect the spark plug before performingmaintenanceexcept carburetoradjust-
- \$ Look for and replace damaged or loose parts before each use. Look for and repair fuel leaks before use. Keepin good working condition.
- \$ Replace trimmer head parts that are chipped, cracked, broken, or damaged in any other way before using the unit.
- \$ Make sure unit is assembled correctly as shown in this manual.
- \$ Make carburetor adjustments with lower end supported to prevent line from contacting any object.
- \$ Keepothersawaywhenmakingcarburetor adjustments.
- \$ UseonlyrecommendedWEEDEATERaccessories and replacement parts.

FUEL SAFETY

- \$ Mix and pour fuel outdoors.
- Keep away from sparks or flames.
- Use a container approved for fuel.
- Do not smoke or allow smoking near fuel or the unit.
- Wipe up all fuel spills
- S Move at least 10 feet (3 meters) away from fueling site before starting engine.
- Stop ĕngine and allow to cool before removing fuel cap.

CUTTING SAFETY

- \$ Use only for trimming, mowing, edging and sweeping. Do not use for pruning or hedge trimming.
- \$ Inspectitheareabeforeeachuse.Remove objects (rocks, broken glass, nails, wire, etc.) which can be thrown by line or become entangled. Hard objects can damage trimmerheadandbethrowncausingseriousin-
- \$ Keepfirmfooting and balance. Do not overreach.
- \$ Keep all parts of your body away from spin-ning line and muffler. Keep engine below waistlevel. Ahot mufflercan cause serious
- \$ Cutting with the line on left side of the shield will throw debris away from the operator.

TRANSPORTING AND STOR-AGE

\$ Allow the engine to cool; secure unit before storing or transporting in vehicle.

- \$ Empty the fuel tank before storing or transporting the unit. Use up fuel left in the carburetor by starting the engine and letting it run until it stops.
- S Store unit and fuelin an area where fuel vapors cannot reach sparks or openflames from water heaters, electric motors or switches, furnaces, etc.
- \$ Store unit so line limiter cannot accidentally cause injury. Unit can be hung by the tube. S Store the unit out of the reach of children

SPECIAL NOTICE: This unit is not equipped with a temperature limiting muffler and spark arresting screen which meets the requirements of California Codes 4442 and 4443. All U.S. forest land and the states of California, Idaho, Maine, Minnesota, New Jersey, Oregon, and Washington require by law that many internal combustion engines to be equipped with a spark arrestor screen. If you operate in a locale where such regulations exist, you are legally responsible for installing and maintaining the operating condition of these parts. Failure to do so is aviolation of the law. If a spark arrestor is required inyourarea, contactyour Authorized Service

 
Dealer for the proper kit.

SPECIAL NOTICE: Exposure to vibrations through prolonged use of gasoline powered hand tools could cause blood vesselor nerve damage in the fingers, hands, and joints of people prone to circulation disorders or abnormal swellings. Prolonged use in cold weather has been linked to blood vesseld amage in other wise healthy people. If symptoms occur such as numbness, pain, loss of strength, change in skin color or texture, or loss of feeling in the fingers, hands, or joints, discontinue the use of this tooland seek medical attention. Ananti-vibration system does not guarantee the avoidance of these problems. Users who operate power tools on a continual and regular basis must monitor closely their physical condition and the condition of this tool.

ASSEMBLY

WARNING: Make sure unit is properly assembled and all fasteners are secure.

ATTACHING THE HANDLE



\$ Assemble handle to the unit as shown; make sure bottom of handle is seated in the groove in the trigger housing.


NOTE: Adjustment knob must be assembled on the side of the unit opposite the operator's position.

S Pivot handle to a comfortable position. Tighten handle securely.

ATTACHING THE SHIELD

WARNING: The shield helps to protect the operator and others from thrown objects, and is equipped with a line limiter blade which cuts excess line. This blade (on underside of shield) is sharp and can cut you.

- Remove wing nut from shield. Insert bracket into slot as shown.
- \$ Pivot shield until bolt passes through hole
- \$ Securely tighten wing nut onto bolt.

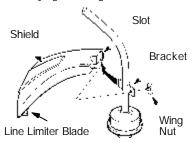

FUEL YOUR UNIT

This engine is certified to operate on unleaded gasoline. Gasoline must be mixed with a good quality 2-cycle air-cooled engine oil designed to be mixed at a ratio of 40:1. Poulan/Weed Eater brand oil is recommended. (A 40:1 ratio is obtained by mixing 3.2 ounces of oil with 1 gallon of unleaded gasoline). When mixing fuel follow the instructions printed on the container. Always read and follow the safety rules under FUEL SAFETY.

STARTING

 
For occasional use only.



HOW TO STOP YOUR UNIT

Push and hold engine stop switch in the STOP or OFF position until the unit has fully stopped.

WARNING: The trimmer head will turn while starting the engine. A hot muffler can cause serious burns.



HOW TO START YOUR UNIT

WARNING: The trimmer head will turn while starting the engine. A hot muffler can cause serious burns.

COLD ENGINE STARTING OR STARTING AFTER REFUELING

- Set unit on a flat surface.
- Slowly press the primer bulb 6 times.
- \$ Move choke lever to FULL CHOKE position.
- Squeeze the throttle trigger fully and hold through all remaining steps.
- \$ Pull starter rope handle sharply 6 times.
- \$ Move choke lever to HALF CHOKE position.
- S Pull starter rope handle no more than 6 pulls, until engine runs.
- \$ Allowenginetorun10seconds, then move choke lever to OFF CHOKE position.

RESTARTING A WARM ENGINE

- \$ MovechokelevertoOFFCHOKEposition.
- S Pull starter rope handle until engine runs.
- \$ If engine does not start in 5 pulls, follow instructions in STARTING A COLD EN-GINE.

USING YOUR UNIT

OPERATING POSITION



Cut from your right to your le

ADVANCING THE CUTTING LINE

Advanceline by tapping the bottom of the cutting head lightly on the ground while engine is running at full speed. Ametal blade attached to the shield will cut the line to the proper length.


TWIST-N-EDGE

- \$ Pull the tab toward the engine.
- S Twist the tube to the edging position; release the tab.



REPLACING THE LINE

- \$ Remove spool by firmly pulling on tap button.
- \$ Clean entire surface of hub and spool.
 \$ Replace with a pre-wound spool, or cut a length of 20 feet of .080" (2 mm) diameter Weed Eaterr brand line. Never use wire, rope, string, etc., which can break off and become a dangerous missile.
- \$ Insert one end of the line about 1/2 inch (1 cm) into the small hole on the inside of spool.

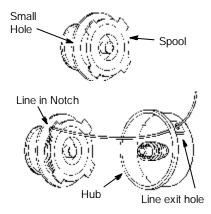

- \$ Wind the line evenly and tightly onto the spool. Wind in the direction of the arrow found on the spool.
- \$ Push the line into the notch, leaving 3 to 5 inches (7 12 cm) unwound.
- \$ Inserttheline into the the exit hole in the hub as shown in the illustration.
- \$ Align the notch with the line exit hole.
- S Push spool into hub until it snaps into place.
- \$ Pull the line extending outside of the hub to release it from the notch.

SERVICE

Werecommend all service and adjustments not listed in this manual be performed by an Authorized Service Dealer.

CARBURETOR ADJUSTMENTS

Your carburetor is equipped with limitercaps. Carburetoradjustment is a complicated task. We recommend that you take your unit to an Authorized Service Dealer. Damage will occur if you turn the needles beyond the limiter stops.

IGNITION TIMING

The ignition timing is fixed, non-adjustable.

SPARK PLUG

Replace the spark plug yearly using a Champion RCJ-8Y plug. Spark plug gap is .025".

TROUBLESHOOTING

Engine will not start.

- \$ Fuel tank empty.
- \$ Engine flooded.
- \$ Spark plug not firing.
- **S** Fuel not reaching carburetor.
- S Carburetor requires adjustment.
- Engine will not idle properly.
 - **\$** Carburetor requires adjustment.
 - **S** Throttle trigger screw too tight.

Engine will not accelerate, lacks power, or dies under a load.

- S Air filter dirty.
- \$ Spark plug fouled.\$ Carburetor requires adjustment.

Engine smokes excessively.

- S Air filter dirty.
- S Too much oil mixed with gasoline.
- S Carburetor requires adjustment.

Line does not advance or breaks while

- **S** Line improperly routed in head.
- Line improperly wound on spool.
- **S** Line size incorrect.

Line welds onto spool.

- \$ Line size incorrect
- \$ Line improperly wound on spool.\$ Crowding line on material being cut.

Line pulls back into head

- Too little line outside of head.
- **S** Line size incorrect.

NEED ASSISTANCE?

Need Assistance? Call 1-800-554-6723

Need Service Parts? Contact your dealer .

LIMITED WARRANTY

FRIGIDAIREHOMEPRODUCTS, Div.WCI OutdoorProducts,Inc.warrantstotheoriginal purchaser that each new Weed Eater brandgasoline tool or attachment is free from defects in material and workmanship and agrees to repair or replace under this warranty any defective gasoline product or attachment as follows from the original date of purchase.

2 YEARS- Parts and Labor, when used for household purposes

90 DAYS - Parts and Labor, when used for commercial, professional, or income producing purposes

30 DAYS - Parts and Labor, if used for rental

Thiswarrantyisnot transferable and does not cover damage or liability caused by improper handling, improper maintenance, or the use of accessories and/or attachments not specifically recommended by FRIGIDAIRE HOMEPRODUCTS for this tool. Additionally, this warrantydoes not cover tune-ups, spark plugs, fillers, starter ropes, starter springs, cutting line, or rotating head parts that will wear and require replacement with reasonableuseduringthewarrantyperiod. Thiswarrantydoesnotcoverpredeliverysetupornormal adjustments explained in the operator's

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

NO CLAIMS FOR CONSEQUENTIAL OR OTHER DAMAGES WILL BE ALLOWED, AND THERE ARE NO OTHER EXPRESS WARRANTIES EXCEPT THOSE EXPRESSLY STIPULATED HEREIN.

SOME STATES DO NOT ALLOW LIMITA-TIONSONHOWLONG AN IMPLIED WAR-RANTY LASTS OR THE EXCLUSION OR LIMITATIONS OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THEABOVE LIMITATIONS OR EXCLUSION MAY NOT APPLY TO YOU

FRIGIDAIRE HOME PRODUCTS' policy is to continuously improve its products. Therefore, FRIGIDAIRE HOME PRODUCTS reserves the right to change, modify, or discontinue models, designs, specifications, and accessories of all products at any time without notice or obligation to any purchaser.

U.S. EPA / ENVIRONMENT CANADA EMISSION CONTROL WARRANTY STATEMENT

YOUR WARRANTY RIGHTS AND OB-LIGATIONS: The U. S. Environmental ProtectionAgency/EnvironmentCanadaand POULAN/WÉEDÉATER, DIVISION OF WCI OUTDOOR PRODUCTS are pleased to explain the emissions control system warranty on your lawn and garden equipment engine All new utility and lawn and garden equipment engines must be designed, built, and equipped to meet the stringent anti-smog standards. POULAN/WEED EATER must warranttheemissioncontrolsystemonyour lawn and gardenequipment engine for the periods of time listed below provided there has been no abuse, neglect, or improper maintenanceof your lawn and garden equipmentengine. Your emission control system includes parts such as the carburetor and the ignition system. Whereawarrantable condition exits, POULAN/WEED EATER willrepair your lawn and garden equipment engine at no cost to you. Expenses covered under warranty includediagnosis, partsandlabor. MANUFAC-TURER'SWARRANTYCOVERAGE: Ifany emissions related part on your engine (as listed under Emissions Control Warranty Parts List) is defective or a defect in thematerialsorworkmanshipoftheenginecausesthe failure of such an emission related part, the partwillberepairedorreplacedby POULAN/WEED EATER. OWNER'S WARRANTY RESPONSIBILITIES: As the lawn and garden equipment engine owner, you are responsible for the performance of the required maintenance listed in your Owner's Manual. POULAN/WEED EATER recommends that youretainallreceipts covering maintenance on your lawn and garden equipment engine, but POULAN/WEED EATER cannot deny warranty solely for the lack of receipts or for your failure to ensure the performance of all scheduled maintenance. As the lawn and garden equipment engine owner, you should be aware that POULAN/WEED EATER may deny you warranty coverage if your lawnand garden equipment engine or a part of it has faileddueto abuse, neglect, impropermaintenance, unapproved modifications, or theuse of parts not made or approved by the original equipment manufacturer. You are responsible for presenting your lawn and garden equipment engine to a POULAN/WEEDEAT-ER authorized repair center as soon as a problem exists. Warranty repairs should be completed in a reasonable amount of time, notto exceed 30 days. If you have any questions regarding your warranty rights andresponsibilities, you should contact your nearest authorized service center or call POULAN/WEED **EATER** 1-800-554-6723 WARRANTY COM-MENCEMENT DATE: The warranty period begins on the date the lawn and garden equip-

ment engine is purchased. LENGTH OF COVERĂGE: This warranty shall be for a period of two years from the initial date of purchase. WHAT IS COVERED: REPAIR OR **REPLACEMENT OF PARTS.** Repair or replacement of any warranted part will be performed at no charge to the owner at an approved POULAN/WEED EATER servicing center. If you have any questions regarding yourwarranty rights and responsibilities, you should contact your nearest authorized service centeror callPOULAN/WEED EATERat 1-800-554-6723 **WARRANTY PERIOD**: Anywarranted partwhich is not scheduled for replacement as required maintenance, or which is scheduled only for regular inspection to the effect of "repair or replace as necessary" shallbewarrantedfor 2 years. Anywar-ranted part which is scheduled for replacement as required maintenance shall be warranted for the period of time up to the first scheduled replacement point for that part. **DIAGNOSIS:** The owner shall not be charged for diagnostic labor which leads to the determination that a warranted part is defective if the diagnostic work is performed at an approved POULAN/WEED EATER servicing center. CONSEQUENTIAL DAM-AGES: POULAN/WEED EATER may be liable for damages to other engine components caused by the failure of a war-ranted part still under warranty. WHAT IS NOT COVERED: All failures caused by abuse,neglect, orimproper maintenanceare not covered. ADD-ON OR MODIFIED **PARTS:** The use of add-onor modified parts can be grounds for disallowing awarranty claim. POULAN/WEED EATER is not liable to cover failures of warranted parts caused by theuse of add-on or modified parts. **HOWTÓ FILEA CLAIM:** If you have any questions regarding yourwarranty rights and responsibilities, you should contact your nearest authorized servicecenteror callPOULAN/WEED EATERat 1-800-554-6723. WHERE TO GET WAR-RANTY SERVICE: Warranty services orrepairs shall be provided at all POULAN/WEED EATERs ervice enters call 1-800-554-6723 MAINTENANCE, REPLACEMENTANDRE-PAIROFEMISSIONRELATED PARTS: Any POULAN/WEED EATER approved replacementpartused in the performance of anywarranty maintenance or repair on emission related parts will be provided without charge to the owner if the part is under warranty. EMIS-SION CONTROL WARRANTY PARTS LIST: Carburetor, Ignition System: Spark Plug (covered up to maintenance schedule), Ignition Module. MAINTENANCE STATE-**MENT:** The owner is responsible for the performance of all required maintenance as defined in the owner's manual.

The information on the product label indicates which standard your engine is certified. Example: (Year) EPA Phase 1 or Phase 2 and/or CALIFORNIA.

IMPO	IRTART ENGINE INFORMATION
THIS EN Regulat	IGINE CONFORMS TO EMISSIONS IONS FOR SMALL OFF ROAD ENGINES
FAMILY DISP. SERIAL#	
REFER TO OWNER'S MANUAL FOR MAINTENANCE SPECIFICATIONS AND ADJUSTMENTS,	

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com