


**WEST BEND.**  
HOUSEWARES

**Electronic  
TIMER / CLOCK / STOPWATCH**

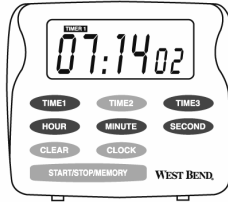

**No. 40053**

[www.westbend.com](http://www.westbend.com)

### **Insert Battery before Using**

1. Slide battery cover in arrow direction.
2. Insert one Triple A (AAA) battery. Match plus (+) and minus (-) symbols.
3. Replace battery cover. Peel static display label from electronic readout. Your timer is ready to use.

### **Helpful Hints on using Timer**

- Timing channels will count up to or down from 99 hours, 59 minutes, and 59 seconds.
- Clock is independent of timing function.
- Excessive heat, above 120 °F, (50 °C), can damage the timer. Keep timer away from all heat sources.
- Wipe timer case with a damp cloth if necessary.
- Never immerse timer in water or other liquid.

- The clip on the back will attach to any thin surface or belt. Magnet will also secure timer to any metal surface.
  - A small hanging hole in clip is provided for use with a string.
  - Clip with metal stand bar will allow timer to stand on any flat surface for viewing.
- For household use only.

**Set Clock**

1. Press CLOCK button for 5 seconds. Display will flash.
2. Press and/or hold HOUR, MINUTE, and SECOND buttons to advance to the correct time. Display shows correct time in AM or PM.
3. Press CLOCK button to activate Clock.

**Set any Timer**

1. Press TIME1, TIME2, or TIME3 button for desired timer channel. The selected timer channel symbol (T1, T2, or T3) will display.
2. Press CLEAR to zero display.
3. Press and hold HOUR, MINUTE and SECOND buttons to advance to correct time.

**Operate any timer**

1. Press START/STOP/MEMORY button to start timer.
2. When time expires, a distinctive alarm will sound. The timer will continue to count up. The alarm will silence after 1 minute.

3. Press CLEAR or any other button to silence alarm. Press START/STOP/MEMORY to stop timer and silence alarm.

4. Press CLEAR to zero display.

#### **Recall Previous Time**

When Countdown time has expired press START/STOP/MEMORY once to pause timer, twice to recall previous time, and again to start countdown timer.

#### **Operate Stopwatch**

1. Press TIME1, TIME2, or TIME3 button for desired timer channel. The selected timer channel symbol (T1, T2, or T3) will display.

2. Press START/STOP/MEMORY to time.

**Pause Stopwatch**

Press START/STOP/MEMORY once to pause timer. Press again to resume timing.

**Clear Display**

Press START/STOP/MEMORY to stop, then press CLEAR.

**Replace Battery**

See "Insert Battery Before Using" Section.  
DISCARD USED BATTERY IMMEDIATELY.  
KEEP BATTERY AWAY FROM CHILDREN.

**CAUTION:** To prevent personal injury,  
never place battery in mouth for any reason  
as it is small and can be swallowed.

West Bend® Housewares, LLC warrants this appliance from failures in the material and workmanship for 1 year from the date of original purchase, provided the appliance is operated and maintained in conformity with the West Bend® Housewares, LLC. Instruction Manual. Any failed part of the appliance will be repaired or replaced without charge at West Bend® Housewares, LLC discretion. This warranty applies to indoor household use only.

The West Bend® Housewares, LLC. warranty does not cover any damage, including discoloration, to any non-stick surface of the appliance. The West Bend® Housewares, LLC. warranty is null and void, as determined solely by West Bend®

Housewares, LLC., if the appliance is damaged through accident, misuse or abuse, scratching, overheating, or if the appliance is altered in any way or if used outside of an indoor household setting.

This warranty gives you specific legal rights. You may also have other rights, which may vary from state to state.

THIS WARRANTY IS IN LIEU OF ALL IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, PERFORMANCE, OR OTHERWISE, WHICH ARE HEREBY EXCLUDED. IN NO EVENT



SHALL WEST BEND® HOUSEWARES, LLC.  
BE LIABLE FOR ANY DAMAGES, WHETHER  
DIRECT, IMMEDIATE, INCIDENTAL,  
FORESEEABLE, CONSEQUENTIAL, OR  
SPECIAL, ARISING OUT OF OR IN  
CONNECTION WITH ITS APPLIANCE.

If you think the appliance has failed or requires service within its warranty period, return it to the original place of purchase. For further details please contact the West Bend® Housewares Customer Service Department at (262) 334-6949 or e-mail us at [housewares@westbend.com](mailto:housewares@westbend.com). Return shipping fees are non-refundable. Hand-written receipts are not accepted.

Valid only in USA and Canada

West Bend Housewares, LLC.  
Attn: Customer Service  
P.O. Box 2780  
West Bend, WI. 53095

L5566

Printed in China

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>