

WESTINGHOUSE HAND BLENDER



MODEL WST2015ZE

OWNER'S MANUAL



Westinghouse

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. To protect against risk of electrical shock, do not put cord, plugs, or the appliance in water or other liquid.
3. This appliance should not be used by children and care should be taken when used near children.
4. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
5. Avoid contacting moving parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Contact Consumer Service for examination, repair or electrical or mechanical adjustment.
7. The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter.
10. Do not let cord contact hot surface, including the stove.
11. When mixing liquids, especially hot liquids, use a tall container or make small quantities at a time to reduce spillage.
12. Keep hands and utensils out of the container while blending to prevent the possibility of severe injury to persons or damage to the unit. A scraper may be used but must be used only when the unit is not running.
13. Blades are sharp. Handle carefully.

SAVE THESE INSTRUCTIONS

For Household Use Only

ADDITIONAL IMPORTANT SAFEGUARDS

1. All users of this appliance must read and understand this Owner's Manual before operating or cleaning this appliance.
2. The cord to this appliance should be plugged into a 120V AC electrical outlet only.
3. Do not leave this appliance unattended during use.
4. If this appliance begins to malfunction during use, immediately turn the unit OFF by releasing the Speed Control Button and unplug the cord. Do not use or attempt to repair the malfunctioning appliance.
5. IF this appliance falls or accidentally becomes immersed in water, unplug it immediately. Do not reach into the water! Do not use this appliance after it has fallen into or becomes immersed in water.
6. To reduce the risk of injury to persons or property, never use this appliance in an unstable position.
7. Do not use this appliance for other than its intended use.
8. Do not use the Mixing/Measuring Beaker if cracked or chipped.

POLARIZED PLUG

 
 
This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

ELECTRIC POWER

If the electrical circuit is overloaded with other appliances, your appliance may not operate properly. It should be operated on a separate electrical circuit from other appliances.

GETTING TO KNOW YOUR WESTINGHOUSE HAND BLENDER WST2015ZE

PRODUCT MAY VARY SLIGHTLY FROM ILLUSTRATION

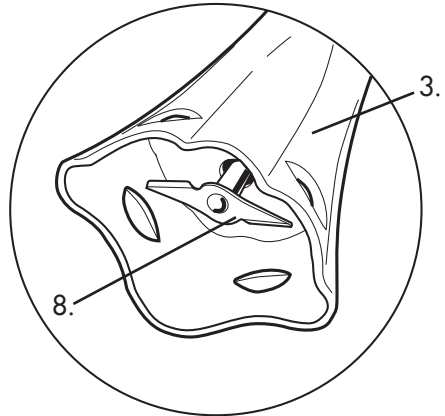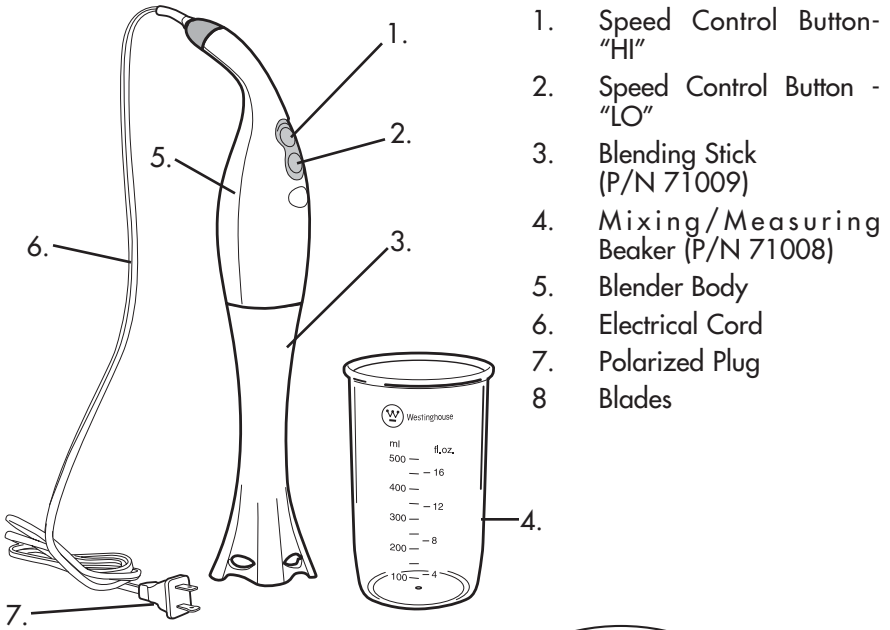

BEFORE USING FOR THE FIRST TIME

CAUTION: Do not touch the Blades with your fingers. The Blades are very sharp and can cause injury if touched.

1. Carefully unpack the Blender Body and all accessories.
2. Wash the Mixing/Measuring Beaker, and Blender Stick in warm soapy water. Rinse and dry thoroughly.
3. Never immerse the Blender Body in water or any other liquid. If necessary, the Blender Body can be wiped clean with a moistened cloth.
4. Always dry the Blending Stick thoroughly so that no water can enter the Blender Body.

NOTE: The Mixing/Measuring Beaker is not microwave-proof.

 
OPERATING INSTRUCTIONS

CAUTION: Always unplug Blender Body from outlet before installing or removing the Blending Stick.

USING THE BLENDING STICK

The Hand Blender is perfectly suited for preparing sauces, soups, baby food, mayonnaise as well as milkshakes, mixing drinks and diet food.

1. Be sure Blender Body is unplugged.
2. Place the Blender Body over the Blending Stick and carefully twist until it clicks into place. Gently turn the Blender Body at the same time if necessary.

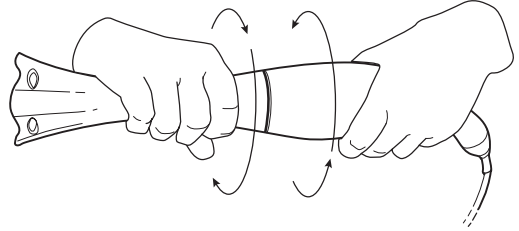

3. Place ingredients into a container, or other bowl or pan which is sufficiently tall to avoid splashing.
4. Plug the Blender Body into a standard 120V AC electrical outlet.
5. Dip the Blending Stick as deeply as possible into the container. Turn ON the Blender by pressing either one of the Speed Control Buttons. Do not turn Blender ON before inserting into container as this may cause splashing.

NOTE: Do not immerse the Blending Stick in food or liquid above the MAX indicator line.

6. When using the Blending Stick, work through the ingredients with a gentle up and down movement of the Blender Body.
7. When blending task is complete, release the Speed Control Button and remove plug from electrical outlet.
8. Carefully remove the Blending Stick by twisting the Blending Stick apart from the Blender Body.
9. Clean unit and attachments as instructed in USER MAINTENANCE INSTRUCTIONS.

USER MAINTENANCE INSTRUCTIONS

This appliance requires little maintenance. It contains no user serviceable parts. Do not try to repair it yourself. Any servicing requiring disassembly other than cleaning must be performed by a qualified appliance repair technician.

TO CLEAN

CAUTION: Never immerse the Blender Body in water or any other liquid.

1. Always unplug the unit before cleaning.
2. Remove the Blending Stick from Blender Body.
3. Wash the Mixing/Measuring Beaker, in warm soapy water. Rinse and dry thoroughly.
4. Never immerse the Blender Body, in water or any other liquid. If necessary, wipe exterior surface with a moist cloth or sponge and dry thoroughly.
5. The Blending Stick can be washed in warm soapy water and is dishwasher safe. Dry the Blending Stick thoroughly before attaching it to the Blender Body.

STORAGE

Store the Hand Blender in its original box in a cool, dry place.

LIMITED ONE-YEAR WARRANTY

Warranty Coverage: This product is warranted to be free from defects in materials or workmanship for a period of one (1) year from the original purchase date. This product warranty is extended only to the original consumer purchaser of the product and is not transferable. For a period of one (1) year from the date of original purchase of the product, our Repair Center will, at its option, either (1) repair the product or (2) replace the product with a reconditioned comparable model. These remedies are the purchaser's exclusive remedies under this warranty.

Warranty Service: To obtain warranty service, you must call our warranty service number at 1-800-233-9054 for return instructions on how to deliver the product, in either the original packaging or packaging affording an equal degree of protection to the Repair Center specified below. You must enclose a copy of your sales receipt or other proof of purchase to demonstrate eligibility for warranty coverage.

To return the appliance, ship to:

ATTN: Repair Center
708 South Missouri Street
Macon, MO 63552 USA

To contact us, please write to, call, or email:

Consumer Relations Department
PO Box 7366
Columbia MO 65205-7366 USA
1-800-233-9054
E-mail:
consumer_relations@toastmaster.com

What Is Not Covered: This warranty does not cover damage resulting from misuse, accident, commercial use, improper service or any other damage caused by anything other than defects in material or workmanship during ordinary consumer use. This warranty is invalid if the serial number has been altered or removed from the product. This warranty is valid only in the United States and Canada.

LIMITATION ON DAMAGES: THERE SHALL BE NO LIABILITY FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY OR CONDITION ON THIS PRODUCT.

DURATION OF IMPLIED WARRANTIES: EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ALL IMPLIED WARRANTIES AND CONDITIONS, INCLUDING, WITHOUT LIMITATION, IMPLIED WARRANTIES AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE OR USE ON THIS PRODUCT ARE LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may have other rights under the laws of your jurisdiction.

For more information on our products, visit our website: www.maxim-toastmaster.com.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>