



# Westinghouse

## 4-Slice Toaster



WST3033

**You can be sure...if it's Westinghouse**

Download from [Www.Somanuals.com](http://Www.Somanuals.com). All Manuals Search And Download.

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock do not immerse cord, plugs, or appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Contact Consumer Service for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let the cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. To disconnect, press the "CANCEL" Button, then remove plug from wall outlet.
12. Do not use appliance for other than intended use.
13. Oversize foods, metal foil packages, or utensils must not be inserted in a Toaster as they may involve a risk of fire or electric shock.
14. A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
15. Do not attempt to dislodge food when Toaster is plugged in.

## SAVE THESE INSTRUCTIONS For Household Use Only

## ADDITIONAL IMPORTANT SAFEGUARDS

**CAUTION HOT SURFACES:** This appliance generates heat and escaping steam during use. Proper precautions must be taken to prevent the risk of burns, fires, or other injury to persons or damage to property.

1. A person who has not read and understood all operating and safety instructions is not qualified to operate this appliance. All users of this appliance must read and understand this Owner's Manual before operating or cleaning this appliance.
2. If this appliance falls or accidentally becomes immersed in water, unplug it from the wall outlet immediately. **Do not reach into the water!**
3. When using this appliance, provide adequate air space above and on all sides for air circulation. Do not operate this appliance while it is touching or near curtains, wall coverings, clothing, dishtowels or other flammable materials.
4. To reduce the risk of fire, do not leave this appliance unattended during use.
5. The cord to this appliance should only be plugged into a 120V AC electrical wall outlet.
6. Do not use this appliance in an unstable position.
7. Use the Toaster on a hard, flat surface. Do not place it near a flame or heat or on a soft surface (such as carpet). Avoid placing it where it may tip over during use. Dropping the Toaster could cause it to malfunction.
8. If this appliance begins to malfunction during use, immediately press the CANCEL Button(s) and unplug the cord. Do not use or attempt to repair the malfunctioning appliance.
9. **WARNING: ELECTRICAL SHOCK HAZARD.** Never attempt to dislodge food inside the Toaster while the Toaster is plugged in. Doing so could cause an electrical shock hazard or a risk of fire.
10. **CAUTION:** This appliance is hot during operation and retains heat for some time after turning off. Always use oven mitts when handling hot materials and allow metal parts to cool before cleaning. Do not place anything on top of the Toaster while it is operating or while it is hot.

### CAUTION:

- **DO NOT** toast pastries with runny fillings or frosting.
- **DO NOT** toast torn slices of bread.
- **DO NOT** place buttered bread or wrapped food into the Toaster.
- **DO NOT** toast small-size breads like "melba," mini-baguettes, breadsticks, etc.

## Polarized Plug

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

## Short Cord Instructions

A short power supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.

Do not use an extension cord with this product.

## Electric Power

If the electric circuit is overloaded with other appliances, your appliance may not operate properly. It should be operated on a separate electrical circuit from other appliances.


## Plasticizer Warning

**CAUTION:** To prevent Plasticizers from migrating from the finish of the countertop or tabletop or other furniture, place **NON-PLASTIC** coasters or placemats between the appliance and the finish of the countertop or tabletop.

**Failure to do so may cause the finish to darken, permanent blemishes may occur or stains can appear.**

# Getting To Know Your Westinghouse WST3033 4-Slice Toaster

The box containing your Westinghouse 4-Slice Toaster should include the following parts. If any of the following parts are missing, contact customer service.

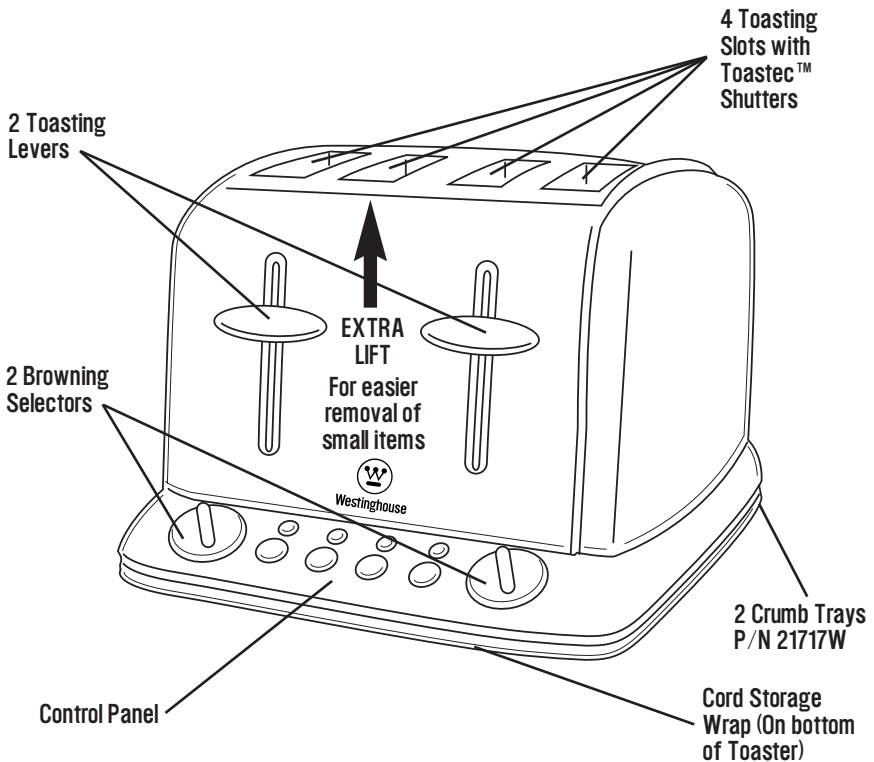

## INTRODUCTION

The new Westinghouse Toaster crisps bread rapidly on the outside, while keeping it moist on the inside.

Lowering one or both of the Toasting Levers closes the Bread Guides, holding the bread centrally in the toasting slots. Toastec™ System Shutters at the top of the bread guides block the escape of heated air, accelerating the browning process and cutting the amount of energy used.

# OPERATING INSTRUCTIONS

## Before Using For The First Time

1. Carefully unpack your Toaster and remove all packaging materials. Remove any labels from the outer stainless steel surfaces.
2. To remove any dust that may have accumulated during packaging, simply wipe the Toaster exterior with a clean, damp cloth.
3. Do not use abrasive cleansers.
4. Do not put the Toaster, cord or plug in water.
5. Before making toast for the first time, operate both pairs of the Toasting Slots without bread and with both Browning Selectors set at the maximum setting. This will help to burn off any dust etc. which may have accumulated on the elements. The new elements may give off an unpleasant smell but this should not be a cause for alarm. Make sure the room is well ventilated while doing this.


## To Operate Toaster

1. Position the Toaster on a firm, level, heat-resistant surface, clear of curtains, draperies, and other combustible materials.

**WARNING: Do not place the Toaster on or near items that may become damaged even by moderate sources of heat.**

2. Unwrap power cord from Cord Storage Wrap on the underside of the Toaster.
3. Plug the power cord into a 120V AC electrical outlet.

## Control Panel

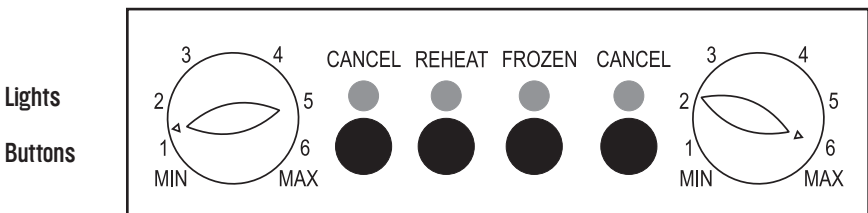

## Toasting Bread

1. Center the bread in the Toasting Slots.
2. Set one or both of the Browning Selectors to the degree of browning required.

**NOTE:** The Browning Control is electronic – moving the Browning Selector(s) after toasting has started will not change the degree of browning.

3. Press one or both of the Toasting Levers down fully – **the Lever(s) will not lock down unless the Toaster is plugged in to an electrical outlet.** Each Toasting Lever operates one pair of Toasting Slots.

The CANCEL Light(s) will illuminate, and will stay on until the toasting cycle is stopped, either automatically, when the toast is ready, or manually, if you press the CANCEL Button(s).

4. When using only one of the Toasting Slots in a pair, do not allow anything to enter the other Slot, as both Slots will be heating when the Lever is lowered.
5. When the toasting cycle is completed, the toast will pop up.
6. **EXTRA LIFT:** When toasting small items (bagels, crumpets, etc.) the Toasting Lever(s) may be raised further, to allow them to be removed more easily.

**NOTE:** Do not operate the Toaster unless both Crumb Trays are in position and correctly fitted.

## Cancel Buttons

There are 2 CANCEL Buttons, one for each pair of Slots.

If you wish to stop the toasting cycle before it is complete, press the appropriate CANCEL Button. The elements will be turned off, the toast will pop up, and the CANCEL Light(s) will go out.

## Reheating Toast

This Toaster has a special setting for reheating toast, which overrides the Browning Selector(s).

To reheat toast which has cooled, place it in one of the toasting slots, lower the Toasting Lever, then press the REHEAT Button. The REHEAT Light will illuminate, to show that this feature is operating, and the toast will be given a short burst of heat before popping up.

**NOTE:** The REHEAT Button affects all four Slots. You CANNOT program the Toaster to REHEAT toast and make fresh toast at the same time.

**CAUTION:** Only reheat plain, unbuttered toast.

## Frozen Bread

Leave the Browning Selector(s) at its normal setting, place the frozen bread into the toasting slots, lower the Toasting Lever, then press the FROZEN Button. The FROZEN Light will illuminate, and will stay on until toasting is complete.

The toasting time will be altered automatically to give the same degree of browning you get with unfrozen bread.

**NOTE:** The FROZEN Button affects all four Slots. You CANNOT program the Toaster to toast FROZEN bread and unfrozen bread at the same time.

## Pastry

For best results, follow the instructions printed on the pastry package. If the package does not have instructions, position the Browning Selector(s) in the middle. Some pastries may require a second toasting cycle.

**NOTE: Do not use this Toaster for toasting pastry items with runny-type frosting or open fillings.**

## Removing Lodged Toast

If a piece of toast becomes lodged in the Toaster, **unplug the Toaster and allow to cool**. Press the Toasting Lever down. Turn the Toaster upside down, and shake the toast loose.

**IMPORTANT: NEVER USE A FORK OR SHARP-EDGED UTENSIL TO REMOVE TOAST, BECAUSE THAT MAY DAMAGE THE HEATING ELEMENT OR CAUSE INJURY.**



## Important Points

- Remove all protective wrappings from food before placing in Toasting Slots.
- For best results, clean Crumb Trays frequently.
- Different breads require different color settings. Press the **CANCEL** Button at any time to check toast color.
- Do not block top openings. Do not place any object over the top openings.
- Do not toast buttered bread or buttered pita bread. Melted butter will cause fire.
- Bread which has been toasted, but not buttered may be reheated. Use the REHEAT feature.
- When toasting more than one slice of bread, use slices of similar size, thickness and freshness.
- Stale bread, thin bread or sweet bread products, such as tea cakes and fruit loaf, brown much more quickly than ordinary bread, so they should be toasted on the lighter settings.
- Never immerse Toaster in water.
- This appliance is for HOUSEHOLD USE ONLY!
- There are no user-serviceable parts inside. Do not attempt to service this product yourself.
- **Never use a fork or sharp-edged utensil to remove toast, because that may damage the heating element or cause injury.**

# User Maintenance Instructions

This appliance requires little maintenance. It contains no user serviceable parts. Do not try to repair it yourself. Contact a qualified appliance repair technician if the product requires servicing.

## Care And Cleaning

- Unplug the Toaster from the electrical outlet and let it cool down fully before attempting any cleaning operation.
- Wipe the outside surfaces with a soft damp cloth. If necessary, use a little mild liquid soap.
- Do not allow anything to enter the slots, as this might damage the elements.
- Do not use harsh or abrasive cleaning agents or solvents.
- Do not immerse the Toaster in water or any other liquid.

## Cleaning Crumb Trays

- Unplug the Toaster from the electrical outlet and let it cool down fully.
- Pull the Crumb Tray(s) out from the bottom rear of the Toaster.
- Wipe the Crumb Tray(s) with a clean, damp cloth. Always dry the Crumb Tray(s) thoroughly before replacing them in the Toaster.

**NOTE: We suggest that you empty the Crumb Tray(s) over a sink or over a garbage can.**

- Do not operate the Toaster unless both Crumb Trays are in position and correctly fitted.

## To Store

Unplug unit, allow to cool, and clean before storing. Store Toaster in its box in a clean, dry place. Never store Toaster while it is hot or still plugged in. Never wrap cord tightly around the appliance, use the Cord Storage area on the bottom of the Toaster. Do not put any stress on the cord where it enters the unit, as it could cause the cord to fray and break.

# NOTES

# LIMITED ONE YEAR WARRANTY

**Warranty:** This Westinghouse product is warranted by Salton, Inc. to be free from defects in materials or workmanship for a period of (1) year from the original purchase date. This product warranty covers only the original consumer purchaser of the product.

**Warranty Coverage:** This warranty is void if the product has been damaged by accident in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel, normal wear and tear, improper assembly, installation or maintenance abuse or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished with the product or to units which have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

**Implied Warranties:** ANY IMPLIED WARRANTIES WHICH THE PURCHASER MAY HAVE ARE LIMITED IN DURATION TO ONE (1) YEAR FROM THE DATE OF PURCHASE. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

**Warranty Performance:** During the above one-year warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at our option) when the product is returned to the Repair Center, or the purchase price refunded. The repaired or replacement product will be in warranty for the balance of the one-year warranty period and an additional one-month period. No charge will be made for such repair or replacement.

**Service and Repair:** Should the appliance malfunction, you should first call toll-free 1 (800) 934-7455 between the hours of 9:00 am and 5:00 pm Central Standard Time and ask for CONSUMER SERVICE stating that you are a consumer with a problem. Please refer to model number WST3033 when you call.

**In-Warranty Service (USA):** For an appliance covered under the warranty period, no charge is made for service or postage. Call for return authorization (1 800 934-7455).

**Out-of-Warranty Service:** A flat rate charge by model is made for out-of-warranty service. Include \$8.00 (U.S.) for return shipping and handling. We will notify you by mail of the amount of the charge for service and require you to pay in advance for the repair or replacement.

**For Products Purchased in the USA, but Used in Canada:** You may return the product insured, packaged with sufficient protection, and postage and insurance prepaid to the USA address listed below. Please note that all customs duty / brokerage fees, if any, must be paid by you and we will require you to pay the cost of customs duty / brokerage fees to us in advance of our performing any service.

**Risk During Shipment:** We cannot assume responsibility for loss or damage during incoming shipment. For your protection, carefully package the product for shipment and insure it with the carrier. Be sure to enclose the following items with your appliance: any accessories related to your problem, your full return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

To return the appliance, ship to:


Attn: Repair Center  
Salton, Inc.  
708 South Missouri Street  
Macon, MO 63552

To contact us, please write to, call, or email:

Salton, Inc.  
P.O. Box 6916  
Columbia, MO 65205-1637  
1(800) 934-7455  
Email: Salton@Saltonusa.com

**Limitation of Remedies:** No representative or person is authorized to assume for Salton, Inc. any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to negligence, gross negligence, strict liability, breach of warranty and breach of contract. Repair, replacement or refund shall be the sole remedy of the purchaser under this warranty, and in no event shall Salton be liable for any incidental or consequential damages, losses or expenses. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

**Legal Rights:** This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

WESTINGHOUSE,  and "YOU CAN BE SURE...IF IT'S WESTINGHOUSE" are trademarks of WESTINGHOUSE ELECTRIC CORPORATION and used under license by Salton, Inc.  
For more information on Salton products: Visit our website: [www.eSalton.com](http://www.eSalton.com)

U.S. Pat. No. 5,644,974  
5,664,481

© 2004 Salton, Inc. All Rights Reserved  
Printed in China

P/N 61518

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>