


PARTS LIST

for

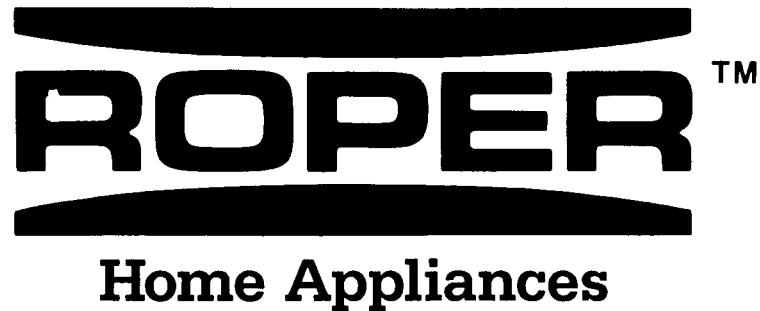

24" BUILT-IN ELECTRIC DOUBLE OVEN Self-Clean Upper / Standard Clean Lower

**MODEL
BES450WB2**

▲B-Black Glass



FOR CUSTOMER SATISFACTION ALWAYS USE
FACTORY SPECIFICATION PARTS



Whirlpool CORPORATION
Benton Harbor, Michigan.


© 1992 WHIRLPOOL CORPORATION

10-92 Litho in U.S.A.

10-92
Part No. 4356282

CONTROL PANEL PARTS

For Model: BES450WB2

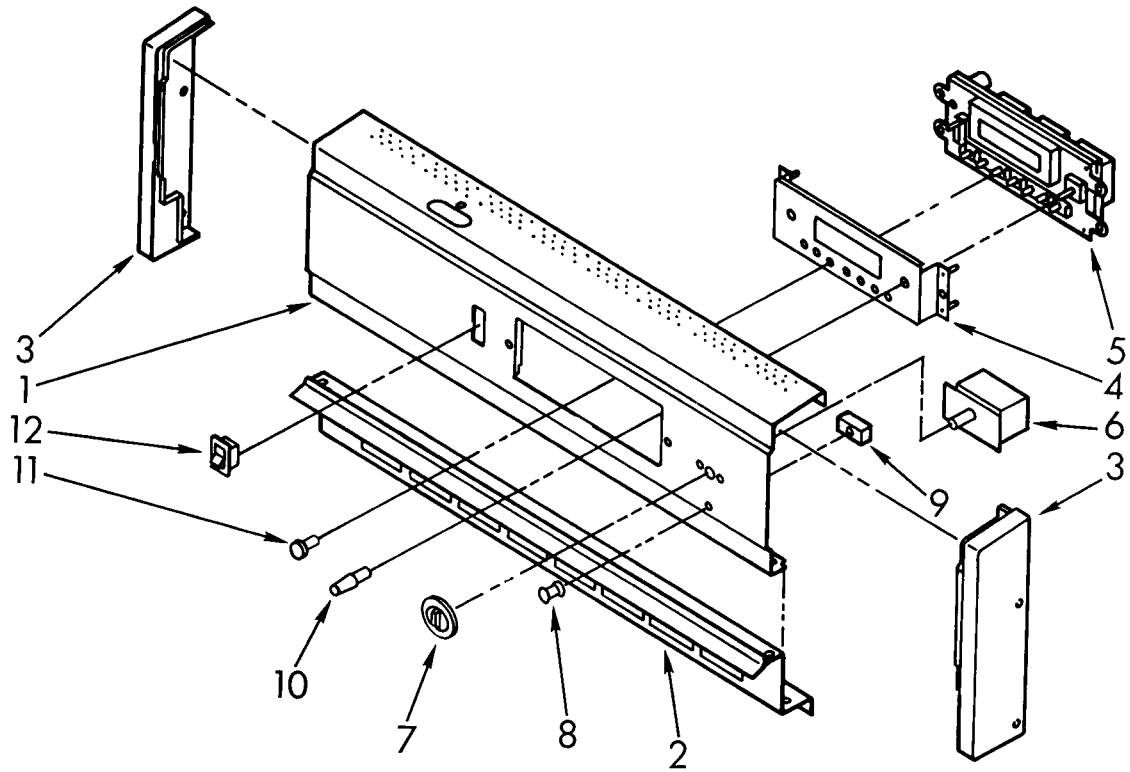

NOTE: The screws and nuts required to attach a part are listed immediately following that part.


1	3180707	Panel, Control
2	3180643	Insert, Control Panel
3		End Cap
	3180677	Left
	3180678	Right
	4173601	Screw, Black (6)
4	3180746	Lens, Clock
5	3180745	Control, Upper Oven
	3181004	Nut (4)
	4173601	Screw (2)
6	3178284	Thermostat, Lower Oven
	3178002	Screw (2)
7	3180949	Knob, Thermostat
8	3180920	Lens, Indicator
9	314031	Indicator, Light
10	3149784	Knob, Bit Generator
11	3149780	Set Button, Knob
12	3148564	Switch, Rocker

LITERATURE PARTS

LIT4356282	Repair Parts List
LIT3180719	Tech Sheet
LIT3180938	Installation Instructions
LIT3177069	Use & Care Guide

COMPONENT SHELF AND LATCH PARTS

For Model: BES450WB2

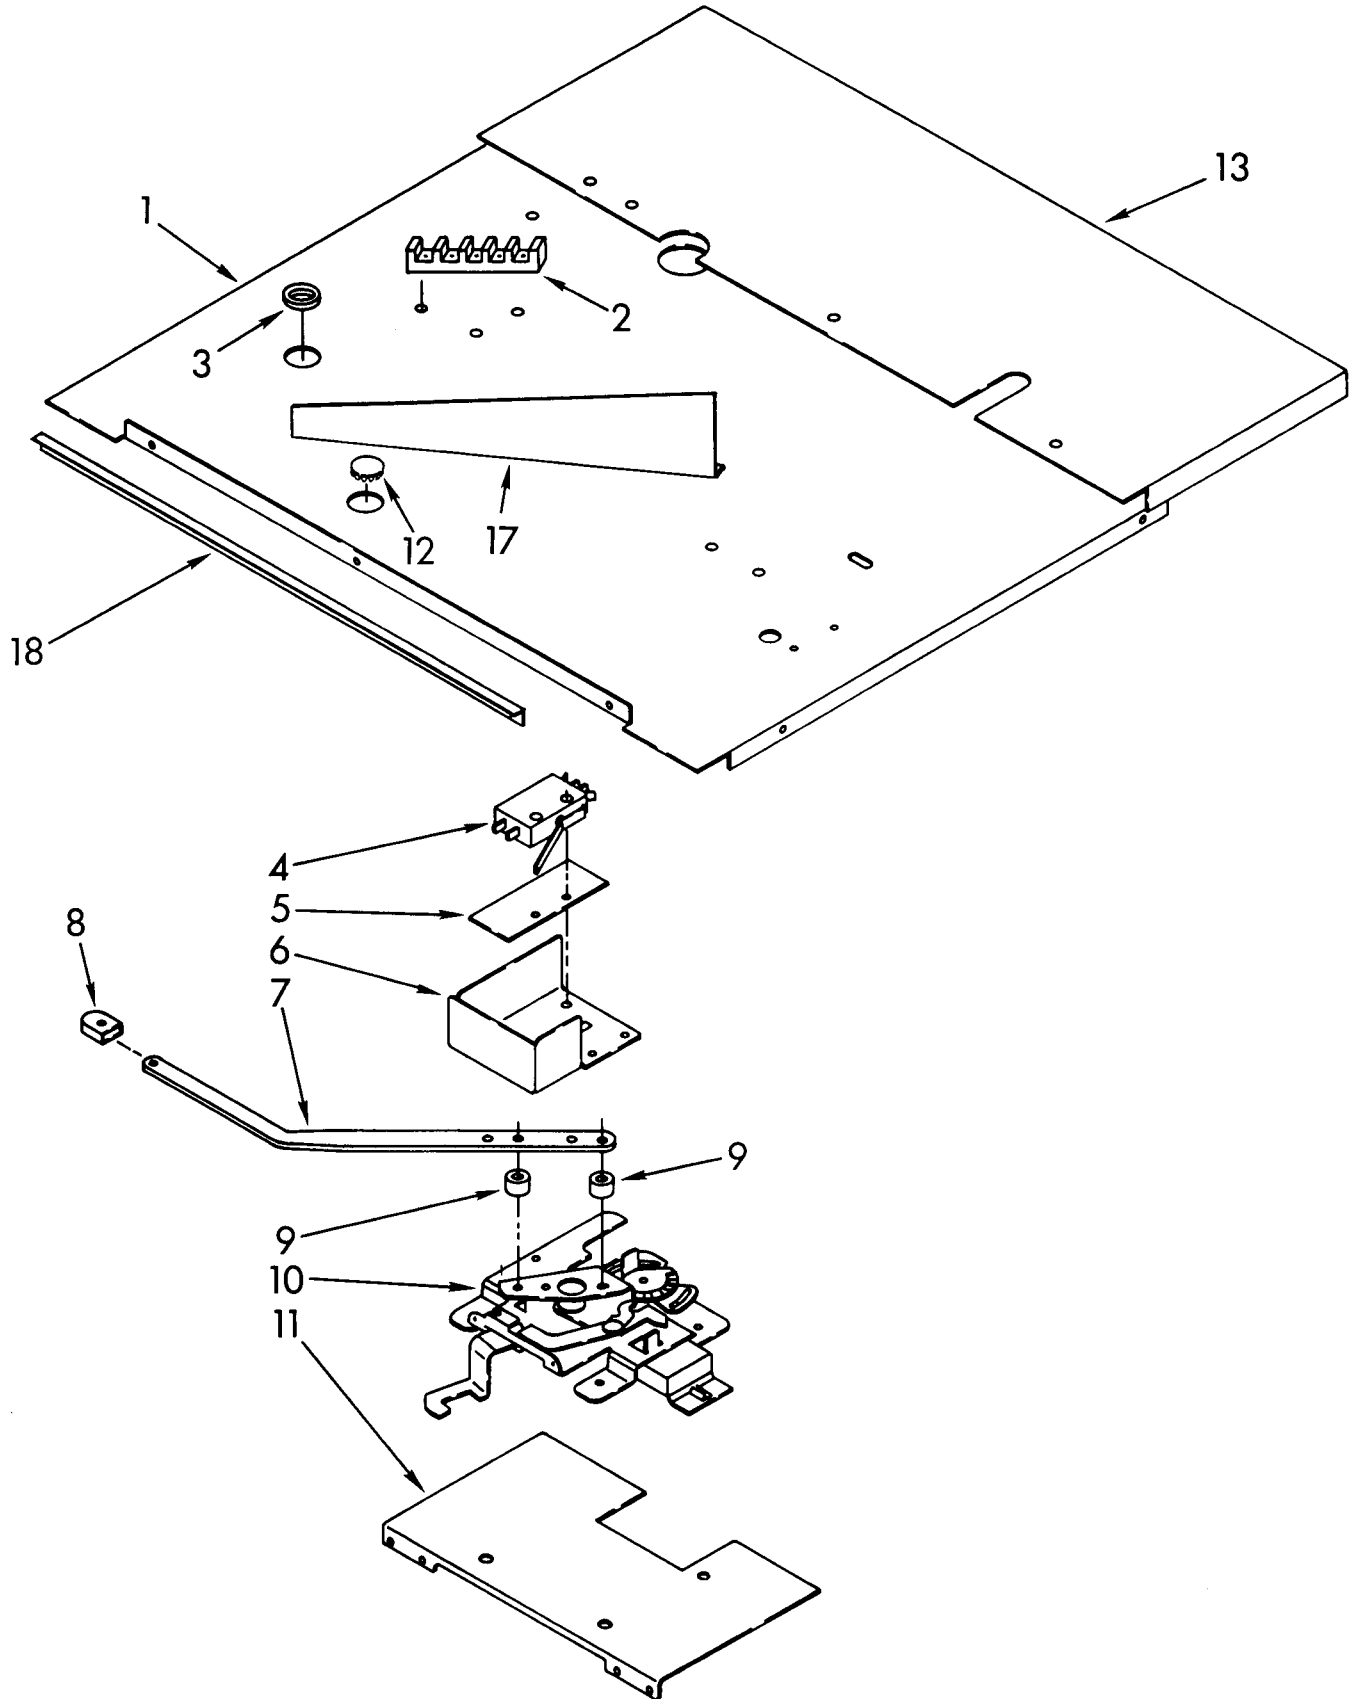


NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	3178090	Shelf, Component
	3148443	Screw (7)
2	258076	Block, Terminal
3	4159035	Bushing
4	3178670	Switch, Latch
	98106	Screw (2)
5	3178185	Insulator, Switch
6	3177662	Guard, Latch
	3177991	Screw (1)
	254225	Screw (2)
7	3177969	Handle, Latch
	3179950	Screw (2)
8	3183293	Knob, Latch Handle
	3183294	Screw
9	3177986	Spacer, Handle
10	3178410	Latch, Mechanism
	3177991	Screw (3)
11	3177496	Plate, Mounting
	3148443	Screw (8)
	3179116	Screw (2)
12	3179777	Button, Plug
13	3178133	Extension, Shelf
	3177991	Screw (8)
	112432	Nut, Hex
17	3180693	Baffle, Air
	3177991	Screw (2)
18	3180690	Shield, Heat
	3177991	Screw (3)

UPPER OVEN PARTS

For Model: BES450WB2

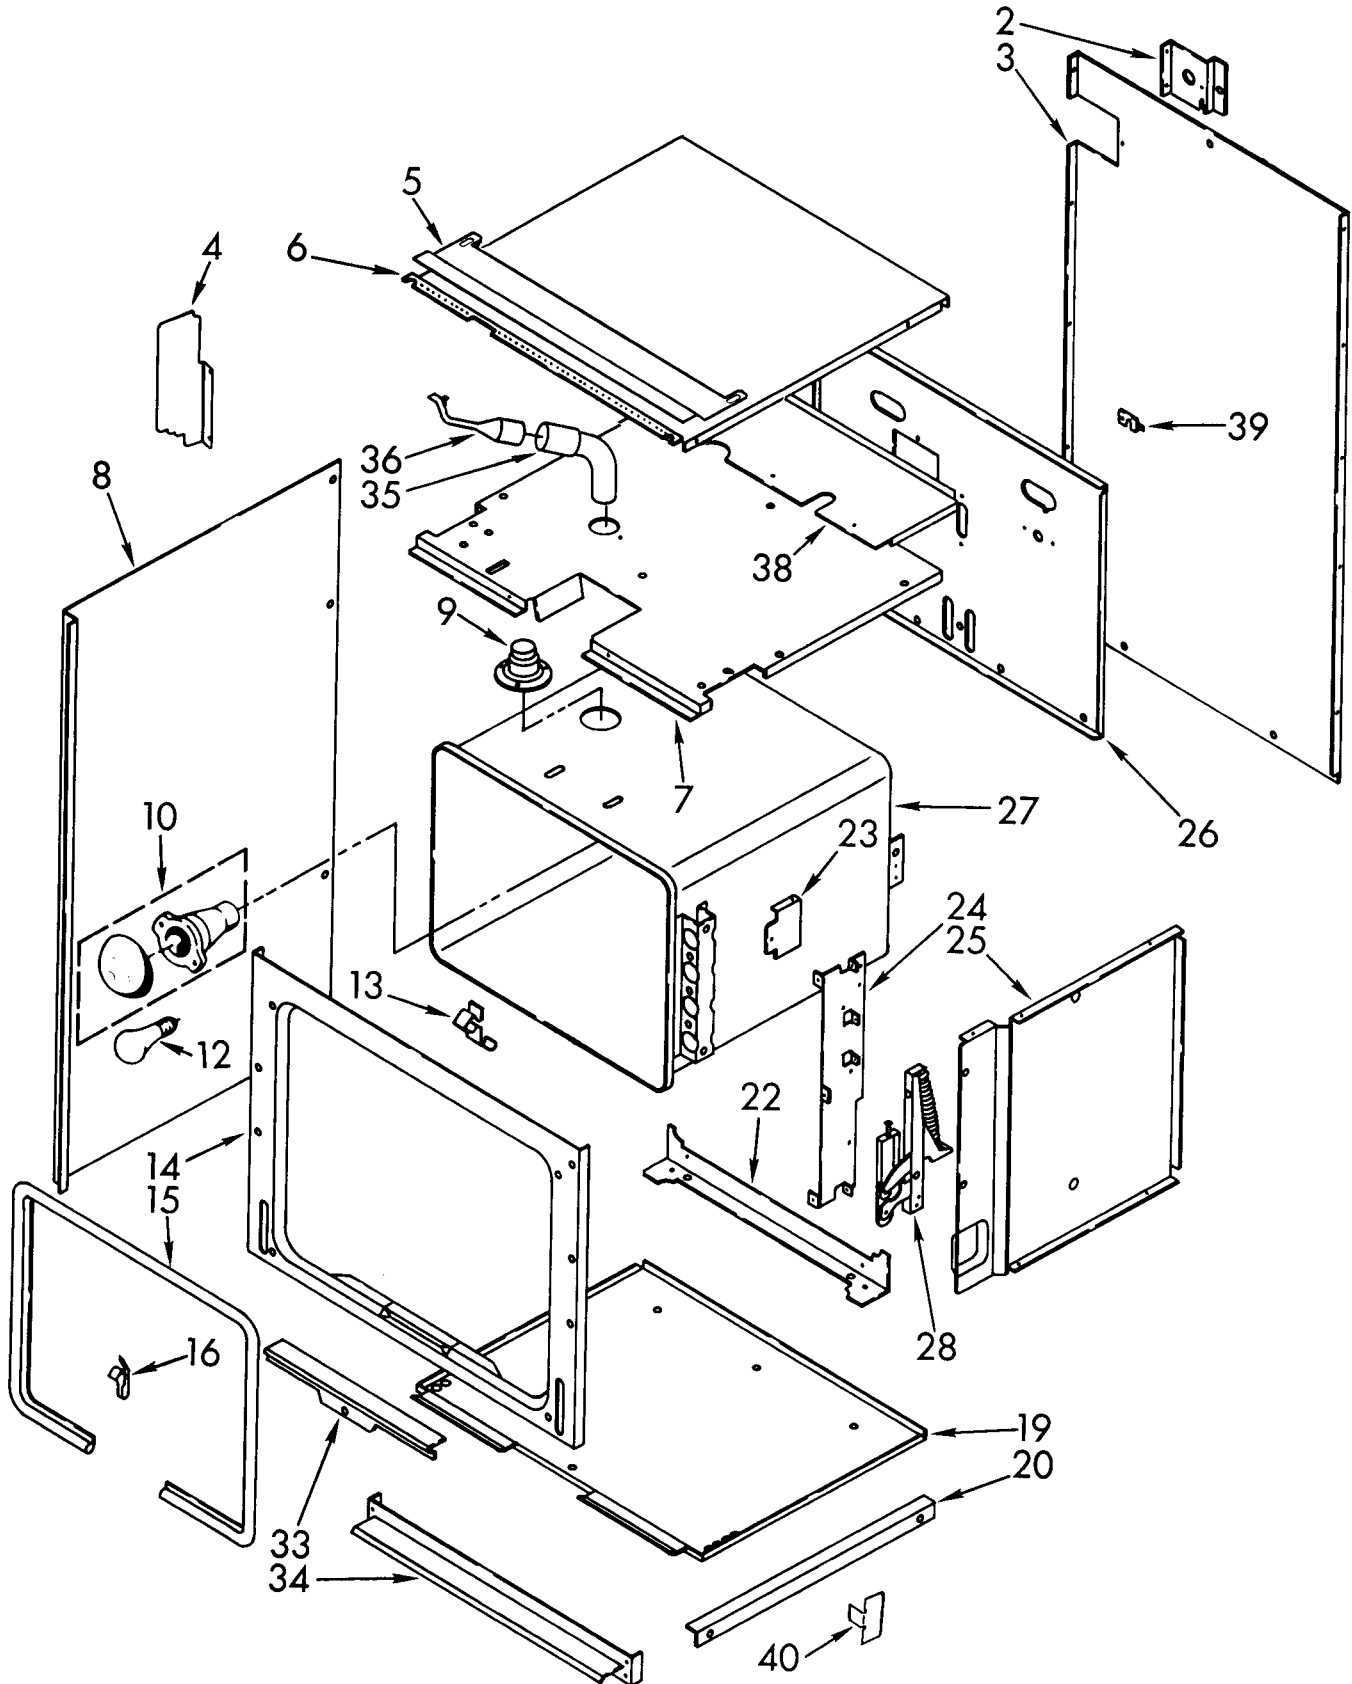

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

2	3177545	Bracket, Conduit
	3148443	Screw (2)
3	3177624	Cabinet, Back
	3148443	Screw (14)
4		Baffle, End Cap
	3181961	Left Hand
	3181962	Right Hand
	254225	Screw (4)
5	3181758	Baffle, Control Back
	3177991	Screw (2)
6	3178139	Cabinet, Top
	3148443	Screw (5)
7	3177437	Top, Module
	3148443	Screw (8)
8	3177440	Side, Cabinet (R.H. & L.H.)
	3148443	Screw (10)
9	3181699	Tube, Vent
	3179117	Screw (3)
10	3150505	Oven Light Assy.
12	311255	Bulb, Oven Light
13	313382	Clip, Thermostat Bulb
14	3177705	Frame, Front
15	3179814	Seal, Door
16	3179848	Clip, Oven Seal
19	3177622	Bottom, Module
20	3179220	Rail, Support (2)
	3148443	Screw (4)
22	3177434	Support, Oven
	3148443	Screw (2)
23	3178612	Shield, Radiation
	3148443	Screw (2)
24	3177433	Bracket, Hinge
	3179795	Screw (6)
	3148443	Screw (2)
25	3177572	Side, Module (R.H. & L.H.)
	3148443	Screw (4)
26	3177558	Back, Module
	3148443	Screw (8)
27	3177491	Liner, Oven
28	3178298	Hinge, Door (2)
	3179795	Screw (4)
33	3179587	Retainer, Seal
	4168863	Screw
	3179776	Screw (8)
34	3182118	Vent, Middle Trim
	3180022	Screw (4)
35	3179922	Vent, Tube (Upper, Female)
36	3179924	Vent, Tube (Upper, Male)
	3148443	Screw (3)
38	3178133	Extension, Shelf
	3177991	Screw (8)
39	4168203	Cover, Cap Tube
	4159445	Screw
40	3182286	Insert, Middle Vent Trim

4173601 Screw (2)


FOLLOWING PARTS NOT ILLUSTRATED

INSULATION

3177865	Insulation, Wrap
3177870	Insulation, Back

LOWER OVEN PARTS

For Model: BES450WB2

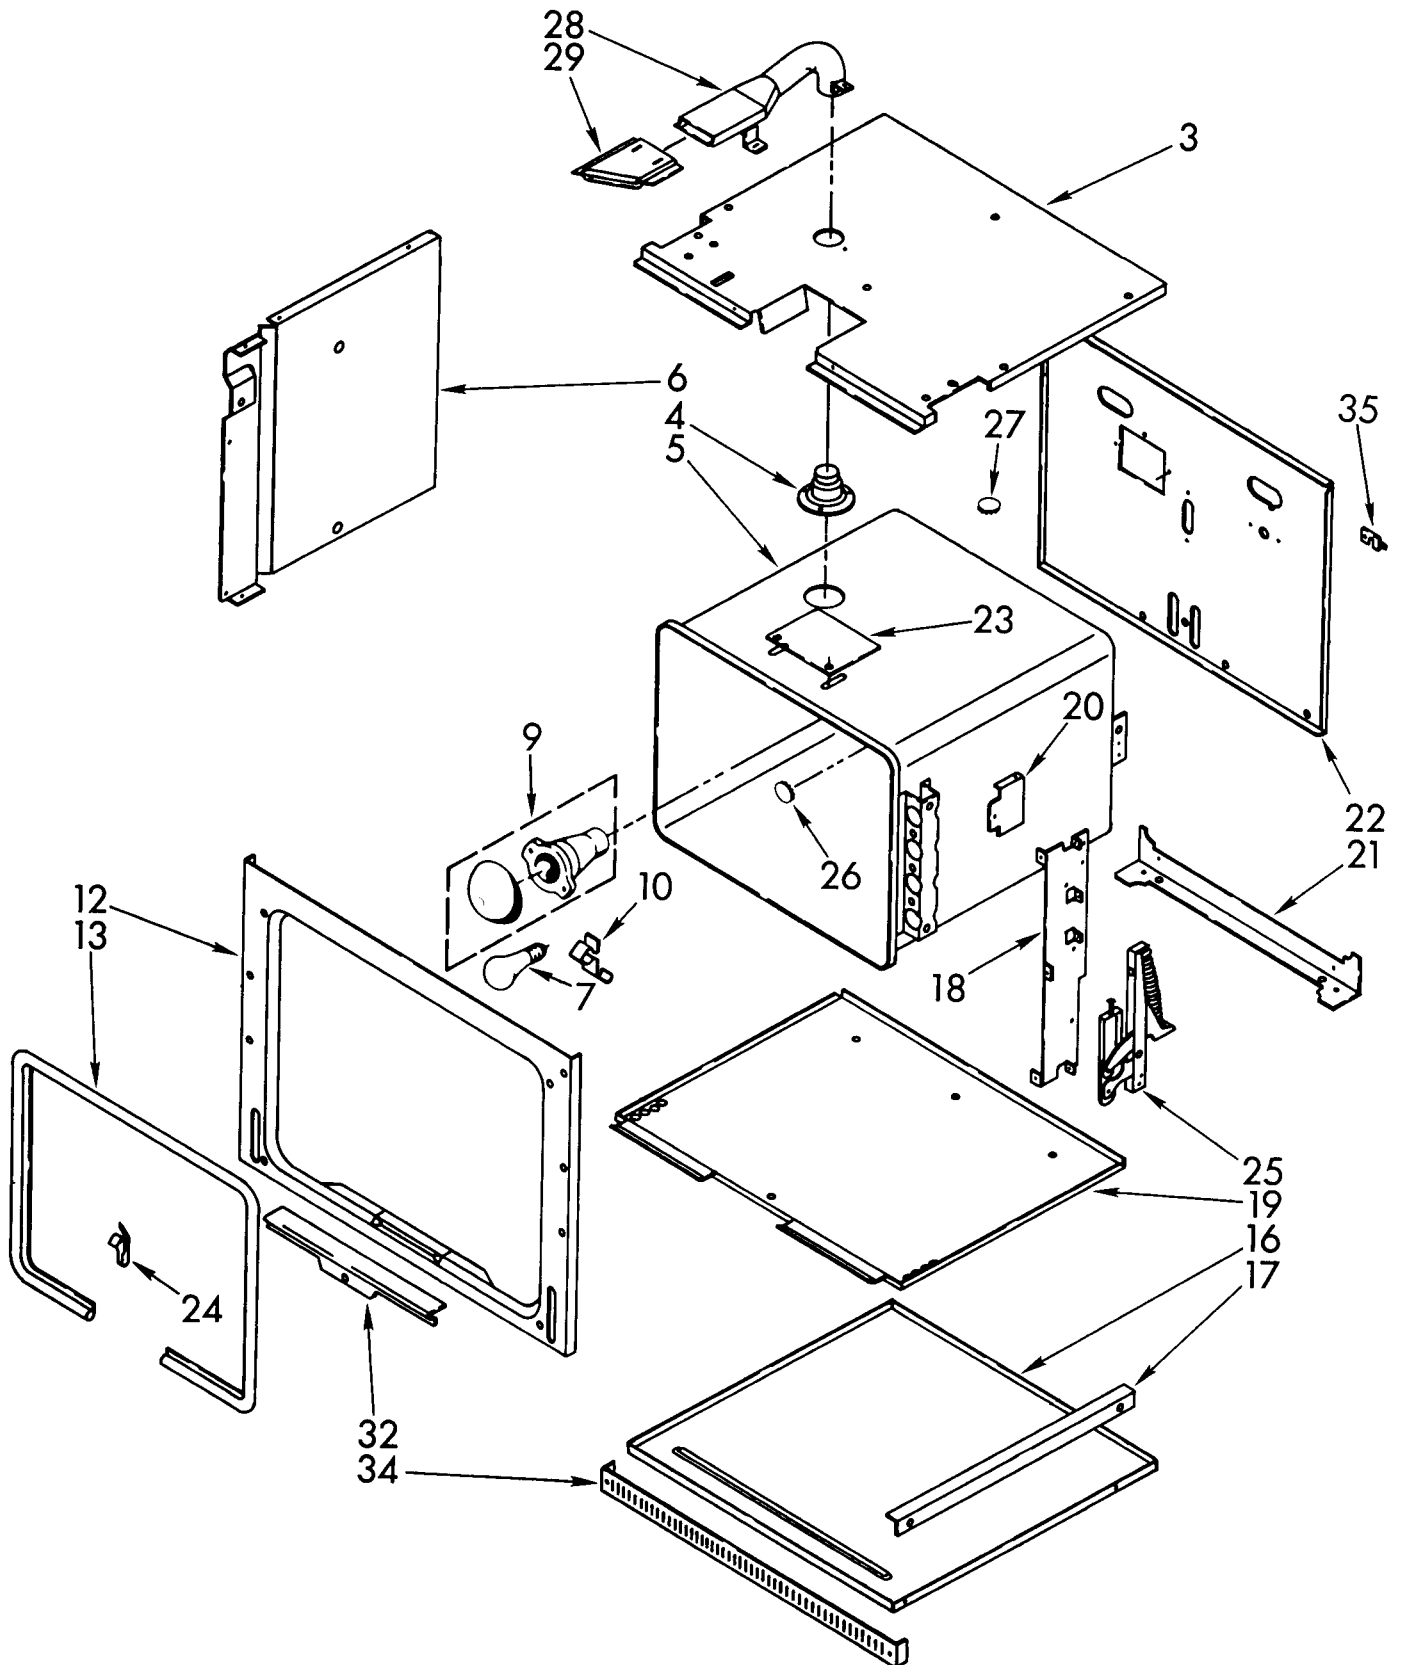

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

3	3183747	Top, Module
	3148443	Screw (8)
4	3181700	Tube, Vent
	3179117	Screw (3)
5	3177491	Liner, Oven
6	3177572	Side, Module (R.H. & L.H.)
	3148443	Screw (4)
7	311255	Bulb, Oven Light
9	3150505	Oven Light Assy.
10	313382	Clip, Bulb (2)
12	3177704	Frame, Door
13	3179814	Seal, Door
16	3177552	Bottom, Oven
17	3179220	Rail, Support (2)
	3148443	Screw (4)
18	3177433	Bracket, Hinge (2)
	3179795	Screw (6)
	3148443	Screw (2)
19	3177622	Bottom, Module
20	3178612	Shield, Radiation
	3148443	Screw (2)
21	3177434	Support, Oevn
	3148443	Screw (2)
22	3177559	Back, Module
	3148443	Screw (8)
23	3180126	Cover, Latch Mtg.
	3179117	Screw (2)
24	3179848	Clip, Seal (3)
25	3178298	Hinge, Door (2)
	3179795	Screw (4)
26	3185108	Button, Plug
27	3185109	Button, Plug
28	3179945	Tube, Vent
	3148443	Screw (3)
29	3181964	Tube, Vent
32	3179587	Retainer, Seal
	4159450	Screw
34	3177784	Trim, Lower Vent
35	4168203	Cover, Cap Tube
	4159445	Screw


FOLLOWING PARTS NOT ILLUSTRATED

INSULATION

3177865	Insulation, Wrap
3177870	Insulation, Back

OVEN LINER PARTS

For Model: BES450WB2

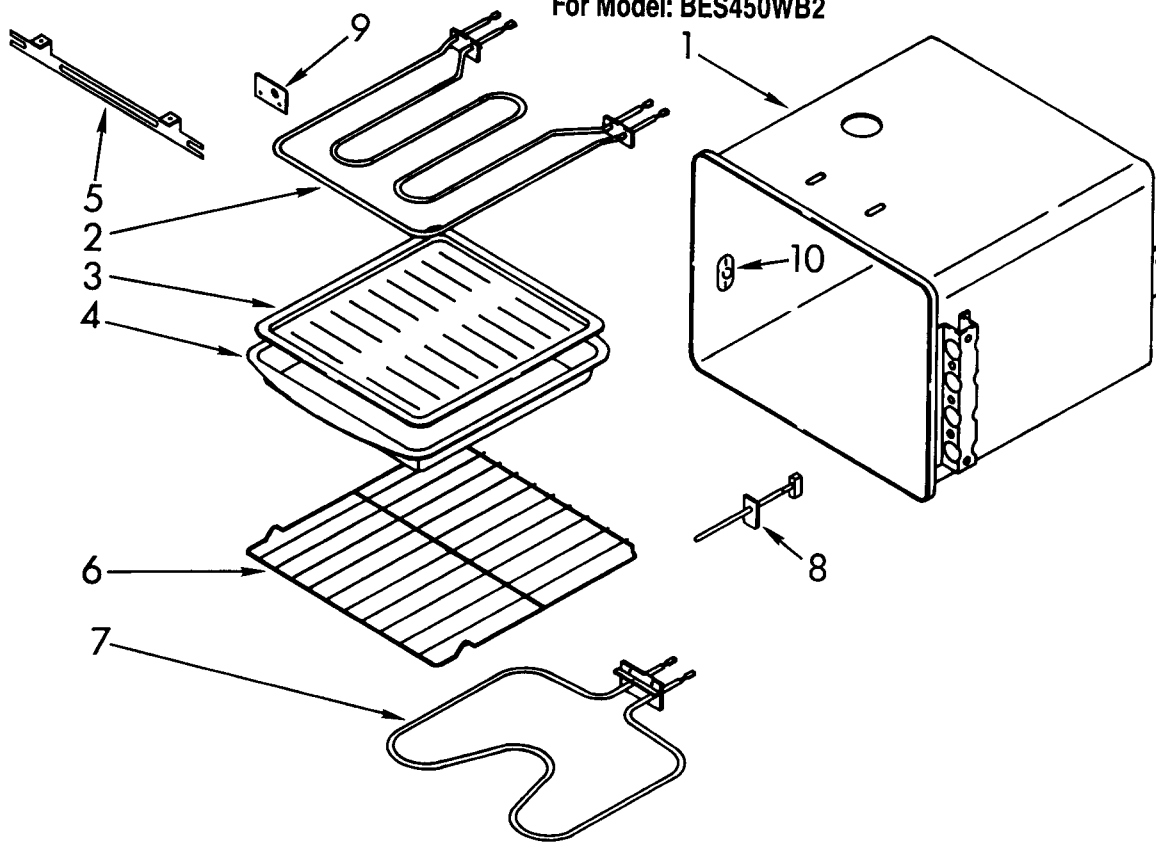


NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	3177491	Liner, Oven
2	660579	Element, Broil
	3185383	Screw (6)
3	3147563	Grill, Broiler
4	3147845	Pan, Broiler
5	3180694	Bracket, Element
	3185383	Screw (2)
6	3185370	Rack, Oven
7	661416	Element, Bake
	3185383	Screw (2)
8	3148440	Sensor, Heat (Upper Oven)
9	3182950	Bracket, Element
10	3184208	Plate, Cover

UPPER OVEN DOOR PARTS

For Model: BES450WB2

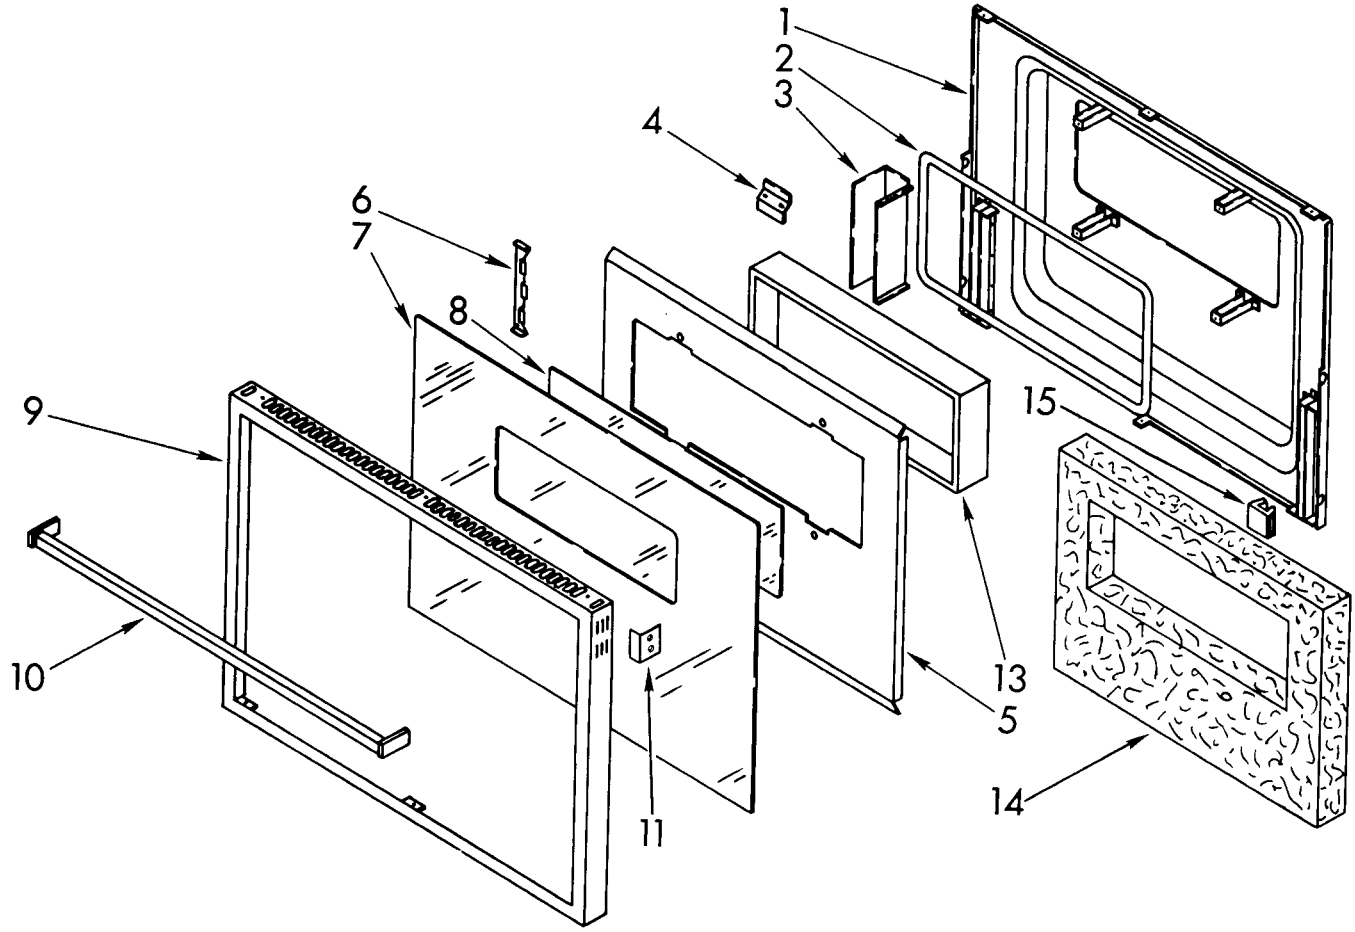


NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	3177597	Liner, Door
	4168863	Screw (6)
	3178001	Screw (2)
2	3178584	Seal, Window
3	3179694	Spacer, Window
4	3177831	Latch, Strike
	3148443	Screw (2)
5	3177719	Insulation Retainer
	3148443	Screw (4)
6	4163855	Bracket, Glass Mounting (2)
	3148443	Screw (4)
7	3180637	Glass, Door
	310706	Clip, Glass (16)
8	4164243	Glass, Reflective
9	3180635	Frame, Door
10	3180654	Handle, Door
	3181924	Screw (4)
11	3181850	Clip (2)
13	4164235	Window Pack
14	3180094	Insulation, Door
15	3181723	Bumper, Door Glass

LOWER OVEN DOOR PARTS

For Model: BES450WB2

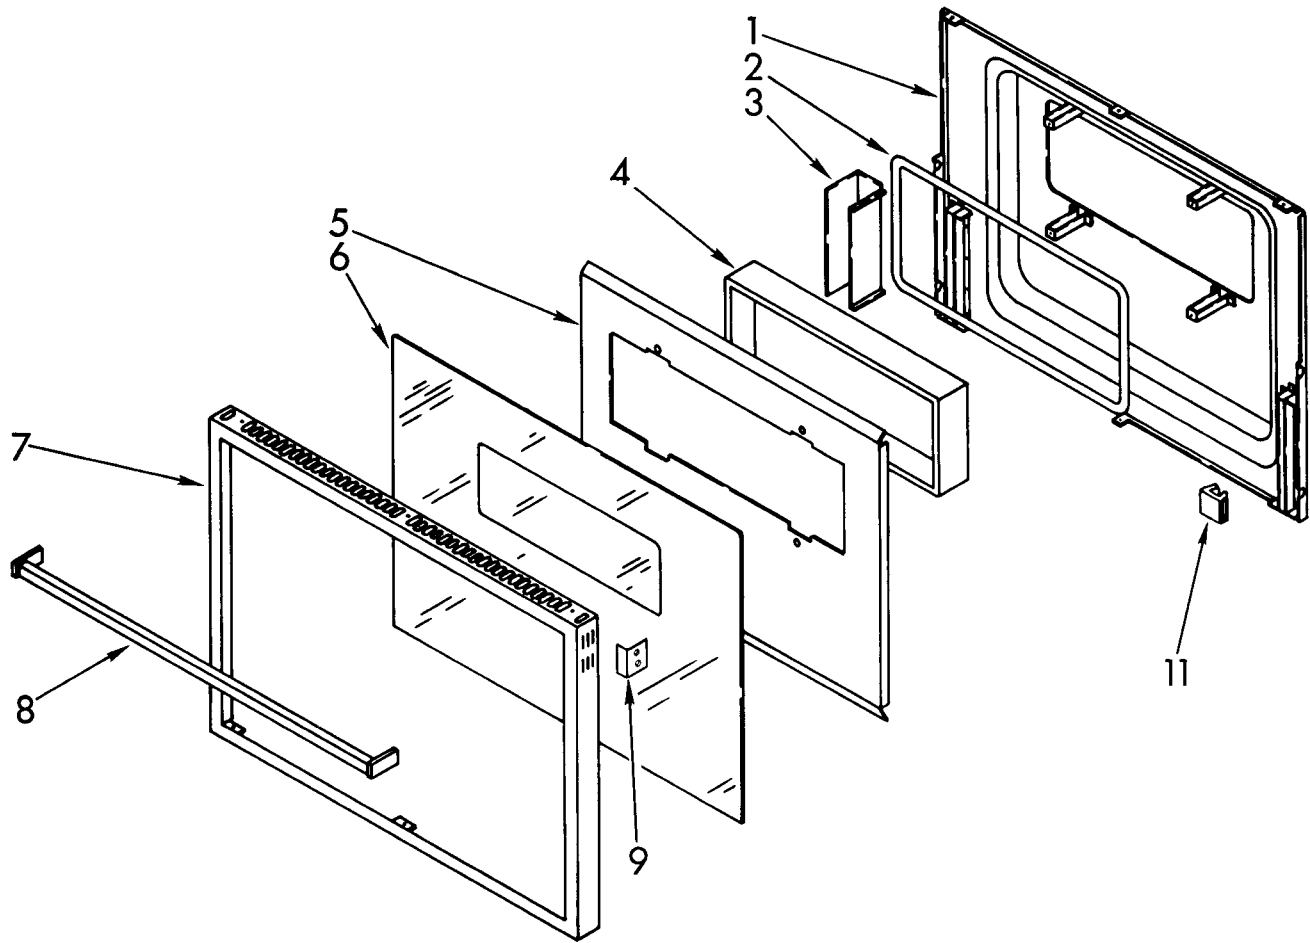


NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	3177598	Liner, Door
	3178001	Screw (2)
	4168863	Screw (6)
2	3178584	Seal, Window
3	3179694	Spacer, Window
4	4169572	Window Pack
5	3177719	Retainer, Insulation
	3148443	Screw (4)
6	3180637	Glass, Door
	310706	Clip, Glass (16)
7	3180635	Frame, Door
8	3180654	Handle, Door
	3181924	Screw (2)
9	3181850	Clip (2)
11	3181723	Bumper, Door Glass

WIRING HARNESS PARTS

For Model: BES450WB2

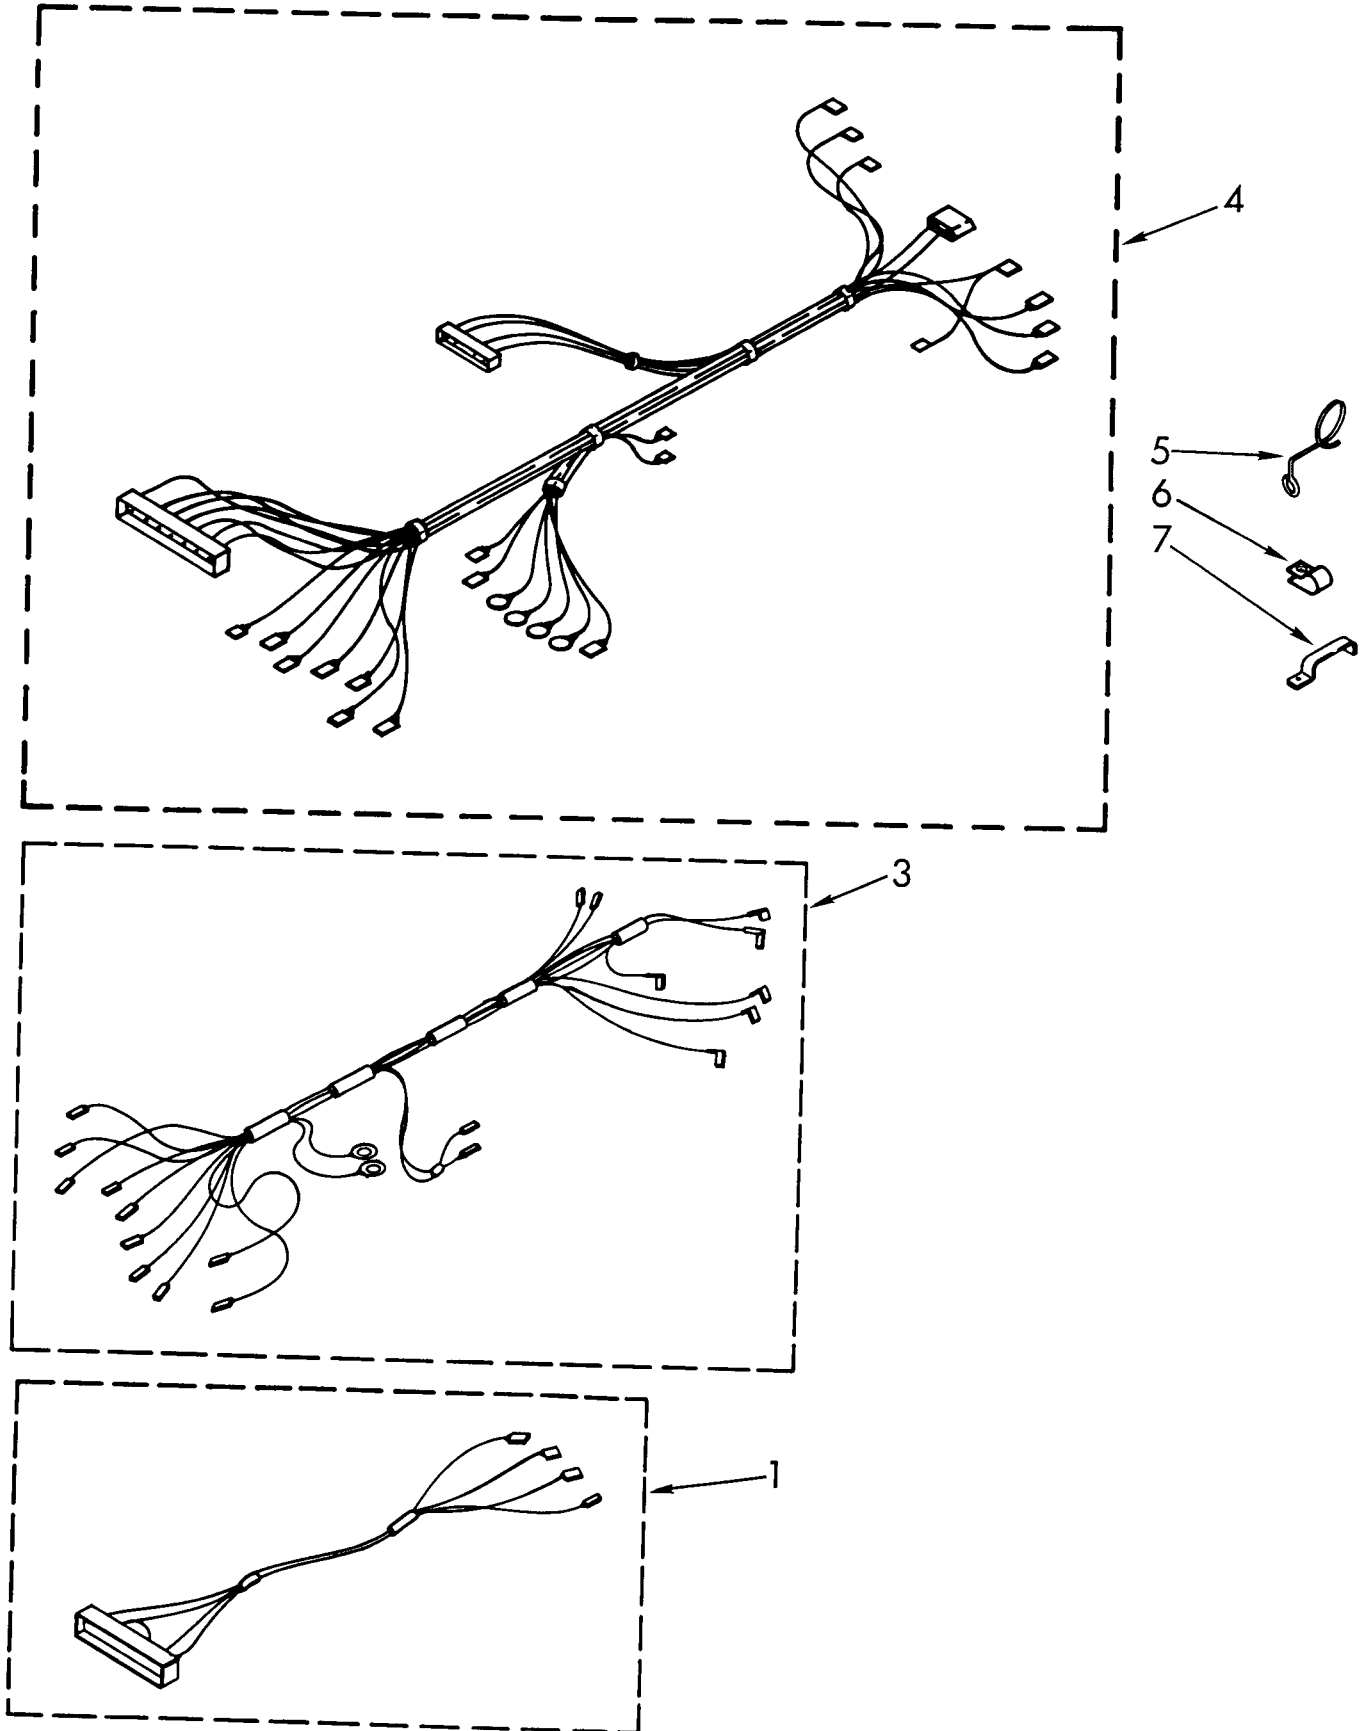

1	3181193	Wiring Harness Latch Switch
3	3180618	Wiring Harness (Lower Oven)
4	3180619	Wiring Harness (Upper Oven)
5	3179668	Standoff, Wire
	3148443	Screw (4)
6	3179669	Clamp, Wire
7	4159037	Clamp, Wire
	357572	Clip, Ground
	309133	Screw (4)

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>