

FT 337

Gebrauchsanweisung

Instructions for use

Mode d'emploi

Gebruiksaanwijzing

Istruzioni per l'uso



Brugsanvisning

Bruksanvisning

Käyttöohje

Manual de utilização

Instrucciones para el uso



Οδηγίες χρήσης

Instrukcje użytkowania

Használati utasítás

Инструкция за използване

הוראות שימוש



Návod k použití

Návod na použitie

Instrucțiuni de utilizare

Инструкции по эксплуатации

تعليمات وكيفية الاستعمال

www.whirlpool.com



SENSING THE DIFFERENCE



INSTALLATION




PRIOR TO CONNECTING



CHECK THAT THE VOLTAGE on the rating plate corresponds to the voltage in your home.

DO NOT REMOVE THE MICROWAVE INLET PROTECTION PLATES located on the side of the oven cavity wall. They prevent grease & food particles from entering the microwave inlet channels.

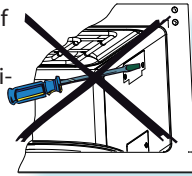

PLACE THE OVEN ON A STABLE, EVEN SURFACE that is strong enough to hold the oven and the food utensils you put in it. Use care when handling.



POSITION THE OVEN AT A DISTANCE from other heating sources. For sufficient ventilation there must be a space of at least 20 cm above the oven. Ensure that the space underneath, above and around the oven is empty to allow for proper airflow. The microwave oven shall not be placed in a cabinet.

ENSURE THAT THE APPLIANCE IS NOT DAMAGED. Check that the oven door closes firmly against the door support and that the internal door seal is not damaged. Empty the oven and clean the interior with a soft, damp cloth.




DO NOT OPERATE THIS APPLIANCE if it has a damaged mains cord or plug, if it is not working properly, or if it has been damaged or dropped. Do not immerse the mains cord or plug in water. Keep the cord away from hot surfaces. Electrical shock, fire or other hazards may result.

AFTER CONNECTING

THE OVEN CAN BE OPERATED ONLY if the oven door is firmly closed.

POOR TELEVISION RECEPTION and radio interference may result if the oven is located close to a TV, radio or aerial.

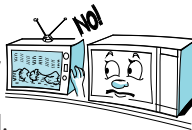

THE EARTHING OF THIS APPLIANCE is compulsory. The manufacturer will accept no responsibility for injury to persons, animals or damage to objects arising from the non-observance of this requirement.

The manufacturers are not liable for any problems caused by the user's failure to observe these instructions.



IMPORTANT SAFETY INSTRUCTIONS



READ CAREFULLY AND KEEP FOR FUTURE REFERENCE



DO NOT HEAT, OR USE FLAMMABLE MATERIALS in or near the oven. Fumes can create a fire hazard or explosion.



DO NOT USE YOUR MICROWAVE oven for drying textiles, paper, spices, herbs, wood, flowers, fruit or other combustible materials. Fire could result.



IF MATERIAL INSIDE / OUTSIDE THE OVEN SHOULD IGNITE OR SMOKE IS OBSERVED, keep oven door closed and turn the oven off. Disconnect the power cord or shut off power at the fuse or circuit breaker panel.



DO NOT OVER-COOK FOOD. Fire could result.



DO NOT LEAVE THE OVEN UNATTENDED, especially when using paper, plastic or other combustible materials in the cooking process. Paper can char or burn and some plastics can melt if used when heating foods.

Do not leave the oven unattended if you are using a lot of fat or oil since they can overheat and cause a fire!



DO NOT USE corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat or cook food. It is not designed for industrial or laboratory use.



DO NOT HANG OR PLACE heavy items on the door as this can damage the oven opening and hinges. The door handle should not be used for hanging things on.



ONLY ALLOW CHILDREN to use the appliance without adult supervision after adequate instructions have been given, so that the child is able to use the appliance in a safe way and understands the hazards of improper use. Children should be supervised when using other heat sources (if available) separately or in combination with microwaves due to the high temperatures generated.



THIS APPLIANCE IS NOT INTENDED for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

CHILDREN SHOULD BE SUPERVISED to ensure that they do not play with the appliance.



DO NOT USE YOUR MICROWAVE oven for heating anything in airtight sealed containers. The pressure increases and may cause damage when opening or may explode.



THE DOOR SEALS AND THE DOOR SEAL AREAS must be regularly inspected for damage. If these areas are damaged the appliance should not be operated until it has been repaired by a trained service technician.

EGGS

DO NOT USE YOUR MICROWAVE oven for cooking or reheating whole eggs with or without shell since they may explode even after microwave heating has ended.





PRECAUTIONS



GENERAL

THIS APPLIANCE IS DESIGNED FOR DOMESTIC USE ONLY!

THE APPLIANCE SHOULD NOT BE OPERATED without food in the oven when using microwaves. Operation in this manner is likely to damage the appliance.

THE VENTILATION OPENINGS on the oven must not be covered. Blocking the air intake or exhaust vents may cause damage to the oven and poor cooking results.

IF YOU PRACTICE OPERATING the oven, put a glass of water inside. The water will absorb the microwave energy and the oven will not be damaged.

DO NOT STORE OR USE this appliance outdoors.

DO NOT USE this product near a kitchen sink, in a wet basement, or near a swimming pool, or similar.

DO NOT USE the cavity for any storage purposes.

REMOVE WIRE TWIST-TIES from paper or plastic bags before placing bag in the oven.



DEEP-FRYING

DO NOT USE YOUR MICROWAVE oven for deep-frying, because the oil temperature cannot be controlled.



USE HOT PADS OR OVEN MITTS to prevent burns, when touching containers, oven parts, and pan after cooking. Accessible parts may become hot during use, young children should be kept away.

LIQUIDS

E.G. BEVERAGES OR WATER. Overheating the liquid beyond boiling point can occur without evidence of bubbling. This could result in a sudden boil over of the hot liquid.



To prevent this possibility the following steps should be taken:

1. Avoid using straight-sided containers with narrow necks.
2. Stir the liquid before placing the container in the oven and let the teaspoon remain in the container.
3. After heating, allow standing for a short time, stirring again before carefully removing the container from the oven.

CAREFUL

ALWAYS REFER to a microwave cookbook for details. Especially, if cooking or reheating food that contains alcohol.

AFTER HEATING BABY FOOD or liquids in a baby bottle or in a baby food jar, always stir and check the temperature before serving.



This will ensure that the heat is evenly distributed and the risk of scalding or burns can be avoided.

Ensure the Lid and the Teat is removed before heating!



ACCESSORIES



GENERAL

THERE ARE a number of accessories available on the market. Before you buy, ensure they are suitable for microwave use.

ENSURE THAT THE UTENSILS YOU USE are oven proof and allow microwaves to pass through them before cooking.



WHEN YOU PUT FOOD AND ACCESSORIES in the microwave oven, ensure that they do not come in contact with the interior of the oven.


This is especially important with accessories made of metal or metal parts.

IF ACCESSORIES CONTAINING METAL comes in contact with the oven interior, while the oven is in operation, sparking can occur and the oven could be damaged.

ALWAYS ENSURE that the turntable is able to turn freely before starting the oven. If the turntable isn't able to turn freely you should use a smaller vessel or the TurnTable stop function (see Large vessels).


LARGE VESSELS

USE THE TURNTABLE STOP button when cooking with vessels that is so large that they can not turn freely in the oven. This function can only be used when cooking with microwaves only or microwaves and Grill in combination. The button will not work with other functions.

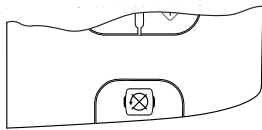

TURNTABLE SUPPORT

 
USE THE TURNTABLE SUPPORT under the Glass turntable. Never put any other utensils on the turntable support.



☞ Fit the turntable support in the oven.

GLASS TURNTABLE

 USE THE GLASS TURNTABLE with all cooking methods. It collects the dripping juices and food particles that otherwise would stain and soil the interior of the oven.




☞ Place the Glass turntable on the turntable support.

WIRE RACK

USE THE HIGH WIRE RACK when cooking with grill.

 USE THE LOW WIRE RACK when cooking with forced air or cooking in combination with other heat sources.





START PROTECTION / CHILD LOCK



THIS AUTOMATIC SAFETY FUNCTION IS ACTIVATED ONE MINUTE AFTER the oven has returned to "stand by mode". (The oven is in "stand by" when the 24-hour clock is displayed or if the clock has not been set, when the display is blank).




THE DOOR MUST BE OPENED AND CLOSED e.g. putting food into it, before the safety lock is released. Else the display will show "door".

door



KITCHEN TIMER

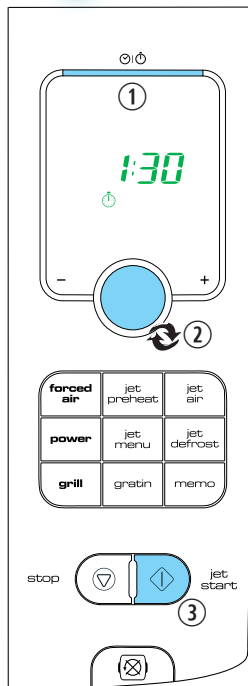

USE THIS FUNCTION when you need a kitchen timer to measure exact time for various purposes such as cooking eggs or letting the dough rise before baking etc.

- 1 **PRESS THE CLOCK BUTTON.**
- 2 **TURN THE ADJUST KNOB** to set the time to measure.
- 3 **PRESS THE START BUTTON.**



FLASHING COLONS indicate that the timer is running.

AN ACOUSTIC SIGNAL will be heard when the timer has finished to count down.

ONE PRESS ON THE CLOCK BUTTON displays how much is left on the Timer. It's displayed for 3 seconds and then returns to displaying the cooking time (If you are currently cooking).

TO STOP THE KITCHEN TIMER when it is operating in the background of another function, you must first recall it to the foreground by pressing the Clock button and then stop it by pressing the Stop button.

PAUSE OR STOP COOKING

TO PAUSE COOKING:

THE COOKING CAN BE PAUSED to check, turn or stir the food by opening the door. The setting will be maintained for 10 minutes.



IF YOU DON'T WANT TO CONTINUE COOKING:

REMOVE THE FOOD, close the door and press the STOP button.



 
TO CONTINUE COOKING:

CLOSE THE DOOR and press the Start button ONCE. The cooking is resumed from where it was paused.



PRESSING THE START BUTTON TWICE will increase the time by 30 seconds.


A BEEP WILL SIGNAL once a minute for 10 minutes when the cooking is finished. Press the STOP button or open the door to cancel the signal.



NOTE: The oven will only hold the settings for 60 seconds if the door is opened and then closed after the cooking is finished.



CLOCK

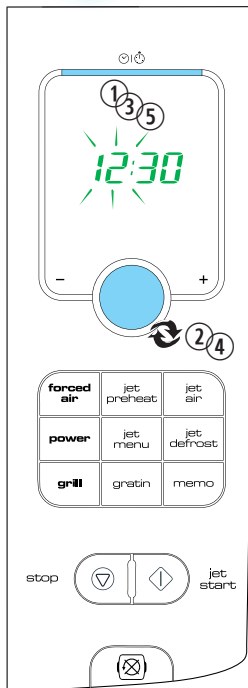

WHEN THE APPLIANCE IS FIRST PLUGGED IN or after a power failure, the display is blank. If the clock is not set, the display will remain blank until the cooking time is set.

- 1 **PRESS THE CLOCK BUTTON** (3 seconds) until the left-hand digits (hours) flicker.
- 2 **TURN THE ADJUST KNOB** to set the hours.
- 3 **PRESS THE CLOCK BUTTON AGAIN.** (The two right-hand digits (minutes) flicker).
- 4 **TURN THE ADJUST KNOB** to set the minutes.
- 5 **PRESS THE CLOCK BUTTON AGAIN.**

THE CLOCK IS SET and in operation.


IF YOU WISH TO REMOVE THE CLOCK from the display once it has been set, simply press the Clock button again for 3 seconds and then press the Stop button.

TO REINSTATE THE CLOCK, follow the above procedure.

NOTE: KEEP THE DOOR OPEN WHILE SETTING THE CLOCK. This gives you 10 minutes to complete the setting of the Clock. Otherwise, each step must be accomplished within 60 seconds.



COOK & REHEAT WITH MICROWAVES

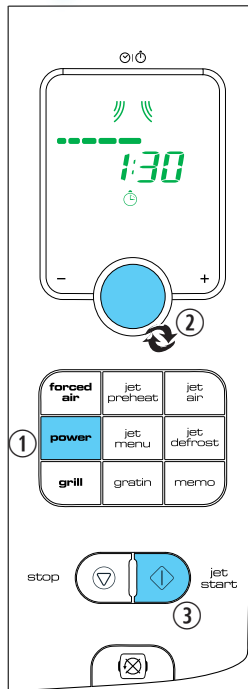


USE THIS FUNCTION for normal cooking and reheating, such as vegetables, fish, potatoes and meat.

- 1 **PRESS THE POWER** button repeatedly to set the microwave power.
- 2 **TURN THE ADJUST** knob to set the cooking time.
- 3 **PRESS THE START** button.

ONCE THE COOKING PROCESS HAS BEEN STARTED:

The time can easily be increased in 30-second steps by pressing the Start button. *Each press* increases the time with 30 seconds. You may also alter the time by turning the adjust knob to increase or decrease the time.

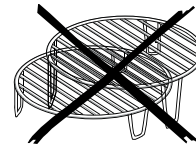


CHOOSING POWER LEVEL

MICROWAVES ONLY	
POWER	SUGGESTED USE:
JET (950 W)	REHEATING of beverages, water, clear soups, coffee, tea or other food with a high water content. If the food contains egg or cream choose a lower power.
750 W	COOKING of fish, meat, vegetables etc.
650 W	COOKING dishes, not possible to stir.
500 W	MORE careful cooking e.g. high protein sauces, cheese and egg dishes and to finish cooking casseroles.
350 W	SIMMERING stews, melting butter.
160 W	DEFROSTING.
90 W	SOFTENING butter, cheeses and ice cream.




JET START

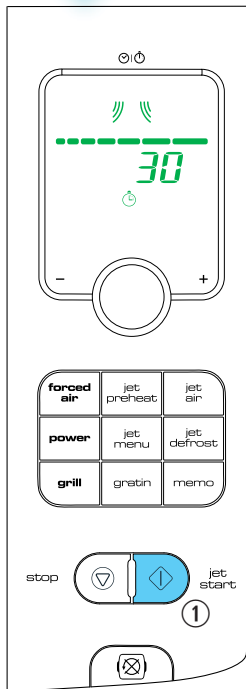

THIS FUNCTION IS USED for quick reheating of food with a high water content such as clear soups, coffee or tea.

1 PRESS THE START BUTTON.

THIS FUNCTION AUTOMATICALLY STARTS with maximum microwave power level and the cooking time set to 30 seconds. *Each additional press* increases the time with 30 seconds. You may also alter the time by turning the adjust knob to increase or decrease the time after the function has started.

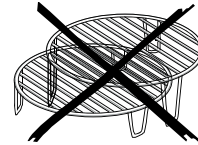

MANUAL DEFROST



FOLLOW THE PROCEDURE for "cook & reheat with microwaves" and choose power level 160 W when defrosting manually.

CHECK AND INSPECT THE FOOD REGULARLY. Experience will give you the times needed for various amounts.

FROZEN FOOD IN PLASTIC BAGS, plastic films or cardboard packages can be placed directly in the oven as long as the package has no metal parts (e.g. metal twist ties).

TURN LARGE JOINTS halfway through the defrosting process.

THE SHAPE OF THE PACKAGE alters the defrosting time. Shallow packets defrost more quickly than a deep block.



BOILED FOOD, STEWS AND MEAT SAUCES defrost better if stirred during defrosting time.


WHEN DEFROSTING it is better to under-thaw the food slightly and allow the process to finish during standing time.

SEPARATE PIECES as they begin to defrost. Individual slices defrost more easily.

SHIELD AREAS OF FOOD with small pieces of aluminum foil if they start to become warm (e.g. chicken legs and wing tips).




STANDING TIME AFTER DEFROSTING ALWAYS IMPROVES the result since the temperature will then be evenly distributed throughout the food.

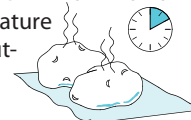



JET DEFROST

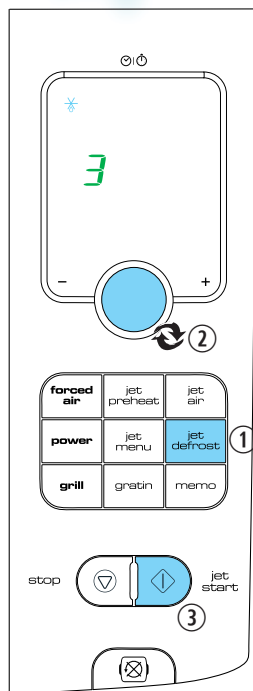

USE THIS FUNCTION for defrosting Meat, Poultry, Fish, Vegetables and Bread. JET Defrost should only be used if the net weight is between 100 g- 2.5 kg.

ALWAYS PLACE THE FOOD on the glass turntable.


- 1 **PRESS THE JET DEFROST BUTTON** repeatedly to select food class. (see table)
- 2 **TURN THE ADJUST KNOB** to set the weight of the food.
- 3 **PRESS THE START BUTTON.**

MIDWAY THROUGH THE DEFROSTING PROCESS the oven stops and prompts you to *TURN FOOD*.

- ⚡ Open the door.
- ⚡ Turn the food.
- ⚡ Close the door and restart by pressing the Start button.

NOTE: The oven continues automatically after 2 min. if the food hasn't been turned. The defrosting time will be longer in this case.

*Turn
Food*

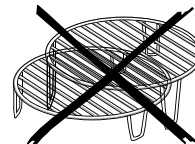



JET DEFROST



THIS FUNCTION NEEDS TO KNOW the net weight of the food.

FROZEN FOODS:

 
IF THE WEIGHT IS LESSER OR GREATER THAN RECOMMENDED WEIGHT: Follow the procedure for "Cook & Reheat with microwaves" and choose 160 W when defrosting.



FROZEN FOODS:

IF THE FOOD IS WARMER than deep-freeze temperature (-18°C), choose lower weight of the food.


IF THE FOOD IS COLDER than deep-freeze temperature (-18°C), choose higher weight of the food.



FOOD CLASS		AMOUNT	HINTS
1	MEAT	100G - 2KG	Minced meat, cutlets, steaks or roasts.
2	POULTRY	100G - 2.5KG	Chicken whole, pieces or fillets.
3	FISH	100G - 1.5KG	Whole, steaks or fillets.
4	VEGETABLES	100G - 1.5KG	Mixed vegetables, peas, broccoli etc.
5	BREAD	100G - 1KG	Loaf, buns or rolls.

FOR FOOD NOT LISTED IN THIS TABLE and if the weight is lesser or greater than recommended weight, you should follow the procedure for "Cook and reheat with microwaves" and choose 160 W when defrosting.

GRILL

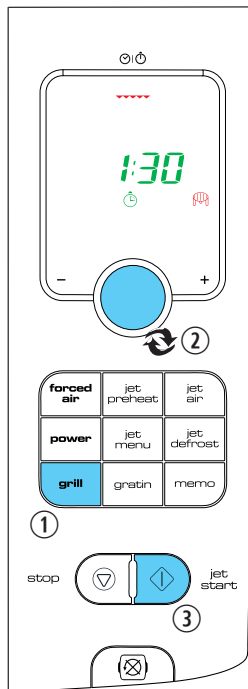



USE THIS FUNCTION TO quickly give a pleasant brown surface to the food.

- 1 PRESS THE GRILL BUTTON.
- 2 TURN THE ADJUST KNOB to set the cooking time.
- 3 PRESS THE START BUTTON.

PRESSING THE GRILL BUTTON DURING COOKING switches the Grill element on and off. The timer will continue to count down when the Grill element is turned off.


DO NOT LEAVE THE OVEN DOOR OPEN for long periods when the Grill is in operation, as this will cause a drop in temperature.

 ENSURE THAT THE UTENSILS used are heat resistant when you use this function.

 DO NOT USE PLASTIC utensils when grilling. They will melt. Items of wood or paper are not suitable either.



GRILL COMBI

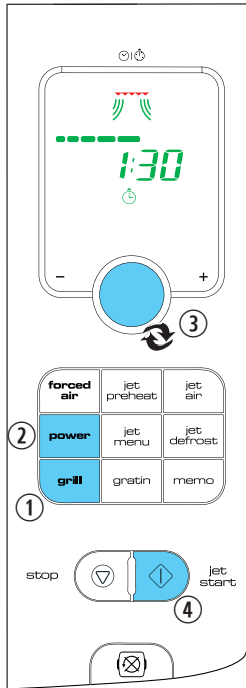

USE THIS FUNCTION TO cook such food as Gratins, Lasagne, Poultry and Baked potatoes.

- 1 PRESS THE **GRILL** BUTTON.
- 2 PRESS THE **POWER** BUTTON repeatedly to set the microwave power.
- 3 TURN THE **ADJUST** KNOB to set the cooking time.
- 4 PRESS THE **START** BUTTON.

DURING OPERATION you can switch the Grill element on/off by pressing the Grill button. The Max. possible microwave power level when using the Grill is limited to a factory-preset level.

IT IS POSSIBLE to switch the microwaves off by reducing the microwave power level to 0 W. When 0 W is reached, the oven switches to Grill only mode.

DO NOT LEAVE THE OVEN DOOR OPEN for long periods when the Grill is in operation, as this will cause a drop in temperature.

IF YOU COOK LARGE GRATINS which require stopped turntable rotation, then turn the dish after approximately half the cooking time. This is necessary for getting colour on the whole top surface.

i ENSURE THAT THE UTENSILS used are microwave safe and heat resistant when you use this function.

i DO NOT USE PLASTIC utensils when grilling. They will melt. Items of wood or paper are not suitable either.


CHOOSING POWER LEVEL

GRILL COMBI	
POWER	SUGGESTED USE:
650 W	COOKING Vegetables Gratins
350 - 500 W	COOKING Poultry & Lasagne
160 - 350 W	COOKING Fish & frozen gratins
160 W	COOKING Meat
90 W	GRATINATING fruit
0 W	BROWNING only during cooking





GRATIN

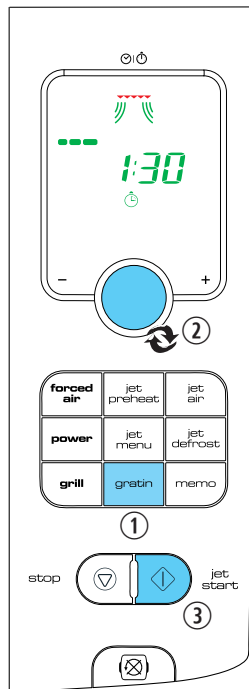


USE THIS FUNCTION TO cook lasagne, fish gratins and vegetable gratins.


- 1 PRESS THE **GRATIN** BUTTON.
- 2 TURN THE **ADJUST KNOB** to set the cooking time.
- 3 PRESS THE **START** BUTTON.

IT IS NOT POSSIBLE TO CHANGE OR SWITCH the Power level or Grill on/off, when using the Gratin function.

DO NOT LEAVE THE OVEN DOOR OPEN for long periods when the Grill is in operation, as this will cause a drop in temperature.


IF YOU COOK LARGE GRATINS which require stopped turntable rotation, then turn the dish after approximately half the cooking time. This is necessary for getting colour on the whole top surface.

 **ENSURE THAT THE UTENSILS** used are microwave safe and heat resistant when you use this function. Place the utensil on the glass turntable.

 **DO NOT USE PLASTIC** utensils when grilling. They will melt. Items of wood or paper are not suitable either.



FORCED AIR

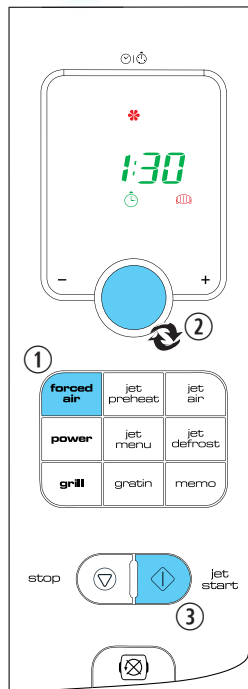


USE THIS FUNCTION to cook cakes, soufflés, poultry and roast meats.

- 1 PRESS THE FORCED AIR BUTTON** repeatedly to set the preferred temperature .
- 2 TURN THE ADJUST KNOB** to set the cooking time.
- 3 PRESS THE START BUTTON.**


USE THE LOW WIRE RACK to put food on to allow the air to circulate properly around the food.

ONCE THE HEATING PROCESS HAS BEEN STARTED the temperature can easily be adjusted by pressing the forced air button.

 **ENSURE THAT THE UTENSILS** used are ovenproof when you use this function.



FORCED AIR COMBI

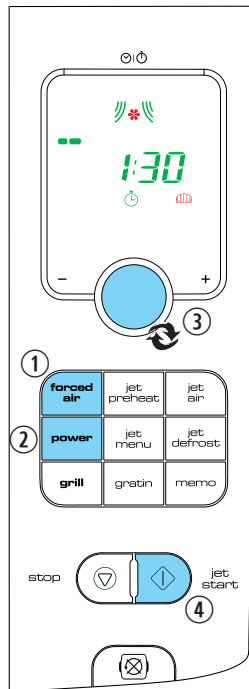

USE THIS FUNCTION TO cook roast meats, poultry, jacket potatoes, frozen convenience foods, cakes, pastry, fish and puddings.

- 1** PRESS THE **FORCED AIR** BUTTON repeatedly to set the preferred temperature .
- 2** PRESS THE **POWER** BUTTON repeatedly to set the microwave power.
- 3** TURN THE **ADJUST KNOB** to set the cooking time.
- 4** PRESS THE **START** BUTTON.

USE THE LOW WIRE RACK to put food on to allow the air to circulate properly around the food.


ONCE THE HEATING PROCESS HAS BEEN STARTED the temperature can easily be adjusted by pressing the forced air button. Also the microwave power level is possible to change. The Max. possible microwave power level when using the Forced air Combi is limited to a factory-preset level.

ENSURE THAT THE UTENSILS used are microwave safe and ovenproof when you use this function.

CHOOSING POWER LEVEL

FORCED AIR COMBI	
POWER	SUGGESTED USE:
350 W	COOKING Poultry, Jacket potatoes, Lasagne & Fish
160 W	COOKING Roast meat & Fruit cakes
90 W	COOKING Sponge cakes & Pastry

JET PREHEAT

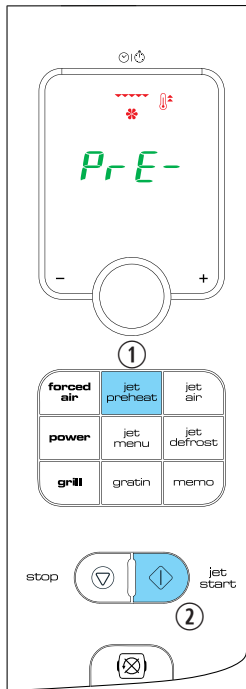

USE THIS FUNCTION to preheat the empty oven.

DO NOT PLACE FOOD before or during preheating in the oven. It may be burned from the intense heat.

PREHEATING is always done with the oven empty.

- 1 PRESS THE JET PREHEAT BUTTON** repeatedly to set the preferred temperature .
- 2 PRESS THE START BUTTON.**

ONCE THE PREHEATING PROCESS HAS BEEN STARTED the temperature can easily be adjusted by pressing the jet preheat button.


DURING THE PREHEATING PROCESS, PRE- HEAT is alternately displayed and the forced air icon keeps blinking until the set temperature is reached.

WHEN THE SET TEMPERATURE IS REACHED the display shows "END" and the oven automatically switches to the Forced Air function keeping the set temperature for 10 minutes before switching off. During this time, it is waiting for you to insert food, set the desired cooking time and press the START button to begin cooking.

PRE-
HEAT



JET MENU

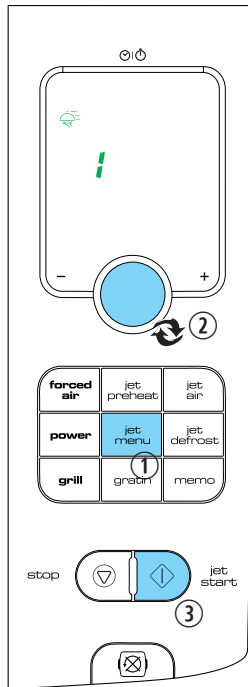

USE THIS FUNCTION TO cook various types of frozen foods.

THE OVEN WILL automatically select cooking method, time and power needed.

- 1** PRESS THE **JET MENU** BUTTON repeatedly to select the food class. (see table)
- 2** TURN THE **ADJUST KNOB** TO set the weight of the food.
- 3** PRESS THE **START BUTTON**.


SOME FOOD CLASSES REQUIRE the food to be added or stirred during cooking (varies between models). In these cases the oven will stop and prompt you to perform the needed action.

- Open the door.
- Add or Stir the food.
- Close the door and restart by pressing the Start button.

NOTE: If the door isn't opened at this time (within 2 minutes) the oven will stop and go to "stand by mode".


	FOOD CLASS	RECOMMENDED AMOUNT	ACCESSORIES TO USE	DURING COOKING
1	RICE MIX	300G - 650G	MICROWAVE SAFE VESSEL	STIR FOOD
2	PASTA MIX	250G - 550G	MICROWAVE SAFE VESSEL	STIR FOOD
3	SOUP	250G - 1000G	MICROWAVE SAFE VESSEL	STIR FOOD
4	DINNER PLATE / FROZEN MEAL	200G - 500G	MICROWAVE SAFE PLATE	
5	MIXED VEGETABLES	150G - 600G	MICROWAVE SAFE VESSEL	STIR FOOD

FOR FOOD NOT LISTED IN THIS TABLE and if the weight is lesser or greater than recommended weight, you should follow the procedure for "Cook and reheat with microwaves".

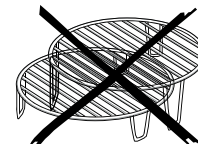



JET AIR

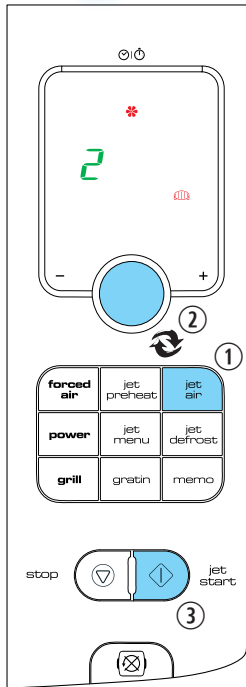

USE THIS FUNCTION for baking of cake mix and pre-baked rolls.
ALWAYS PLACE THE FOOD on the low wire rack.


- 1 **PRESS THE JET AIR BUTTON** repeatedly to select food class. (see table)
- 2 **TURN THE ADJUST KNOB** to set the amount of the food if necessary.
- 3 **PRESS THE START BUTTON.**

THERE IS PREHEATING STAGE before cooking start for some foods, during the preheating process, PRE- HEAT is alternately displayed.

SOME FOOD CLASSES REQUIRE the food to be added after preheating. In these cases the oven will stop and prompt you to perform the needed action.


IF THE DOOR ISN'T OPENED AT THIS TIME (within 2 minutes) the oven will stop and go to stand by mode.

- 🔔 Open the door.
- 🔔 Add the food.
- 🔔 Close the door and restart by pressing the Start button.

 **ENSURE THAT THE UTENSILS** used are microwave safe and ovenproof when you use this function.

PRE-
HEAT

	FOOD CLASS	AMOUNT	HINTS
1	CAKE MIX	400G - 800G	Use microwave safe and ovenproof cake dish.
2	PRE-BAKED ROLLS	2-4 PIECES	ADD food when the oven prompts you to do so. PLACE the rolls directly on the low wire rack.
3	FROZEN PRE-BAKED ROLLS	2-4 PIECES	ADD food when the oven prompts you to do so. PLACE the rolls directly on the low wire rack.

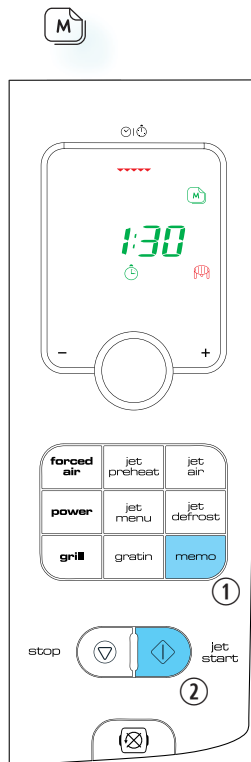

MEMORY

THE MEMORY FUNCTION PROVIDES you with an easy way to quickly recall a preferred setting.

THE PRINCIPLE OF THE MEMORY FUNCTION is to store whatever setting that is currently displayed.

HOW TO USE A STORED SETTING:

- 1 **PRESS THE MEMO BUTTON.**
- 2 **PRESS THE START BUTTON.**

HOW TO STORE A SETTING:


- 1 **SELECT** any function.
- 2 **PROGRAM** your settings.
- 3 **PRESS AND KEEP THE MEMO BUTTON PRESSED** for 3 seconds until an acoustic signal is heard. The setting is now stored. You may reprogram the memory as many times as you wish.

WHEN THE APPLIANCE is plugged in or after a power failure, your Memo function will have stored 2 minutes at full microwave power as default setting.

MAINTENANCE & CLEANING

CLEANING IS THE ONLY MAINTENANCE normally required. It must be carried out with the microwave oven disconnected.

FAILURE TO MAINTAIN THE OVEN in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.


 **DO NOT USE METAL SCOURING PADS, ABRASIVE CLEANSERS, steel-wool pads, gritty washcloths, etc. which can damage the control panel, and the interior and exterior oven surfaces. Use a cloth with a mild detergent or a paper towel with spray glass cleaner. Apply spray glass cleaner to a paper towel. Do NOT SPRAY directly on the oven.**




AT REGULAR INTERVALS, especially if spill overs have occurred, remove the turntable, the turntable support and wipe the base of the oven clean.



THIS OVEN IS DESIGNED to operate with the turntable in place.


 **DO NOT** operate the microwave oven when the turntable has been removed for cleaning.

USE A SOFT AND DAMP CLOTH with mild detergent to clean the interior surfaces, front and rear of the door and the door opening.

 **DO NOT ALLOW GREASE** or food particles to build up around the door.

FOR STUBBORN STAINS, boil a cup of water in the oven for 2 or 3 minutes. Steam will soften the marks.

ADDING SOME LEMON JUICE to a cup of water, placing this on the turntable and boiling for a few minutes can eliminate odors inside the oven.


 **DO NOT USE STEAM CLEANING APPLIANCES** when cleaning your microwave oven.

THE GRILL ELEMENT does not need cleaning since the intense heat will burn off any splashes, but the ceiling beneath it may need regular cleaning. This should be done with a soft and damp cloth with mild detergent.

IF THE GRILL IS NOT USED REGULARLY, it should be run for 10 minutes a month to burn off any splashes, in order to reduce the risk of fire.

DISHWASHER SAFE:


TURNTABLE SUPPORT.

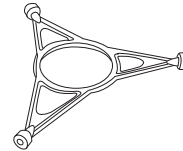

GLASS TURNTABLE



 WIRE RACK



TROUBLE SHOOTING GUIDE

IF THE OVEN DOES NOT WORK, do not make a service call until you have made the following checks:

- ❏ The Turntable and turntable support is in place.
- ❏ The Plug is properly inserted in the wall socket.
- ❏ The Door is properly closed.
- ❏ Check your Fuses and ensure that there is power available.
- ❏ Check that the oven has ample ventilation.
- ❏ Wait for 10 minutes, then try to operate the oven once more.
- ❏ Open and then close the door before you try again.

THIS IS TO AVOID unnecessary calls for which you will be charged.

When calling for Service, please give the serial number and type number of the oven (see Service label). Consult your warranty booklet for further advice.



IF THE MAINS CORD NEEDS REPLACING it should be replaced by the original mains cord, which is available via our service organization. The mains cord may only be replaced by a trained service technician.




SERVICE ONLY TO BE CARRIED OUT BY A TRAINED SERVICE TECHNICIAN. It is hazardous for anyone other than a trained person to carry out any service or repair operation, which involves the removal of any cover, which gives protection against exposure to microwave energy.

DO NOT REMOVE ANY COVER.




ENVIRONMENTAL HINTS

THE PACKING BOX may be fully recycled as confirmed by the recycling symbol. Follow local disposal regulations. Keep potentially hazardous packaging (plastic bags, polystyrene etc.) out of the reach of children.

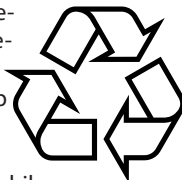

THIS APPLIANCE is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

THE SYMBOL on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

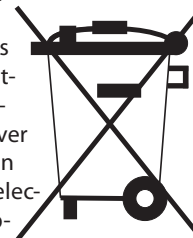

DISPOSAL must be carried out in accordance with local environmental regulations for waste disposal.

FOR MORE DETAILED INFORMATION about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

BEFORE SCRAPPING, cut off the mains cord so that the appliance cannot be connected to the mains.

Three horizontal light blue lines for writing.



Twenty horizontal light blue lines for writing, arranged in a single column.



IN ACCORDANCE WITH IEC 60705.

THE INTERNATIONAL ELECTROTECHNICAL COMMISSION has developed a standard for comparative testing of heating performance of different microwave ovens. We recommend the following for this oven:

Test	Amount	Approx. time	Power level	Container
12.3.1	1000 G	11 - 12 MIN	750 W	PYREX 3.226
12.3.2	475 G	5 - 5 ½ MIN	750 W	PYREX 3.827
12.3.3	900 G	14 - 15 MIN	750 W	PYREX 3.838
12.3.4	1100 G	24 - 26 MIN	GRATIN SETTING	PYREX 3.827
12.3.5	700 G	24 - 26 MIN	FA 170°C + 90 W	PYREX 3.827
12.3.6	1200 G	32 - 35 MIN	FA 200°C + 350 W	PIE PLATE
13.3	500 G	10 - 12 MIN	160 W	PLASTIC PLATE



Whirlpool is a registered trademark of Whirlpool, USA

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>