




COOKTOP PARTS

For Models: RS675PXGB7, RS675PXGQ7, RS675PXGT7
(Black) (White) (Biscuit)

30" DROP-IN
ELECTRIC OVEN
SELF CLEAN

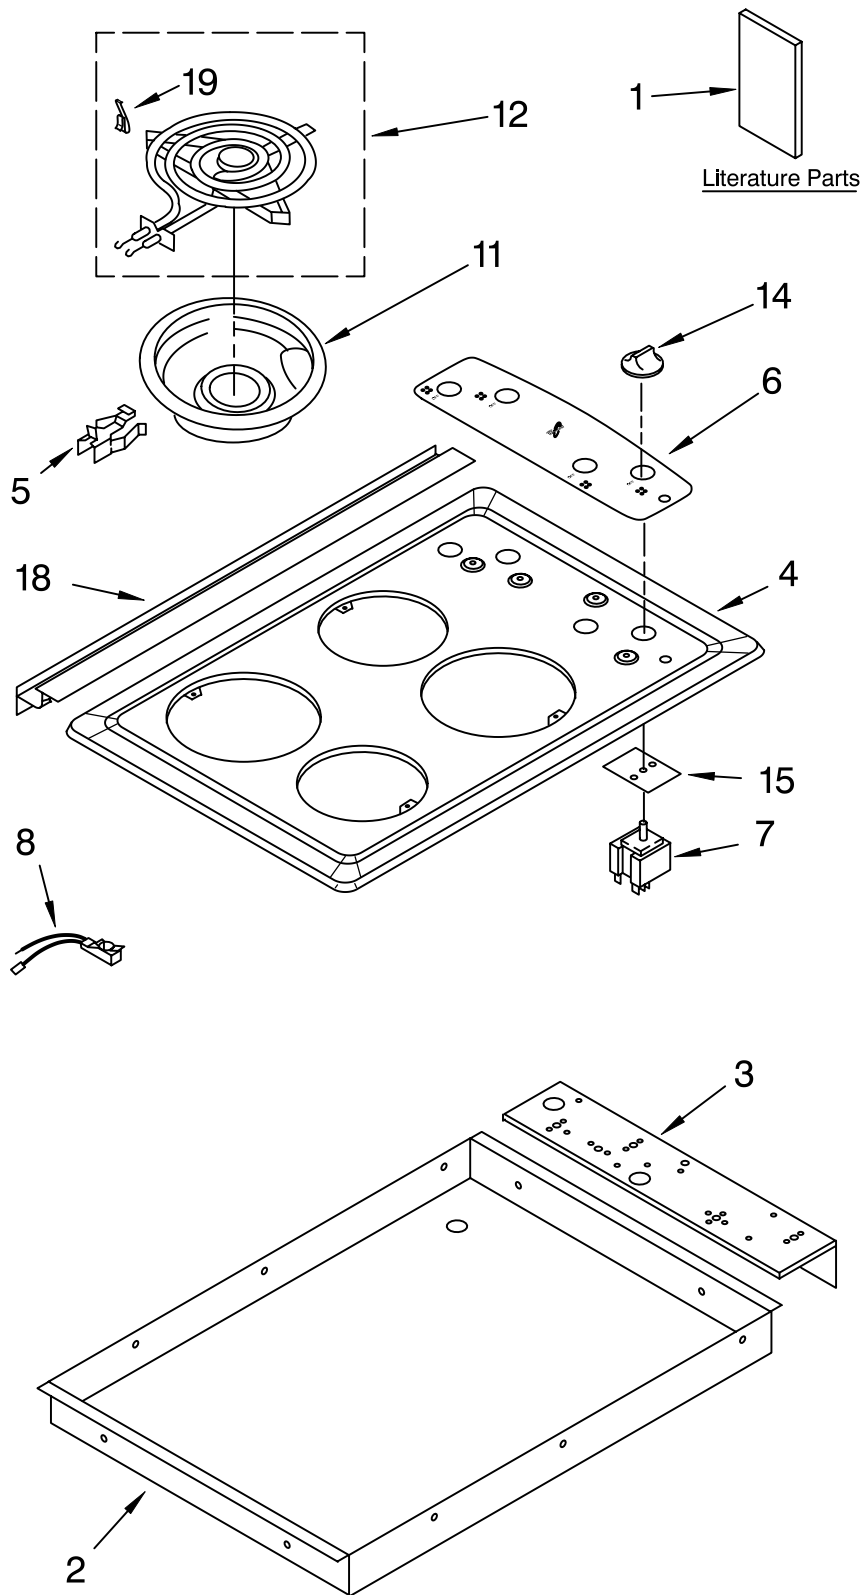

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------


NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	LIT3191799	Literature Parts Installation Instructions
	LIT3191537	Use & Care Guide
	LIT3192845	Tech Sheet
	LIT3191638	Safe Cooking Tips
2	3192459	Burner Box
3	3192330	Bracket, Mounting
	3177991	Screw
4		Cooktop
	8284709	Biscuit
	3191168	White
	3191167	Black
5	3192575	Clip, Mtg. (4)
	3400843	Screw
6		Panel, Control
	8284707	Biscuit
	3191229	White
	3191228	Black
7		Switch, Infinite
	3191471	Use W/6" Surface (Blue Shaft)
	3191473	Use W/8" Surface (Red Shaft)
	3400855	Screw, 8-32 x 1/4
8	3191491	Light, Indicator
11		Pan, Surface
	3195208	6" Pan
	3195209	8" Pan
12		Element, Surface
	8053266	6" Burner
	8053268	8" Burner
14		Knob, Control
	3196232	White
	8272506	Biscuit
	3196231	Black
15	3183956	Seal, Switch Shaft (4)
18		Trim, Extension
	3192103	White
	8300518	Biscuit
	3192102	Black
19	3195917	Clip, Element

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Models:RS675PXGB7, RS675PXGQ7, RS675PXGT7
(Black) (White) (Biscuit)

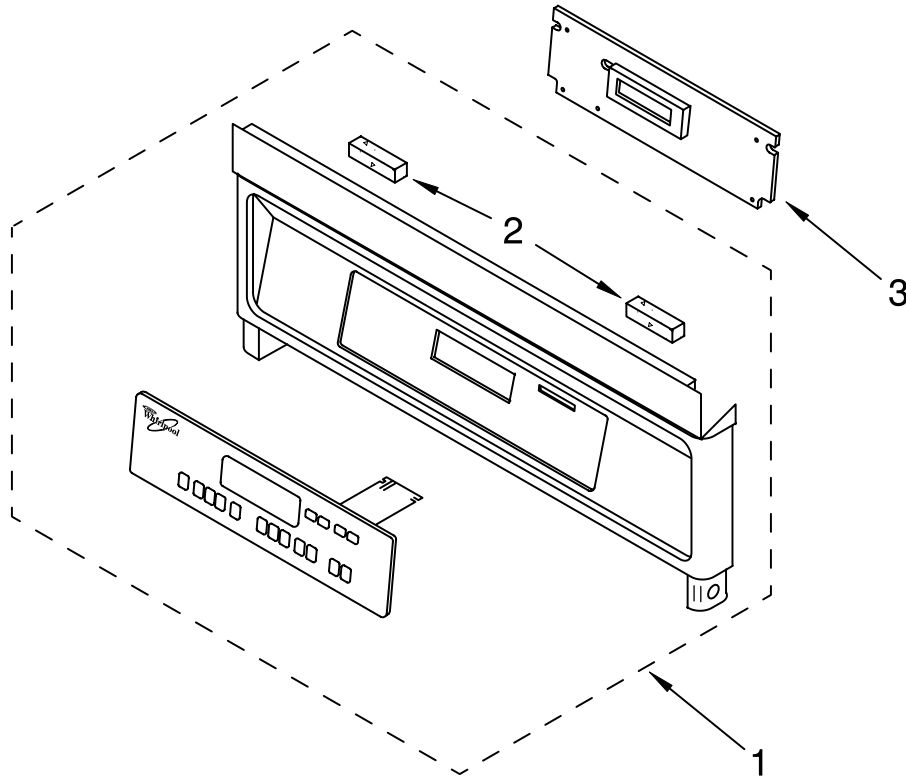


Illus. No.	Part No.	DESCRIPTION
1	4452845	Control Panel Assy. White
	8300515	Biscuit
	4452844	Black
		W/Membrane Switch
	3400832	Screw
2	4451034	Gasket, Control Panel
3	4452892	Microcomputer
	4449745	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN PARTS

For Models: RS675PXGB7, RS675PXGQ7, RS675PXGT7
(Black) (White) (Biscuit)

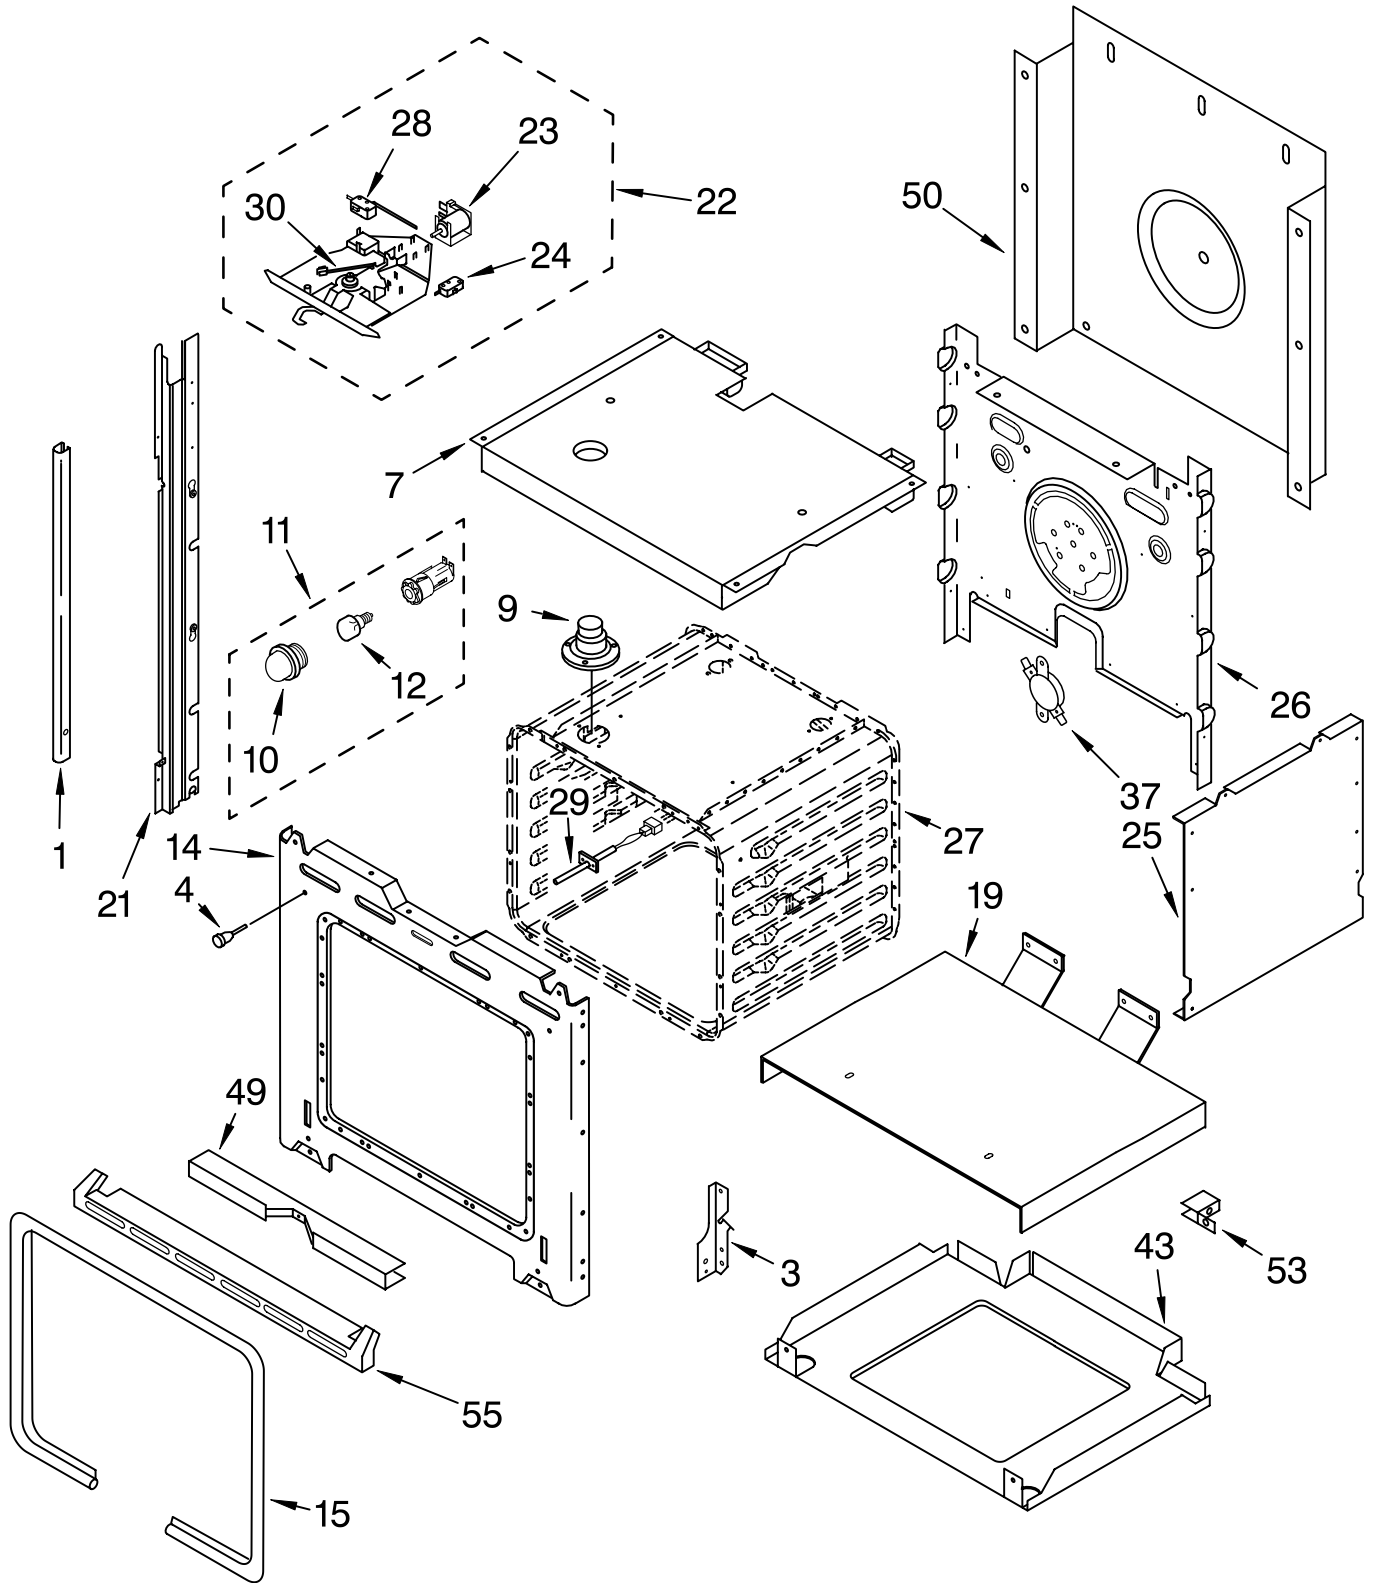

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN PARTS


For Models: RS675PXGB7, RS675PXGQ7, RS675PXGT7
(Black) (White) (Biscuit)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
NOTE: The screws and nuts required to attach a part are listed immediately following that part.			14	4455612	Frame, Front	37	4451442	Thermostat (TOD) (Temp.) SPST
				4449040	Screw	43	4455530	Base, Chassis
				4450118	Nut	49	4448933	Retainer, Gasket
			15	4455382	Gasket, Door		4449154	Screw
			19	4451478	Support, Insulation	50	4451747	Cover, Back
				4449809	Screw		4449809	Screw
1		Trim, Side (Right Hand)	21		Rail, Side	53	4449845	Support, Bracket
	4450845	White		4450579	Right Side		4449809	Screw
	4452120	Biscuit		4450580	Left Side	55	4449809	Screw
	4450844	Black (Left Hand)		4448444	Grommet		4449809	Screw
	4450848	White		4449154	Screw			Trim, Bottom
	4452121	Biscuit	22	4451896	Latch Assembly		4448478	White
	4450847	Black	23	4452224	Solenoid		4452415	Biscuit
		Screw	24	4452312	Micro Switch N.C.		4448477	Black
	4449041	Bright		4449154	Screw	FOLLOWING PARTS NOT ILLUSTRATED		
	4449747	Black	25	4455641	Side, Chassis (R.H. & L.H.)	INSULATION		
3		Hinge Receiver		4449809	Screw		4449316	Insulation, Wrap
	4455520	Left Hand	26	4452234	Back, Chassis		4450365	Insulation, Back
	4455521	Right Hand		4449809	Screw			
4	4448520	Bumper, Door	27		Liner, Oven (Not serviceable)			
7	4455286	Top Chassis	28	4451426	Micro Switch			
	4449809	Screw	29	4455636	Sensor			
9	4452158	Tube, Vent		4449154	Screw			
	4449154	Screw	30	4451537	Spring, Latch			
10	4452165	Lens, Light						
11	4452368	Oven Light Assy						
12	4452166	Bulb, Light						

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN DOOR PARTS

For Models: RS675PXGB7, RS675PXGQ7, RS675PXGT7
(Black) (White) (Biscuit)

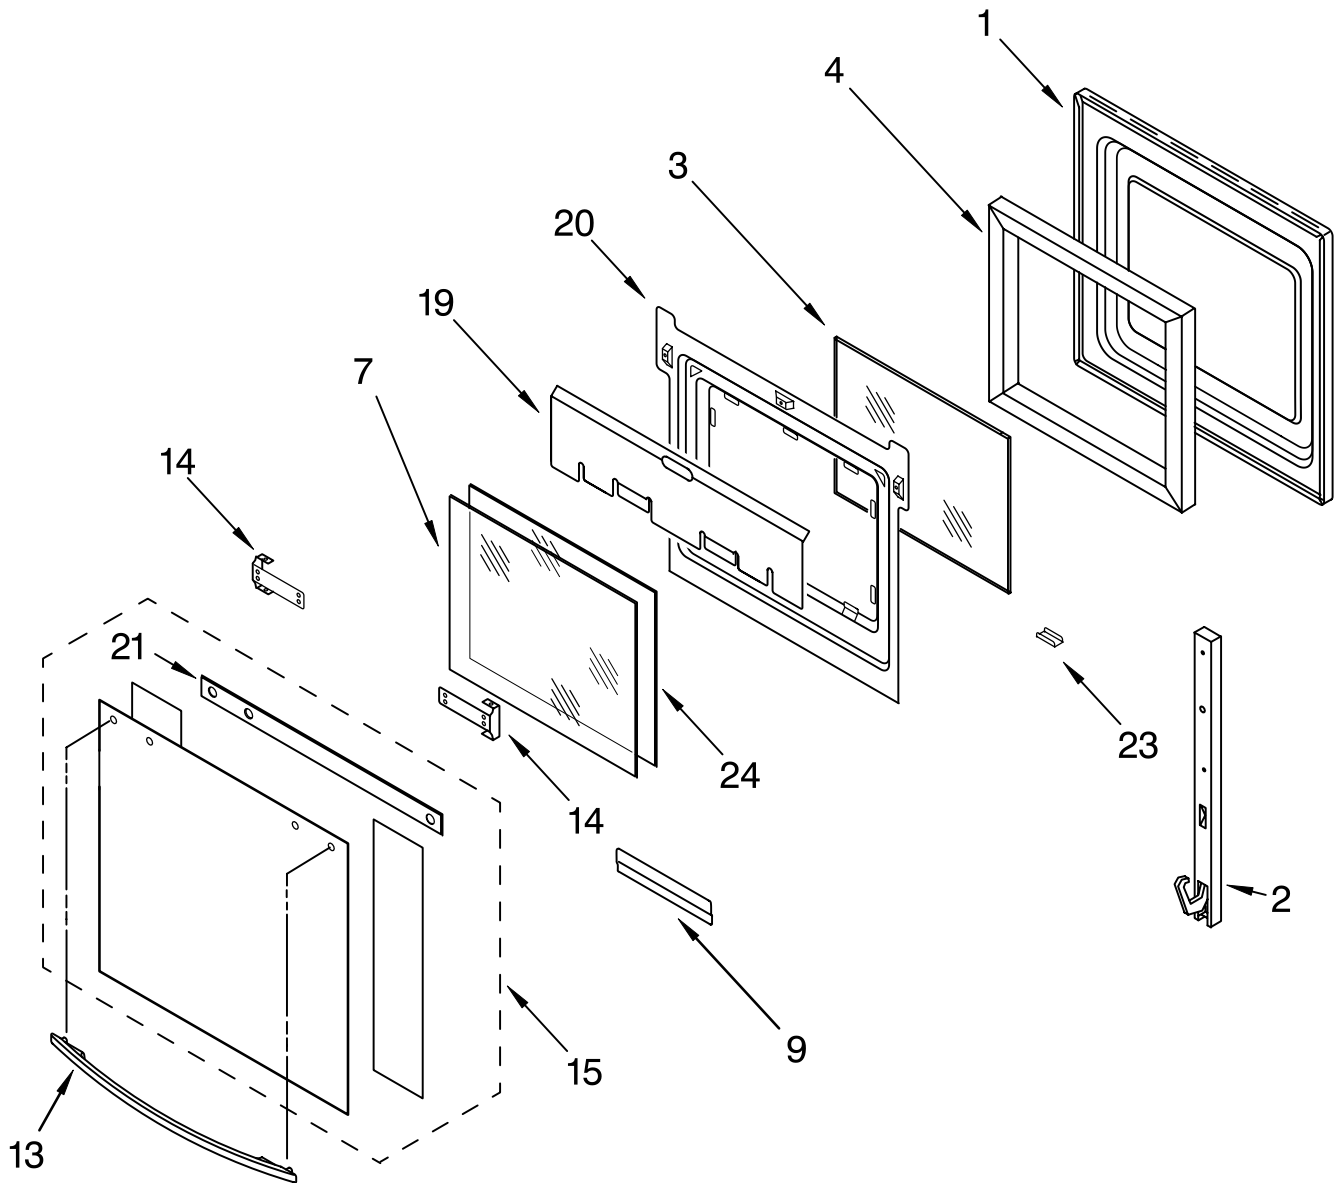

Illus. Part No. DESCRIPTION

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

- 1 4451719 Door Liner
- 2 445525 Hinge, Door
4449743 Screw
- 3 4449259 Glass, Inner
- 4 4451722 Insulation, Door
- 7 4449263 Glass, Inner (2)

Illus. Part No. DESCRIPTION

- 9 4451668 Retainer, Glass
4449809 Screw
- 13 4448855 White
4452860 Biscuit
4448854 Black
- 14 4450813 Bracket, Handle
4451040 Screw
- 15 4452066 White
4452859 Biscuit
4452065 Black

Illus. Part No. DESCRIPTION

- 19 4450362 Shield, Heat
4449809 Screw
- 20 4451671 Retainer, Glass
4449809 Screw
- 21 4451674 Seal, Door Top
- 23 4450864 White
4452119 Biscuit
4450863 Black
- 24 4455257 Glass, Inner

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST


INTERNAL OVEN PARTS

For Models: RS675PXGB7, RS675PXGQ7, RS675PXGT7

(Black)

(White)

(Biscuit)

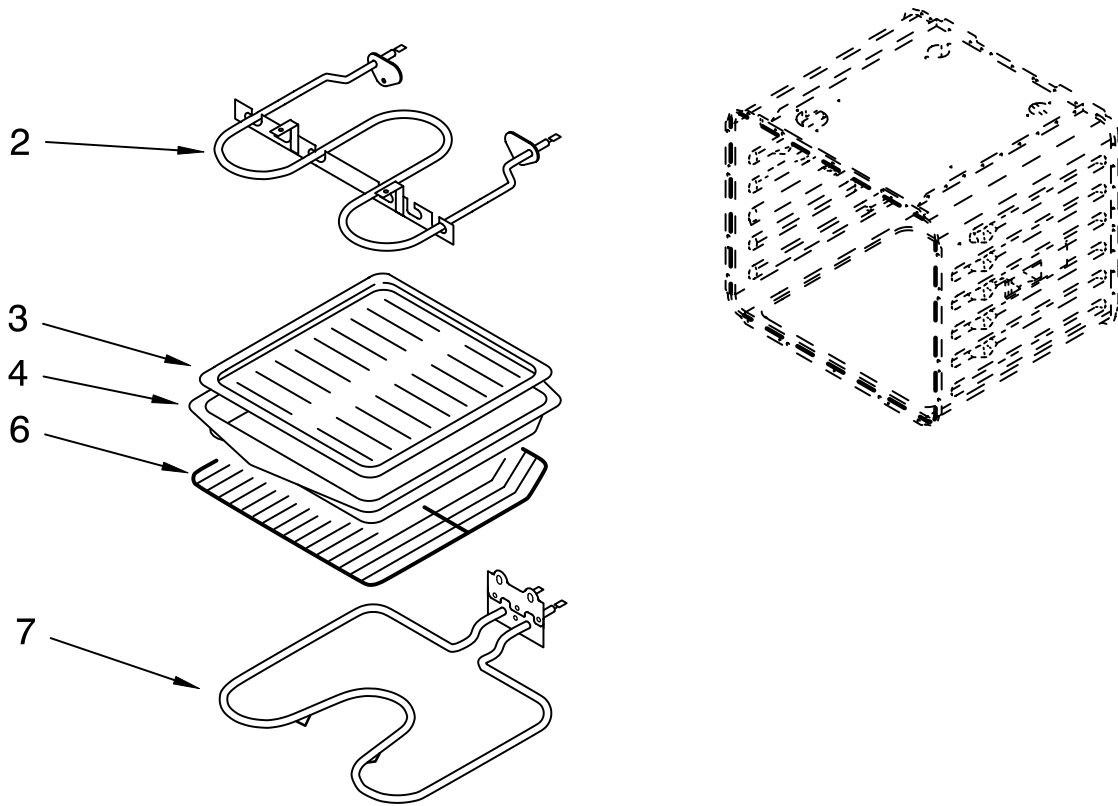


Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

2	4452154	Element, Broil
	4449154	Screw
3	3147563	Grill, Broiler
4	3147845	Pan, Broiler
6	4448717	Rack, Oven
7	4452153	Element, Bake
	4449154	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

TOP VENTING PARTS

For Models: RS675PXGB7, RS675PXGQ7, RS675PXGT7
(Black) (White) (Biscuit)

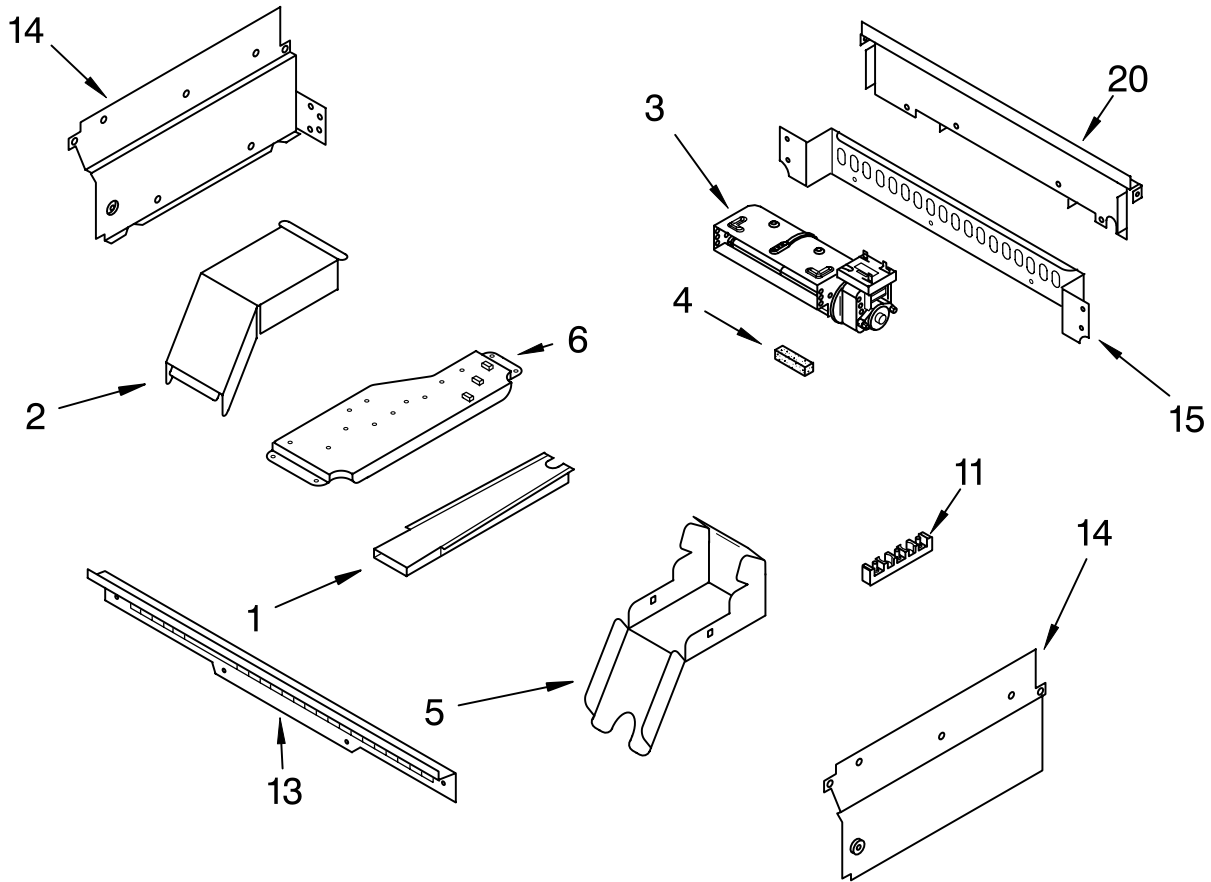

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	4451759	Vent, Exhaust
	4449040	Screw, 8-18 x 3/8
2	4455178	Elbow, Vent Top
3	4455334	Blower
	4455352	Bracket, Blower (2)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

4	4451758	Block, Foam
5	4455177	Elbow, Vent Bottom
6	4451761	Plate, Service
11	4449868	Block, Terminal
	3400080	Screw
13	4448549	Vent, (Control Panel)
	4450038	Screw

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

14		Side, Control Compt.
	3191832	Right
	3191833	Left
	4449809	Screw
15	4452244	Back, Control
	4449809	Screw
20	3191842	Cover, Rear

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OPTIONAL PARTS

For Models:RS675PXGB7, RS675PXGQ7, RS675PXGT7
(Black) (White) (Biscuit)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
<u>PAINT, TOUCH-UP (1/2oz.)</u>			<u>SPLICING WIRES--25FT. LENGTH</u>			<u>WIRING HARNESS PARTS</u>		
	72017	White		242828	Wire (12 Ga. 150 c Black)		3191220	Harness, Wire (Main)
	261869	Cord Brown		242820	Wire (14 Ga. 150 c Black)		4455733	Harness, Wire (EDC)
	72032	Black		242821	Wire (14 Ga. 150 c Blue)		4451163	Conduit
<u>PAINT, SPRAY</u>				242822	Wire (14 Ga. 150 c Brown)		4448664	Clamp
	350930	White		242830	Wire (14 Ga. 200 c Brown)		4449809	Screw
	261900	Citrine White		242823	Wire (14 Ga. 150 c Green)		112432	Nut
	830864	Black		242824	Wire (14 Ga. 150 c Orange)		4450800	Screw, Ground
<u>ADHESIVE</u>				242829	Wire (12 Ga. 150 c Red)		3192236	Harness, Wire (Infinite Switch)
	591014	Adhesive Loctite (1/3 oz.)		242825	Wire (14 Ga. 150 c Red)		4455592	Harness, Wire (Light)
	482338	Sealer, Silastic (3 oz.)		242831	Wire (14 Ga. 200 c Red)		4452222	Spacer, Harness
				242826	Wire (14 Ga. 150 c White)		4454384	Ground, Wire
				242827	Wire (14 Ga. 150 c Yellow)		3400015	Screw, Ground
				242832	Wire (14 Ga. 200 c Yellow)	<u>Miscellaneous</u>		
							814381	Hinge Pin Kit
							4448950	Screw, Install (4)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>