




# COOKTOP PARTS

For Models: RS696PXGB7, RS696PXGQ7  
(Black) (Designer White)

30" ELECTRIC  
DROP-IN RANGE  
SELF-CLEANING  
OVEN

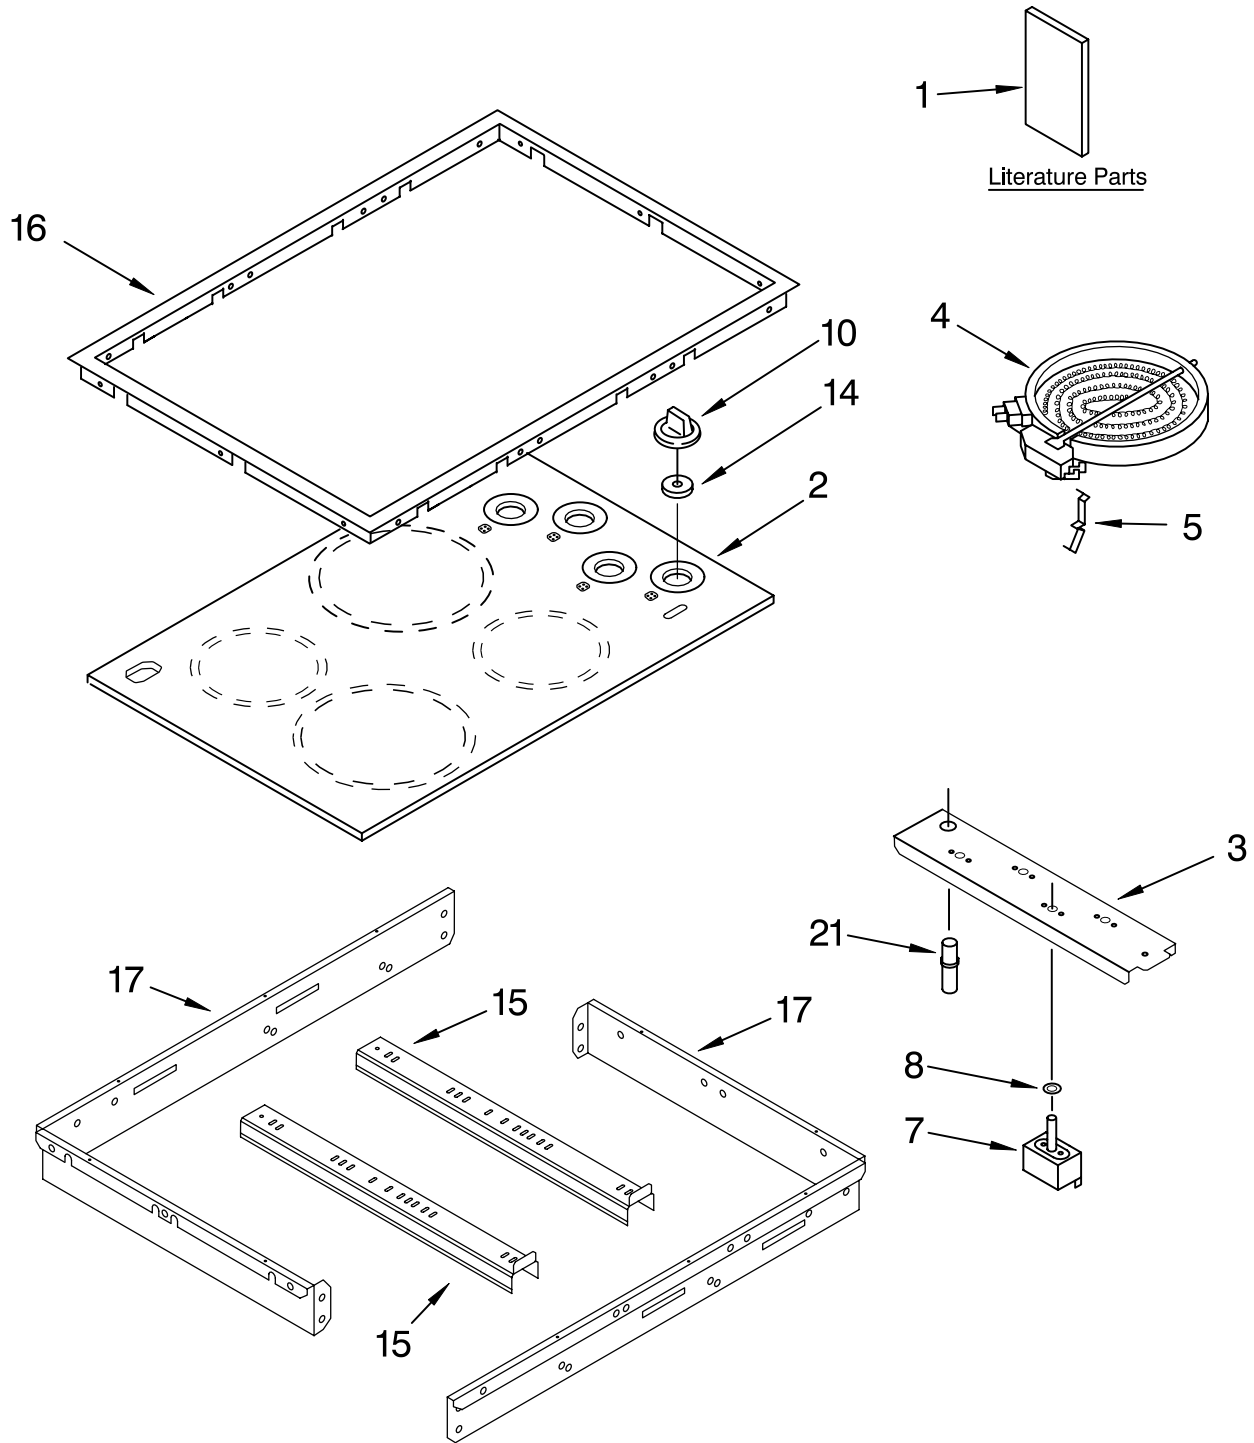

Literature Parts

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# COOKTOP PARTS

For Models:RS696PXGB7, RS696PXGQ7  
(Black) (Designer White)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------


NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1		Literature Parts
	LIT3191800	Installation Instructions
	LIT3191537	Use & Care Guide
	LIT3192844	Tech Sheet
	LIT3191638	Safe Cooking Tips
2		Cooktop, Glass
	3191843	Black
	3191189	White
3	3191310	Bracket, Switch Mounting
4		Element, Surface
	8272567	1200W RF-LR
	8272566	1800W RR
	8272565	2500W LF
5	3191791	Spring, Locator
	246119	Screw (8)
7		Switch, Infinite
	3191049	1200W RR-LR (Silver Shaft)
	3191050	1800W RR (Yellow Shaft)
	4454541	2500W LF (Red Shaft)
	311865	Screw
8	3183956	Seal, Switch Cover
10		Knob, Control (4)
	3196231	Black
	3196232	White
14	3182435	Seal, Switch (4)
15	3191515	Bracket, Support Element
16		Trim Ring, Cooktop
	3193228	Black
	3193227	White
	3196537	Screw
17	3192452	Frame, Cooktop
21	3191952	Lamp, Indicator
	3191953	Bumper, Rubber
	9750835	Bumper, Door

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# OVEN PARTS

For Models:RS696PXGB7, RS696PXGQ7  
(Black) (Designer White)

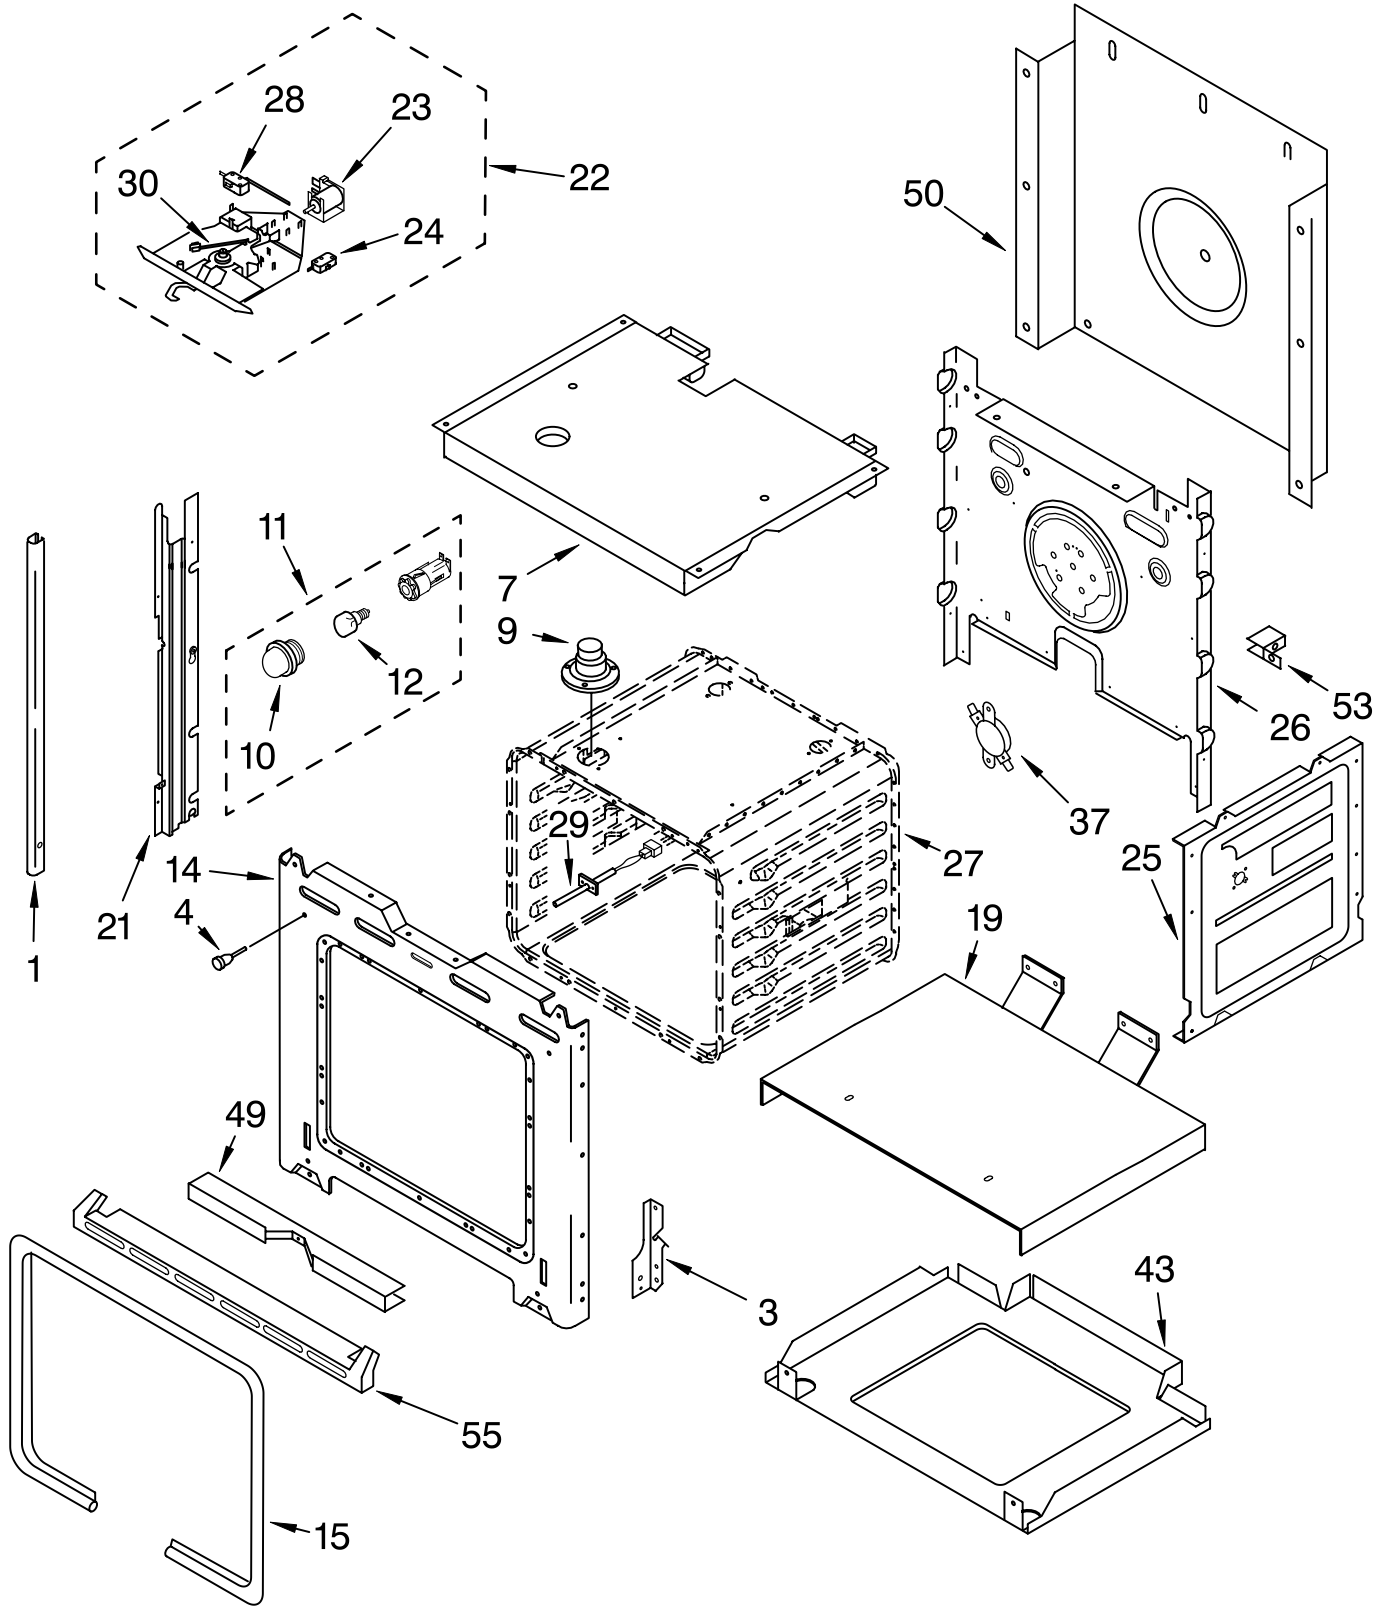

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# OVEN PARTS

For Models:RS696PXGB7, RS696PXGQ7  
(Black) (Designer White)

Illus. No.	Part No.	DESCRIPTION
NOTE: The screws and nuts required to attach a part are listed immediately following that part.		
1		Trim, Side (Right Hand)
	4450844	Black Model
	4449747	Screw
	4450845	White Model (Left Hand)
	4450847	Black Model
	4449747	Screw
	4450848	White Model
		Screw
	4449747	Black
	4449041	Bright
3		Hinge Receiver
	4455520	Left Hand
	4455521	Right Hand
4	4448520	Bumper, Door
7	4455286	Top Chassis
	4449809	Screw
9	4452158	Tube, Vent
	4449154	Screw

Illus. No.	Part No.	DESCRIPTION
10	4452165	Lens, Light
11	4452368	Oven Light Assy
12	4452166	Bulb, Light
14	4455612	Frame, Front
	4449040	Screw
	4450118	Nut
15	4455382	Gasket, Door
19	4451478	Support, Insulation
	4449809	Screw
21		Rail, Side
	4450579	Right Side
	4450580	Left Side
	4448444	Grommet
	4449154	Screw
22	4451896	Latch Assy
23	4452224	Solenoid
24	4452312	Micro Switch N.C.
	4449809	Screw
25	4455641	Side, Chassis (R.H. & L.H.)
	4449809	Screw
26	4452234	Back, Chassis
	4449809	Screw
27		Liner, Oven (Not serviceable)

Illus. No.	Part No.	DESCRIPTION
28	4451426	Micro Switch
29	4455636	Sensor
	4449154	Screw
30	4451537	Spring, Latch
37	4451442	Thermostat (TOD) (Temp.) SPST
43	4455530	Base, Chassis
49	4448933	Retainer, Gasket
	4449154	Screw
50	4451747	Cover, Back
	4449809	Screw
53	4449845	Support, Bracket
	4449809	Screw
55		Trim, Bottom
	4448477	Black Model
	4448478	White Model

**FOLLOWING PARTS  
NOT ILLUSTRATED**


**INSULATION**

4449316	Insulation, Wrap
4450365	Insulation, Back

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# CONTROL PANEL PARTS

For Models:RS696PXGB7, RS696PXGQ7  
(Black) (Designer White)

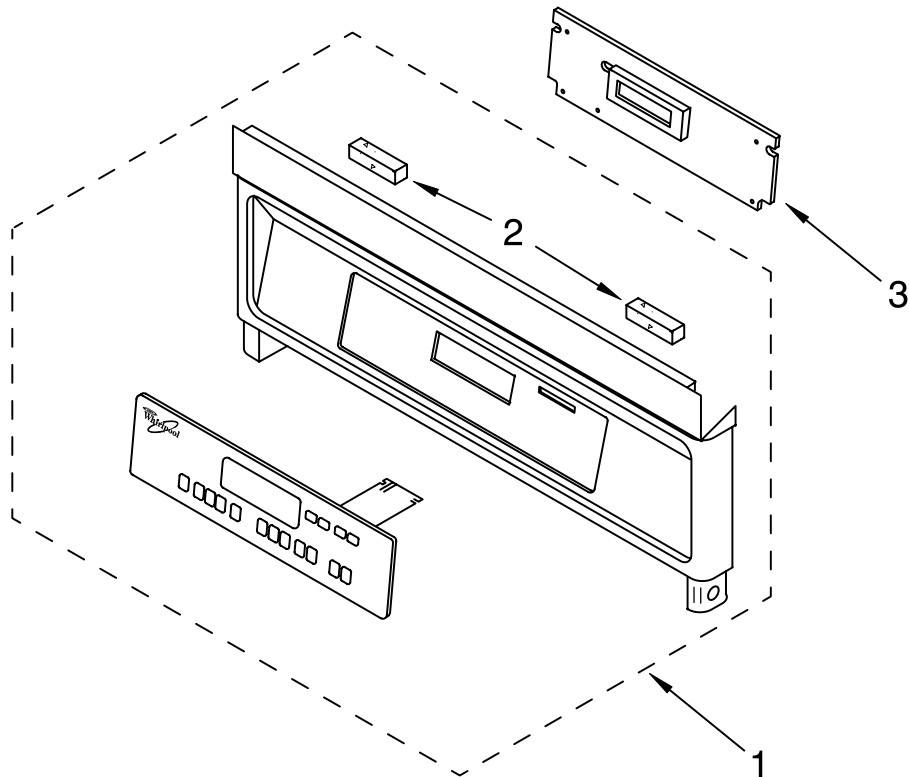

<b>Illus.</b>	<b>Part</b>	
<b>No.</b>	<b>No.</b>	<b>DESCRIPTION</b>


NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1		Control Panel Assy. W/Membrane Switch
	4452844	Black Model
	4452845	White Model
	4449745	Screw
	3400832	Screw
2	4451034	Gasket, Control Panel
3	4452892	Microcomputer
	4449745	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# OVEN DOOR PARTS

For Models: RS696PXGB7, RS696PXGQ7  
(Black) (Designer White)

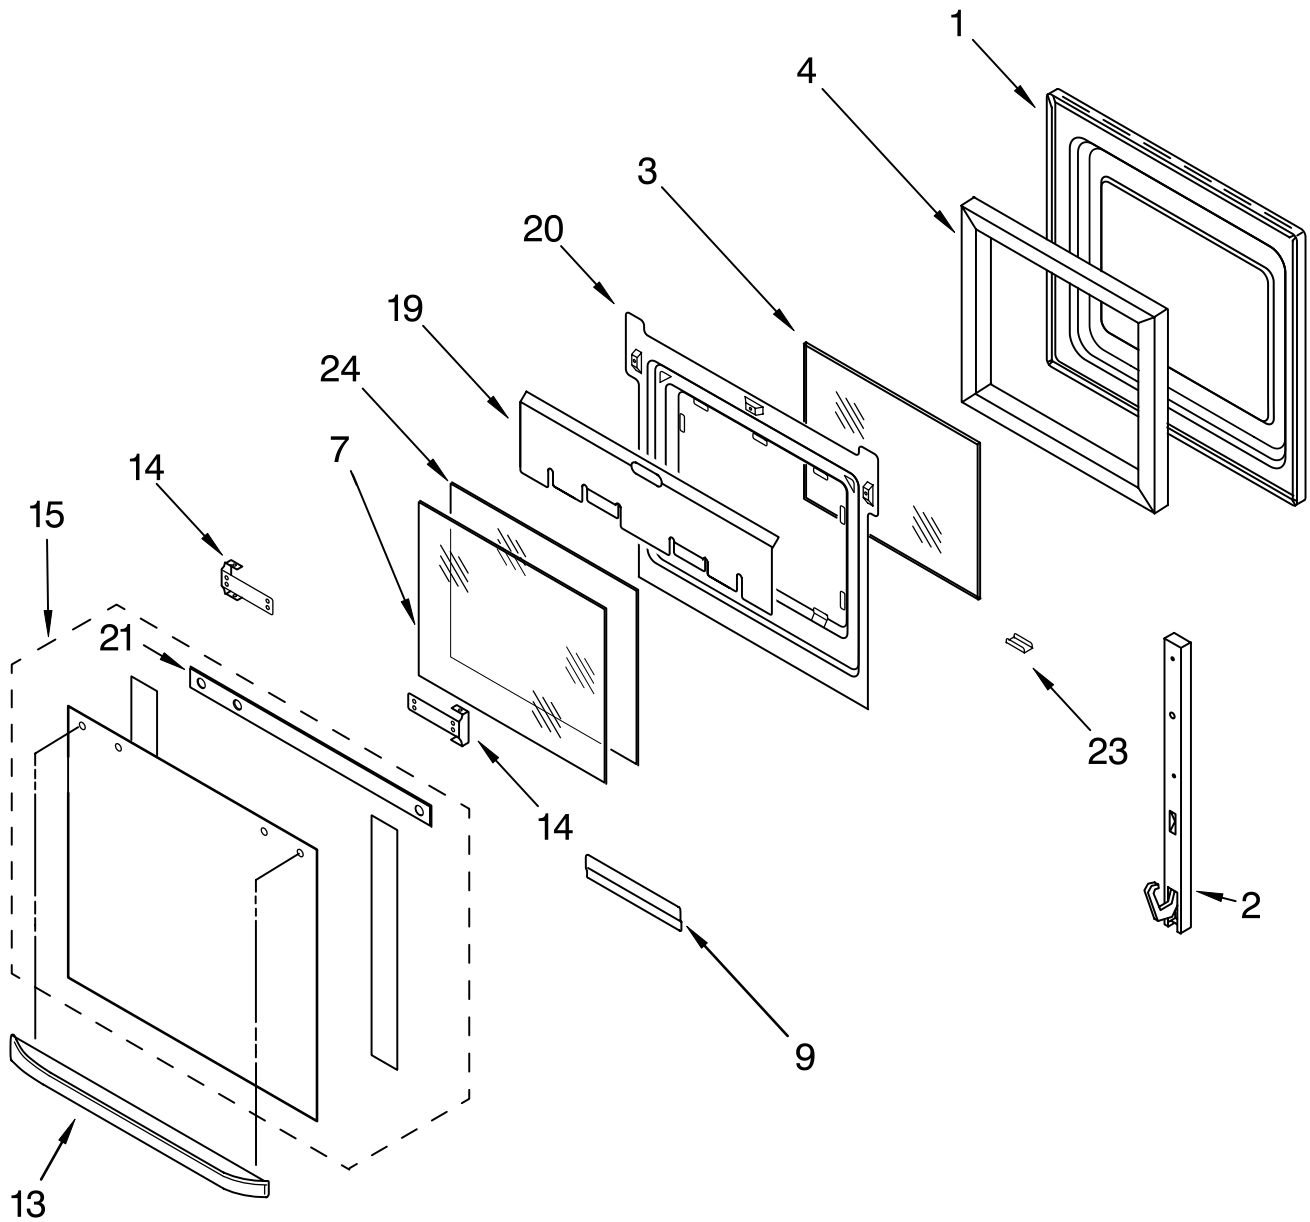


Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
NOTE: The screws and nuts required to attach a part are listed immediately following that part.			7	4449263	Glass, Inner	19	4450362	Shield, Heat
1	4451719	Door Liner	9	4451668	Retainer, Glass		4449809	Screw
2	4455525	Hinge, Door		4449809	Screw	20	4451671	Retainer, Glass
3	4449743	Screw	13		Door Handle		4449809	Screw
4	4451722	Insulation, Door		4448854	Black Model	21	4451674	Seal, Door Top
				4448855	White Model	23		Retainer, Clip
			14	4450813	Bracket, Handle		4450863	Black Model
				4451040	Screw		4450864	White Model
			15		Assy, Door Glass		3400832	Screw
				4452065	Black Model	24	4455257	Glass, Inner
				4452066	White Model			

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# TOP VENTING PARTS

For Models: RS696PXGB7, RS696PXGQ7  
(Black) (Designer White)

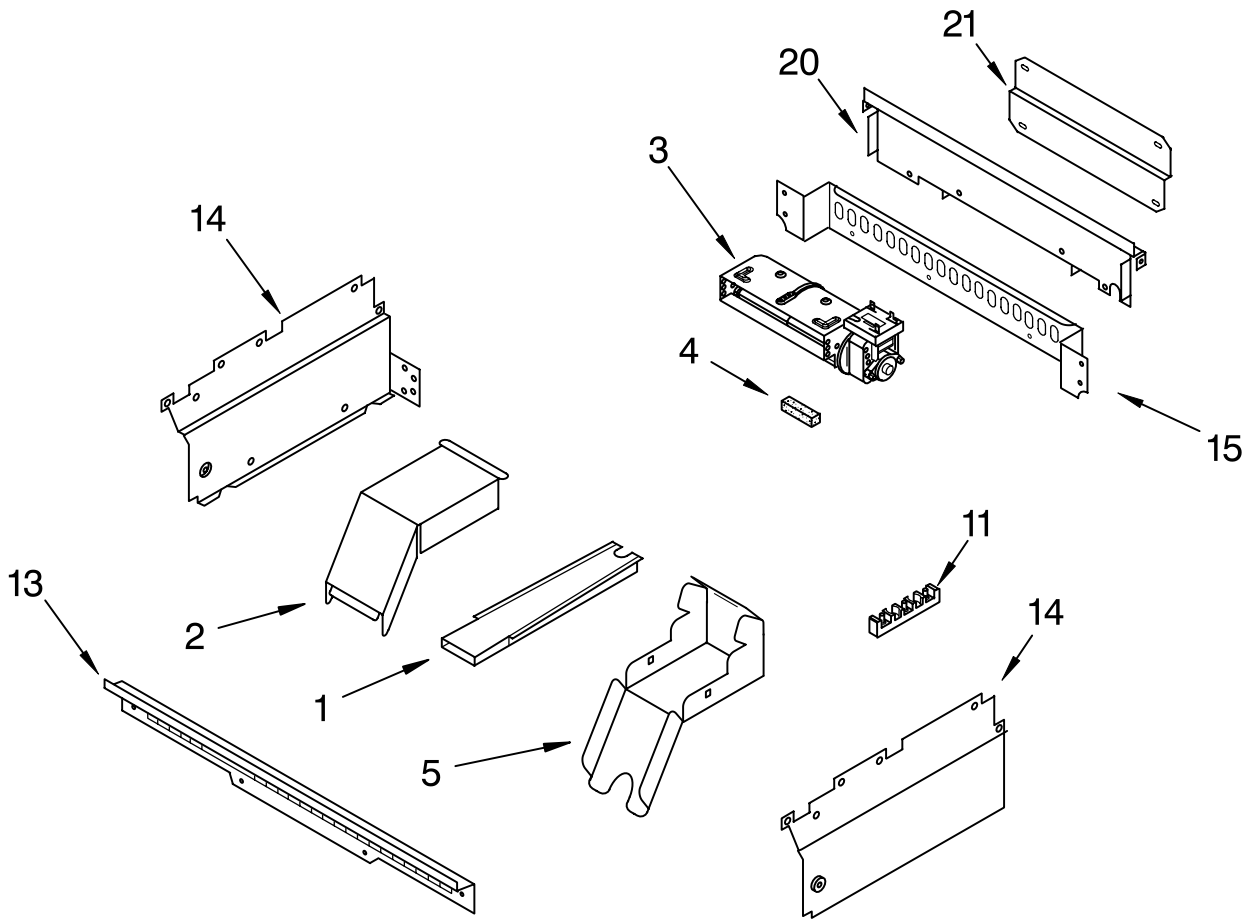

Illus. No.	Part No.	DESCRIPTION
NOTE: The screws and nuts required to attach a part are listed immediately following that part.		
1	4451759	Vent, Exhaust
	4449040	Screw
2	4455178	Elbow, Vent-Top
3	4455334	Blower
	4455352	Bracket, Blower


Illus. No.	Part No.	DESCRIPTION
4	4451758	Block, Foam
5	4455177	Elbow, Vent-Bottom
11	4449868	Block, Terminal
	3400080	Screw
13	4448549	Vent, (Control Panel)
	4450038	Screw

Illus. No.	Part No.	DESCRIPTION
14		Side, Control Compt.
	4451535	Right
	4451536	Left
	4449809	Screw
15	4452244	Back, Control
	4449809	Screw
20	3191842	Cover, Rear
21	4451407	Plate, Support
	4452260	Spacer, Foam

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# INTERNAL OVEN PARTS

For Models: RS696PXGB7, RS696PXGQ7  
(Black) (Designer White)

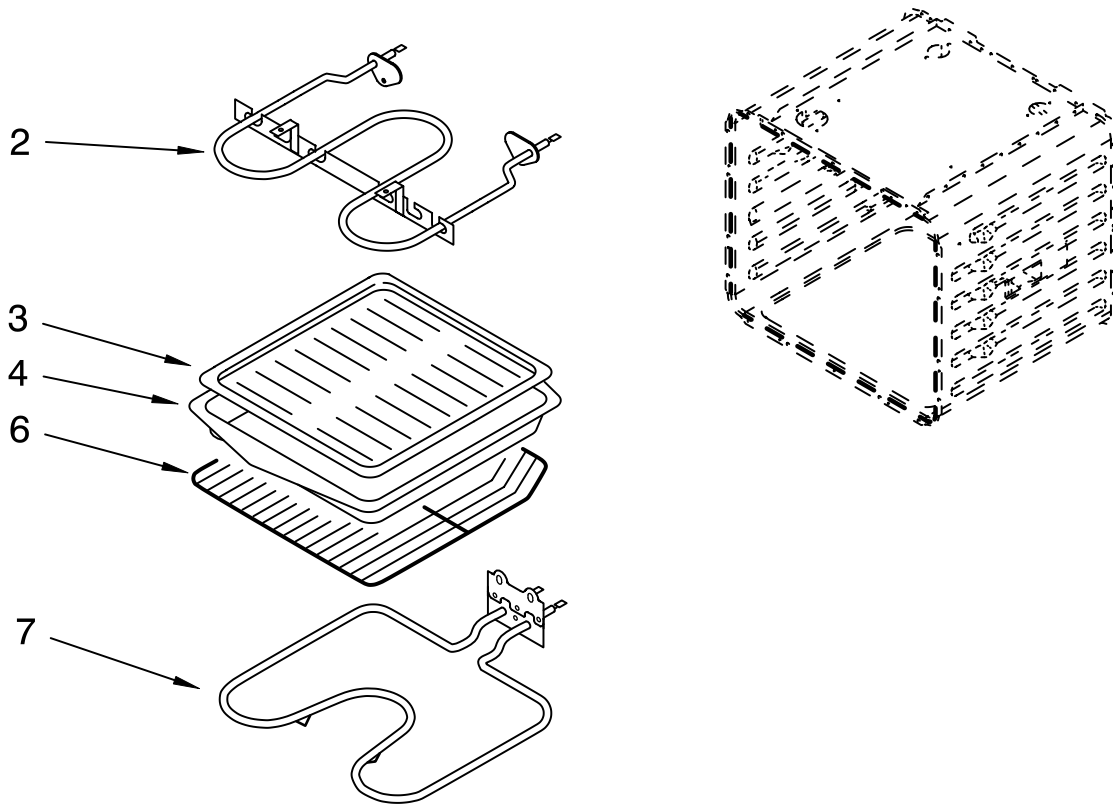

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

2	4452154	Element, Broil
	4449154	Screw
3	3147563	Grill, Broiler
4	3147845	Pan, Broiler
6	4448717	Rack, Oven
7	4452153	Element, Bake
	4449154	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST



# OPTIONAL PARTS

For Models:RS696PXGB7, RS696PXGQ7  
(Black) (Designer White)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

**PAINT, TOUCH-UP (1/2oz.)**

72017 White  
261869 Cord Brown  
72032 Black

**PAINT, SPRAY**

350930 White  
261900 Citrine White  
830864 Black

**ADHESIVE**

591014 Adhesive  
Loctite (1/3 oz.)  
482338 Sealer, Silastic  
(3 oz.)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

**SPLICING WIRES--25FT.**

**LENGTH**

242828 Wire (12 Ga.  
150 c Black)  
242820 Wire (14 Ga.  
150 c Black)  
242821 Wire (14 Ga.  
150 c Blue)  
242822 Wire (14 Ga.  
150 c Brown)  
242830 Wire (14 Ga.  
200 c Brown)  
242823 Wire (14 Ga.  
150 c Green)  
242824 Wire (14 Ga.  
150 c Orange)  
242829 Wire (12 Ga.  
150 c Red)  
242825 Wire (14 Ga.  
150 c Red)  
242831 Wire (14 Ga.  
200 c Red)  
242826 Wire (14 Ga.  
150 c White)  
242827 Wire (14 Ga.  
150 c Yellow)  
242832 Wire (14 Ga.  
200 c Yellow)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

**WIRING HARNESS PARTS**

4455733 Harness, Wire  
(Main)  
3191956 Harness, Wire  
(Infinite Switch)  
4455280 Harness, Wire  
(Burners)  
4451163 Conduit  
4448664 Clamp  
4449809 Screw  
112432 Nut  
4450800 Screw, Ground  
4451761 Support, Wiring  
4454842 Tie, Cable  
4452222 Spacer, Harness

**Miscellaneous**

814381 Pin Hinge Kit  
4448950 Screw, Install (4)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>