


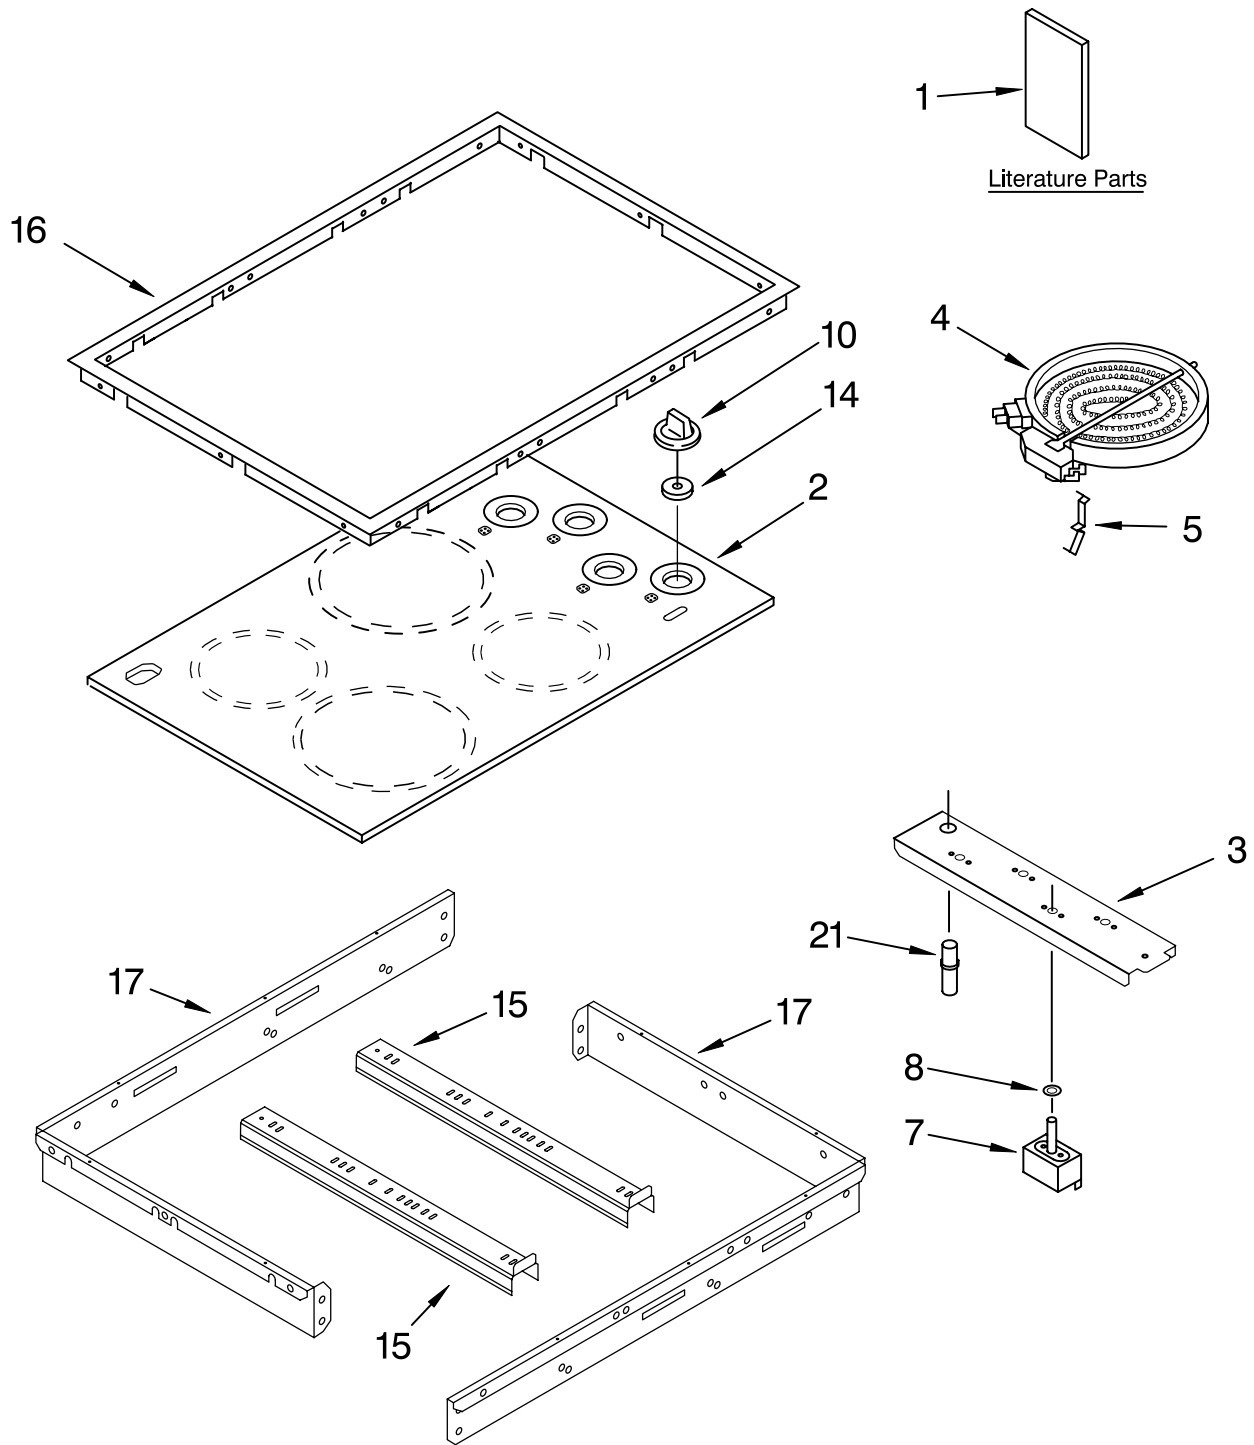

COOKTOP PARTS

For Models: RS696PXGB8, RS696PXGQ8
(Black) (Designer White)

30" ELECTRIC
DROP-IN RANGE
SELF-CLEANING
OVEN



Literature Parts

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

COOKTOP PARTS


For Models:RS696PXGB8, RS696PXGQ8
(Black) (Designer White)

Illus. No.	Part No.	DESCRIPTION
		NOTE: The screws and nuts required to attach a part are listed immediately following that part.
1		Literature Parts
	LIT8300770	Installation Instructions
	LIT8300666	Use & Care Guide
	LIT3192844	Tech Sheet
	LIT3191638	Safe Cooking Tips
2		Cooktop, Glass
	3191843	Black
	3191189	White
3	3191310	Bracket, Switch Mounting
4		Element, Surface
	8272567	1200W RF-LR
	8272566	1800W RR
	8272565	2500W LF
5	3191791	Spring, Locator
	246119	Screw (8)
7		Switch, Infinite
	3191049	1200W RR-LR (Silver Shaft)
	3191050	1800W RR (Yellow Shaft)
	4454541	2500W LF (Red Shaft)
	311865	Screw
8	3183956	Seal, Switch Cover
10		Knob, Control (4)
	3196231	Black
	3196232	White
14	3182435	Seal, Switch (4)
15	3191515	Bracket, Support Element
16		Trim Ring, Cooktop
	3193228	Black
	3193227	White
	3196537	Screw
17	3192452	Frame, Cooktop
21	3191952	Lamp, Indicator
	3191953	Bumper, Rubber
	9750835	Bumper, Door

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN PARTS

For Models: RS696PXGB8, RS696PXGQ8
(Black) (Designer White)

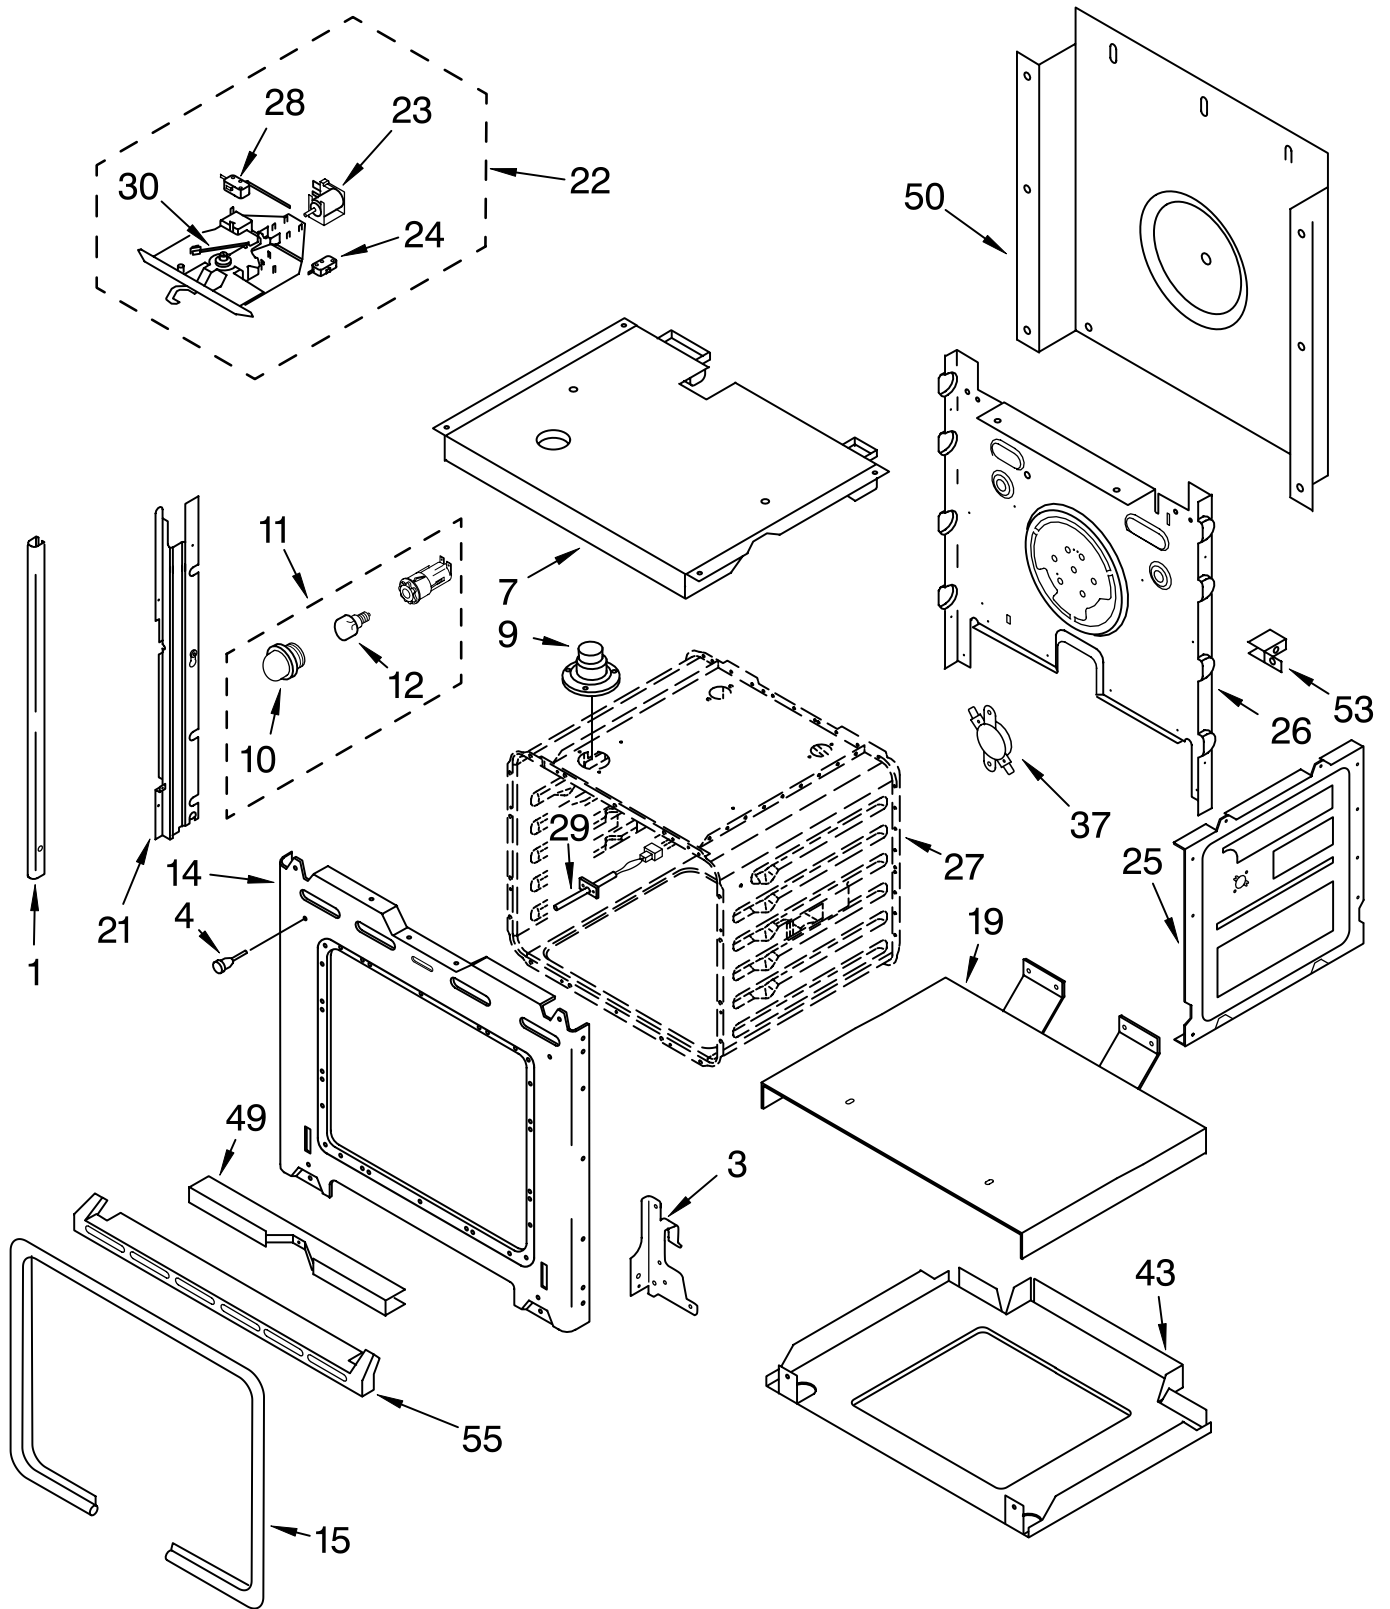

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN PARTS


For Models:RS696PXGB8, RS696PXGQ8
(Black) (Designer White)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
NOTE: The screws and nuts required to attach a part are listed immediately following that part.			11	4452368	Oven Light Assy	29	4455636	Sensor
			12	4452166	Bulb, Light		4449154	Screw
			14	4455612	Frame, Front	30	4451537	Spring, Latch
				4449040	Screw	37	4451442	Thermostat (TOD) (Temp.) SPST
1		Trim, Side (Right Hand)		4450118	Nut	43	4455530	Base, Chassis
	4450844	Black Model	15	4455382	Gasket, Door	49	4448933	Retainer, Gasket
	4449747	Screw	19	4451478	Support, Insulation		4449154	Screw
	4450845	White Model (Left Hand)	21		Rail, Side	50	4451747	Cover, Back
	4450847	Black Model		4450579	Right Side		4449809	Screw
	8281236	Screw		4450580	Left Side	53	4449845	Support, Bracket
	4450848	White Model		4448444	Grommet		4449809	Screw
		Screw	22	4451896	Latch Assy	55		Trim, Bottom
	4449747	Black	23	4452224	Solenoid		4448477	Black Model
	4449041	Bright	24	4452312	Micro Switch N.C.		4448478	White Model
3		Hinge Receiver		4449809	Screw	FOLLOWING PARTS NOT ILLUSTRATED		
	4455605	Left Hand	25	4455641	Side, Chassis (R.H. & L.H.)	INSULATION		
	4455606	Right Hand		4449809	Screw		4449316	Insulation, Wrap
4	4448520	Bumper, Door	26	4452234	Back, Chassis		4450365	Insulation, Back
7	4455286	Top Chassis		4449809	Screw			
	4449809	Screw	27		Liner, Oven (Not serviceable)			
9	4452158	Tube, Vent	28	4451426	Micro Switch			
	3196176	Screw						
10	4452165	Lens, Light						

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Models:RS696PXGB8, RS696PXGQ8
(Black) (Designer White)

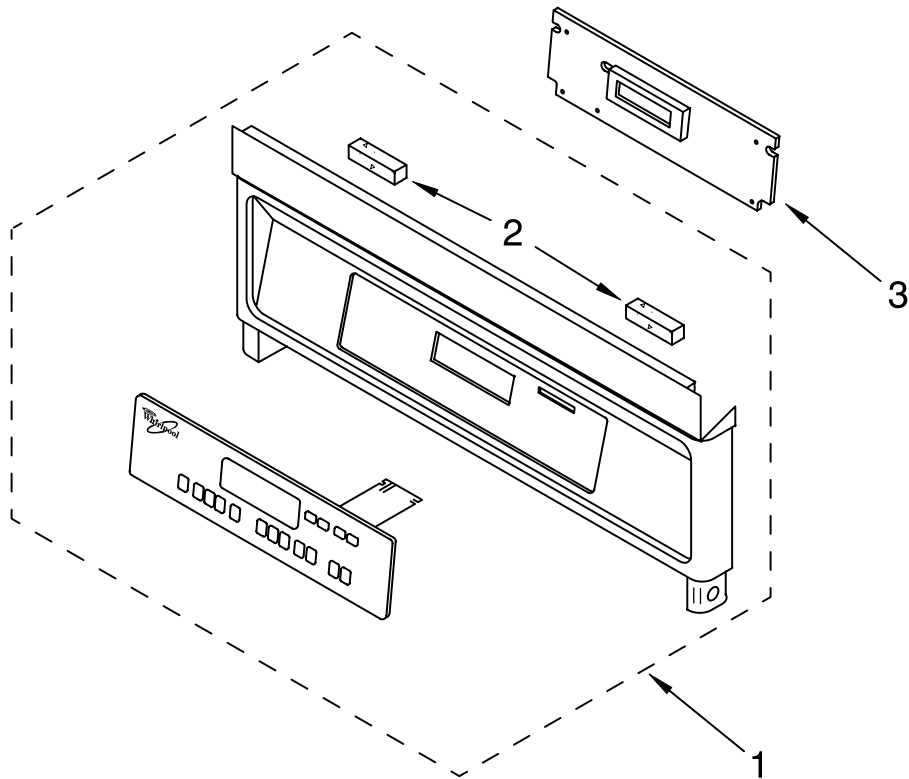

Illus. No.	Part No.	DESCRIPTION
-------------------	-----------------	--------------------


NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1		Control Panel Assy. W/Membrane Switch
	4452844	Black Model
	4452845	White Model
	4449745	Screw
	3400832	Screw
2	4451034	Gasket, Control Panel
3	4452892	Microcomputer
	4449745	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN DOOR PARTS

For Models:RS696PXGB8, RS696PXGQ8
(Black) (Designer White)

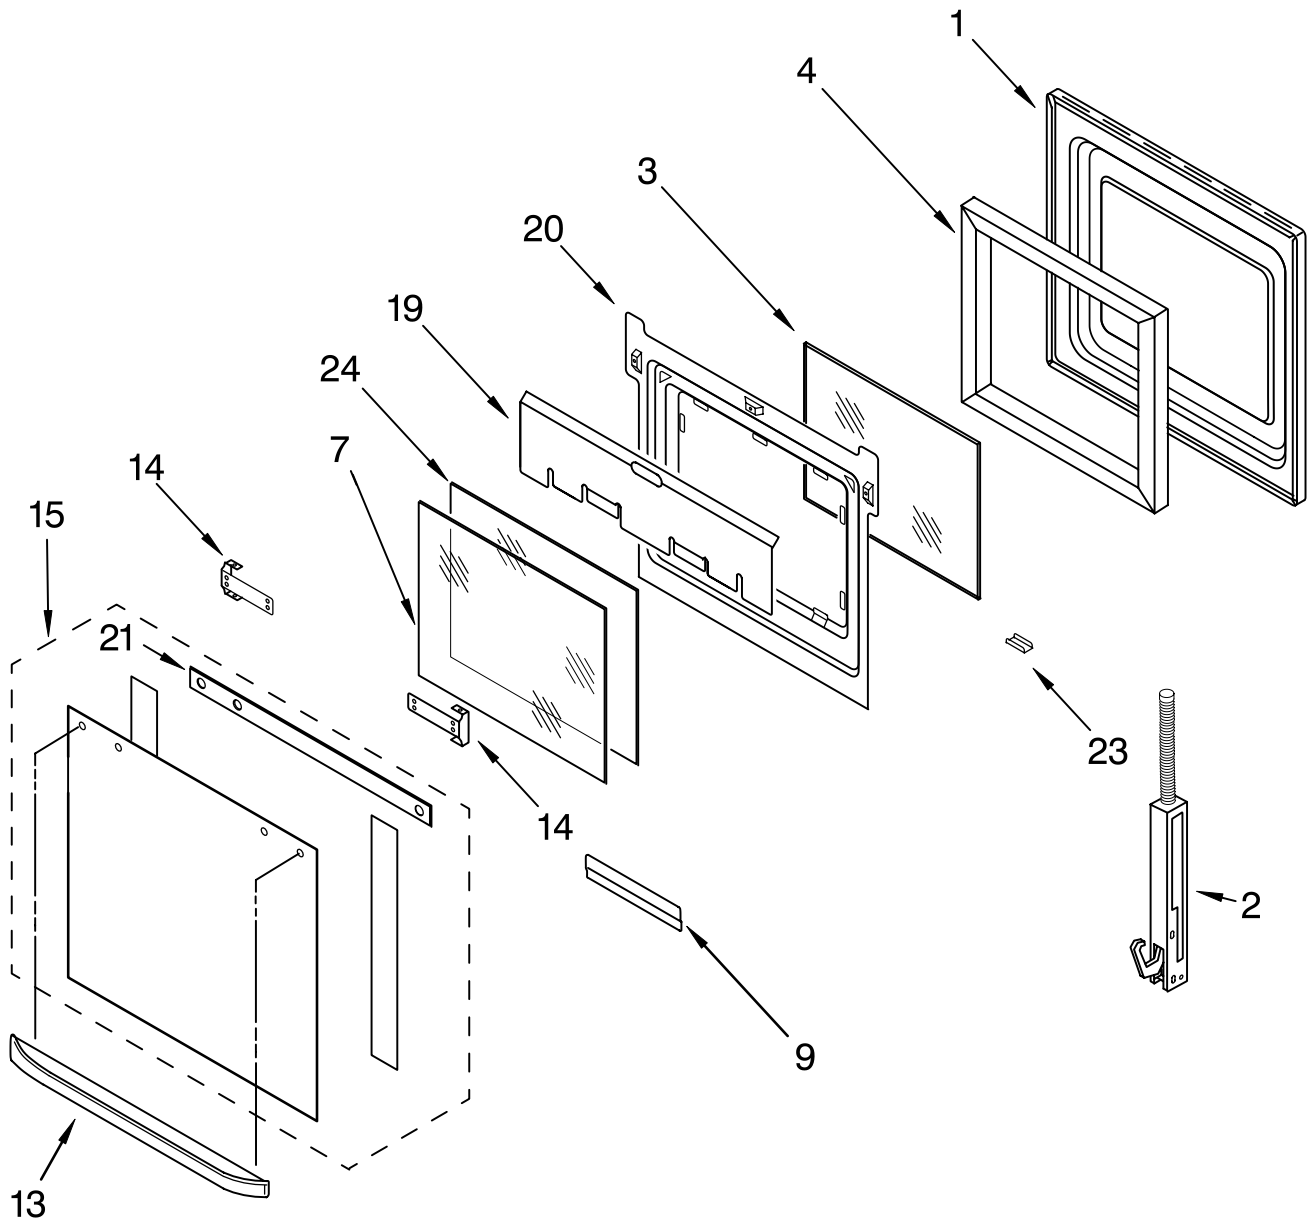

Illus. Part No. DESCRIPTION

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1 4455618 Door Liner
2 8300571 Hinge, Door
8300572 R.Side
8300572 L.Side
4449743 Screw
3 4449259 Glass, Inner

Illus. Part No. DESCRIPTION

4 4451722 Insulation, Door
7 4449263 Glass, Inner
9 4451668 Retainer, Glass
4449809 Screw
13 4448854 Door Handle
4448855 Black Model
4448855 White Model
14 4450813 Bracket, Handle
4451040 Screw
15 4452065 Assy, Door Glass
4452066 Black Model
4452066 White Model


Illus. Part No. DESCRIPTION

19 4450362 Shield, Heat
4449809 Screw
20 8300778 Retainer, Glass
4449809 Screw
21 8300820 Seal, Door Top
23 4450863 Retainer, Clip
4450863 Black Model
4450864 White Model
3400832 Screw
24 4455257 Glass, Inner

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

TOP VENTING PARTS

For Models:RS696PXGB8, RS696PXGQ8
(Black) (Designer White)

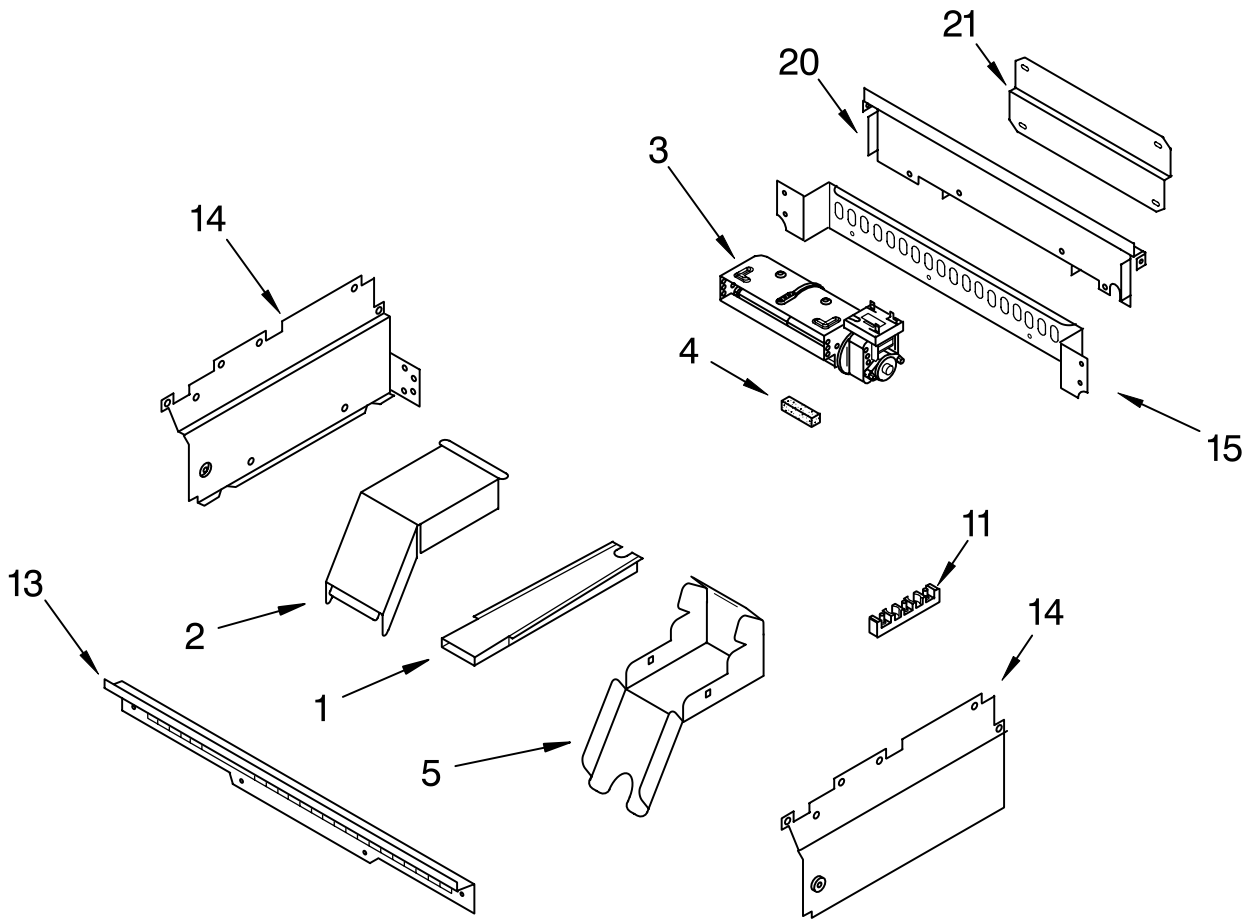

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	4451759	Vent, Exhaust
	4449040	Screw
2	4455178	Elbow, Vent-Top
3	4455334	Blower
	4455352	Bracket, Blower

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

4	4451758	Block, Foam
5	4455177	Elbow, Vent-Bottom
11	4449868	Block, Terminal
	3400080	Screw
13	4448549	Vent, (Control Panel)
	4450038	Screw

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------


14		Side, Control Compt.
	4451535	Right
	4451536	Left
	4449809	Screw
15	4452244	Back, Control
	4449809	Screw
20	3191842	Cover, Rear
21	4451407	Plate, Support
	4452260	Spacer, Foam

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

INTERNAL OVEN PARTS

For Models:RS696PXGB8, RS696PXGQ8

(Black) (Designer White)

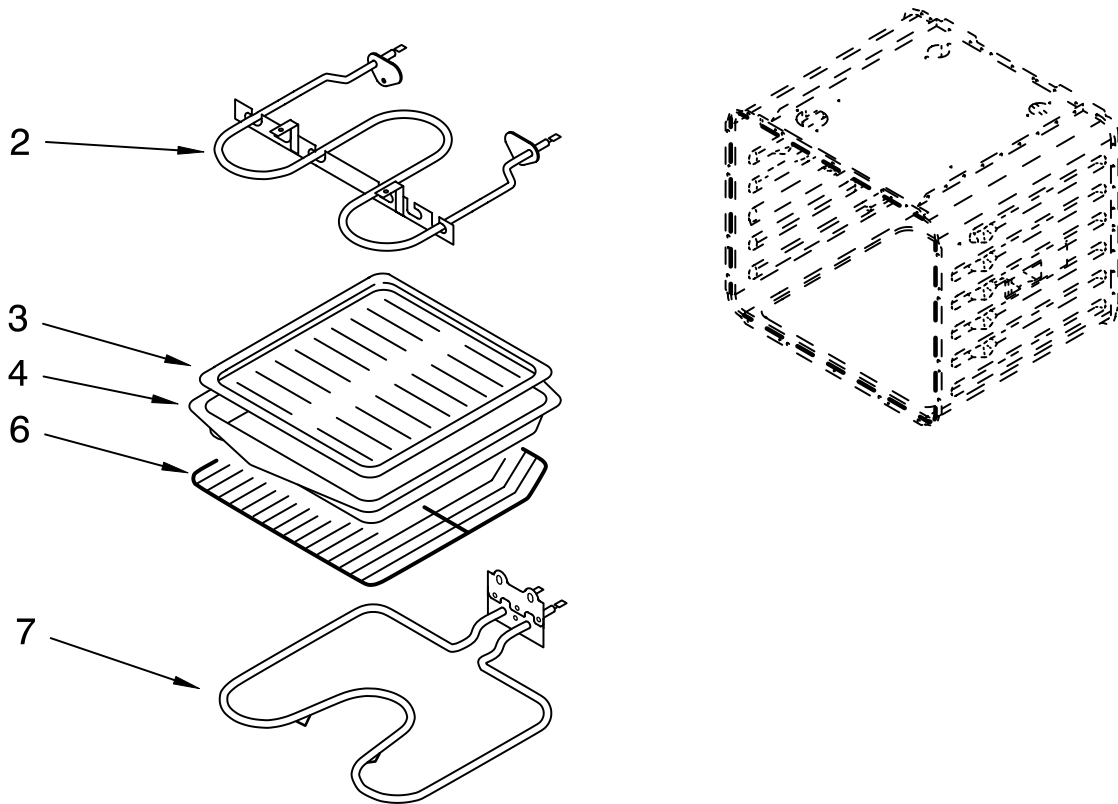

Illus. No.	Part No.	DESCRIPTION
2	4452154	Element, Broil
	4449154	Screw
3	3147563	Grill, Broiler
4	3147845	Pan, Broiler
6	4448717	Rack, Oven
7	4452153	Element, Bake
	4449154	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OPTIONAL PARTS

For Models:RS696PXGB8, RS696PXGQ8
(Black) (Designer White)

Illus. No.	Part No.	DESCRIPTION
<u>PAINT, TOUCH-UP (1/2oz.)</u>		
	72017	White
	261869	Cord Brown
	72032	Black
<u>PAINT, SPRAY</u>		
	350930	White
	261900	Citrine White
	830864	Black
<u>ADHESIVE</u>		
	591014	Adhesive Loctite (1/3 oz.)
	482338	Sealer, Silastic (3 oz.)

Illus. No.	Part No.	DESCRIPTION
<u>SPLICING WIRES--25FT.</u>		
<u>LENGTH</u>		
	242828	Wire (12 Ga. 150 c Black)
	242820	Wire (14 Ga. 150 c Black)
	242821	Wire (14 Ga. 150 c Blue)
	242822	Wire (14 Ga. 150 c Brown)
	242830	Wire (14 Ga. 200 c Brown)
	242823	Wire (14 Ga. 150 c Green)
	242824	Wire (14 Ga. 150 c Orange)
	242829	Wire (12 Ga. 150 c Red)
	242825	Wire (14 Ga. 150 c Red)
	242831	Wire (14 Ga. 200 c Red)
	242826	Wire (14 Ga. 150 c White)
	242827	Wire (14 Ga. 150 c Yellow)
	242832	Wire (14 Ga. 200 c Yellow)

Illus. No.	Part No.	DESCRIPTION
<u>WIRING HARNESS PARTS</u>		
	4455733	Harness, Wire (Main)
	3191956	Harness, Wire (Infinite Switch)
	4455280	Harness, Wire (Burners)
	4451163	Conduit
	4448664	Clamp
	4449809	Screw
	112432	Nut
	4450800	Screw, Ground
	4451761	Support, Wiring
	4454842	Tie, Cable
	4452222	Spacer, Harness
<u>Miscellaneous</u>		
	814381	Pin Hinge Kit
	4448950	Screw, Install (4)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>