


# use & care guide

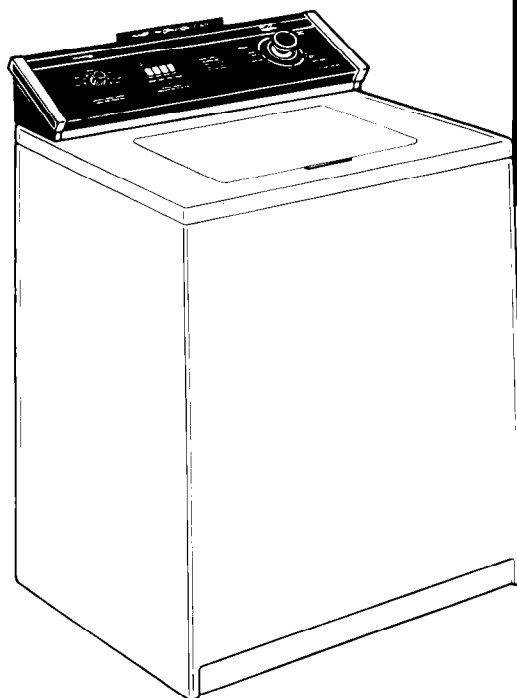

The Whirlpool logo, consisting of a stylized swirl above the word "Whirlpool" in a serif font, all enclosed within a black square.

## **AUTOMATIC WASHER**

**Super Capacity  
Model  
3LA5800XS**

ishers, Clothes Dryers, Freezers, Refrigerator-Freezers, Ice Makers, Dishwashers, Built-In Ovens and Surface Units, Ranges, Microwave Ovens, Trash Compact




Download from [www.manualslib.com](#) Some of the manuals are available for free. All Manuals Search and Download.

# Contents

	Page		Page
<b>PARTS AND FEATURES</b> .....	2	For a Drain and Spin .....	12
<b>IMPORTANT SAFETY</b>		For a Soak .....	12
<b>INSTRUCTIONS</b> .....	3	Liquid Bleach Dispenser .....	13
<b>OPERATING INSTRUCTIONS</b> .....	4	MAGIC CLEAN® Lint Filter .....	13
Starting Your Washer .....	4	<b>CARING FOR YOUR WASHER</b> .....	14
What Happens in Each Cycle ..	6	Winterizing .....	15
<b>OTHER OPERATING</b>		<b>IF YOU NEED SERVICE OR</b>	
<b>INSTRUCTIONS</b> .....	12	<b>ASSISTANCE</b> .....	16
For a Rinse and Spin .....	12		

©1990 Whirlpool Corporation

## Parts and features

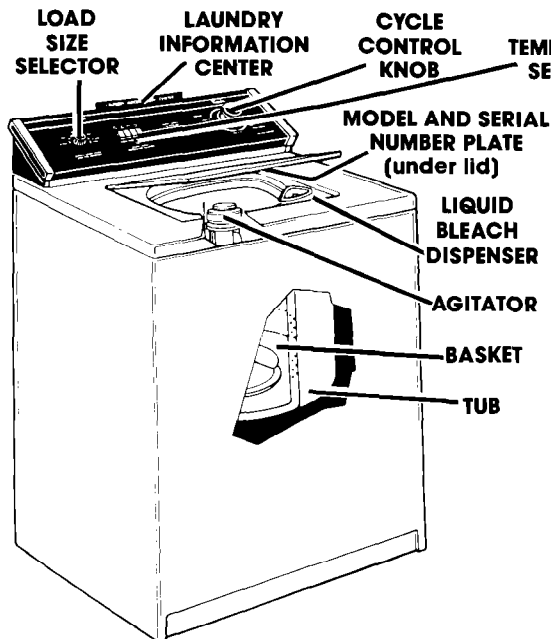

If your washer has a Consumer Buy Guide label, remove it. It will be easier to remove before the washer is used. To remove any remaining glue:

- Rub briskly with thumb to make a ball, then remove.
- or
- Soak area with liquid hand dishwashing detergent before removing glue as described above.

Do not use sharp instruments, rubbing alcohol, flammable fluids or abrasive cleaners. These can damage the finish. See "Important Safety Instructions" on page 3.

**Thank you for buying a Whirlpool appliance. Please complete and mail the Owner Registration Card provided with this product.** Then complete the form below. Have this information ready if you need service or call with a question.

- Copy Model and Serial Numbers from plate (under lid near hinge) and the purchase date from the sales slip.
- Keep this book, your Laundry Guide and your sales slip in the Laundry Information Center.

\_\_\_\_\_ **Model Number**

\_\_\_\_\_ **Serial Number**

\_\_\_\_\_ **Purchase Date**

\_\_\_\_\_ **Service Company Phone Number**

# IMPORTANT SAFETY INSTRUCTIONS

## **⚠ WARNING**

To reduce the risk of fire, electrical shock, or injury to persons when using your washer, follow basic precautions, including the following:

- **Read all instructions before using the washer.**
- **NEVER** wash items cleaned, washed, soaked in or spotted with wax, paint, gasoline, or flammable fluids in the washer. The fumes can create a **FIRE HAZARD** or **EXPLOSION. ALWAYS** hand launder and air dry fabrics containing these materials.
- **NEVER** allow children to operate, play with, or crawl inside the washer. Close supervision of children is necessary when the washer is used near children.
- When discarding an old washer, **ALWAYS** remove the lid to prevent accidental entrapment.
- **NEVER** put your hands into the washer until all motion stops. If the lid is opened while the basket is spinning, the basket will automatically stop in a few seconds.
- **DO NOT** tamper with controls.
- **NEVER** use or store flammable fluids (dry-cleaning solvents, kerosene) in or near your washer. **DO NOT** add flammable fluids to the wash water. These substances give off vapors that can create a **FIRE HAZARD** or **EXPLOSION.**
- If hot water has not been used recently (usually 2 weeks or longer), hydrogen gases may build up in the water heater and the hot water pipes. **HYDROGEN GAS IS EXPLOSIVE.** To prevent injury or damage, before using your washer, turn on all hot water taps and allow water to run for several minutes. This will allow gases to escape. **DO NOT** smoke or use any open flame near the faucet while it is open.
- **You are responsible for making sure that your washer:**
  - is installed, repaired, and has parts replaced by a qualified person.
  - is properly installed and leveled on a floor that can support the weight.\*
  - is connected to the correct 3-prong outlet, electric supply, water supply and drain.\*
  - is properly grounded.\*
  - is properly maintained.\*
  - is protected from the weather and kept where the temperature will not fall below freezing.

\*See the Installation Instructions.

– SAVE THESE INSTRUCTIONS –

## **Additional safety instructions and your responsibilities**


- **ALWAYS** store detergent, laundry aids and other materials in a cool, dry place where children can't reach them – in a locked cabinet if possible.
- **ALWAYS** read and follow instructions on packages of detergent and laundry aids – especially warnings and precautions.
- **HAZARDOUS FUMES** can be formed if chlorine bleach is used in the same wash as ammonia or acids such as vinegar or rust remover.
- **ALWAYS** unplug the power supply cord before attempting to service the washer.
- **DO NOT** machine wash glass fiber materials. Small particles can stick to fabrics washed in following loads and cause skin irritation.
- **You are responsible for making sure that your washer:**
  - is used only for jobs normally expected of home automatic washers.
  - is not run by children or anyone unable to operate it properly.

# Operating instructions


## Starting Your Washer



Be sure to measure and add detergent, then place a sorted load in the washer before starting it.

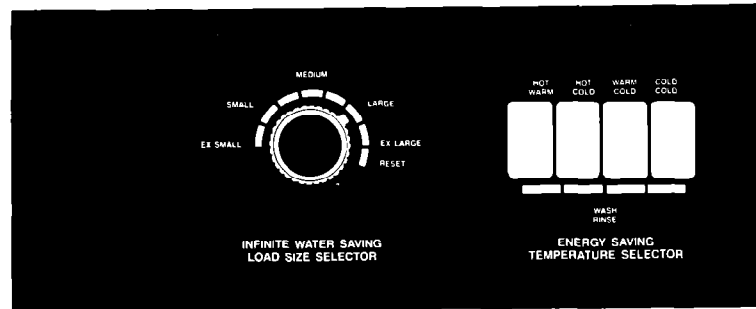

### 1. Select a LOAD SIZE

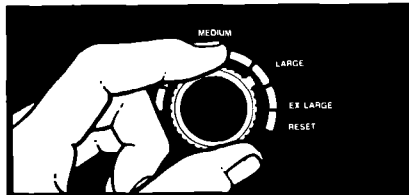

- Turn the knob to point at a setting that describes the size of load you want to wash.
- Set the knob anywhere on or between EX SMALL (a few small items) and EX LARGE (a full load).
- To change the water level after the washer has started to fill, turn the knob to RESET, then the desired water level.


**NOTE:** Use the EX LARGE water level for best permanent press results.

**NOTE:** For best washing results, items should move freely in the washer. Do not overload the washer or choose a water level that is too low for your wash load.

For best results with permanent press clothes, use the EX LARGE water level.

Reduce wash time when using EX SMALL or SMALL water level settings. Loads with only a few small items need less wash time for best results.


### 2. Select WATER TEMPERATURES

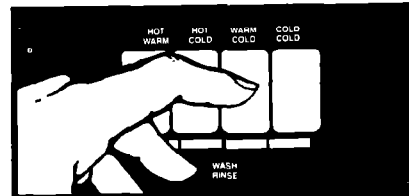


- Select wash and rinse water temperatures by pushing a button.
- This drawing shows a warm wash (top temperature) and cold rinse (bottom temperature) selection.

Recommended wash temperatures can be found in your Laundry Guide.


**NOTE:** Use warm water with the PERM'T PRESS or KNITS GENTLE cycles. For heavily soiled permanent press or knit clothes, pre-wash or pre-soak before washing in warm water.

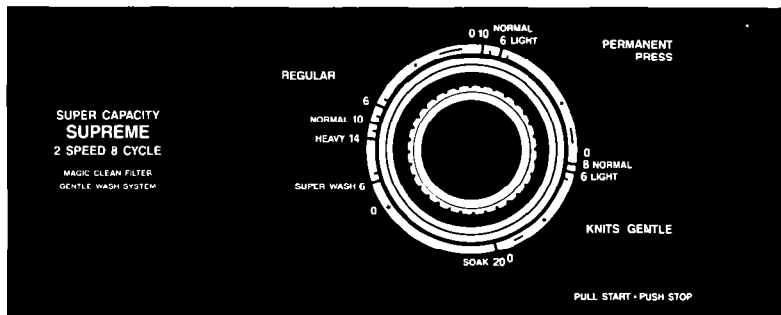


### 3. Select CYCLE and WASH TIME; Start the washer

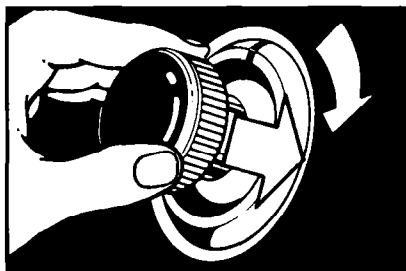


**A.** Push in the Control Knob and turn it clockwise.

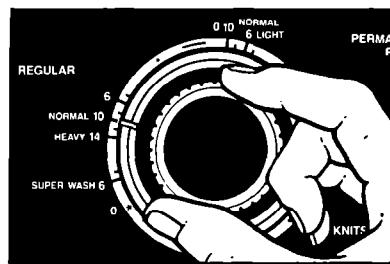

**B.** Stop when the indicator on the knob's outer ring points to the number in the wash cycle you want. The numbers are minutes of wash time.

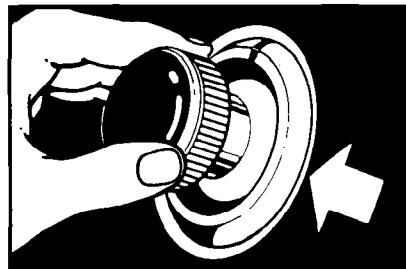

**C.** Start the washer by pulling out the Control Knob. The washer will fill to the selected water level with the selected wash water temperature. After filling, the washer will agitate for the selected number of minutes.

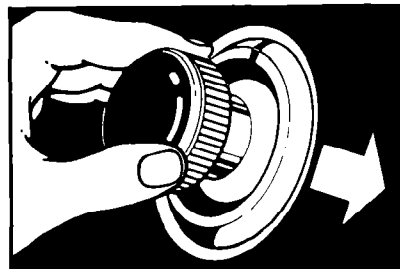



**D.** To stop the washer at any time, push in the Control Knob. To restart the washer, pull out the Cycle Control Knob.

## What Happens in Each Cycle

Each cycle has different agitation and spin speeds designed for different kinds of fabrics. Numbers on the dial in each cycle are the minutes of WASH agitation time.



When the Cycle Control Knob is set to a number and pulled out, the washer fills before agitation and timing starts. After agitation starts, the knob turns clockwise until it points to OFF and the cycle ends.

### REGULAR HEAVY Cycle

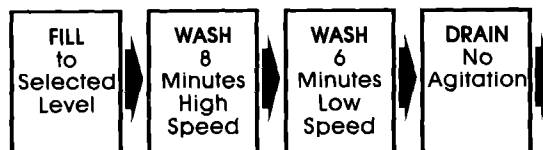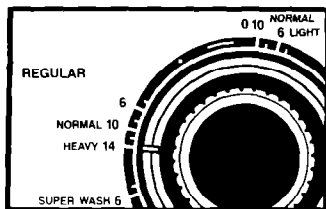



A cycle for sturdily constructed fabrics that are heavily soiled.

### REGULAR NORMAL Cycle

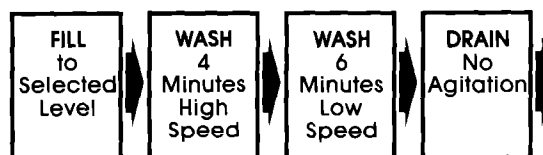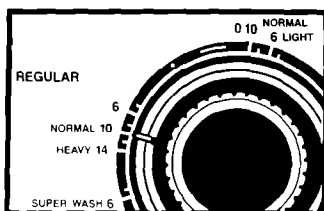

A cycle for regular loads of fabrics that are moderately soiled.

### PERMANENT PRESS NORMAL Cycle


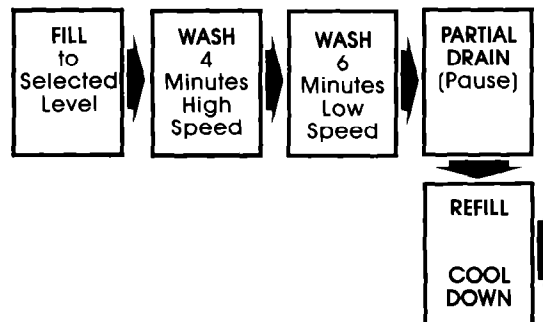
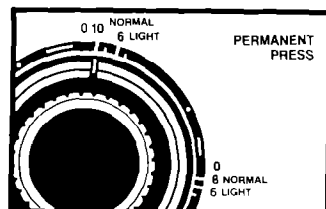


A cycle designed for moderately soiled permanent press and some synthetic fabrics. The **cool-down** rinse helps keep wrinkles from setting into these fabrics.

**NOTE:** You may hear the sound of water spraying during the spin parts of some cycles. In some cycles, water is sprayed on the spinning load to help with the rinsing.

## Gentle Wash System


For better fabric care in the REGULAR and PERMANENT PRESS cycles, the agitation speed is reduced during the last few minutes of wash time.

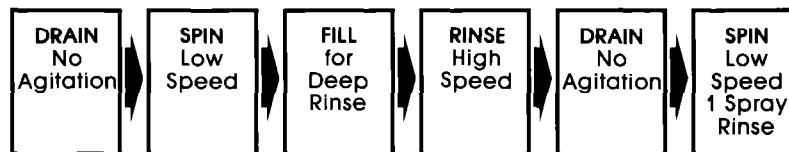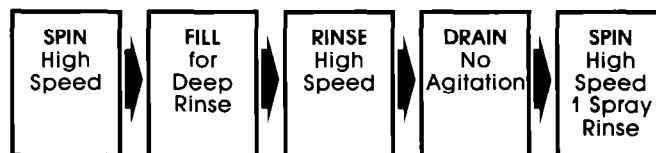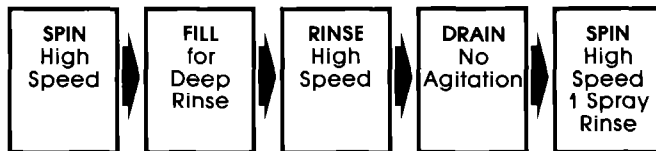


**NOTE:** Always use **cold rinse water** for permanent press fabrics.

**NOTE:** THE WASHER WILL PAUSE BRIEFLY THROUGHOUT EACH CYCLE. These pauses are normal. They allow for the reversing of the motor, normal washer operation, and the cool-down portion of the PERMANENT PRESS Cycle.


## PERMANENT PRESS LIGHT Cycle

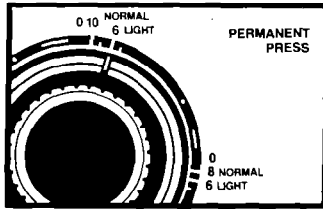


A cycle designed for lightly soiled permanent press and some synthetic fabrics. The **cool-down** rinse helps keep wrinkles from setting into these fabrics.

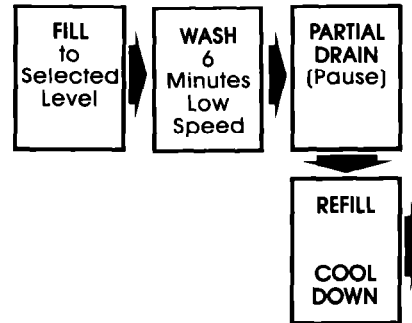


## KNITS GENTLE NORMAL Cycle

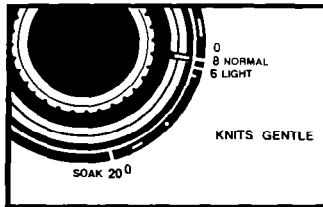


A cycle that gently washes and spins moderately soiled delicate items and washable knits.

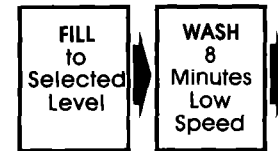

## KNITS GENTLE LIGHT Cycle



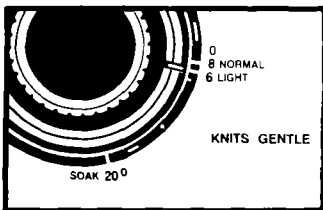


A cycle that gently washes and spins lightly soiled delicate items and washable knits.

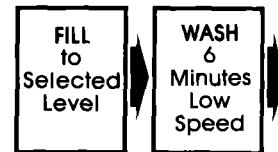


**NOTE:** THE WASHER WILL PAUSE BRIEFLY THROUGHOUT EACH CYCLE. These pauses are normal. They allow for the reversing of the motor, normal washer operation, and the cool-down portion of the PERMANENT PRESS Cycle.




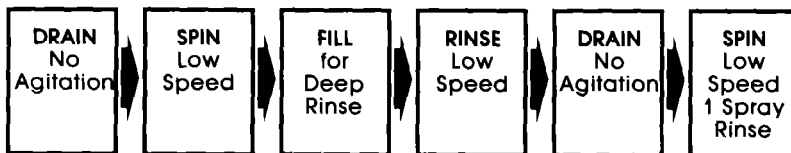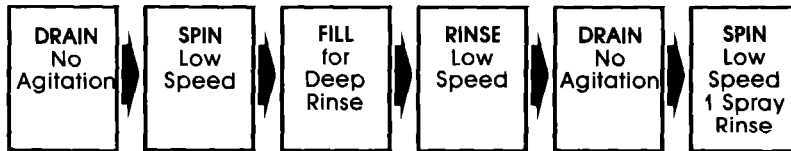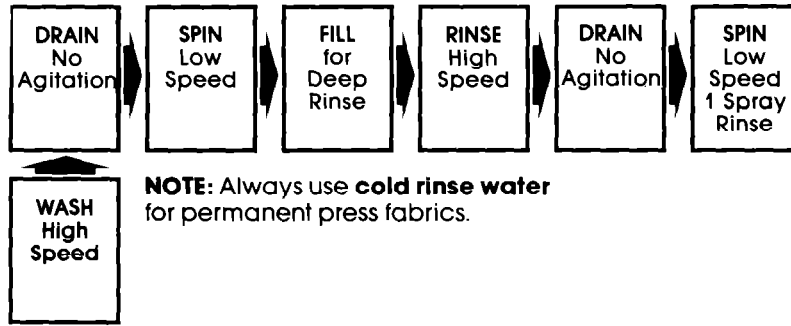


## SOAK Cycle

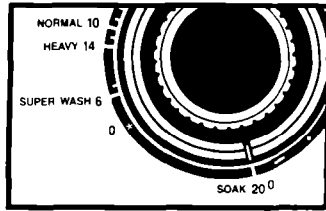


Brief periods of agitation and soak time help remove heavy soils and certain stains that need extra pretreatment. Use recommended amount of detergent or pre-soak additive. **The SOAK Cycle should always be followed by a Wash Cycle.**

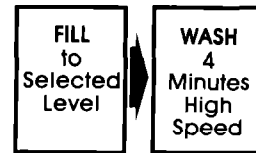


## SUPER WASH Cycle

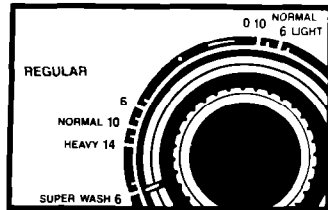


Use for washing heavily soiled loads that require maximum soil removal. **Double the amount of detergent recommended when using the SUPER WASH Cycle.**

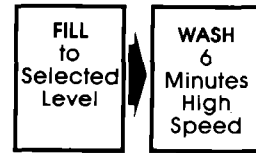


**NOTE:** THE WASHER WILL PAUSE BRIEFLY THROUGHOUT EACH CYCLE. These pauses are normal. They allow for the reversing of the motor, normal washer operation, and the cool-down portion of the PERMANENT PRESS Cycle.

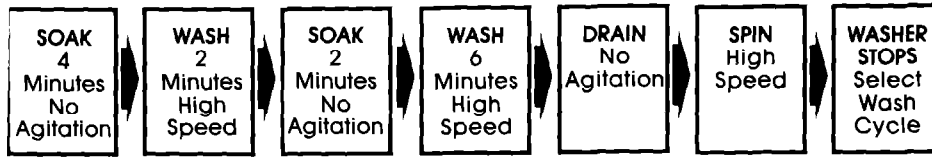

Special care is needed when soaking or pre-washing laundry.  
**See your Laundry Guide for proper use of this cycle.**

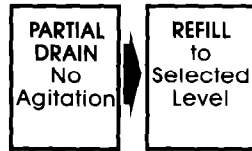


# Other operating instructions

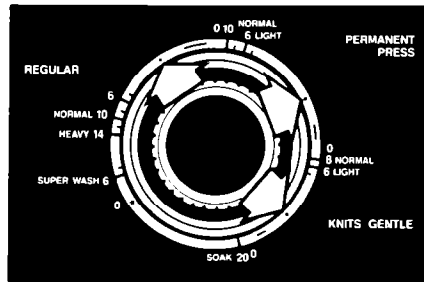

## For a rinse and spin

When using extra detergent for heavily soiled clothes, or washing special-care items, you may want an extra rinse and spin.

1. Push Control Knob in.
2. Turn clockwise to one of the dots on the dial, as illustrated.
3. Pull Control Knob out. The washer will fill to selected level, agitate 2 minutes, drain and spin.

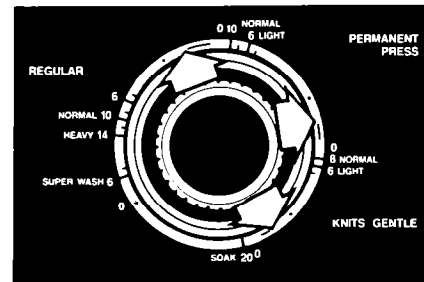


## For a drain and spin

A drain and spin may help shorten drying times for some heavy fabrics or special-care items by removing excess water.

1. Push Control Knob in.
2. Turn clockwise to any bar just before an OFF area on the dial, as illustrated.
3. Pull Control Knob out. The washer will drain and spin.

For agitation and spin speeds in each cycle, see pages 6-11.

## For a soak

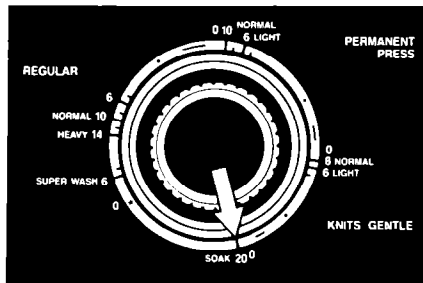

For best results, use **warm** water for soaking stained laundry. **Hot water can set stains.**



1. Use recommended amount of pre-soak product or detergent.
2. Push Control Knob in.
3. Turn clockwise until indicator points to the number next to SOAK.
4. Pull Control Knob out. The washer will start.
5. When the cycle is over, add detergent for the next selected wash cycle. **The SOAK Cycle should always be followed by a wash cycle.**

**NOTE:** See the Laundry Guide for additional soaking information.

To start soak with agitation, the Control Knob must point to a number in the SOAK Cycle.

## Liquid bleach dispenser


Always measure bleach. Do not guess. Never use more than 1 cup (250 mL) for a full load. Use less with lower water level settings. Follow directions on bottle for safe use. Use a cup with a pouring spout to avoid spilling.

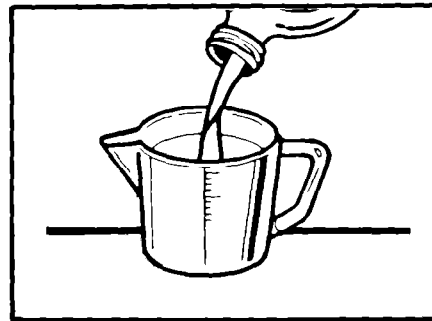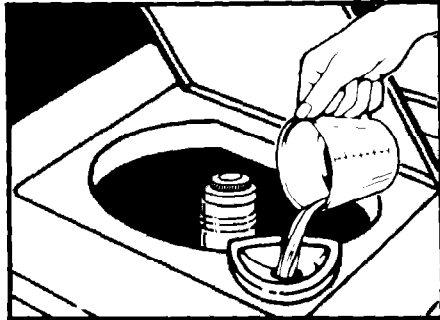

1. Load the washer first.
2. Pour **measured** bleach carefully into dispenser. **DO NOT** let bleach splash, drip or run down into the washer basket. **Undiluted bleach will damage any fabric it touches.**
3. Start the washer. Bleach will be diluted automatically during the wash part of the cycle.

For more information on bleaching, see your Laundry Guide.


## MAGIC CLEAN<sup>®</sup> lint filter

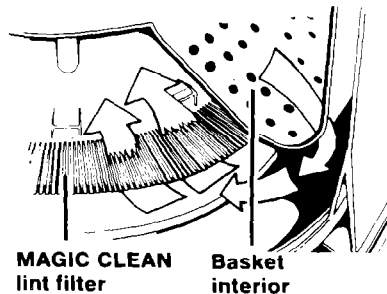

The lint filter at the bottom of the washer basket cleans itself. During agitation, wash and rinse water pass over the filter, separating lint from water. The collected particles of lint are then continuously spun away from the filter and washed out of the system at the end of the wash cycle.

If your washer drains into a tub, remove any lint collected in the tub or strainer.


# Caring for your washer

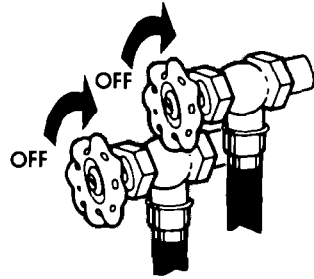


**WHEN NOT WASHING**, keep both water taps turned off. This takes the pressure off the water inlet valve and hoses.



**WIPE UP SPILLS** with a soft damp cloth as soon as they occur. This will help keep your washer looking like new.

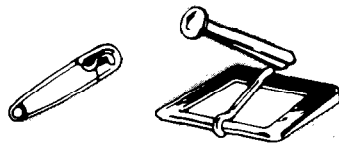

**REMOVE SHARP OBJECTS** such as pins, buckles, etc., from clothes before washing. Close metal zippers.



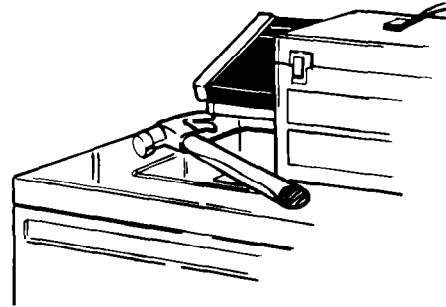


**SHARP OR HEAVY OBJECTS** should never be put on or in the washer. Check pocket for bolts, nuts, tools, etc.



Service or performance problems caused by the use of any product not manufactured by Whirlpool Corporation are the responsibility of the manufacturer of that product.

## Winterizing

Because some water stays in the washer, freezing can cause a lot of damage. If your washer is **stored or moved** during the cold weather...

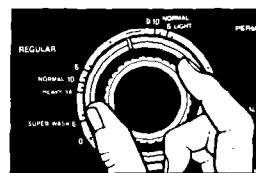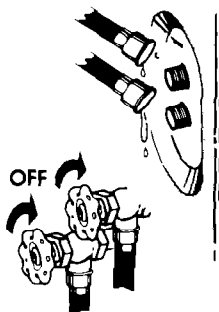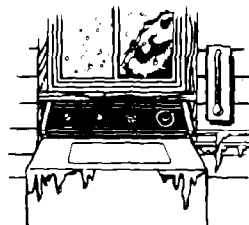

1. Shut off both water taps. Disconnect and drain water inlet hoses.
2. Put a quart of R.V. type antifreeze in the basket.
3. Set the washer for a DRAIN and SPIN (see page 12). Let it run for about 30 seconds to mix the antifreeze and water.

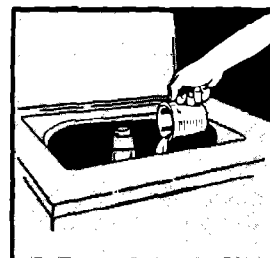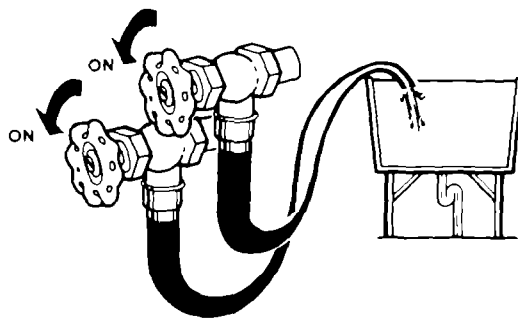

### To use the washer again...

1. Flush water pipes and hoses.
2. Connect hoses to the washer.
3. Turn on the water taps.

4. Run the washer through a complete cycle with one cup of detergent to clean out the antifreeze.

# If you need service or assistance, we suggest you follow these steps:

## 1. Before calling for assistance...

Performance problems often result from little things you can find and fix yourself without tools of any kind.

### If your washer does not fill:

- Is the power supply cord plugged into a live circuit with the proper voltage?
- Are both water taps open?
- Have you checked your home's main fuses or circuit breaker box?
- Are the water supply hoses kinked?
- Is the Cycle Control Knob set and pulled out?

### If your washer does not spin:

- Is the lid closed?
- Is the power supply cord plugged into a live circuit with the proper voltage?
- Have you checked your home's main fuses or circuit breaker box?

### If your washer stops during a cycle:

- Remember, the washer pauses briefly at different times in each cycle. These pauses are normal.

### If your washer fills and drains without running:

- Make sure that the Cycle Control Knob is pointing to a number in the cycle.

### Make sure the drain hose is higher than the water level in the washer. If it isn't:

- The washer may seem to be draining during wash and rinse cycles.
- Water can siphon out. (See Installation Instructions.)

## 2. If the problem is not due to one of the above items\*...

- Contact the dealer from whom you purchased the unit, or an authorized Whirlpool<sup>SM</sup> service company.

## 3. If you need FSP<sup>®</sup> replacement parts\*...

FSP is a registered trademark of Whirlpool Corporation for quality parts. Look for this symbol of quality whenever you need a replacement part for your Whirlpool appliance. FSP replacement parts will fit right and work right, because they are made to the same exacting specifications used to build every new Whirlpool appliance.

To locate FSP replacement parts in your area, contact the dealer from whom you purchased the unit, or an authorized Whirlpool service company.

\*When requesting assistance, please provide: model number, serial number, date of purchase, and a complete description of the problem. This information is needed in order to better respond to your request.

®Registered Trademark/SM Service Mark of Whirlpool Corporation

Part No. 3347988 Rev. A  
©1990 Whirlpool Corporation

Printed in U.S.A.



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>