










 






 




(1) Programme duration figures (guideline) are valid for maximum temperature wash with no special functions.

Programme	Type of fabrics / Degree of soiling / Notes	Max. Load kg	Detergent and Additives				Option Half Load	Temperature °C	Maximum Spin Speed rpm	Programme time approx. min (1)
			Pre-wash	Washing	Softener	Bleach				
 Cotton with Prewash	Heavily soiled sheets, tablecloths, underclothes, shirts etc. in hard wearing and high temperature resistant cotton. The maximum load for heavily soiled washing is 3.5 kg.	5.0	Yes	Yes	*	*	*	from  to 90	Max *	130
 Cotton	Moderately soiled sheets, tablecloths, underclothes, towels etc. in hard wearing and high temperature resistant cotton.	5.0	—	Yes	*	*	*	from  to 90	Max *	115
 Coloured	Averagely soiled blouses, shirts etc. made of polyester (Diolen, Trevira); polyamide (Perlon, Nylon), or cotton blends.	2.0	—	Yes	*	—	*	from  to 60	Max *	100
 Quick Wash	Blouses, shirts, cotton blouses, dark coloured terry towelling, jeans, etc. lightly soiled.	5.0	—	Yes	*	—	*	from  to 40	Max *	85
 Synthetics	Lightly soiled shirts, blouses etc., made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or cotton blends.	2.0	—	Yes	*	—	*	from  to 40	Max *	70
 Rinse + Spin	This programme allows starch or softener to be added. It is followed by an intensive spin cycle.	5.0	—	—	*	—	*		Max *	20
 Spin	Programme for intensive spin cycle.	5.0	—	—	—	—	—	—	Max *	10
 Delicate	Delicate fabrics and curtains (dresses, skirts, shirts, blouses, etc.).	1.5	—	Yes	*	—	—	from  to 40	Max *	55
 Wool	Machine washable woollens with pure new wool label.	1.0	—	Yes	*	—	—	from  to 40	Max *	45
 Rinse + Spin	This programme allows starch or softener to be added. It is followed by a gentle spin cycle.	1.5	—	—	*	—	—		Max *	15
 Spin	Programme for gentle spin cycle.	1.5	—	—	—	—	—	—	Max *	5
 Drain	Drain only, without spin cycle.	—	—	—	—	—	—	—	—	3

* Max: 400 for AWT 2040
500 for AWT 2050

N.B.: The excess of detergent in the dispenser could cause technical problems.

ENERGY AND WATER CONSUMPTION DATA

Programme	Temperature (°C)	Load (kg)	Water (l)	Energy (kWh)	Programme time (min)
Cotton	90	5.0	72	1.80	115
Cotton	60	5.0	72	1.15	115
Coloured	60	2.0	66	0.80	100
Coloured	40	2.0	66	0.40	100
Quick Wash + 1/2 Load	40	2.5	57	0.55	85
Synthetics + 1/2 Load	30	1.0	55	0.30	70
Delicate	40	1.5	70	0.65	55
Wool	40	1.0	70	0.55	45

Programmes with prewash last about 15 minutes more than programmes without prewash. Water and energy consumption values were measured in standard conditions in compliance with the Standard IEC 60 456. Individual consumption may vary in comparison with the values specified in the table, because of differences in supply water pressure and temperature, the load and the type of wash.

ADDING DETERGENT AND ADDITIVES

Pour the detergent and additives into the respective compartments as follows:

- Programme with pre and main wash
- Main wash programme without prewash
- Fabric softeners and starch
- Bleach
- Stain removers
- Anti-scale agents (water hardness 4)

**Important Note:**

- Do not fill beyond the “MAX” level mark.
- For programme with prewash: do not use liquid detergent.
- For programmes without prewash from cold to 40° C, it is recommended to use a liquid detergent to avoid whitish residues on the coloured laundry.

CLOSE THE DOOR AND SELECT THE PROGRAMME

1. Turn the **programme selector knob** clockwise to the desired programme.
2. Turn the **temperature knob** to the required temperature.

SELECT ANY DESIRED OPTION

“Half Load” button

- Reduces the water consumption in the “Cotton” and “Synthetics” programmes especially during the rinse.
- Especially suitable for lightly soiled or small loads (reduces the quantity of detergent).
- Not suitable for high temperature programmes.

“No Spin”

- It excludes the spin function from the programme.

PROGRAMME START

Open the water inlet tap and select the desired spin speed, turning the **spin speed and On/Off knob** to the desired position (the indicated spin speed or “No Spin”). The pilot lamp lights up.

DOOR LOCK

During the running programme, the door cannot be opened.

The door locks automatically in all programmes.

If the programme is stopped or if an electrical power failure occurs, the door unlocks automatically after about 1 minute.

PROGRAMME END

- The programme selector knob is at “STOP”.
1. Turn the spin speed knob to the Off position “SELECTING A NEW PROGRAMME, SPIN SPEED, OPTIONS AFTER PROGRAMME START

1. Turn the spin speed knob to the Off position “TO STOP, RESET A PROGRAMME BEFORE THE END

1. Turn the spin speed knob to the Off position “Download from Wwww.Somanuals.com. All Manuals Search And Download.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>