

SETUP INSTRUCTIONS

Setting Up Entertainment Anywhere™

Please Read

These instructions are intended to complement the instructions provided for each component in this kit. Please read each set of instructions provided.

X10's Entertainment Anywhere allows you to play DVDs, MP3s and CDs from your PC through on your home theater. The Boom 2000 software puts the control of up to three different multimedia functions together in one place - the UR51A MP3/DVD/CD remote. Boom 2000 lets you control playback on your TV up to 50 feet away from your PC.

Note: Even though your UR51A remote is labeled "MP3 Remote Control," it is the proper remote for this kit.

1 Setting Up the Audio Transmitter

The first part of setting up the DVD Anywhere is connecting the wireless video transmitter (model VT30A) to the DVD player on your computer. The output of your DVD's decoder card connects to the input on the video sender. Follow these steps:

1. Find your PC-DVD's decoder card. This should be on the back of your PC. If you aren't sure where the decoder card is, contact the maker of your PC (or DVD player if sold separately).

2. Plug the supplied RCA cables into the video output of the DVD decoder, then plug the other end into the Video In jack on the VT30A.



Note: If your DVD decoder card does not have an RCA video output, you will need to obtain the correct cable from the DVD maker or an electronics store.

3. Find the audio output on your PC's sound card. This normally connects to the speaker. Connect this output to the video sender left and right Audio In plugs using a 1/4-inch stereo jack to RCA audio cable (supplied with model VK35A kits). If you don't have this cable, you can purchase one at a home electronics store.

4. Connect the PT30A power supply to the DC 12V plug on the VT30A video transmitter.

The Video Sender Transmitter is now ready to send your DVD movies to your TV. Place the VT30A in a convenient location and raise the antenna for best reception.

2 Connect the Video Receiver to Your TV or VCR

These steps will guide you through connecting the VR30A video receiver to your TV or VCR. Here's how you do it:

1. Plug the yellow video plug on the supplied RCA cable (the one with yellow, red and white connectors on both ends) into the Video Out jack on the VR30A Video Sender receiver. Connect the other end into the yellow video input jack on your TV or VCR.

2. Connect the red and white plugs on the RCA cable to the respective Audio In connections on the video receiver. Plug the other ends of these into the audio inputs on your TV or VCR.

Note: If your TV or VCR doesn't have RCA video and audio inputs, you can connect the output of the receiver to the TV using the provided coaxial cable. This will supply both sound and picture to the TV.


3. Plug the PR30A power supply into any 120V AC outlet.

4. Plug the power output of the PR30A into the DC 12V plug on the VR30A. Make sure the Channel switch on the underside of the VR30A is set to the same letter as that on the VT30A video transmitter and turn the Video Sender receiver On. Simply select the correct input setting on your TV or VCR to watch your DVD movie.



3 Connect the Remote Receiver

Find a free serial port on your computer and plug the remote receiver (model MR26A) into it. You can also plug the MR26A into an X10 FireCracker. Tighten the plug onto the serial port.

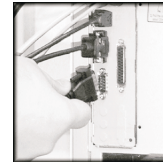

4 Install the X10 Boom 2000 Software

Download the Boom 2000 software from <http://www.x10.com/software>

Next, run the downloaded file, x10boom2.exe. This installs the Boom 2000 software.

5 Use the Boom 2000 Software

First, press the PC button on the remote. Then press the DVD, MP3 or CD button on the remote which opens the X10 player. You can now press PLAY, STOP, PAUSE, FF, and REW on the remote to select and play DVDs, MP3s and CDs that you normally access on screen. Use VOL +, VOL -, and MUTE to control the sound level.

WWW.X10.COM

MODEL NUMBER:
IN35A 0



99081 37026 3

©Copyright 2000 X10 Wireless Technology, Inc.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>