



ProFinishTM Jr.

Cold Laminating System

✕ XYRON[®] Technology

Makes items up to 9" wide.*

Use it anywhere!

No heat.

No electricity.

No batteries.

* Adhesive cartridge 9" wide, all others 8.5" wide.



Sticker Maker

Laminator

 
Label Maker

Magnet Maker

USER'S MANUAL

The ProFinish™ Jr. is perfect for laminating your classroom and office materials. In addition, you can use this handy machine to create magnets or apply adhesive backing to your materials. The ProFinish™ Jr. allows you all this quality and flexibility without the use of heat, electricity or batteries. It is so easy, you can get started on your projects right now!

Machine Features

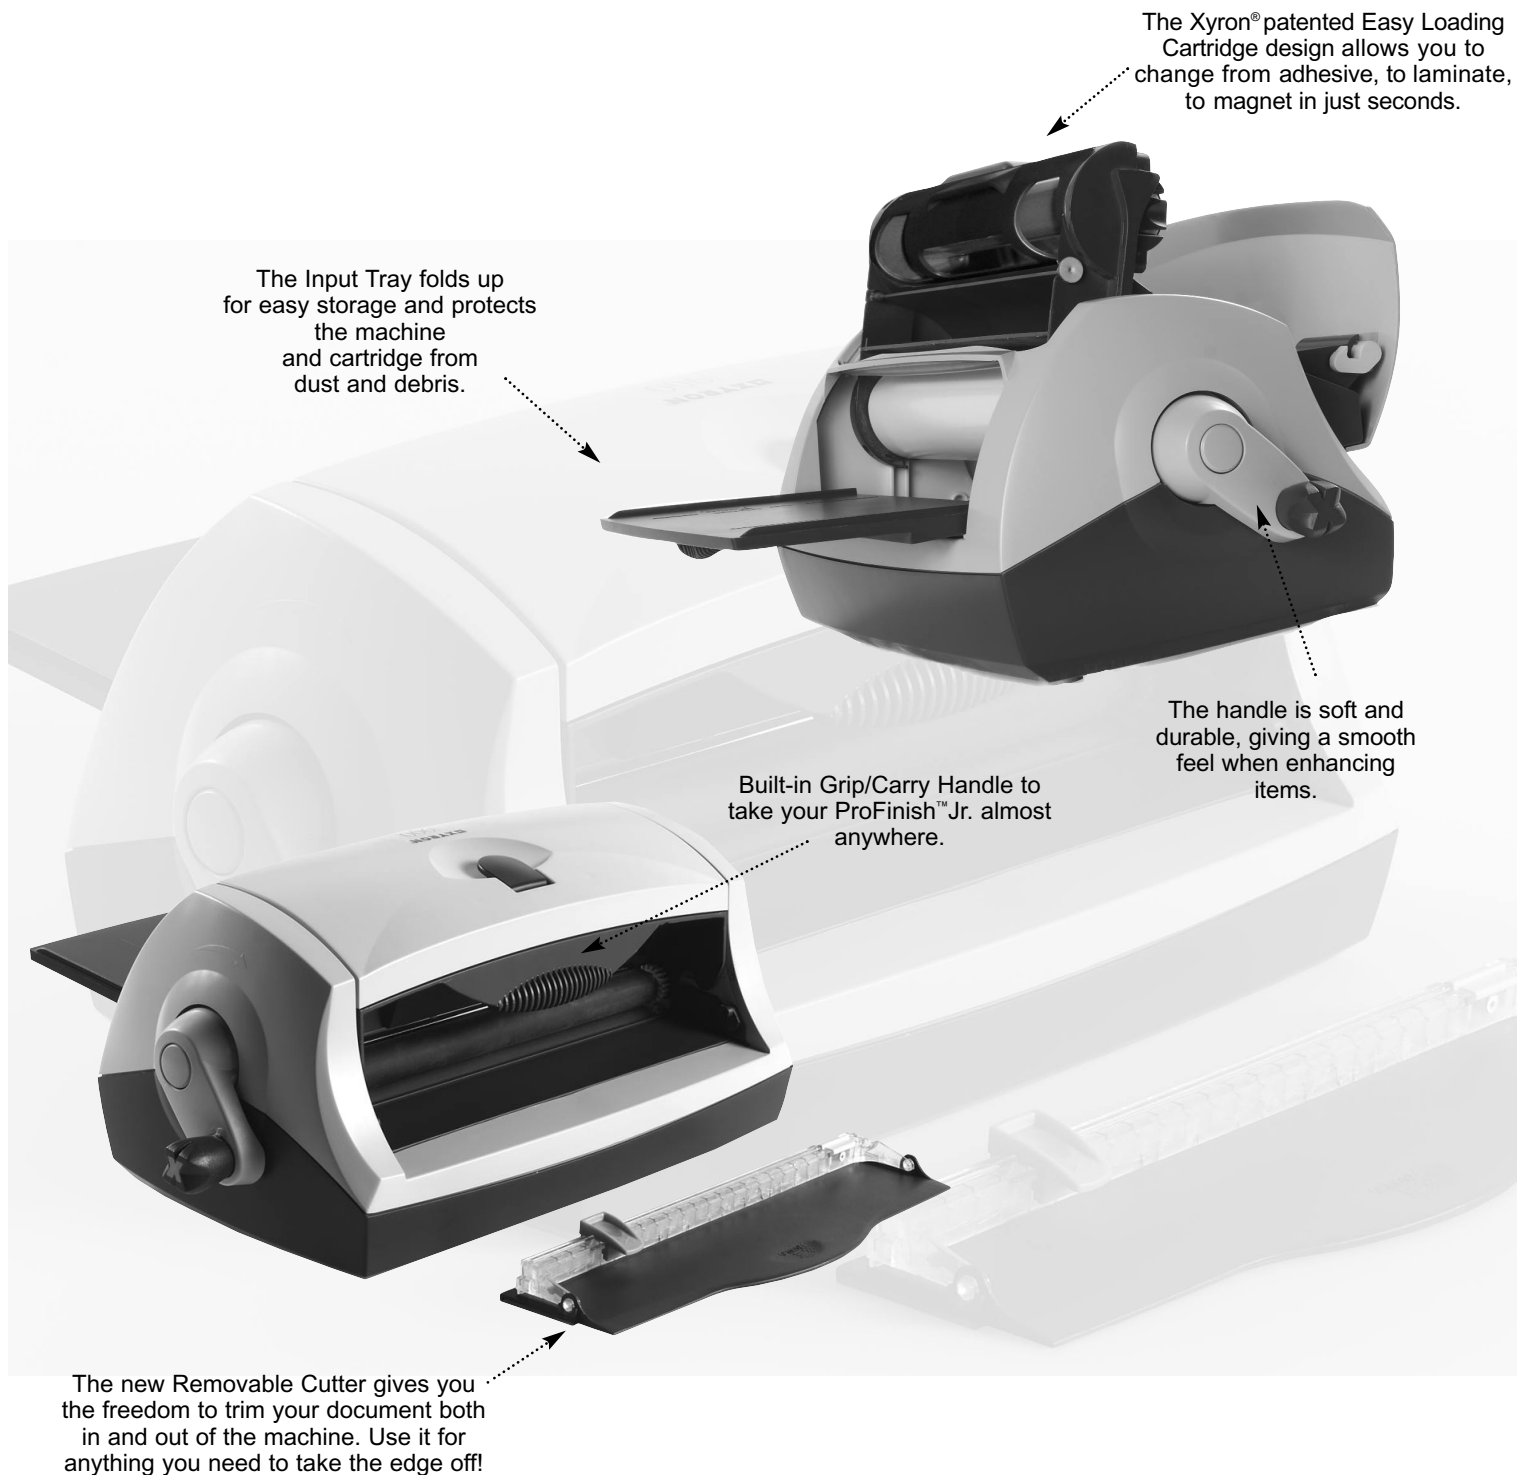

With just a few simple, easy-to-follow steps, you'll be protecting and enhancing your documents and projects:

Getting Started

Step 1:

Place item flat on the tray, aligned all the way to the left side. Guide the item forward while slowly turning the handle clockwise.



 
Step 2:

After the item is completely visible on the output tray, trim the item by sliding the blade across the material.



Step 3:

Gently lift up the cutter tray and slide it out. Use the cutter to trim the rest of the item if necessary. For adhesive, remove the clear mask and peel off the sticky-back item.

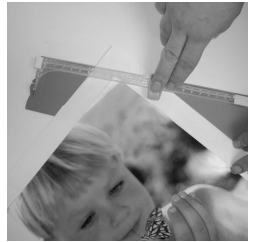


How to replace the cutter assembly:

Align the cutter sides with the machine. Slide in the cutter with the cut bar resting on the spring arms on the side of the machine until it snaps and locks into place.



How to replace the cut blade:

 Loosen and remove the screw in the cut bar with wrench. Remove colored plastic insert and slide the old blade off the cut bar (safely discard old blade). Carefully slide the NEW ProFinish™ Jr. blade onto clear bar. NOTE: The sharp edge of the blade should be facing inward. Replace the colored plastic insert into clear bar and secure screw with wrench. Verify smooth movement across the entire length of the clear bar.

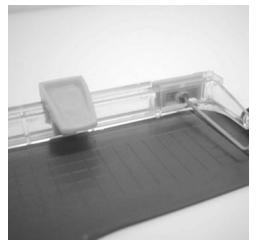

How to load the cartridge:

Open the lid to your ProFinish™ Jr. machine. Slide the cartridge into the tracks on the sides of the machine with the exposed rolls of material facing the open lid cover. Close the lid securely. Advance film and trim.



Helpful Hints

- Make sure the cartridge is installed correctly prior to using the machine.
- For best results, turn the handle slowly.
- Arrange small items (without overlapping them) on the feed tray to maximize your cartridge material use.
- Use items that are 1/10 of an inch thick or less.
- Test before using one-of-a-kind items.
- Watch for the End-of-Roll marker 18 inches from the end of Laminate and Magnet cartridges. To remove marker, simply peel it off the laminate.

Adhesive Supply:

- For best results, apply pressure with finger or dull tool around the edge of the object prior to removing the clear plastic film.
- If there is excess adhesive around the edges of an item, simply wipe off with your fingers. The adhesive comes right off without sticking to your hands.
- Clean off adhesive buildup from the rollers with any adhesive remover or rubbing alcohol.
- Acid-Free Permanent Adhesive is safe for scrapbooking. Acid-Free Repositionable Adhesive is safe for windows, painted walls and doors, and it does not leave any residue on most surfaces. Test on an inconspicuous area first.

Laminate Supply:

- It is not recommended for one-of-a-kind items since the process is permanent (use copies of photos and other valuable items).
- Make sure there is adequate space between each item you are laminating. Overlapping will cause the items to be laminated together.
- Two-Sided Lamination allows you to cut right to the edge or completely through the item you are protecting. It will not separate!

Magnet Supply:

- To maximize the material when making a magnet frame, place a smaller item in the middle of the frame. This way, even the magnet material in the middle of the frame is being used. Keep other paper supplies and photos handy for magnetizing.

Machine Specifications

Footprint:	7.75" W x 14.5" L x 6.75" H (19.7 cm x 37 cm x 17.1 cm)
Weight:	Approximately 6 lbs (2.72 kg)
Packed Weight:	Approximately 7 lbs (3.17 kg)
Maximum Document Thickness:	0.10" (2.54 mm)
Maximum Document Width:	9" (22.86 cm)
Maximum Document Length:	Cartridge Dependent
Power Source:	NONE
Cutter Assembly:	Removable, with available replacement blade
Manufactured:	Some parts and assembly in both USA and China

Replacement Cartridges

Part Number

9" x 50' Two-Sided Lamination	200032-00
9" x 40' One-Side Permanent Adhesive	200033-00
9" x 25' One-Side Laminate/One-Side Repositionable Adhesive	200034-00
8.5" x 10' One-Side Laminate/One-Side Magnetic	200035-00

**Contact your local dealer to order replacement cartridges
or call Varitronics® at 800-328-0585**

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>