

Instructions for use and care of DF 62/21 Frost-free refrigerator/freezer



It is most important that this instruction book should be retained with the appliance for future reference. Should the appliance be sold or transferred to another owner, or should you move house and leave the appliance, always ensure that the book is supplied with the appliance in order that the new owner can be acquainted with the functioning of the appliance and the relevant warnings.

Refrigeration Warnings

THESE WARNINGS ARE PROVIDED IN THE INTEREST OF SAFETY. YOU MUST READ THEM CAREFULLY BEFORE INSTALLING OR USING THE APPLIANCE.

This appliance is designed to be operated by adults. Children should not be allowed to tamper with the controls or play with the product.

Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.

This product should be serviced by an authorized Zanussi Network Service Centre, and only genuine Zanussi spare parts should be used.

It is dangerous to alter the specifications or modify this product in any way.

Care must be taken to ensure that the appliance does not stand on the electrical supply cable.

Zanussi domestic fridge/freezers are designed to be used specifically for the storage of edible foodstuffs only.

Frozen food must not be re-frozen once it has been thawed out.

Manufacturers' storage recommendations should be strictly adhered to. Refer to relevant instructions.

There are working parts in this product which heat up. Always ensure that there is adequate ventilation as a failure to do this will result in component failure and possible food loss. See installation instructions.

Parts which heat up should not be exposed. Wherever possible the back of the product should be against a wall.

Before any cleaning or maintenance work is carried out, be sure to switch off the appliance and unplug.

The appliance should be left for 2 hours after installation before it is turned on in order to allow the refrigerant to settle.

Do not place carbonated or fizzy drinks in the freezer as it creates pressure on the container, which may cause it to explode, resulting in damage to the appliance.

This appliance is heavy. Care should be taken when moving it.

Ice lollies can cause frost burns if consumed straight from the freezer.

Under no circumstances should you attempt to repair the appliance yourself. Repairs carried out by inexperienced persons may cause injury or more serious malfunctioning. Refer to your local Zanussi Network Centre, and always insist on genuine Zanussi spare parts.

Index

Installation	page 5
Location	page 5
Electricity supply	page 6
Cleaning the appliance's interior	page 6
Operation	page 7
Storage of foods in refrigerator compartment	page 8
Freezing fresh food	page 9
Storage of commercially frozen foods	page 10
Ice cube trays	page 10
Defrosting	page 11
Maintenance	page 12
Cleaning	page 12
Extended periods of inoperation	page 12
Inner light	page 12
Defective operation	page 12
Door reversal directions	page 13
	

Important!

Your new appliance is easy to use. Nevertheless, to get the best results it is important that you read this booklet very carefully and follow all the instructions before using the appliance for the first time.

The booklet provides exact instructions for installation, operation and maintenance, and in addition also supplies some useful hints.

Installation

If this appliance - equipped with magnetic door seals - replaces an older appliance featuring a spring lock (mechanical latch) on the door or lid, please ensure that this lock is made completely unusable before «throwing out» the old appliance. This will prevent it from becoming a death-trap for a child.

Rear spacers (Fig. 1)

Two rear spacers, to be fitted on the back of the appliance, are provided with the instruction manual.

Proceed as follows:

- Remove the screw "A";
- Fit the spacer «B» under the rear edge of the worktop of the appliance and push it up until the two openings match.
- Fix the spacer with the screw "A";
- Fit the other spacer in the same way.

Location

Place the appliance as far away as possible from sources of heat, e.g. radiators, heaters, direct sunlight, etc. The best results are achieved with a room temperature of between $+\ 10\ ^{\circ}\text{C}$ and $+\ 32\ ^{\circ}\text{C}$.

Make sure that there is nothing hindering air circulation at the back, bottom, or top of the appliance. To achieve the best performance, the top of the appliance - if set under a wall cabinet - should be at least 100 mm away from the base of the cabinet (Figure 2/A).

However, the appliance should ideally not be installed underneath wall cabinets (as shown in Figure 2/B).

One or more adjustable feet mounted on the base of the appliance make it possible to set it perfectly level.

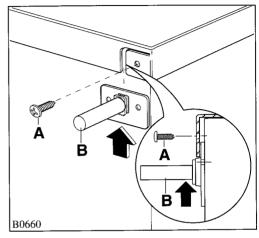


Fig. 1

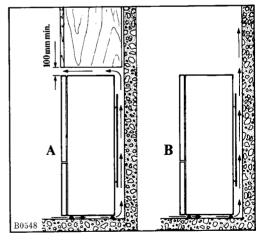


Fig. 2

Please ensure that when the appliance is installed it is easily accessible for the engineer in the event of a breakdown.

Electricity Supply

The appliance is for operation on a 220/-240 V 50 Hz supply, so be sure that your electricity supply voltage is within the range marked on the nameplate located inside the cabinet.

Earthing

WARNING: THIS APPLIANCE MUST BE EARTHED. The manufacturer declines any liability should this safety measure not be observed.

If the plug that is fitted to your appliance is not suitable for your socket outlet, it must be cut off and the appropriate plug fitted. The cut off plug should be disposed of to prevent the hazard of electric shocks in case it should be plugged into a 13 Amp socket in another part of your home.

Electrical connection

IMPORTANT: The wires in this mains lead are coloured in accordance with the following code:

GREEN AND YELLOW - EARTH BLUE - NEUTRAL BROWN - LIVE

If you fit your own plug, the colours of the wires in the mains lead of your appliance may not correspond with the markings identifying the terminals in your plug, this is what you have to do:

Connect the green and yellow (earth) wire to the terminal in the plug which is marked with the letter "E" or the earth symbol \oplus , or coloured green, or green and yellow.

Connect the blue (neutral) wire to the terminal in the plug which is marked with the letter «N» or coloured black.

Connect the brown (live) wire to the terminal which is marked with the letter "L" or coloured red.

The plug moulded on to the cord incorporates a fuse. For replacement use a 13 Amp BS 1362 fuse. Only ASTA approved fuses should be used.

The fuse cover/carrier must be replaced in the event of changing fuse.

The right fuse cover/carrier colour is the one shown by the coloured insert at the base of the plug or is the colour of the inscription at the base of the plug. The plugmust not be used if the fuse cover/carrier is lost.

A replacement cover/carrier must be obtained from Zanussi Service Agents whose addresses are listed on the attached "Zanussi Service and Spares Nationwide".

This appliance complies with E.E.C. directive **N.** 87/308 of 2.6.87 relative to radio interference suppression.

To start the cooling system, insert the plug into the wall socket and switch on. If the room temperature drops below 16 degrees centigrade, you will need to check the temperature setting. A switch is located next to the thermostat knob. (fig. 3). The operating position is where the switch is depressed (the built-in light is on).

You should ensure that this switch is used correctly. It is most likely that the switch will need to be depressed throughout the winter to allow for the low overnight temperatures. No damage can be caused by leaving the switch in this position for a period of time. During the Spring, release the switch.

A - Ambient switch

B - Thermostat dial

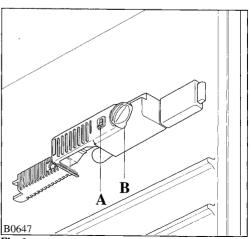


Fig. 3

Cleaning the appliance's interior

Before using the appliance for the first time, wash all internal parts with lukewarm water and neutral soap so as to remove the typical «new» smell and then dry thoroughly. Do not use detergents or abrasive powders as these will damage the finish.

Operation

The freezer compartment of this model is of the «frost-free» type. This means that no frosting occurs on the inner walls of the compartment or on food during operation. The absence of frosting is achieved by constant circulation of cold air inside the compartment, produced by an automatic fan blower.

Important: To enable the consistent unblocked flow of cold air around the food ensure that a space of 1.5 cms (0,60") is left at the top of the freezer compartment.

Operation-Temperature adjustment

Connect the plug to the wall socket. Start by using a setting between 2 and 4 and then, later, select the thermostat position most suitable for your requirements. Temperature is adjusted automatically and may be increased (less cold) by turning the knob towards the lower numbers or may be decreased (more cold) by turning it towards the higher numbers.

The correct position, however, must be located by taking into account that the internal temperature depends on following factors:

ambient temperature;

the number of times the door is opened; the amount of food stored;

the location of the appliance.

Operation is interrupted by turning the control knob until its pointer coincides with symbol «•».

When the thermostat is on the maximum cold setting, ambient temperature is particularly high and the fridge compartment is full, the appliance may run continuously. In this case the back wall of the fridge compartment will become abnormally covered by frost.

If this happens it is necessary to set the thermostat on a lesser cold setting so as to enable automatic defrosting to take place and consequently save electric energy.

Storage of foods in refrigerator compartment

To achieve the best results with the refrigerator compartment, you should follow one or two very simple rules:

Do not put warm foods or evaporating liquids in the refrigerator.

Cover or wrap foods (particularly if they have a strong smell or contain aromatic herbs).

Do not cover the shelves (grids) with paper or plastic since this blocks circulation of air in the compartment.

Please note: Do not place foodstuffs and paperbags etc. in contact with the evaporator plate at the rear of the refrigerator compartment as this can lead to impairment of the operation of the refrigerator.

Foods should be positioned inside the refrigerator compartment as indicated in Figure 5:

- 1. Cold cuts, cheese, butter, milk
- 2. Meat and fish
- 3. Fruit and vegetables.

In this position, fresh meat can be stored for 1-2 days at most.

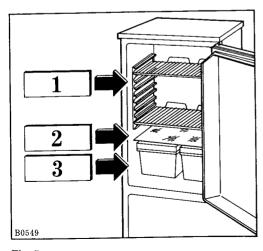


Fig. 5

Further hints for getting the best out of your refrigerator are as follows:

Cooked foods, cold dishes, jellies, etc., should be well covered

Fruit and vegetables should be washed before being stored

Raw meat (of all types, including poultry) should be stored in plastic bags.

The walls of the refrigerator are equipped with a series of runners so that the shelves (grids) can be positioned as desired. Furthermore, the upper shelf can be tilted as in Fig. 6. This will make a handy bottle rack for wines and beverages.

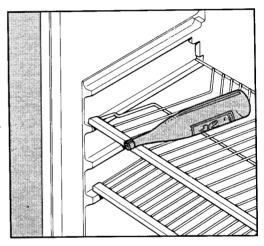


Fig. 6

Drink-chiller

The drink-chiller can easily be removed from its runners for filling up. To draw out the drink, push the glass against the arms of the special dispenser tap. When the glass is removed, the tap closes automatically. To clean the drink-chiller, fill with hot water, let it cool and rinse a few times. For a more accurate cleaning it would help adding a tablespoonful of bicarbonate of soda, then wash taking care to close and open the tap several times so as to clear it of any sugar deposits that may have formed. Empty the container and rinse with clean water.

Freezing fresh food

The 4-star compartment () is suitable for long term storage of commercially frozen food (up to 3 months, unless otherwise stated by the manufacturer), and for freezing fresh food.

Net storage capacity: 50 litres. Gross storage capacity: 65 litres.

Under normal circumstances, to freeze fresh food it is not necessary to change the setting of the thermostat knob with respect to the normal running position.

Food to be frozen has to be placed in the bottom basket.

The maximum amount of food which is freezable in 24 hours is 3,5 Kgs.

To help you make the most of the freezing process, here are some important hints:

Freeze only good-quality, fresh and wellcleaned foods.

Split them into small portions to (a) speed up freezing and (b) avoid having to thaw more food than you require. It is in fact important to remember that once the foods have thawed out, they deteriorate fast.

Another point to remember is that lean foods keep better and longer than fatty foods. Salt too reduces storage time.

Wrap the foods in foil or polythene film, ensuring that the wrapping adheres closely to the food and is well sealed. In this way, by avoiding contact with air, the colour, flavour and nutritional value of the foods remain intact.

During the freezing process, do not add further foods for freezing and do not open the freezer door.

The foods for freezing should not be placedin contact with already frozen foods, but put in the special bottom basket. This will stop the temperature of already frozen foods from rising.

Never put fizzy drinks in the freezer as they might well burst.

In addition, never put hot foods or liquids in the freezer compartment and take care not to fill recipients up to the brim if they are covered with a lid.

Water ices, if consumed immediately after removal from the freezing compartment, can possibly cause the skin to be freeze burnt.

It is a good idea to mark the packs - or the cards on the sliding drawers if your model has them - with the date on which freezing started so that you can keep a check on storage periods.

If accidental thawing occurs - due to a power cut for example - the foods must be used up very quickly or else cooked immediately and refrozen. If, however, the power failure is relatively brief (from 6 to 8 hours) and the freezer compartment is packed full, the frozen foods will not suffer any damage.

On the inner freezer door you will find schematic drawings of foods and animals indicating maximum storage time (in months) possible from the time of freezing.

Storage of commercially frozen foods

To get the best out of your freezer, in the case of storage of commercially frozen foods you should ensure that:

the products have been correctly stored by the retailer;

that there is only a very short time between when you purchase the products and when you put them in the freezer.

You do not store products for longer than the time specified by the food manufacturer.

If the appliance has been out of use for some time, before putting the products in the compartment, let the appliance run for at least two hours with the thermostat knob on the coldest setting. After this, turn the knob to a medium setting.

Avoid opening the door too frequently and when you open it, leave it open only for as long as is strictly necessary.

If there happens to be a power failure do not open the freezer door.

If the freezer is fully loaded the frozen food will not be affected if the power cut is of short duration; otherwise it is recommended to consume the food within a very short time.

Thawing

Before being used, deep-frozen foods can be thawed out either in the refrigerator compartment or at room temperature, depending on the time available for this operation.

Small pieces of food - such as hamburgers, cutlets, chips, and fish fingers, for example - can be cooked straight out of the freezer, without any intermediate thawing operation.

Clearly, cooking time will be marginally longer than in the case of thawed foods.

Ice cube trays

The refrigerator is provided with two ice cube trays.

These trays should be filled with drinking water and then placed in the freezer compartment.

Defrosting of freezer and refrigerator

The inner walls of the freezer are automatically defrosted.

In the case of the refrigerator, the evaporator is automatically defrosted every time the compressor stops operating.

The water produced by defrosting flows away - in the case of both the freezer and refrigerator compartments - through special drainage grooves into a container positioned in the back of the appliance above the compressor where it then evaporates.

We particularly recommend that you periodically clean the defrost-water drainage outlet, located in the center of the drainage groove (Figure 7) in the refrigerator compartment, to prevent the defrost water from overflowing on to foods stored in the compartment.

use the special cleaner provided, which you will find already inserted into the discharge hole.

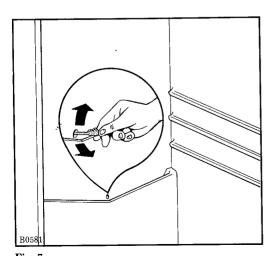


Fig. 7

Maintenance

Before performing maintenance operations, we advise you to disconnect the refrigerator from the wall socket.

Cleaning

Wash all walls and internal accessories with lukewarm water and odour-free liquid detersive products. Rinse and dry accurately.

Extended periods of inoperation

Whenever the refrigerator is not to be used for an extended period of time, disconnect it from the wall socket, empty and clean the interior surfaces. Remember to leave the door open for the entire period when the refrigerator is not to be used.

Replacing the interior light bulb

Prior to undertaking this operation, be sure to unplug the appliance from the wall socket as a safety precaution.

If the interior light does, not come on when the door is opened, you will need to gain access to the interior light bulb. To do this, remove the bulb housing cover by unscrewing the bulb housing cover by unscrewing the screw and by sliding it out. Check that the bulb is correctly screwed into its socket. If it is burnt out, replace with a similar 10W bulb. Replace the cover by sliding it back in Fasten it by means of the previously removed screw.

Defective operation

Before calling your local dealer for servicing assistance, check the following points to see if you may not solve the problem yourself:

The interior light does not turn on when the door is opened

Make sure that the refrigerator is plugged in to the wall socket correctly. If so, substitute the light-bulb.

The compressor fails to work

Make sure that the thermostat is not set on the «STOP» position, and that the electrical current arrives without interruption to the refrigerator.

The compressor works continuously

Perhaps the thermostat has been set to an excessively high position.

Traces of water are found in the compartment

The defrosting water drain might be clogged.

In the event that defective operation continues after these controls, contact your local Zanussi Service Network and provide all of the data listed on the rating plate located inside the refrigerator in the lower left corner: the model, serial number, etc. This information will permit the most rapid repair operations.

IN-GUARANTEE CUSTOMERS SHOULD ENSURE THAT THE ABOVE CHECKS HAVE BEEN MADE AS THE ENGINEER WILL MAKE A CHARGE IF THE FAULT IS NOT A MECHANICAL OR ELECTRICAL BREAKDOWN.

* Please note that proof of purchase is required for any in-guarantee service calls.

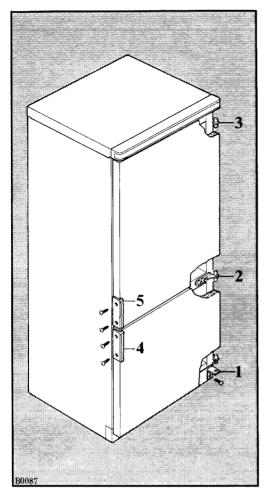


Fig. 8

Door reversal directions (Fig. 8)

Before carrying out the operations described below, pull out the mains plug from the wall socket.

To carry out this reversal go through the following steps:

- a) Remove bottom hinge 1;
- b) Slide out the lower door from middle hinge 2 and remove the latter;
- c) Slide out the upper door from pin 3, unscrew the latter and then screw it down into the hinge provided on the opposite side;
- d) Refit the upper door and the middle hinge on the opposite side;
- e) Refit the lower door and bottom hinge 1 on the opposite side;
- f) Remove handles 4-5 and refit them on the opposite side.

How to find the telephone number of your

Zanussi Service Force

listed in this leaflet

Zanussi Service areas are allocated by postcodes which are listed in alphabetical order for easy reference.

- 1. Look for the two letters of your address postcode in the far left 'Postcode' column.
- 2. Match up the number of your postcode against the number listed in the 'Postcode Numbers' column.
- 3. Look across the column to the Service Force Key Number for your area. Turn to the last page of this directory for the address and telephone number to contact for service which is listed against your key number.

If you are unsure of your postcode, the main towns and cities are listed in alphabetical order for easy reference.

Additionally, your local Zanussi Service Force Centre telephone number is listed under 'Z' in your telephone directory.

The Customer Care Department at Zanussi House, Hambridge Road, Newbury, RG14 5EP, Tel: 0635 521313, will be happy to help you with any queries or difficulties.

For Service in the Republic of Ireland

The telephone number of your service centre can be found in your Local Telephone Directory under "Elektro Service" or "Zanussi". The information can also be found in the Golden Pages under "Electrical Appliances - Repairing".



Post- code Letter	Town	Post-code Number	Service Force Key Number	Post- code Letter	Town	Post-code Number	Service Force Key Number
AB	Aberdeen	1-5, 22-23, 30)-38 1	DE	Derby	1-3, 6-7, 13-15	10
AB		41-45, 51-56	1	DE	Derby	11-12	18
AL	St Albans	1-10	2	DE	Derby	4-5, 55	33
Α	Brecon	45	3	DG	Dumfries	1-7, 10-12, 14	34
BA	Bath	1-5, 11-15	4	DG		8-9	34
BA		7-10, 20-22	5	DG	Dumfries	13	35
BA		6, 16	6	DH	Durham	1-9	37
BB	Blackburn	1-12	7	DL	Darlington	1-17	37
BD	Bradford	1-23	8	DN	Doncaster	1-7, 10-12, 22	33
BD		24	7	. DN		14	38
ВН	Bournemouth	1-25	9	DN	Doncaster	8-9, 15-21, 31-4	0 39
BL	Bury	0-9	11			,	
BN	Brighton	1-15,	12	SUB	POSTCODE DI	VISION	
BN	Ü	20-27	12 -	DN	Gainsboroug	gh	
BN		16-18	13		South	21-1, 21-2, 21-	5 40
BR	Bromley	1-8	14	DN	Gainsborou	gh	
BS	Bristol	1-28, 88-89	15		North	21-3, 21-4	39
BT	Belfast	1-82	16	l _{DT}	Dorchester	1-5, 10-11	9
В	Birmingham	1-21, 25-33, 3	8. 40. 17	DT		6-9	5
В	J	45, 47-48, 60		ľ			
В		80, 90-94, 97	-98 17	SUB	POSTCODE DI	VISION	
В	Birmingham	23-24, 34-37,	18	DT	Bridport Eas	st 6-3, 6-4	5
В	J	42-44, 46, 72	- 18	DT	Bridport We	st 6-5, 6-6	5
В		79	18	DY	Dudley	1-6, 8-9	17
В	Birmingham	49-50,	20	DY	·	7, 10-14	41
В	•	96	19	EC	London	All EC Codes	28
В	Birmingham	95	20	EH	Edinburgh	1-42, 46, 52-5	4 42
CA	Carlisle	1-28	21	EH	•	43-45	35
CB	Cambridge	1-8	22] EH	Edinburgh	47-49, 51, 55	43
СВ	·	9-11	23	EN	Enfield	1-11	28
CF	Cardiff	1-8, 31-48	3	EX	Exeter	1-17, 20	45
CH	Chester	1-4	24	EX		18-23, 31-39	46
CH		5-7	25	İΕ	London	All East Codes	s 28
CH		8	26	FK	Falkirk	1-4	43
CM	Chelmsford	0-6, 8-9, 11-1	5 27	FK		10-14, 18-19	32
CM		7	23	FK	Falkirk	5-9, 15-17	47
CM	Chelmsford	16-24	28	FK		20-21	31
CO	Colchester	1-16	23	FY	Fleetwood	0-8	7
CR	Croyden	0-9	29	GCI	Guernsey		48
CT	Canterbury	1-21	36	GL	Gloucester	1-19,	49
CV	Coventry	1-8, 10-12, 21		GL		50-56	49
CV	-	9, 13	18	GL		20	19
CV	Coventry	31-37	20	GU	Guildford	1-24, 26, 34-3	5 50
CW	Crewe	1-12	30	G⊎		25	51
DA	Dartford	1-18	29	GU	Guildford	27-33	13
DD	Dundee	1-5, 7-11	31	G	Glasgow	1-5, 11-15, 20-	-23, 47
DD		6	32	ΙG		31-34, 40-46,	51- 47

Post- code Letter	Town	Post-code Number	Service Force Key Number	Post- code Letter	Town	Post-code Number	Service Force Key Number
G	Glasgow	53, 58, 60-69,	73, 47	SUB P	OSTCODE DIVI	SION	
G		76-78, 81-84	47	LN	Lincoln	3-4, 3-5	40
G	Glasgow	71-72, 74-75	43	LN		3-6	39
HA	Harrow	0-9	2	LS	Leeds	1-29	8
HD	Huddersfield	1-8	8	LU	Luton	1-6	2
HG	Harrogate	1-5	8	LU		7	22
HP	Hemel	1-3	2	L	Liverpool	1-49, 60-70	24
HP	Hempstead	4-23	53	ME	Medway	3	29
HR	Hereford	1-2, 4, 6-9	49	ME	·	1-2, 4-20, 9	9 36
HR		3, 5	54	MK	Milton Keynes	1-17, 19, 40-	46 22
HU	Huli	1-20, 55	38	MK	•	18	65
нх	Halifax	1-7	8	ML	Motherwell	1-12	43
IG	Ilford	1-11	28	М	Manchester	1-35, 60	11
IOM	Isle of Man		55	NE	Newcastle-on-	•	
IP	Ipswich	1-15, 30-31	56		Tyne	1-49, 61-70,	. 88 66
ΪΡ		16-27	57	NE	•	98-99	66
iP	Ipswich	28-29, 32-33	22	NE		71	35
IV	Inverness	1-24, 26, 30-3		NG	Nottingham	1-14	10
IV		40-49, 51-56	58	NG		15-22, 25	33
IV	Inverness	25, 27-28	59	NG	Nottingham	23-24	40
JCI	Jersey	20, 27 20	60	NG	Houngham	31-34	64
KA	Kilmarnock	1-26, 28-30	43	NN	Northampton		67
KA	Kiimamook	27	61	NN	Horaliampion	8-10, 14-18	22
KA		28	68	NN	Northampton		65
KT	Kingston-on-	20	00	NP	Newport	1-9, 44	3
13.1	Thames	1-23	51	NR	Norwich	1-35	57
KT	mames	24	50	NW	London	All NW Code	
KW	Wick	1-14	59	'***	London	Except 2, 4,	
KW	VVICK	15-17	62	NW	London	2, 4, 7, 9, 10	
KY	Kirkcaldy	1-16	32	N	London	All N Codes	
LA	Lancaster	1-23	7	OL	Oldham	1-12, 15-16	20 11
LD	Llandrindod	1-23	, 54	OF	Oldilalli	13-14	7
LD	Lianumiuou	3	3	OX	Oxford	1-17	65
LE	Leicester	3 1 - 5, 7-8, 11-14		PA		1-1/	47
LE	Leicesiei	16-17	63	PA	Paisley	5-19	47
LE	Laignator		63	l .	Paidley	20-27	68
LE	Leicester	6, 9-10 15	64	PA PA	Paisley		
	Llandudna	15 11-15				28-29, 41-49	
LL	Llandudno		25	PA		30-40	70
LL	l land, de	16-19	26	PA PA	Deieleu	62-78	68
LL	Llandudno	20-21, 23, 27,		PA DA	Paisley	80-82, 88	71 70
LL	Llondudes	32, 34-40, 42-		PA	Dotorbare:	83-87	72
LL	Llandudno	22, 24-26, 28-		PE	Peterborough		
LL		33-34, 41, 48-		PE	Datambass	16-19	22
LL	12	51, 78	26	PE	Peterborough		40
LN	Lincoln	1-6, 8-10	40	PE	5 "	30-33, 35-3	
LN		7, 11-13	39	PH PH	Perth	1-2, 8-9, 10- 3-7	-18 31 32

Post- code Letter	Town	Post-code Number	Service Force Key Number	Post- code Letter	Town	Post-code Number	Serv Fore Ke Num	ce y
PH	Perth	19-26, 30-44	58	SY		7, 17-19	5	54
PL	Plymouth	1-21	73	SY	Shrewsbury	8	4	11
PL		22-35	74	SY		23-25	7	77
PO	Portsmouth	1-22	13	s	Sheffield	1-19, 30-31, 4	0-45	33
PO	I.O.W.	30-41	75	s		60-66, 74, 80-	-81 3	33
PR	Preston	1-9	7	s	Sheffield	70-73, 75	ε	3
RG	Reading	1-17, 26	53	TA	Taunton	1-11, 21 - 24	ε	ò
RG		21-25, 27	50	TA		12-20	5	5
RG	Reading	28	4	TD	Selkirk	1-15	3	35
RH	Redhill	1-3, 6-7, 9-20	12	TF	Telford	1-8, 10-13	4	11
RH		4-5	50	TF		9	3	30
RH	Redhill	8	29	TN	Tonbridge	1-2, 4, 8-11, 1	3-16 2	29
RM	Romford	1-5, 7, 10-18	27	TN	Tonbridge	12, 17-19, 23-	40 3	36
RM		6, 8-9	28	TN	Tonbridge	3, 5-7	1	12
SA	Swansea	1-18, 31-32	3	TQ	Torquay	1-6, 9, 12-13	7	78
SA		33-39, 41-44, 6	61-73 76	TQ		7-8	7	73
SA	Swansea	19-20, 40, 45-4	18 77	TQ		14	4	1 5
SE	London	All SE Codes	14	TR	Truro	1-27	7	74
SG	Stevenage	1-9, 11, 15	2	TS	Stockton-on-			
SG		10, 12-14	28		Tees	1-29	3	37
SG	Stevenage	16-19	22	TW	Twickenham	1-20	5	51
SK	Stockport	1-3, 6-12	30	UB	Uxbridge	1-10	2	2
SK		4-5, 13-16	11	WA	Warrington	1-5, 8-9, 10-1	5 1	11
SK	Stockport	17	33	WA		6-7	2	24
SL	Slough	1-10	53	WA	Warrington	16	3	30
SM	Sutton	1-3, 7	51	WC	London	All WC Codes	; 4	14
SM		4-6	29	WD	Watford	1-2, 4-7	2	2
SN	Swindon	1-8, 11-16	65	WD		3	5	53
SN		9-10	4	WF	Wakefield	1-17	8	3
SO	Southampton	1, 4, 41-43, 51	9	WN	Wigan	1-5, 7	1	11
so		2-3, 5, 21-24, 5	52 13	WN		6, 8	2	24
so	Southampton	20	4	WR	Worcester	1-14		19
SP	Salisbury	1 <i>-</i> 5, 9-11	4	WR		15	4	1 1
SP		6	9	ws	Walsali	1-15	1	18
SP	Salisbury	7-8	9	WV	Wolverhampto	n1-4, 10-14		18
SR	Sunderland	1-7, 9	66	(wv		5-9, 15-16	4	11
SR		8	37) W	London	All West Code	es 5	52
SS	Southend-on-					Except 1-14		
	Sea	0-9, 11-17, 99	27	W	London	3, 4, 5, 7, 13		2
ST	Stoke-on-) W	London	1-2, 6, 8-12, 1	14 4	14
	Trent	1-18, 20-21	30	YO	York	1-3, 5, 7-8		3
ST		19	18	YO		4, 6, 11-18, 25		38
SW	London	2, 4, 8-9, 12, 16		YO	York	21-22		37
SW	London	1, 3, 5-7, 10-11	44	ZE	Lerwick	1, 3		79
SW	London	13-15, 18	44	ZE		2	ε	30
SW	London	19-20	51	1				
SY	Shrewsbury	1-6, 9-17, 18-2		1				
	Downl	oad from Www.S	omanuals.co	m. All Ma	inuais Search A	nd Download.		

Service Force Key Number	Service Force Address	Telephone Number	Service Force Key Number	Service Force Address	⁻ Telephone Number
1	60 Commerce Street, Aberdeen, AB2		23	Unit 2b, Elton Park Business Centre,	
	1BP	0224 583949		Hadleigh Road, Ipswich, IP2 1 DQ	0473 211713
	or Tel:	0224 582704	24	Unit 14, Dock Road, Birkenhead, L41	
2	Unit 4, Riverside Est, Coldharbour			1JJ	051 639 1287
	Ln, Harpenden	0582 461909	25	Plas Fynnon W/house, Middleton Rd,	ı
3	3 Pentwyn Road, Blackwood, Gwent,			Oswestry	0691 652917
	Sth Wales	0495 223151	26	Easy Launderette, Panton Hall,	
4	31 St Andrews Road, Bemerton,			Denbigh, Clwyd	0745 81 3272
	Salisbury, SP2	0722 336072	27	19 Sirdar Rd, Off Brook Rd, Rayleigh,	
5	3 Bancombe Ct. Trad. Est., Martock,			Essex	0268 741171
	Yeovil, TA12	0935 822836	28	284 Alma Road, Enfield, EN3	081 805 6825
6	6 Hamp Ind Est. Bridgwater,		29	Unit B4, Imperial Bus. Estate,	
	Somerset, TA6 3NT	0278 424550		Gravesend, Kent	0474 353771
7	333 Ranglet Road, Walton Summit,		30	Unit 8, Croft Road, Newcastle under	
	Preston, PR5	0772 321200	ļ	Lyme, Staffs, ST5 0TW	0782 713003
8	57 Ingram Road, Holbeck, Leeds,		31	3-7 Blackness Street, Dundee,	
	Yorks,	0532 460992	1	Scotland, DD1	0382 642828
9	63 Curzon Road, Bournemouth, BH1			or Tel:	0382 455862
		0202 303363		or Tel:	0382 826809
10	Unit 2, Furnace Road, Ilkeston,		32	33a Burnside, Auchtermuchty, Fife,	
	,	0602 442770		Scotland	0337 28807
11	Unit 41/42 Clarendon Ct, Winwick		33	Unit 63, Storforth Ln Trad. Est.	
		0925 50822		Chesterfield	0246 231790
12	Unit 3, 21/25 Bridge Road, Haywards		34	93 Irish Street, Dumfries, Scotland	0387 69694
	,	0444 417656	35	2-8 Wood Market, Kelso, Borders,	
13	266 Main Road, Southbourne,		١	TD5 7AX	0573 24411
	,	0243 374814	36	Unit 2, Bridge Rd Bus. Centre, Bridge	
		0243 371170		Road Ashford, Kent, TN23 1BB	0233 613463
14	9, Bourne Road, Bromley, Kent, BR2	004 040 0500	37	8 Cumbie Way, Aycliffe Ind. Est.	0005 000000
45		081 313 9533		Newton Aycliffe	0325 300606
15	Unit 1, Albert Crescent, Bristol, BS2	0070 740047	38	Unit 1, Boulevard Unit Fact. Est. Hull,	
40		0272 713217	00	HU3 4AY	0482 223335
16	Owenmore Hse, Kilwee Ind. Est.,	0232 301121	39	Unit 2, Cromwell Road, Grimsby, DN31 2BN	0472 358760
17	Upper Dunmurry Lane, Belfast 66 Birch Rd East, Wyreley Rd Ind.	0232 301121	40	Unit 14 Stonefield Park, Clifton Street	
17		021 327 1671	+0	Lincoln	0522 532330
18	Unit 3 Sterling Park, Claymore,	021 321 1011	41	1 Underhill Street, Bridgnorth, Salop,	0322 332330
10	•	0827 289800	"'	WV16	0746 763322
		0827 289822	42	38 Buccleuch Street, Dalkeith,	0140 100022
19	22 Newton Road, Malvern, Worcester,		""	Midlothian, EH22	031 663 7758
	WR141NZ	, 0684 572915	43	Block 2 Unit 5, Auchenraith Ind. Est.	20. 000 1700
20	Unit 23/24, Alliance Business PK,		~	Rosendale Way, Blantyre	0698 828145
	· · · · · · · · · · · · · · · · · · ·	0203 350666	44	4 Royal Lane, Yiewsley, W-Drayton, UB7	
21	High Ehenside, Egremont, Cumbria,		45	91 Exeter Road, Exmouth, Devon,	
	CA22	0946 820509	-	EX8 1QD	0395 263531
22	1 Wharf Road, Higham Ferrers,		46	Unit 4, Upcroft Ave, Pottington Ind	
	, 9	0933 317727	1	Est, Barnstaple	0271 71774
2	D 1 1 1 // (111	Manuala Casaah And Dawalaad	

Service Force Key Number	Service Force Address	Telephone Number	Service Force Key Number	Service Force Address		Telephone Number
47	Unit E6C Anniesland Ind. Est.		71	2 Killweivagh, Gregory, Benbecula,		
	Netherton Rd, Glasgow, Scotland	041 954 5304		Outer Hebrides	08	70 2331
	or Tel:	041 954 5349	72	Churchouse, 16 James St,		
48	Blencathra, Saumarez Lane, Castel,			Stornaway, Isle of Lewis	08	51 705555
	Guernsey	0481 56854	73	16 Faraday Mill, Cattedown,		
49	134 Eastgate Street, Gloucester, GL1			Plymouth, PL4	07	52 257455
	1QT	0452 422488	74	80 Killigrew Street, Falmouth,		
50	Unit 1 Redfields Ind. Pk, Church			Cornwall, TR11	03	26 314600
	Crookham, Fleet	0252 851414	75	111 Hunnyhill, Newport, Isle of Wight	09	83 523062
51	127 Walton Road, Molesey, Surrey,		76	Roch, Haverfordwest, Dyfed		37 710366
	KT8 0DT	081 9796366	77	Unit 16, Llambed Ind. Est., Lampeter,		
	or Tel:	081 9797962		SA48		70 423424
52	Unit 4, Riverside Est, Coldharbour		78	278 Torquay Road, Preston, Paignton		03 529969
	Ln, Harpenden	0582 461909	79	3-4 Carlton Place, Lerwick, Shetland,		
53	Reform Road, Maidenhead,			ZE1	05	95 2915
	Berkshire	0628 783711	80	Harlsdale, Symbister, Whalasay,	00	000 540
54	Merion House, High Street,	0507.004848	٠,	Shetland		066 546
EE	Llandrindod Wells	0597 824842	81	London House, Victoria Str., Alderney	/ 04	0102 3303
55	South Quay Industrial Estate,	0604 600114				
56	Douglas, I.O.M. Unit 2b, Elton Park Business Centre,	0624 622114				
56	Hadleigh Rd, Ipswich, IP2 0DQ	0473 211713	İ			
57	75 Grove Road, Norwich, NR1 3RL	0603 629653				
58	Unit 3B3, Smithton Ind. Est.	0000 023030				
50	Smithton, Inverness	0463 791822				
59	Drummuie Road, Golspie,	0.0070.022				
•••	Sutherland, KW10 6SY	0408 633517				
60	P.O.Box 45, Queens Road, St Helier,					
	Jersey	0534 67001				
61	Bruach, Blackwaterfoot, Isle of Arran	077 086 246				
62	Hatson Ind. Estate, Kirkwall, Orkney	0856 5457	1			
63	75 St Marys Road, Market					
	Harborough, Leics	0858 433229				
64	Pinfold Rd, Manning Rd Ind. Est.					
	Bourne, Lincs	0778 422147				
65	Unit E19, Telford Rd, Launton Ind.					
	Est. Bicester	0869 248598	ł			
66	Unit C1, Bergen CI, Tyne Tunnel Trad.					
	Estate, North Shields, Tyne & Wear	091 2960166				
67	53 Sandringham Road, Northampton					
co	NN1	0604 37061				
68	96 Argyll Street, Dunoon, Argyll, PA23 7NE					
69	Inverasdale, Gallow Hill Rd,	0369 2147				
UÐ	Cambeltown, Argyll	0586 553753				
70	Moss Field Workshop, Moss Field	0000 0001 00				
. •	Drive, Oban	0631 664530				
	•		m All N	Januals Search And Download		1

19

PEACE OF MIND FOR TWELVE MONTHS

Zanussi guarantee conditions

This guarantee is in addition to your statutory and other legal rights which will not be excluded or in any way diminished by the return of this guarantee card.

We, Zanussi Ltd., undertake that if, within twelve months of the date of the purchase, this ZANUSSI appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, we will, at our option, repair or replace the same FREE OF ANY CHARGE for labour, materials or carriage on condition that:

- * The appliance has been correctly installed and used only on the electricity supply stated on the rating plate.
- * The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's operating and maintenance instructions.
- * The appliance has not been serviced, maintained, repaired, taken apart or tampered with by any person not authorised by us.
- * The appliance is still in the possession of the original purchaser.

All service work under this guarantee must be undertaken by a Zanussi Service Force Centre.

Home visits are made between 8.30 am and 5.30 pm Monday to Friday. Visits may be available outside these hours in which case a premium will be charged.

Any appliance or defective part replaced shall become our property.

Exclusions


This guarantee does not cover:

- * Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic.
- * Costs incurred for calls to put right machines improperly installed or calls to machines outside the UK and the Republic of Ireland.
- * Appliances found to be in use within a commercial or similar environment, plus those which are the subject to rental agreements.
- * Products of Zanussi manufacture which are NOT marketed by Zanussi Ltd.
- * EEC Countries The standard guarantee is applicable but subject to the owner's responsibility and cost to ensure the appliance meets the standards set by the country to which the product is taken. The Zanussi company in the country concerned will be pleased to advise further. Sight of your purchase receipt will be required by them.







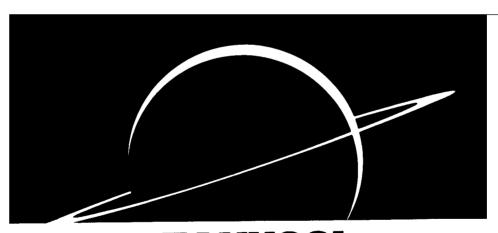

ZANUSSI The appliance of science

Zanussi Ltd., Zanussi House, Newbury.

The information in this manual is correct at time of going to press. Zanussi reserve the right to alter specifications without notice.

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com