

ZANUSSI

Instructions for the use and care of refrigerators

PLB1630-PLB1605
ZB1756TPR-P1756
ZB2406R-ZPL2430-Z12340
ZI1650-ZPL1650
Z1630-ZPL1630-Z1701

Installation

Please note

If you are discarding an old refrigerator or freezer that has a lock on the door, please ensure that the lock is made unusable to avoid accidents to young children.

Electricity Supply

The appliance is for operation on a 220/240V 50 c/s supply, so be sure that your electricity supply voltage is within this range which is marked on the nameplate located inside the cabinet.

Earthing

WARNING

THIS APPLIANCE MUST BE EARTHED. The manufacturer declines any liability should this safety measure not be observed.

Electrical Connection

Important

The wires in this mains lead are coloured in accordance with the following code:

GREEN AND YELLOW - EARTH
BLUE - NEUTRAL
BROWN - LIVE

If you fit your own plug, the colours of the wires in the mains lead of your appliance may not correspond with the markings identifying the terminals in your plug, this is what you have to do:

Connect the green and yellow (earth) wire to the terminal in the plug which is marked with the letter "E" or the earth symbol \perp , or coloured green, or green and yellow.

Connect the blue (neutral) wire to the terminal in the plug which is marked with the letter "N" or coloured black.

Connect the brown (live) wire to the terminal which is marked with the letter "L" or coloured red.

«If the plug is not suitable it must be cut off and the appropriate plug fitted».

The cut off plug should be disposed of to prevent the hazard of electric shocks in case it should be plugged into a 13 Amp socket in another part of your home.

The plug moulded on to the cord incorporates a fuse. For replacement, use a 13 Amp BS 1362 fuse. Only ASTA approved fuses should be used. The fuse cover/carrier must be replaced in the event of changing fuse.

The right fuse cover/carrier colour is the one shown by the coloured insert at the base of the socket.

The plug must not be used if the fuse cover/carrier is lost.

A replacement cover/carrier must be obtained from Zanussi Service Agents whose addresses are listed on the attached "Zanussi Service Agents Nationwide".

This appliance complies with E.E.C. directive No. 76/889 of 4.11.76 relative to radio interference suppression.

Location and Levelling

Mod. ZB1756TPR/P1756-ZB2406R-Z1701

Place the appliance away from heat sources and in such a way that air can circulate freely at the back of the cabinet. Level by adjusting the special levelling feet on the bottom of the cabinet.

Before using

Remove all securing tapes. Wash inside the appliance with lukewarm water and a little bicarbonate of soda (one teaspoonful to a quart of water). Do not use soap or detergents as the smell might linger. Dry thoroughly. Repeat the above for regular cleaning of your appliance.

Using your refrigerator

Mod. PLB1630 - ZI1630
ZPL1630 - ZI2430 - ZPL2430

Temperature Control

Thermostat.

The thermostat controls the temperature of the refrigerator compartment, higher number on the control knob giving a lower temperature.

For a given thermostat setting the temperature of the refrigerator compartment depends on the location of the refrigerator, the surrounding air temperature and the number of times the door is opened. The thermostat setting might have to be varied to allow for these factors.

Important

The location, the surrounding air temperature and the frequency with which the door is opened, can affect the temperature within the refrigerator compartment, making it necessary to adjust the setting of the thermostat.

Frozen food storage

The three-star ******* built-in deepfreeze storage compartment, due to the low temperature reached (-18°C), is suitable for long term storage of frozen foods (normally up to three months).

Net frozen food storage volume:

Mod. PLB1630 - cu. ft. 0,55

Mod. ZI1630 - cu. ft. 0,68

Mod. ZPI1360 - cu. ft. 0,68

Mod. ZPL2430 - cu. ft. 0,55

Mod. ZI2430 - cu. ft. 0,55

Mod. Z1701 - cu. ft. 5,50

Total gross capacity:

Mod. PLB1630 - cu. ft. 5,6

Mod. ZI1630 - cu. ft. 5,3

Mod. ZPL1630 - cu. ft. 5,3

Mod. ZPL2430 - cu. ft. 8,11

Mod. ZI2430 - cu. ft. 8,11

Mod. Z1701 - cu. ft. 6,00

Carbonated drinks should not be stored in the built-in deepfreeze storage compartment.

Frozen food manufacturers generally recommend a maximum storage period of three months and their recommendation should not be exceeded.

Where to keep food

The following guide will ensure that you get the best from your refrigerator. Some foods have a certain amount of water which, if evaporated, destroys their vitamins content and nourishing power. To protect these foods from over dehydration, they must be stored in the crisper, in closed containers or wrapped in plastic sheets.

Raw meat and poultry must be kept in covered containers, waxed paper or plastic wrapping, on a shelf close to the deepfreeze storage compartment.

Cooked food, cold dishes, jelly etc. must be kept, well covered, in any shelf of the refrigerator.

Fruit must be kept in the crisper.

Vegetables must be cleaned and washed, and when slightly wet, kept in a container to preserve their freshness. Cheese and butter must be kept in special containers or wrapped in aluminium or polythene foil, in order to avoid contact with the air.

Milk bottles must be well closed and placed on the shelves of the door inner panel.

Do not wash eggs unless absolutely necessary as this destroys their protective film. Do not leave the door open too long, especially in warm and damp climates, in order to avoid an excessive formation of frost.

Do not place hot food or evaporating liquids inside the refrigerator and cover all food, especially if aromatic.

Do not pack shelves so tightly as to obstruct the free circulation of air.

The gap between the front of the shelf and the closed door should be left clear.

Using your refrigerator

Defrosting is completely automatic in the refrigerator cabinet. Defrost water drains out to the back of the cabinet where it evaporates. The built-in deepfreeze storage compartment is not automatically defrosted. Frost should be removed at regular intervals, using the plastic scraper provided.

Complete defrosting is only occasionally required. It should be carried out as follows when there is little or no frozen food in the built-in deepfreeze storage compartment. (Caution: a rise in temperature of frozen foods can shorten their storage life).

1. Wrap frozen foods and ice cream in several layers of newspaper and put in the coldest place available.
 2. Switch off at the plug.
 3. Fill the ice trays with hot water and place in the built-in deepfreeze storage compartment with a piece of cardboard underneath as a protection to hasten the defrosting process. Refill trays as necessary.
 4. Leave deepfreeze storage compartment door open.
 5. When the defrosting is complete dry the deepfreeze storage compartment interior thoroughly.
 6. Switch on the supply.
 7. Replace any frozen foods in the built-in deepfreeze storage compartment
- After about an hour refill and replace the ice trays. It is not necessary to remove foodstuffs from the refrigerator compartment or door as the defrost water will be collected in the special drip channel. On no account should any attempt be made to chip ice from the built-in deepfreeze storage compartment.

**Mod. PLB1605 - ZB1756 TPR P1756
ZB2406R - ZI1650 - ZPL1650 - Z1701**

Temperature control

To start the refrigerator turn the knob of the thermostat clockwise beyond the " • ".

The temperature increases (less cold) by turning the thermostat knob anticlockwise; it decreases (more cold) by turning it clockwise.

A medium setting is generally the most suitable.

Important

The location, the surrounding air temperature and the frequency with which the doors are opened, can affect the temperature within the refrigerator compartment, making it necessary to adjust the setting of the thermostat.

Where to keep food

Please refer to chapter «Where to keep food» on page 4.

Defrosting

The ice which forms on the evaporator while the appliance is in operation is automatically eliminated every time the motor-compressor stops. Defrost water runs down a special conveyor to a tray where it evaporates.

Holidays

Do not switch your electricity off at the mains if you intend to leave foodstuffs in your refrigerator while you are away 2 days or less - it is not necessary to remove any foodstuffs.

Up to 2 weeks - do not leave milk, meats, poultry or fish in the refrigerator compartment. Eggs butter and bacon may be safely left.

Over 2 weeks - remove all foodstuffs from the refrigerator compartment.

If you do wish to switch off then empty, wash and dry the interior and leave the doors open.

Service

Prior to undertaking any maintenance operation, be sure to unplug the appliance from the wall socket as a safety precaution.

Clean out the interior periodically with lukewarm water and bicarbonate of soda, the cabinet exterior with Silicon wax spray, the condenser and the motor compressor with a brush or a vacuum cleaner. During periods when the appliance is not in use, take the following precautions:
unplug the refrigerator from the power supply;
take out all the foodstuffs contained in the cabinet;
clean both the inside and all accessories
leave the door ajar to facilitate the circulation of air in the interior of the cabinet so as to avoid the formation of unpleasant smells.

Maintenance

Should service be required for this appliance, contact your local Zanussi Service Agent, but before requesting service read the following, as it could save you unnecessary inconvenience and expense.

1. Check that the power supply is working (by plugging in another appliance).
2. Check that the fuse has not blown in the plug.
3. The motor is designed to start and stop regularly. If, however, it does not appear to run at all, check that the cabinet light comes on. If it does, leave the door open for 5 minutes with the thermostat at the coldest setting. If motor still does not run call your Zanussi Service Agent.

ZANUSSI ELETTRODOMESTICI

Industrie Zanussi spa

ZANUSSI GUARANTEE CONDITIONS

This guarantee is in addition to your statutory and other legal rights which will not be excluded or in any way diminished by the return of the enclosed card.

We, IAZ International (UK) Ltd, guarantee that if within twelve months of the date of the purchase, this ZANUSSI appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials we will at our option repair or replace the same **FREE OF ANY CHARGE** for labour, materials or carriage on condition that:

- The appliance has been correctly installed and used only on the electricity supply stated on rating plate.
- The appliance has been used for normal domestic purposes and in accordance with the manufacturer's operating and maintenance instructions.
- The appliance has not been serviced, maintained, repaired, taken apart or tampered with by any person not authorised by us.

- The appliance is still in the possession of the original purchaser.
- Any appliance or defective part replaced shall become our property.

This guarantee does not cover any damage caused during transportation or the replacement of any light bulbs or removable parts of glass or plastic.

Should you require service on your Zanussi appliance consult the enclosed list of service agents for your nearest Zanussi engineer. If the product is under guarantee then you will be required to produce proof of date of purchase to the engineer.

Please ensure that the enclosed pre-addressed card is stamped, completed in full and forwarded to IAZ International (UK) Ltd, to enable the guarantee to be recorded. Also complete the space below as your own record of the guarantee.

GUARANTEE RECORD

Appliance purchased from _____ on _____
Guarantee card no _____ Model no _____
Serial no _____ (These details may be taken from your Guarantee Record Card)
Your name _____
Address _____

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>