

**User  
manual**

**Washer-  
dryer**



ZWD 14581 W  
ZWD 14581 S  
ZWD 16581 W

## Thank you for selecting our appliance

We wish you lots of enjoyment with your new appliance and we hope that you will consider our brand again when purchasing household appliances.  
Please read this user manual carefully and keep it throughout the product life cycle as a reference document. The user manual should be passed on to any future owner of the appliance.

The following symbols are used in this manual:



Important information concerning your personal safety and information on how to avoid damaging the appliance.



General information and tips



Environmental information

## Content

---

Safety information	-----3	Washing	-----17
Description of the appliance	-----5	Drying	-----23
Detergent dispenser drawer	-----5	Care and cleaning	-----24
Control panel and functions	-----6	Something not working	-----27
Programme table	-----8	Technical data	-----30
Drying programmes	-----11	Consumption values	-----31
Programme information	-----12	Installation instruction	-----32
Washing and drying hints	-----13	Fitting under a counter	-----36
Before the first use	-----16	Environmental concerns	-----37
Operating Sequence	-----17	Guarantee conditions	-----38

## Safety information

In the interest of your safety and to ensure the correct use, before installing and first using the appliance, read this user manual carefully, including its hints and warnings. To avoid unnecessary mistakes and accidents, it is important to ensure that all people using the appliance are thoroughly familiar with its operation and safety features. Save these instructions and make sure that they remain with the appliance if it is moved or sold, so that everyone using it through its life will be properly informed on appliance use and safety.

### General safety

- It is dangerous to alter the specifications or attempt to modify this product in any way.
- During high temperature washing and drying programmes the door glass may get hot. Do not touch it!
- Make sure that small pets do not climb into the drum. To avoid this, please check into the drum before using.
- Any objects such as coins, safety pins, nails, screws, stones or any other hard, sharp material can cause extensive damage and must not be placed into the machine.
- Only use the advised quantities of fabric softener and detergent. Damage to the fabric can ensue if you over-fill. Refer to the manufacturer's recommendations of quantities.
- Wash small items such as socks, laces, washable belts etc in a washing bag or pillow case as it is possible for such items to slip down between the tub and the inner drum.
- Do not use your washer-dryer to wash articles with whalebones, material without hems or torn material.
- Always unplug the appliance and turn off the water supply after use, clean and maintenance.
- Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Service Centre. Always insist on genuine spare parts.

### Installation

- This appliance is heavy. Care should be taken when moving it.
- When unpacking the appliance, check that it is not damaged. If in doubt, do not use it and contact the Service Centre.
- All packing and transit bolts must be removed before use. Serious damage can occur to the product and to property if this is not adhered to. See relevant section in the user manual.
- After having installed the appliance, check that it is not standing on the inlet and drain hose and the worktop is not pressing the electrical supply cable.
- If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely.
- Always be sure, that there is no water leakage from hoses and their connections after the installation.
- If the appliance is installed in a location subject to frost, please read the «**dangers of freezing**» chapter.
- Any plumbing work required to install this appliance should be carried out by a qualified plumber or competent person.
- Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.


## Use

- This appliance is designed for domestic use. It must not be used for purposes other than those for which it was designed.
- Only wash and dry fabrics which are designed to be machine washed and dried. Follow the instructions on each garment label.
- Do not overload the appliance. See the relevant section in the user manual.
- Before washing, ensure that all pockets are empty and buttons and zips are fastened. Avoid washing frayed or torn articles and treat stains such as paint, ink, rust, and grass before washing. Underwired bras must NOT be machine washed.
- Garments which have been in contact with volatile petroleum products should not be machine washed. If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine.
- As some duvets and eiderdowns should be washed/dried in large commercial machines because of their bulk, please check with the manufacturer of the item before washing in a domestic machine.
- The users should always check that they have not left their gas lighters (disposable or otherwise) in their clothing.
- Never tumble dry items that have had contact with chemicals such as dry cleaning fluid. These are of a volatile nature and could cause an explosion.
- Only tumble dry items which have been washed in water or require airing.
- Plastic detergent dispensers should not remain in the drum during the drying cycle, as the plastic used is not designed to withstand the heat. If you wish to wash-through-to-dry you should use the conventional detergent dispenser drawer.


- Never pull the power supply cable to remove the plug from the socket; always take hold of the plug itself.
- Never use the washer-dryer if the power supply cable, the control panel, the working surface or the base are damaged so that the inside of the washer-dryer is accessible.

## Child safety

- This appliance is not intended for use by person (including children) with reduced physical sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Young children should be supervised to ensure that they do not play with the appliance.
- The packaging components (e.g. plastic film, polystyrene) can be dangerous to children - danger of suffocation! Keep them out of children's reach
- Keep all detergents in a safe place out of children's reach.
- Make sure that children or pets do not climb into the drum. To avoid this the machine incorporates special feature.

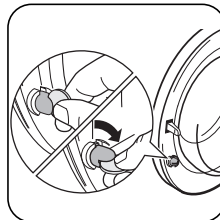

To **activate** this device, rotate the button (without pressing it) inside the door clockwise until the groove is horizontal. If necessary use a coin.

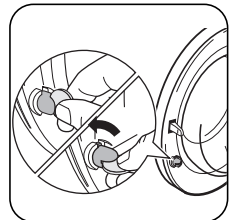


To **disable** this device and restore the possibility of closing the door, rotate the button anti-clockwise until the groove is vertical.

## Description of the appliance


Your new appliance is fitted with an automatic device which detects the laundry amount in some programmes for cotton and synthetic items and chooses the best cycles parameters for washing in an economical way. Cycle time duration, energy and water consumptions are proportional to the amount of each load.

It is ideal when washing different small quantities of laundry.

- 1** Detergent dispenser drawer
- 2** Control panel
- 3** Door opening handle
- 4** Drain pump
- 5** Adjustable feet

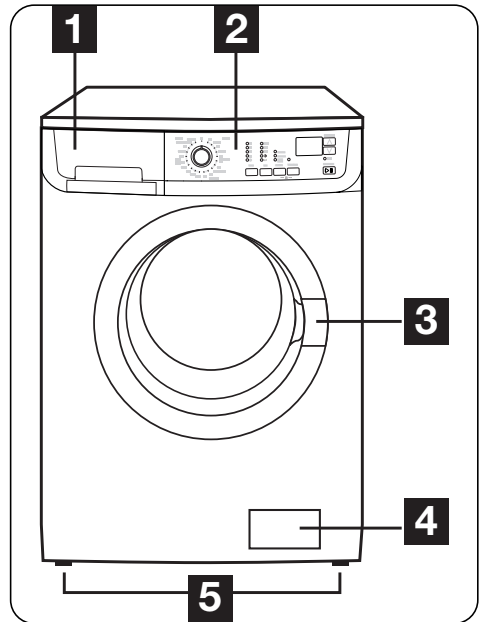

## Detergent dispenser drawer

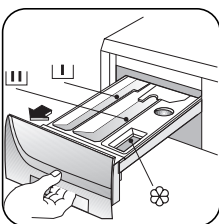


 Prewash

 Wash

 Fabric Softener

# Control panel and functions

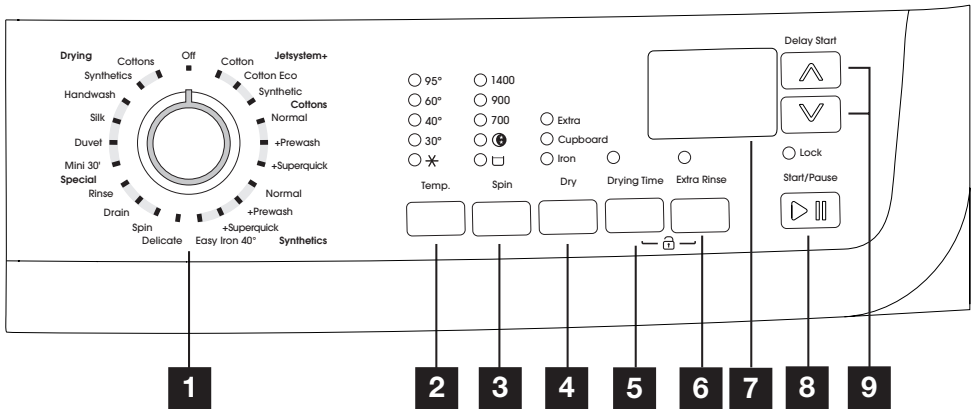

## 1 Programme selector dial and On/Off switch

- The programme selector dial allows to select a programme and/or to switch the machine on/off. It can be turned either clockwise or anticlockwise. The light Start/Pause starts to flash.

## 2 Temperature button

- Press the Temperature button repeatedly to change the temperature, if you want your laundry to be washed at a different temperature from the one proposed by the washer-dryer. Position \* corresponds to a cold wash. This option can be used for very delicate laundry. The relevant light will light up.

## 3 Spin reduction button

- Press the Spin button repeatedly to change the spin speed, if you want your laundry to be spun at a speed different from the one proposed by the washer-dryer or to select the «Night Cycle» (Night Cycle icon) or the «Rinse Hold» (Rinse Hold icon) option. The relevant light will light up.







## 4 Dry button

- By means of this button you can choose the required degree of drying for cottons and synthetics:
  - Extra dry (cottons).
  - Cupboard dry (cottons and synthetics).
  - Iron dry (cottons).
 The corresponding pilot light illuminates. The drying time is automatically adjusted by the machine: the laundry will be dried to the selected degree of dryness.

## Control panel and functions







<p><b>5</b> Drying Time button</p>	<ul style="list-style-type: none"> <li>● By depressing this button you can select a timed drying programme for cotton or synthetics, the relevant light illuminates. To select the drying time push the button until the time you want appears in the display according to the fabrics (cotton or synthetics) you have to dry. For Cottons you can select a drying time from 10 minutes to 130 minutes (2.10). For Synthetics you can select a drying time from 10 minutes to 130 minutes (2.10).</li> </ul>
<p><b>6</b> Extra Rinse button</p>	<ul style="list-style-type: none"> <li>● By means of this button, the machine performs some additional rinses.</li> </ul>
<p><b>7</b> Display</p>	<ul style="list-style-type: none"> <li>● The display shows the following information: duration of the selected programme, delayed start, incorrect option selection, alarm codes, drying time, drying cycle, washing phases, child safety lock and end of programme.</li> </ul>
<p><b>8</b> Start/Pause button</p>	<ul style="list-style-type: none"> <li>● The Start/Pause button allows to start the selected programme; the corresponding green pilot light stops flashing.</li> <li>● This button interrupts also a programme which is running, the corresponding green pilot light starts to flash.</li> </ul>
<p><b>9</b> Delay Start button</p>	<ul style="list-style-type: none"> <li>● The wash programme can be delayed from 30 min - 60 min - 90 min, 2 hours and then by 1 hour up to a maximum of 20 hours by means of this button.</li> </ul>

## Programme table - Proportional programmes

Programme/ Temperature	Type of laundry	Options	Description of programme
<b>Cotton</b> 95 - ✕ <i>PROPORTIONAL</i>	White and coloured cotton (Normally soiled): e.g. sheets, tablecloths, household linen, towels.	Spin red.   Extra Rinse	Main wash from 95°C to ✕ Cold 3 rinses Long spin
<b>Cotton Eco</b> 60-40 <i>PROPORTIONAL</i>	<b>White and fast coloured cotton</b> (normally or lightly soiled items): sheets, household linen, underwear	Spin red.   Extra Rinse	Main wash from 60°C to 40°C 2 rinses Long spin
<b>Synthetic</b> 60 - ✕ <i>PROPORTIONAL</i>	<b>Synthetic or mixed fabrics</b> , underwear, coloured garments, non-shrink shirts, blouses.	Spin red.   Extra Rinse	Main wash from 60°C to ✕ Cold 3 rinses Short spin








Cycle time duration, energy and water consumptions are proportional to the amount of load.

## Programme table

Programme/ Temperature	Type of laundry	Options	Description of programme
Cottons <b>Normal</b> 95 - ✕	<b>White and coloured cotton</b> cotton (normally soiled items): sheets, tablecloths, household linen, towels.	Spin red.   Extra rinse	Main wash from 95°C to ✕ Cold 3 rinses Long spin
Cottons <b>+ Prewash</b> 95 - ✕	<b>White and coloured cotton</b> (heavy soiled cotton items): sheets, household linen, underwear	Spin red.   Extra rinse	Prewash at 30°C Main wash from 95°C to ✕ Cold 3 rinses Long spin
Cottons <b>+ SuperQuick</b> 95 - ✕ Max load: 3.5 kg	White cotton (slightly soiled items): e.g. sheets, tablecloths, household linen, towels.	Spin red.   Extra rinse	Main wash from 95°C to ✕ Cold 2 rinses Long spin



## Programme table






 
Programme/ Temperature	Type of laundry	Options	Description of programme
Synthetics <b>Normal</b> 60 - ❄️	<b>Synthetic or mixed fabrics</b> , underwear, coloured garments, non-shrink shirts, blouses.	Spin red. 🌀  Extra rinse	Main wash from 60°C to ❄️ Cold 3 rinses Short spin
Synthetics <b>+ Prewash</b> 60 - ❄️	<b>Synthetic or mixed fabrics</b> , underwear, coloured garments, non-shrink shirts, blouses.	Spin red. 🌀  Extra rinse	Prewash at 30°C Main wash from 60° to ❄️ Cold 3 rinses Short spin
Synthetics <b>+ SuperQuick</b> 60 - ❄️ Max load: 2 kg	<b>Synthetic or mixed fabrics</b> lightly soiled	Spin red. 🌀  Extra rinse	Main wash from 60° to ❄️ Cold 2 rinses Short spin
Easy Iron 40° Max load: 2 kg	<b>Synthetic or mixed fabrics</b> to be gentle washed and spun.	Spin red.  Extra rinse	Main wash at 40° 4 rinses Short spin
Delicates 40- ❄️	<b>Delicate fabrics</b> , for example curtains.	🌀  Extra Rinse	Main wash from 40°C to ❄️ Cold 3 rinses Short spin
<b>Spin</b>	Separate spin for cottons.	Spin red.	Drain and long spin
<b>Drain</b>	For emptying out the last rinse water in programmes with the Rinse Hold  or Night Cycle 🌀 option.		Draining of water
<b>Rinse</b>	Separate rinse cycle for cotton hand washed items.	Spin red. 🌀  Extra rinse	3 rinses Long spin

Max load for Cottons .....7 kg

Max load for Synthetics .....3.5 kg

Max load for Delicates .....3.5 kg

## Programme table - Special programmes

Programme/ Temperature	Type of laundry	Options	Description of programme
<b>Mini 30'</b> 30°	Short cycle for lightly soiled fabrics		Main Wash at 30°C 2 rinses Short spin
<b>Duvet</b> 30°	Special cycle for blankets		Main Wash at 30°C 3 rinses Short spin
<b>Silk</b> 30°	Silk items to be gentle washed and spun.	 	Main wash at 30°C 2 rinses Short spin
<b>Handwash</b> 40° - 	Special programme for hand washing fabrics	Spin red.,  , 	Main wash from 40° to  Cold 3 rinses Short spin

Max load for Handwash/Duvet..... 2 kg

Max load for Mini 30'..... 2.5 kg






Max load for Silk .....1 kg

## Drying programmes

Degree of drying	Type of fabric	Max Load	Spin speed	Drying time mins
<b>Extra dry</b> Ideal for towelling materials	Cotton and linen (bathrobes, bath towels, etc)	3.5 kg	1600 rpm	95-105
			1400 rpm	100-110
		1.5 kg	1600 rpm	45-55
			1400 rpm	50-60
<b>Cupboard dry (*)</b> Suitable for items to put away without ironing	Cotton and linen (bathrobes, bath towels, etc)	3 kg	1600 rpm	85-95
			1400 rpm	90-100
		1.5 kg	1600 rpm	35-45
			1400 rpm	40-50
	Synthetics and mixed fabrics (jumpers, blouses, under- wear, household linen)	2 kg	900 rpm	70-80
		1 kg	900 rpm	35-45
<b>Iron dry</b> Suitable for ironing	Cotton and linen (sheets, tablecloths, shirts, etc.)	3.5 kg	1600 rpm	65-75
			1400 rpm	70-80
		1.5 kg	1600 rpm	30-40
			1400 rpm	35-45

(\*) The **Cupboard dry** drying programme for «**Cottons**» is the reference programme for the Energy Label data, in compliance with EC directive 92/75.

## Programme information

<b>Eco programmes</b>	This programme can be selected for slightly or normally soiled cotton items. The temperature will decrease and the washing time will be extended. This allows to obtain a good washing efficiency by saving energy.
<b>Handwash</b>	Washing programme for delicate fabrics with the «hand washing» care symbol  .
<b>Silk</b>	Delicate washing programme suitable for silk and mixed synthetics items. Washing temperature is 30°C. The maximum spin speed is automatically reduced to 700 rpm.
<b>Easy Iron</b>	Selecting this programme, the laundry is gently washed and spun to avoid any creasing. In this way ironing is easier. Furthermore the machine will perform additional rinses.
<b>Mini 30'</b>	Special program at 30°C, (the duration is approx. 30 minutes), suitable for laundry to be freshened up: e.g. a sport jacket worn only once or slightly soiled or new garments.
<b>Duvet</b>	Washing programme for a single synthetic duvet, blanket, bedspread etc. The washing temperature is 30°C. The spin is performed at 700 rpm.
<b>Rinse</b>	With this programme it is possible to rinse and spin cotton garments which have been washed by hand. The machine performs 3 rinses, followed by a final spin at maximum speed. The spin speed can be reduced by depressing Spin button.
<b>Drain</b>	For emptying out the water of the last rinse in programmes with the Rinse Hold  or Night Cycle  option. Turn first the programme selector dial to «Off», then select programme Drain and depress the Start/Pause button.
<b>Spin</b>	Separate spin for hand washed garments and after programmes with Rinse Hold  or Night Cycle  option. Before selecting this programme the selector dial must be turned to Off. You can choose the speed by means of the relevant button to adapt it to the fabrics to be spun.
<b>Off = Cancelling</b>	To reset a programme and to switch off the machine turn the selector dial to «Off». Now can a new programme be selected.

# Washing and drying hints

## Sorting the laundry

Follow the wash code symbols on each garment label and the manufacturer's washing instructions. Sort the laundry as follows: whites, coloureds, synthetics, delicates, woollens.

## Temperatures

90° or 95°	for normally soiled white cottons and linen (e.g. tea cloths, towels, tablecloths, sheets...)
50°/60°	for normally soiled, colour fast garments (e.g. shirts, night dresses, pyjamas....) in linen, cotton or synthetic fibres and for lightly soiled white cotton (e.g. underwear).
30°-40°-Cold	for delicate items (e.g. net curtains), mixed laundry including synthetic fibres and woollens bearing the label «pure new wool, machine washable, non-shrink».

## Before loading the laundry

Never wash whites and coloureds together. Whites may lose their «whiteness» in the wash.

New coloured items may run in the first wash; they should therefore be washed separately the first time.

**Make sure that no metal objects are left in the laundry (e.g. hair clips, safety pins, pins). Button up pillowcases, close zip fasteners, hooks and poppers. Tie any belts or long tapes.**

Remove persistent stains before washing. Rub particularly soiled areas with a special detergent or detergent paste.

Treat curtains with special care. Remove hooks or tie them up in a bag or net.

Avoid drying dark clothes with light coloured fluffy items such as towels as these can attract the fluff.

Remove the laundry when the appliance has finished drying.

To avoid a static charge when drying is completed, use either a fabric softener when you are washing the laundry or a fabric conditioner specifically for tumble dryers.

Particularly delicate items such as synthetic curtains, woollen and silk, garments with metal inserts, nylon stockings, bulky garments such as anoraks, bedcovers, quilts, sleeping bags and duvets must not be machine dried.

Garments padded with foam-rubber or materials similar to foam-rubber must not be machine dried; they represent a fire hazard.

Also, fabrics containing residues of setting lotions or hair sprays, nail solvents or similar solutions must not be machine dried in order to avoid the formation of harmful vapours.

For drying, follow the indications given on the manufacturer's labels.

For drying, follow the indications given on the manufacturer's labels.

- May be tumble dried
- Drying at high temperature
- Drying at reduced temperature
- Do not tumble dry

## IMPORTANT!

As a dryer, the machine works on the condensation principle.

**Therefore, the water tap must be open and the drain hose must drain water into a sink or into the drain pipe, even during the drying cycle.**

## Maximum loads

Recommended loads are indicated in the programme charts.

General rules:

**Cotton, linen:** drum full but not too tightly packed;

**Synthetics:** drum no more than half full;

**Delicate fabrics and woollens:** drum no more than one third full.

Washing a maximum load makes the most efficient use of water and energy.

For heavily soiled laundry, reduce the load size.

## Laundry weights

The following weights are indicative:

bathrobe	1200 g
napkin	100 g
quilt cover	700 g
sheet	500 g
pillow case	200 g
tablecloth	250 g
towelling towel	200 g
tea cloth	100 g
night dress	200 g
ladies' briefs	100 g
man's work shirt	600 g
man's shirt	200 g
man's pyjamas	500 g
blouse	100 g
men's underpants	100 g

## Removing stains

Stubborn stains may not be removed by just water and detergent. It is therefore advisable to treat them prior to washing.

**Blood:** treat fresh stains with cold water. For dried stains, soak overnight in water with a special detergent then rub in the soap and water.

**Oil based paint:** moisten with benzine stain remover, lay the garment on a soft cloth and dab the stain; treat several times.

**Dried grease stains:** moisten with turpentine, lay the garment on a soft surface and dab the stain with the fingertips and a cotton cloth.

**Rust:** oxalic acid dissolved in hot water or a rust removing product used cold. Be careful with rust stains which are not recent since the cellulose structure will already have been damaged and the fabric tends to hole.

**Mould stains:** treat with bleach, rinse well (whites and fast coloureds only).

**Grass:** soap lightly and treat with bleach (whites and fast coloureds only).

**Ball point pen and glue:** moisten with acetone (\*), lay the garment on a soft cloth and dab the stain.

**Lipstick:** moisten with acetone as above, then treat stains with methylated spirits. Remove any residual marks from white fabrics with bleach.

**Red wine:** soak in water and detergent, rinse and treat with acetic or citric acid, then rinse. Treat any residual marks with bleach.

**Ink:** depending on the type of ink, moisten the fabric first with acetone (\*), then with acetic acid; treat any residual marks on white fabrics with bleach and then rinse thoroughly.

**Tar stains:** first treat with stain remover, methylated spirits or benzine, then rub with detergent paste.

(\* ) do not use acetone on artificial silk.

## Detergents and additives

Good washing results also depend on the choice of detergent and use of the correct quantities to avoid waste and protect the environment. Although biodegradable, detergents contain substances which, in large quantities, can upset the delicate balance of nature.

The choice of detergent will depend on the type of fabric (delicates, woollens, cottons, etc.), the colour, washing temperature and degree of soiling.


All commonly available washer-dryer detergents may be used in this appliance:


- powder detergents for all types of fabric,
- powder detergents for delicate fabrics (60°C max) and woollens,
- liquid detergents, preferably for low temperature wash programmes (60°C max) for all types of fabric, or special for woollens only.

The detergent and any additives must be placed in the appropriate compartments of the dispenser drawer before starting the wash programme.

If using concentrated powder or liquid detergents, a programme **without** prewash must be selected.

The washer-dryer incorporates a recirculation system which allows an optimal use of the concentrated detergent.

Pour liquid detergent into the dispenser drawer compartment marked  **just before** starting the programme.

Any fabric softener or starching additives must be poured into the compartment marked  before starting the wash programme.

Follow the product manufacturer's recommendations on quantities to use and **do not exceed the «MAX» mark in the detergent dispenser drawer.**

### Quantity of detergent to be used

The type and quantity of detergent will depend on the type of fabric, load size, degree of soiling and hardness of the water used.

Water hardness is classified in so-called «degrees» of hardness. Information on hardness of the water in your area can be obtained from the relevant water supply company, or from your local authority.

Follow the product manufacturers' instructions on quantities to use.

### Degrees of water hardness

Follow the product manufacturers' instructions on quantities to use.

Use less detergent if:

- you are washing a small load,
- the laundry is lightly soiled,
- large amounts of foam form during washing.

Level	Characteristic	Degrees	
		German °dH	French °T.H.
1	soft	0-7	0-15
2	medium	8-14	16-25
3	hard	15-21	26-37
4	very hard	> 21	> 37

## Before the first use


### **WARNING!**

Ensure that the electrical and water connections comply with the installation instructions.

### **IMPORTANT!**

Remove the polystyrene block and any material from the drum.

### **Child safety lock**

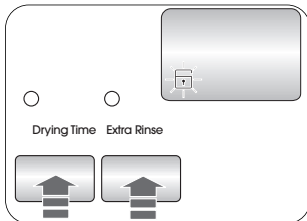


This device permits you to leave the appliance unsupervised without having the worry that children might be injured by or cause damage to the appliance.

This function remains able also when the washer-dryer is not working.

There are two different ways to set this option:

- before pressing the «Start/Pause»: it will be impossible to start the machine.
- after pressing the «Start/Pause» it will be impossible to change any other programme or option.


To enable (disable) this option press simultaneously for about 6 seconds «Drying Time» and «Extra Rinse» buttons until the icon  appears (disappears) on (from) the display.

### **Acoustic signals**

The machine is provided of an acoustic device, which sounds in the following cases:

- at the end of the cycle
- in the event of operating problems


By pressing the «Dry» and «Drying Time» buttons simultaneously for about 6 seconds, the acoustic signal is deactivated (except for the events of operating problems).

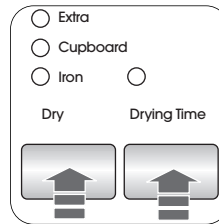

By pressing these 2 buttons again, the acoustic signal is reactivated.





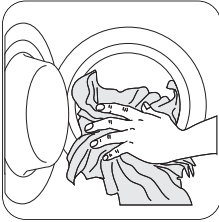

# Operating sequence




**1. Load the laundry**  
Open the door by carefully pulling the door handle outwards. Place the laundry in the drum, one item at a time, shaking them out as much as possible. Close the door.

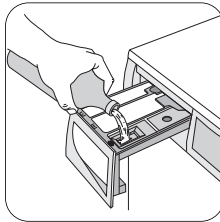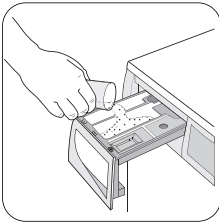
## 2. Measure out the detergent and the fabric softener



Pull out the dispenser drawer until it stops. Measure out the amount of detergent required, pour it into the main wash compartment  and, if you wish to carry out the prewash phase, pour it into the compartment marked .

If required, pour fabric softener into the compartment marked  (the amount used must not exceed the «MAX» mark in the drawer). Close the drawer gently.

## 3. Select the required programme

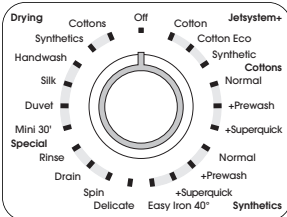

The selector dial is divided into the following sections:

- **Jetsystem+** (Proportional programmes),
- **Cottons** (Normal programmes),

- **Synthetics**,
- **Delicates**,
- **Special**,
- **Drying**

The green Start/Pause light starts to flash. The selector dial can be turned either clockwise or anticlockwise.


Position «Off» to Reset programme/Switching OFF of the machine.


**At the end of the programme the selector dial must be turned to position «Off», to switch the machine off.**
 
### **IMPORTANT!**

If you turn the programme selector dial to another programme when the machine is working, the **red** Start/Pause pilot light will flash 3 times and the message **Err** is displayed on the display to indicate a wrong selection. The machine will not perform the new selected programme.

## 4. Select the temperature

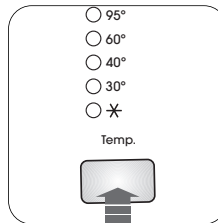


Press this button repeatedly to increase or decrease the temperature, if you want your laundry to be washed at a temperature different from the one proposed by the washing machine. Maximum temperatures are 95°C for Cottons, 60°C for Synthetics, 40°C for Easy Iron, Delicate, Handwash, 30°C for Silk, Duvet and Mini 30', while  corresponds to cold wash.


# Operating sequence

## 5. Select the spin speed or Night Cycle ☾ or Rinse Hold ☐ option

ZWD 14581W - S

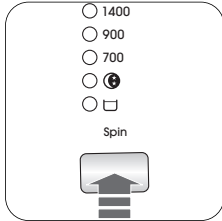

ZWD 16581W

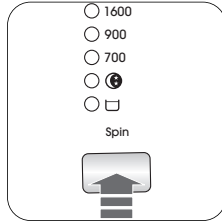

Press the «Spin» button repeatedly to change the spin speed, if you want your laundry to be spun at a speed different from the one proposed by the appliance. The relevant light will light up.

Maximum speeds are:

- Cottons: 1600, 1400 rpm depending on the model;
- Synthetics, Handwash: 900 rpm
- Delicates, Mini 30', Silk and Duvet: 700 rpm;

**Night Cycle ☾**: by selecting this option, the machine will not drain the water of the last rinse, so as not to crease the laundry. As all spinning phases are suppressed, this washing cycle is very noiseless and it can be selectionned at night or in times with a more economical power rate.

On Cotton, Synthetics, Delicates, Silk programmes the rinses will be performed with more water.

When the programme has finished, the Start/Pause light goes off, the display shows a flashing zero «0.00», the «Lock» light is alight and the door is blocked to indicate that the water must be emptied out.

**Rinse Hold ☐**: by selecting this option the water of the last rinse is not emptied out to prevent the fabrics from creasing.

When the programme has finished, the Start/Pause light goes off, on the display appears a flashing zero «0.00», the «Lock» light is alight and the door is locked to indicate that the water must be emptied out.

### To empty out the water:

1. turn the programme selector dial to «Off»
2. select the **Drain** or **Spin** programme
3. reduce the spin speed if needed, by means of the relevant button
4. depress Start/Pause button
5. at the end of programme, the display shows a flashing zero «0.00» and the «Lock» light goes off (and it will be possible to open the door).

### Programme Option buttons


Depending on the programme, different functions can be combined. These must be selected after choosing the desired programme and before depressing the «Start/Pause» button.

In any case, if an option is chosen that is not allowed with the selected programme or option, the message **Err** will be displayed on the display for few seconds, and the integrated **red** «Start/Pause» light start flashing.

### IMPORTANT!

For the compatibility of the options with the washing programmes, please refer to the «Programme table».

## 6. Select Dry option

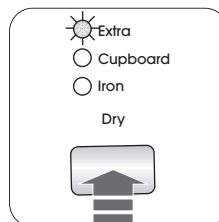


By means of this button you can choose the required degree of drying for cottons and synthetics:

## Operating sequence

- Extra dry (cottons).
- Cupboard dry (cottons and synthetics).
- Iron dry (cottons).

The corresponding pilot light illuminates. The drying time is automatically adjusted by the machine: the laundry will be dried to the selected degree of dryness.

### 7. Select the Drying Time

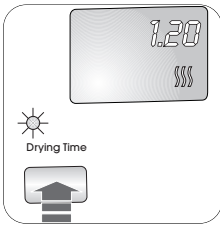


By depressing this button you can select a timed programme for cotton or synthetics. The relevant light illuminates.

For **Cottons** and **Synthetics** you can select a drying time from 10 minutes to 130 minutes (2.10). Every time you press the button the time increases by 5 mins.

#### Note!

The programme time will automatically increase by up to 2 minutes. this is quite normal.

### 8. Select the Extra Rinse option

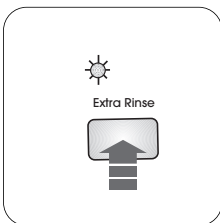

This option is recommended for people who are allergic to detergents, and in areas where the water is very soft. The machine performs some additional rinses.

This option can be selected with all programmes except some programmes. (See the programme table).

### 9. Display

The display shows the following information:

#### Duration of the selected programme

After selecting a programme, the duration is displayed in hours and minutes (for example 2.05). The duration is calculated automatically on the basis of the maximum recommended load for each type of fabric.



After the programme has started, the time remaining is updated every minute.

#### ATTENTION!

When selecting the «proportional» programmes, the display shows the washing duration of the maximum recommended load. After the Start/Pause has been pressed, on the display appears an arrows animation indicating that the appliance is calculating the laundry amount and the real duration. During this time, the washing duration shown decreases.



○ Lock



When the calculating phase has finished, the arrows animation disappears from the display and the washing time is adjusted to the real load.

#### Washing programme phase icons

By selecting the wash programme, the washing programme phase icons corresponding to the various phases making up the programme are shown in the bottom of the display.

## Operating sequence



After the machine has started, only the running icon stays on. When the programme has finished, a flashing zero «0.00» is displayed.

### Delayed start

The selected delay (20 hours max) set by means of the relevant button appears on the display for about 3 seconds, then the duration of the previously selected programme is displayed.



The delay time value decreases by one unit every hour and then, when 1 hours remain, the time decreases every minute.

### Incorrect option selection



If an option which is not compatible with the set wash programme is selected, the message **Err** is displayed for about 2 seconds and

the integrated red Start/Pause light start flashing.


### Alarm codes



In the event of operating problems, some alarm codes can be displayed, for example **E20** (see paragraph «Something

not working»).


### Drying phase

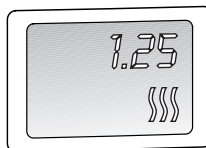

During the drying phase the display shows the drying icon illuminated and the selected drying time to indicate that the appliance has started the drying phase.

### 10. Select the Start/Pause

To start the selected programme, press the Start/Pause button; the corresponding green pilot light stops flashing.

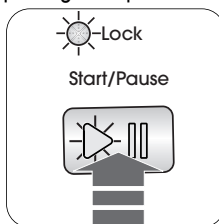

The «Lock» light illuminates to indicate that the appliance starts operating and the door is locked.

The «Lock» pilot light indicates if the door can be opened:

- Light on: the door cannot be opened. The appliance is in function.
- Light off: the door can be opened. The washing programme is finished.

When the programme has finished, the «Lock» light goes off.

To **interrupt** a programme which is running, depress the Start/Pause button: the corresponding green pilot light starts to flash.

To **restart** the programme from the point at which it was interrupted, press the Start/Pause button again.


If you have chosen a delayed start, the machine will begin the countdown.



# Operating sequence

## **IMPORTANT!**

If an incorrect option is selected, the red pilot light of the Start/ Pause button flashes for 3 times and the message Err is displayed for about 2 seconds.
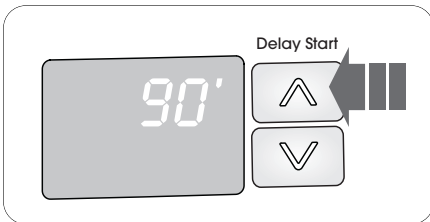
### **11. Select the Delay Start**



Before you start the programme, if you wish to delay the start, press repeatedly the «Delay Start» buttons  and , to select the desired delay.

The selected delay time value (up to 20 hours) will appear on the display for about 3 seconds, then the duration of the programme will appear again.

You must select this option after you have set the programme and before you press the Start/Pause button.

The wash programme can be delayed from 30 min - 60 min - 90 min, 2 hours and then by 1 hour up to a maximum of 20 hours by means of this button.

### **Selecting the delayed start:**

 
- Select the programme and the required options.
- Select the delay start.
- Depress «Start/Pause» button: the machine starts its hourly countdown.

The programme will start after the selected delay has expired.

### **Canceling the delayed start:**

You can cancel the delay time at any moment, before you press the Start/Pause button.

If you have already pressed the Start/Pause button, and you wish to cancel the delay time, proceed as follows:

- set the washing machine to PAUSE by pressing the Start/Pause button;
- press the Delay Start buttons once until the symbol  is displayed.
- press the Start/Pause button again to start the programme.

## **IMPORTANT!**

The door will be locked throughout the delay time. If you need to open the door, you must first set the washing machine to PAUSE by pressing the Start/Pause button, wait until the «Lock» pilot light goes off. After you have closed the door, press the Start/Pause button again.

### **Note!**

**The Delay Start cannot be selected with Drain programme.**

### **Altering an option or a running programme**

It is possible to change any option before the programme carries it out.

Before you make any change, you must pause the washer-dryer by pressing the Start/Pause button.

Changing a running programme is possible only by resetting it. Turn the programme selector dial to Off and then to the new programme position. The washing water in the tub will not emptied out. Start the new programme by depressing the Start/Pause button again.

# Operating sequence

---

## Interrupting a programme

Depress the Start/Pause button to interrupt a programme which is running, the corresponding light starts to flash. Depress the button again to restart the programme.

## Cancelling a programme

Turn the selector dial to Off to cancel a programme which is running. Now you can select a new programme.

## Opening the door after the programme has started

First set the machine to pause by pressing the Start/Pause button.

If the «Lock» light goes off, the door can be opened.



If the «Lock» light goes on, this means that the machine is already heating, that the water level is above the bottom edge of the door or that the drum is turning.

In this case the door can not be opened.

If you cannot open the door but you need to open it you have to switch the machine off by turning the selector dial to «Off». After about 3 minutes the door can be opened (pay attention to the water level and temperature!).

## At the end of the programme

The machine stops automatically. The Start/Pause and «Lock» lights go off, and on the display will appear a flashing «0.00». The door can be opened.

If the  «Rinse hold» or  «Night Cycle» option has been selected, the Start/Pause light is off and «Lock» pilot light illuminates. The door remains locked to indicate that the water must be emptied out before opening the door. The display will show a flashing «0.00».

To empty out the water please read the steps on the Rinse Hold option paragraph.

Turn the programme selector dial to «Off» to switch the machine off.

Remove the laundry from the drum and carefully check that the drum is empty.

If you do not intend to carry out another wash, close the water tap. Leave the door open to prevent the formation of mildew and unpleasant smells.

# Drying


## Drying 3.5 kg of Cottons

You have for example just machine-washed and spun at 1400 rpm 7 kg of laundry.

They are cotton fabrics of medium weight which you want to iron as soon as they are dry.

Turn the selector dial to the «Off» position to switch the machine off. Then remove the laundry from the appliance and divide the items to obtain two loads of approx. 3.5 kg each. The water tap must be open and the drain hose must be positioned in the sink or connected to the drain pipe.

1. Load the laundry.
2. Turn the selector dial to «Cottons» programme in the «Drying» sector.
3. For an electronic drying, depress «Dry» button until the «Iron» pilot light illuminates. Then select the desired dryness degree.
4. For an electronic drying, depress the «Drying Time» button until the time you want appears on the display (see the drying programmes).

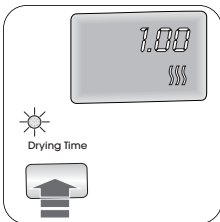

5. Press the «Start/Pause» button to start the programme.
6. At the end of the programme, the buzzer sounds. Three flashing zeroes «0.00» will appear on the display. At this point, begins an «anti-crease phase», which lasts for about 10 minutes. The door can be opened only at the end of this phase.

### Note!

If you wish to open the door before the anti-crease phase or to interrupt it, press any key or turn the programme selector dial to any

programme position (except «Off»), the door can be immediately opened.

6. Turn the selector dial to the «Off» position to switch the machine off. Remove the laundry.

## Autodrying 2 kg of synthetics (NON-STOP programme)

You intend to wash and dry automatically 2 kg of synthetics which do not need ironing.

### Warning!

For NON-STOP programmes, it is also essential not to exceed the maximum load sizes of 3.5 kg for cotton and 2 kg for synthetics.

### Do not use a dosing device/ball when carrying out a washing & drying programme.

1. Load the laundry.
2. Add detergent and fabric softener.
3. Switch the machine on by turning the selector dial to the selected wash programme/fabric.
4. Select the drying time (see the drying programmes) or the dryness degree.
5. Select the required options by means of the relevant buttons. If possible, do not select a spin speed lower than that proposed by the appliance to avoid a too long drying time so saving energy.

In any case the reduction of the spin speed is only possible after selecting drying.

The lowest values **with timed drying** you can select are the following:

- 900 r.p.m. for cottons
  - 700 r.p.m. for synthetics using drying timed
6. Start the programme by depressing the «Start/Pause» button.
  7. At the end of the programme Turn the selector dial to the «Off» position to switch the machine off.
  8. Remove the laundry.

# Care and cleaning

## **IMPORTANT!**

You must DISCONNECT the appliance from the electricity supply, before you can carry out any cleaning or maintenance work.

## **Descaling**

The water we use normally contains lime. It is a good idea to periodically use a water softening powder in the machine. Do this separately from any laundry washing, and according to the softening powder manufacturer's instructions. This will help to prevent the formation of lime deposits.

## **Maintenance Wash**

With the use of low temperature washes it is possible to get a build up of residues inside the drum.

We recommend that a maintenance wash be performed on a regular basis.

To run a maintenance wash:


- The drum should be empty of laundry.
- Select the hottest cotton wash programme.
- Use a normal measure of detergent, must be a powder with biological properties.

## **External cleaning**

Clean the exterior cabinet of the appliance with soap and water only, and then dry thoroughly.

## **Cleaning the dispenser drawer**


The washing powder and additive dispenser drawer should be cleaned regularly.

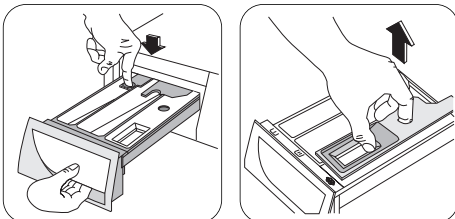

To aid cleaning, the top part of the additive compartment should be removed.

Remove the drawer by pressing the catch downwards and by pulling it out. Flush it out under a tap, to remove any traces of accumulated powder.

## **Cleaning the drawer recess**

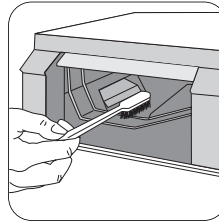

Having removed the drawer, use a small brush to clean the recess, ensuring that all washing powder residue is removed from the upper and lower

part of the recess.

Replace the drawer and run the rinse programme without any clothes in the drum.

## **Cleaning the pump**

The pump should be inspected if


- the machine does not empty and/or spin
- the machine makes an unusual noise during draining due to objects such as safety pins, coins etc. blocking the pump.

Proceed as follows:


- disconnect the appliance.
- if the appliance is operating, wait, if necessary, until the water has cooled down.
- open the pump door levering on the groove with a coin or with the suitable tool, that you can find in the bag containing the instruction booklet (or fitted on the appropriate recess behind the detergent dispenser drawer depending on the model).
- place a bowl with a small edge close to the pump to collect any spillage




## Care and cleaning

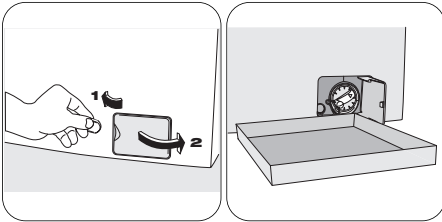



- pull out the emergency emptying cap from the filter cover, using a pliers.
- when no more water comes out, unscrew the pump cover, using a pliers, and remove the filter. Always keep a rag nearby to dry up spillage of water when removing the cover.

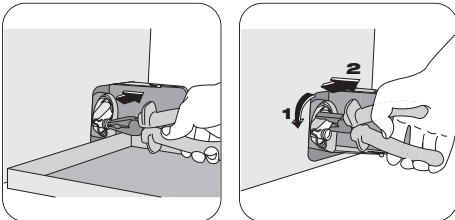

- Remove any objects from the pump impeller by rotating it.

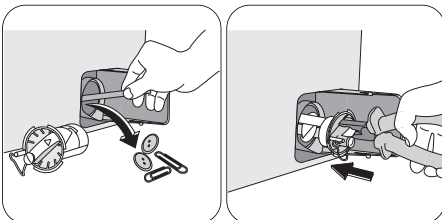

- replace the emergency emptying cap into the filter cover and fix it firmly.

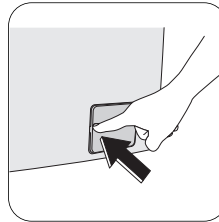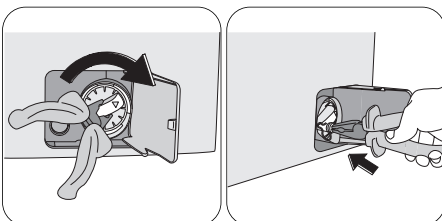


- Close the pump door.

### **IMPORTANT!**

When the appliance is in use and depending on the programme selected there can be hot water in the pump. Never remove the pump cover during a wash cycle, always wait until the appliance has finished the cycle, and is empty. When replacing the cover, ensure it is securely retightened so as to stop leaks and young children being able to remove it.

### **Cleaning the water inlet filter**

If your water is very hard or contains traces of lime deposit, the water inlet filter may become clogged. It is therefore a good idea to clean it from time to time.

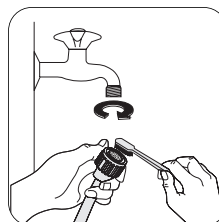

Turn off the water tap. Unscrew the water inlet hose. Clean the filter using a hard bristle brush. Tighten up the inlet hose.

# Care and cleaning

## The dangers of freezing

If the machine is exposed to temperatures below 0°C, certain precautions should be taken:

- pull out the plug from the power socket;
- turn off the water tap.
- unscrew the inlet hose.
- place a bowl with a small edge close to the pump to collect any spillage from the emergency emptying hose.  
Place the end of the inlet hose in a bowl placed on the floor and let water drain out.
- screw the water inlet hose back on and reposition the emergency emptying cap on again into the filter cover.
- when you intend to start the machine up again, make sure that the room temperature is above 0°C.

## Emergency emptying out

If the water is not discharged, proceed as follows to empty out the machine:

- pull out the plug from the power socket;
- close the water tap;
- if necessary, wait until the water has cooled down;
- open the pump door using the suitable tool;

- place a bowl with a small edge close to the pump to collect any spillage. Remove the emergency emptying cap from the filter cover. The water should drain by gravity into the bowl. When the bowl is full, put the cap back on filter cover. Empty the bowl. Repeat the procedure until water stops flowing out;
- clean the pump if necessary as previously described;
- replace the filter into the pump and screw it firmly as previously described;
- replace the emergency emptying cap into the filter cover and close the pump door.

# Something not working


## **IMPORTANT!**



Certain problems are due to lack of simple maintenance or oversights, which can be solved easily without calling out an engineer. Before contacting your local Service Centre, please carry out the checks listed below.

During machine operation it is possible that the **red** Start/Pause pilot light flashes, the buzzer sounds and one of the following alarm codes appears on the display to indicate that the machine is not working.

- **E10**: problem with the water supply
- **E20**: problem with water draining
- **E40**: door open.


Once the problem has been eliminated, press the Start/Pause button to restart the programme. If after all checks, the problem persists, contact your local Service Centre.

Malfunction	Possible Cause / Solution
<p><b>The washer-dryer does not start:</b></p>	<p>The door has not been closed. <b>E40</b></p> <ul style="list-style-type: none"> <li>• Close firmly the door.</li> </ul> <p>The plug is not properly inserted in the power socket.</p> <ul style="list-style-type: none"> <li>• Insert the plug into the power socket.</li> </ul> <p>There is no power at the socket.</p> <ul style="list-style-type: none"> <li>• Please check your domestic electrical installation.</li> </ul> <p>The main fuse or the plug fuse has blown.</p> <ul style="list-style-type: none"> <li>• Replace the fuse.</li> </ul> <p>The selector dial is not correctly positioned and the Start/Pause button has not been depressed.</p> <ul style="list-style-type: none"> <li>• Please turn the selector dial and press the Start/Pause button again.</li> </ul> <p>The delay start has been selected.</p> <ul style="list-style-type: none"> <li>• If the laundry are to be washed immediately, cancel the delay start.</li> </ul> <p>The «Child Safety Lock»  function has been selected.</p> <ul style="list-style-type: none"> <li>• Disable the «Child Safety Lock» fonction.</li> </ul>
<p><b>The machine does not fill:</b></p>	<p>The water tap is closed. <b>E10</b></p> <ul style="list-style-type: none"> <li>• Open the water tap.</li> </ul> <p>The inlet hose is squashed or kinked. <b>E10</b></p> <ul style="list-style-type: none"> <li>• Check the inlet hose connection.</li> </ul> <p>The filter in the inlet hose is blocked. <b>E10</b></p> <ul style="list-style-type: none"> <li>• Clean the water inlet hose filter.</li> </ul> <p>The door is not properly closed. <b>E40</b></p> <ul style="list-style-type: none"> <li>• Close firmly the door.</li> </ul>

Malfunction	Possible Cause / Solution
<b>The machine fills then empties immediately:</b>	<p>The end of the drain hose is too low.</p> <ul style="list-style-type: none"> <li>Refer to relevant paragraph in «water drainage» section.</li> </ul>
<b>The machine does not empty and/or does not spin:</b>	<p>The drain hose is squashed or kinked. <i>E20</i></p> <ul style="list-style-type: none"> <li>Check the drain hose connection.</li> </ul> <p>The drain pump is clogged. <i>E20</i></p> <ul style="list-style-type: none"> <li>Clean the drain pump.</li> </ul> <p>The option  or  has been selected.</p> <ul style="list-style-type: none"> <li>Select the Drain or Spin programmes</li> </ul> <p>The laundry is not evenly distributed in the drum.</p> <ul style="list-style-type: none"> <li>Redistribute the laundry.</li> </ul>
<b>There is water on the floor:</b>	<p>Too much detergent or unsuitable detergent (creates too much foam) has been used.</p> <ul style="list-style-type: none"> <li>Reduce the detergent quantity or use another one.</li> </ul> <p>Check whether there are any leaks from one of the inlet hose fittings. It is not always easy to see this as the water runs down the hose; check to see if it is damp.</p> <ul style="list-style-type: none"> <li>Check the water inlet hose connection.</li> </ul> <p>The inlet hose is damaged.</p> <ul style="list-style-type: none"> <li>Change it with a new one.</li> </ul> <p>The cap on the emergency emptying hose has not been replaced after cleaning the pump.</p> <ul style="list-style-type: none"> <li>Put the cap back on the emergency emptying and place the latter back in its seat.</li> </ul>
<b>Unsatisfactory washing results:</b>	<p>Too little detergent or unsuitable detergent has been used.</p> <ul style="list-style-type: none"> <li>Increase the detergent quantity or use another one.</li> </ul> <p>Stubborn stains have not been treated prior to washing.</p> <ul style="list-style-type: none"> <li>Use commercial products to treat the stubborn stains.</li> </ul> <p>The correct temperature was not selected.</p> <ul style="list-style-type: none"> <li>Check if you have selected the correct temperature.</li> </ul> <p>Excessive laundry load.</p> <ul style="list-style-type: none"> <li>Introduce into the drum less laundry.</li> </ul>

Malfunction	Possible Cause / Solution
<b>The door will not open:</b>	The programme is still running. <ul style="list-style-type: none"> <li>• Wait the end of washing cycle.</li> </ul> The door lock has not been released. <ul style="list-style-type: none"> <li>• Wait about 2 minute.</li> </ul> There is water in the drum. <ul style="list-style-type: none"> <li>• Select drain or spin programme to empty out the water.</li> </ul>
<b>The machine vibrates or is noisy:</b>	The transit bolts and packing have not been removed. <ul style="list-style-type: none"> <li>• Check the correct installation of the appliance.</li> </ul> The support feet have not been adjusted. <ul style="list-style-type: none"> <li>• Check the correct levelling of the appliance.</li> </ul> The laundry is not evenly distributed in the drum. <ul style="list-style-type: none"> <li>• Redistribute the laundry.</li> </ul> Maybe there is very little laundry in the drum. <ul style="list-style-type: none"> <li>• Load more laundry.</li> </ul>
<b>Spinning starts late or the machine does not spin:</b>	The electronic unbalance detection device has cut in because the laundry is not evenly distributed in the drum. The laundry is redistributed by reverse rotation of the drum. This may happen several times before the unbalance disappears and normal spinning can resume. If, after 10 minutes, the laundry is still not evenly distributed in the drum, the machine will not spin. In this case, redistribute the load manually and select the spin programme. <ul style="list-style-type: none"> <li>• Redistribute the laundry.</li> </ul>
<b>The machine makes an unusual noise</b>	The machine is fitted with a type of motor which makes an unusual noise compared with other traditional motors. This new motor ensures a softer start and more even distribution of the laundry in the drum when spinning, as well as increased stability of the machine.
<b>No water is visible in the drum</b>	Machines based on modern technology operate very economically using very little water without affecting performance.

If you are unable to identify or solve the problem, contact our service centre. Before telephoning, make a note of the model, serial number and purchase date of your machine: the Service Centre will require this information.

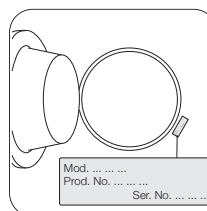

## Technical data

Dimensions	Width	60 cm
	Height	85 cm
	Depth (including the porthole)	63 cm
Electrical connection Voltage - Overall power - Fuse	Information on the electrical connection is given on the rating plate on the inner edge of the appliance door	
Water supply pressure	Minimum	0,05 MPa
	Maximum	0,8 MPa
Maximum Load	Cotton	7 kg
	Synthetics	3.5 kg
	Easy Iron 40°	2 kg
	Delicates	3.5 kg
	Handwash/Duvet	2 kg
	Mini 30'	2.5 kg
	Silk	1 kg
Spin Speed	Maximum	1400 rpm (ZWD14581W- ZWD14581S)
		1600 rpm (ZWD16581W)

## Consumption values

Programme	Energy consumption (in kWh)	Water consumption (in litres)	Programme duration
Cottons Normal 95° - ✕	2.1	62	<b>For the duration of the programmes, please refer to the display on the control panel.</b>
Cottons Prewash 95°C - ✕	2.3	74	
Cottons Superquick 95 - ✕	1.4	45	
Synthetics Normal 60°C - ✕	0.9	54	
Synthetics Prewash 60°C - ✕	1.05	64	
Synthetics Superquick 60°C- ✕	0.7	55	
Easy Iron 40°C	0.45	63	
Delicates 40°C	0.55	63	
Mini 30'	0.25	48	
Duvet 30°C	0.35	75	
Silk 30°C	0.25	50	
Handwash 40°C - ✕	0.4	62	
Rinse	0.1	46	
Drain	-	-	
Spin	-	-	
Cotton Eco 60°C	1.19	56	

### **Infos**

The consumption data shown on this chart is to be considered purely indicative, as it may vary depending on the quantity and type of laundry, on the inlet water temperature and on the ambient temperature. It refers to the highest temperature for each wash programme.



(\*) The «Cotton Eco at 60°C» is the reference programme for the data entered in the energy label, in compliance with EEC 92/75 standards.

# Installation instruction



## Unpacking

All transit bolts and packing must be removed before using the appliance.



You are advised to keep all transit devices so that they can be refitted if the machine ever has to be transported again.

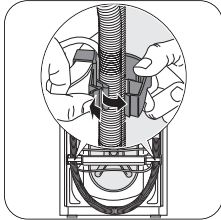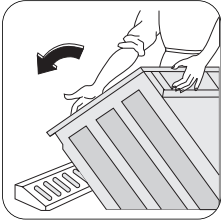



1. After removing all the packaging, carefully lay machine on it's back to remove the polystyrene base from the bottom.
2. Remove the power supply cable and the draining hose from the hose holders on the rear of the appliance.

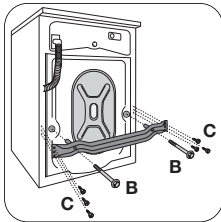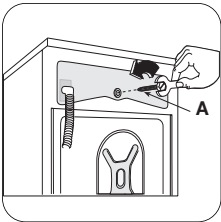

3. With a suitable spanner unscrew and remove the central rear bolt **A**.
4. Unscrew and remove the two large rear bolts **B** and the six smaller bolts **C**.

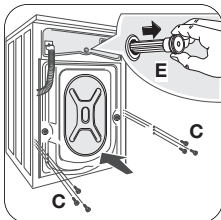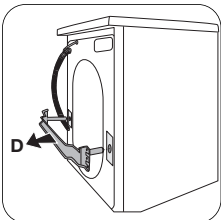

5. Remove the bracket **D**, refit the six smaller bolts **C** and slide out the relevant plastic spacer **E**.

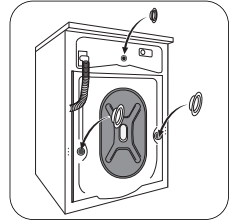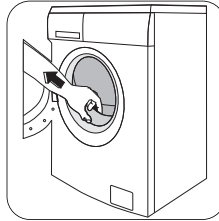

6. Open the porthole, take out the inlet hose from the drum and remove the polystyrene block fitted with the adhesive tape on the door seal. Open the porthole, take out the inlet hose from the drum and remove the polystyrene block fitted with the adhesive tape on the door seal.
7. Fill the smaller upper hole and the two large ones with the corresponding plastic plug caps supplied in the bag containing the instruction booklet.


## Positioning

Install the machine on a flat hard floor. Make sure that air circulation around the machine is not impeded by carpets, rugs etc. Check that the machine does not touch the wall or other kitchen units. Level the washer-dryer by raising or lowering the feet. The feet may be tight to adjust as they incorporate a self locking nut, but the machine **MUST** be level and stable. If necessary, check the setting with a spirit level.

Any necessary adjustment can be made with a spanner.

Accurate levelling prevents vibration, noise and displacement of the machine during operation. Never place cardboard, wood or similar materials under the machine to compensate for any unevenness in the floor.



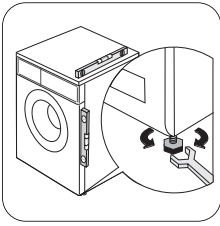


**Water inlet**

An inlet hose is supplied and can be found inside the machine drum.

**Do not use the hose from your previous machine to connect to the water supply.**

1. Open the porthole and extract the inlet hose.
2. Connect the hose with the angled connection to the machine.

**Do not place the inlet hose downwards. Angle the hose to the left or right depending on the position of your water tap.**

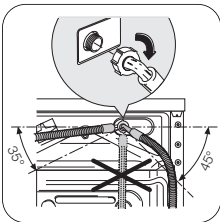

3. Set the hose correctly by loosening the ring nut. After positioning the inlet hose, be sure to tighten the ring nut again to prevent leaks.

4. Connect the hose to a tap with a 3/4" thread. Always use the hose supplied with the appliance. The inlet hose must not be lengthened. If it is too short and you do not wish to move the tap, you will have to purchase a new, longer hose specially designed for this type of use.



**NOTE**  
**Installation should comply with local water authority and building regulations' requirements.**

The appliance must be connected to a cold water supply.

A minimum water pressure of 0.05 MPa (0.5 bar) is required for safe operation of the appliance.



If you cannot make the cold water connection direct from the rising mains, you may be able to operate the appliance from your cold water storage system.

There should be a minimum distance of 5.02m (16.5 ft) between the appliance's inlet and the bottom of the water storage tank.

**Water drainage**


This appliance is designed to be permanently plumbed into your home's drainage system using one of the following methods.

**1. Into a drainage standpipe.**

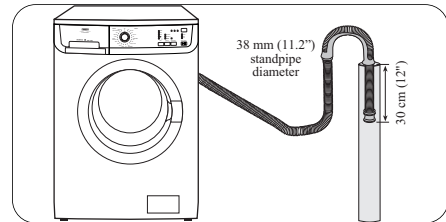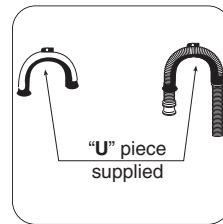


Firstly form a hook in the end of the drain hose using the «U» piece supplied. Place the drain hose into your standpipe, which should have an internal diameter of approximately 38mm thus ensuring there is an air break between the drain hose and standpipe.

When discharging into a standpipe ensure that the top of the standpipe is no more than 90 cm (35.4") and no less than 60 cm (23.6") above floor level.

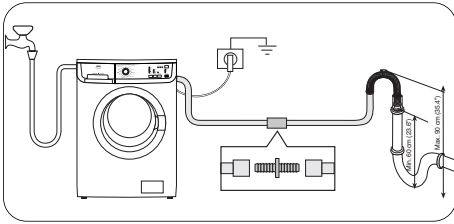



The drain hose may be extended to a maximum of 4 metres. An additional drain hose and joining piece is available from your local Service Force Centre. The joining piece must have an internal diameter of 18mm.

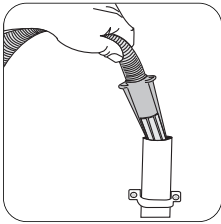

If your drain hose looks like this (see below) you do not require the «U» piece. Just push the hose firmly into the standpipe.

## 2. Onto a sink outlet spigot.

If the outlet spigot has not been used before, remove any blanking plug that may be in place.

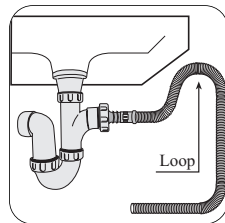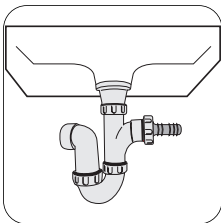


Push the drain hose onto the spigot and secure with a clip if required, ensure a loop is formed in the drain hose (see diagram) to prevent waste from the sink entering the washer-dryer.

### **Important!**

Before connecting the machine to new pipework or to pipework that has not been used for some time, run off a reasonable amount of water to flush out any debris that may have collected in the pipes.

## Levelling

Level the washer-dryer by raising or lowering the feet. The feet may be tight to adjust as they incorporate a self locking nut, but the machine **MUST** be level and stable.

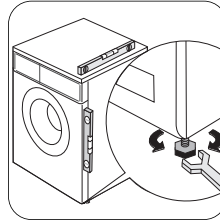

Any necessary adjustment can be made with a spanner. Accurate levelling prevents vibration, noise and displacement of the

machine during operation.

Some vibration is inevitable, especially if mounted on a wooden floor.

Sprung wooden floors are particularly susceptible to vibration. For advice, consult a builder. If possible, always place the machine on a solid floor.

## Special conditions

If the floor is carpeted or covered with crumbly or soft material, insert a rigid support base under the feet to prevent noise, vibration or displacement. The base should protrude a few centimetres beyond the edges of the machine.

### **! WARNING!**

The machine should **NOT** be placed on deep pile carpeting.


### **NOTE**

Please ensure that when the appliance is installed it is easily accessible for the engineer in the event of a breakdown.

## In the interest of the environment

washer-dryers and dishwashers should be connected to the FOUL drainage system, the water will then be taken to a sewage works for treatment before being discharged safely into a river. It is essential that these appliances are not connected to the surface water drainage system as this water is discharged directly into a river or stream and may cause pollution.

If you require any further advice please contact your local water authority.

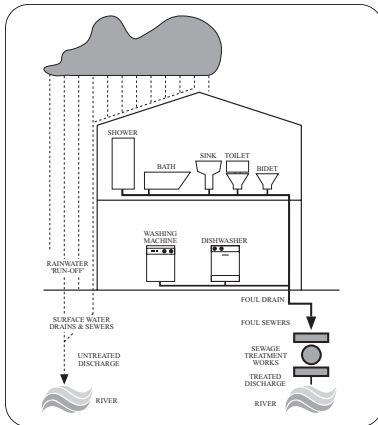

**Electrical connection**

Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.

**! WARNING!**

**This appliance must be earthed. The manufacturer declines any liability should this safety measure not be observed.**

Before switching on, make sure the electricity supply voltage is the same as that indicated on the appliance's rating plate.

**IMPORTANT!**


**Information on the electrical connection is given on the rating plate on the inner edge of the appliance door.**

The appliance is supplied with a 13amp plug fitted. In the event of having to change the fuse in the plug supplied, a 13amp ASTA approved (BS1363/A) fuse must be used.

Should the plug need to be replaced for any reason, proceed as described below.

The wires in the mains lead are coloured in accordance with the following code:

- Green and Yellow ..... - Earth
- Blue ..... - Neutral
- Brown..... - Live

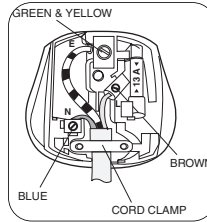

The wire coloured green and yellow must be connected to the terminal marked with the letter «E» or by the earth symbol  $\equiv$  or

coloured green and yellow.

The wire coloured blue must be connected to the terminal marked «N» or coloured black.

The wire coloured brown must be connected to the terminal marked «L» or coloured red. Upon completion there must be no cut, or stray strands of wire present and the cord clamp must be secure over the outer sheath.

**! WARNING!**

**A cut off plug inserted into a 13 amp socket is a serious safety (shock) hazard. Ensure that the cut off plug is disposed of safely. Should the appliance power supply cable need to be replaced, this must be carried out by our Service Force Centre.**

The power supply cable must be easily accessible after installing the appliance.

**Permanent connection**

In the case of permanent connection it is necessary that you install a double pole switch between the appliance and the electricity supply (mains), with a minimum gap of 3mm between the switch contacts and of a type suitable for the required load in compliance with the current electrical regulations.

The switch must not break the yellow and green earth cable at any point.

## Fitting under a counter


### **WARNING!**

Before any work to the appliance, you must disconnect the plug from the power socket.

### **Important!**


**For safety reasons, it is dangerous to fit the appliance under a counter without the steel plate, which you can order in your nearest Service Force Centre.**

The top must be fixed to the cabinet as follows: Unscrew the screws from the back panel of the appliance. Push the worktop to the back and raise it to remove. (see the picture below).

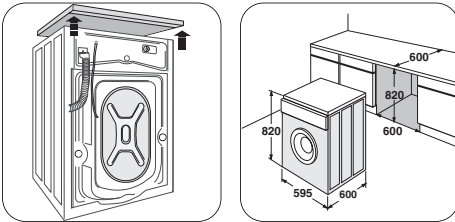

## Environmental concerns

### Packaging materials

The materials marked with the symbol  are recyclable.

>PE<=polyethylene


>PS<=polystyrene

>PP<=polypropylene

This means that they can be recycled by disposing of them properly in appropriate collection containers.

### Old machine

Use authorised disposal sites for your old appliance. Help to keep your country tidy!

The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

### Ecological hints

To save water, energy and to help protect the environment, we recommend that you follow these tips:

- Normally soiled laundry may be washed without prewashing in order to save detergent, water and time (the environment is protected too!).
- The machine works more economically if it is fully loaded.
- With adequate pre-treatment, stains and limited soiling can be removed; the laundry can then be washed at a lower temperature.
- Measure out detergent according to the water hardness, the degree of soiling and the quantity of laundry being washed.

# Guarantee conditions

## Standard guarantee conditions

We, Zanussi-Electrolux, undertake that if within 12 months of the date of the purchase this Zanussi-Electrolux appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, we will, at our option repair or replace the same FREE OFCHARGE for labour, materials or carriage on condition that:

- The appliance has been correctly installed and used only on the electricity supply stated on the rating plate.
- The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's instructions.
- The appliance has not been serviced, maintained, repaired, taken apart or tampered with by any person not authorised by us.
- Electrolux Service Force Centre must undertake all service work under this guarantee.
- Any appliance or defective part replaced shall become the Company's property.
- This guarantee is in addition to your statutory and other legal rights.

## Exclusions

- Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic.
- Costs incurred for calls to put right an appliance which is improperly installed or calls to appliances outside the United Kingdom.
- Appliances found to be in use within a commercial environment, plus those which are subject to rental agreements.
- Products of Electrolux manufacturer that are not marketed by Electrolux.

## Service and Spare Parts.

In the event of your appliance requiring service, or if you wish to purchase spare parts, please contact your local Service Force Centre by telephoning:

**0870 5 929 929**

Your telephone call will be automatically routed to the Service Force Centre covering your postcode area. For the address of your local Service Force Centre and further information about Service Force, please visit the website at [www.serviceforce.co.uk](http://www.serviceforce.co.uk)

Before calling out an engineer, please ensure you have read the details under the heading «Something not working». When you contact the Service Force Centre you will need to give the following details:

- 1 Your name, address and postcode.
- 2 Your telephone number.
- 3 Clear concise details of the fault.
- 4 The model and Serial number of the appliance (found on the rating plate).
- 5 The purchase date.

Please note a valid purchase receipt or guarantee documentation is required for in guarantee service calls.

## Customer Care

For general enquiries concerning your Electrolux appliance, or for further information on Electrolux products please contact our Customer Care Department by letter or telephone at the address below or visit our website at [www.electrolux.co.uk](http://www.electrolux.co.uk)

Customer Care Department Electrolux Major Appliances Addington Way Luton Bedfordshire, LU4 9QQ Tel: 08705 727 727 (\*)

*(\*) Calls may be recorded for training purposes*




For Customer Service in The Republic of Ireland please contact us at the address below:  
Electrolux Group (Irl) Ltd  
Long Mile Road, Dublin 12, Republic of Ireland  
Tel: + 353 (0)1 4090751  
Email: [service.eid@electrolux.ie](mailto:service.eid@electrolux.ie)

### European guarantee

This appliance is guaranteed by Electrolux, in each of the countries listed in the following page, for the period specified in the appliance guarantee or otherwise by law. If you move from one of these countries to another of these countries the appliance guarantee will move with you subject to the following qualifications:

- The appliance guarantee starts from the date you first purchased the appliance which will be evidenced by production of a valid purchase document issued by seller of the appliance.
- The appliance guarantee is for the same period and to the same extent for labour and parts as exists in your country of residence for this particular model or range of appliances.
- The appliance guarantee is personal to the original purchaser of the appliance and cannot be transferred to another user.
- The appliance is installed and used in accordance with instructions issued by Electrolux and is only used within the home, i.e. is not used for commercial purposes.
- The appliance is installed in accordance with all relevant regulations in force within your new country of residence.

The provisions of this European Guarantee do not affect any of the rights granted to you by law.

		
Albania	+35 5 4 261 450	Rr. Pjeter Bogdani Nr. 7 Tirane
Belgique/België/Belgien	+32 2 363 04 44	Bergensesteenweg 719, 1502 Lembeek
Česká republika	+420 2 61 12 61 12	Budějovická 3, Praha 4, 140 21
Danmark	+45 70 11 74 00	Sjællandsgade 2, 7000 Fredericia
Deutschland	+49 180 32 26 622	Muggenhofer Str. 135, 90429 Nürnberg
Eesti	+37 2 66 50 030	Mustamäe tee 24, 10621 Tallinn
España	+34 902 11 63 88	Carretera M-300, Km. 29,900 Alcalá de Henares Madrid
France	www.electrolux.fr	
Great Britain	+44 8705 929 929	Addington Way, Luton, Bedfordshire LU4 9QQ
Hellas	+30 23 10 56 19 70	4, Limnou Str., 54627 Thessaloniki
Hrvatska	+38 51 63 23 338	Slavonska avenija 3, 10000 Zagreb
Ireland	+353 1 40 90 753	Longmile Road Dublin 12
Italia	+39 (0) 434 558500	C.so Lino Zanussi, 26 - 33080 Porcia (PN)
Latvija	+37 17 84 59 34	Kr. Barona iela 130/2, LV-1012, Riga
Lituania	+370 5 27 80 609	Verkių 2 9, 09108 Vilnius, Lithuania
Luxembourg	+35 2 42 43 13 01	Rue de Bitbourg, 7, L-1273 Hamm
Magyarország	+36 1 252 1773	H-1142 Budapest XIV, Erzsébet királyné útja 87
Nederland	+31 17 24 68 300	Vennootsweg 1, 2404 CG - Alphen aan den Rijn
Norge	+47 81 5 30 222	Risløkkvn. 2, 0508 Oslo
Österreich	+43 18 66 400	Herziggasse 9, 1230 Wien
Polska	+48 22 43 47 300	ul. Kolejowa 5/7, Warsaw
Portugal	+35 12 14 40 39 39	Quinta da Fonte - Edifício Gonçalves Zarco - Q35 -2774-518 Paço de Arcos
Romania	+40 21 451 20 30	Str. Garii Progresului 2, S4, 040671 RO
Schweiz-Suisse-Svizzera	+41 62 88 99 111	Industriestrasse 10, CH-5506 Mägenwil
Slovenija	+38 61 24 25 731	Tršaška 132, 1000 Ljubljana
Slovensko	+421 2 43 33 43 22	Electrolux Slovakia s.r.o., Electrolux Domáce spotrebiče SK, Seberínho 1, 821 03 Bratislava
Suomi	www.electrolux.fi	
Sverige	+46 (0)771 76 76 76	Electrolux Service, S:t Göransgatan 143, S-105 45 Stockholm
Türkiye	+90 21 22 93 10 25	Tarlabası caddesi no : 35 Taksim Istanbul
Россия	+7 095 937 7837	129090 Москва, Олимпийский проспект, 16, БЦ "Олимпик"







# Notes

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

## Notes

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

[www.electrolux.com](http://www.electrolux.com)

[www.zanussi-electrolux.co.uk](http://www.zanussi-electrolux.co.uk)

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>