


Instruction for the use and care of SL 24 washing machine

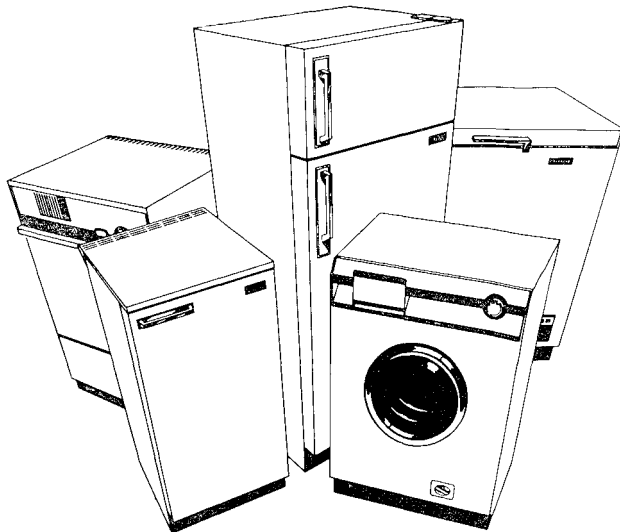

ZANUSSI

It's not what we do, it's the way that we do it.

I N D E X

Technical data	page	3
Installation	»	4
Electrical connection	»	7
Operating instructions	»	8
Wash programmes	»	11
Care and cleaning	»	14

TECHNICAL DATA



Width	23.6	ins.
Overall depth (excluding hose)	22.0	ins.
Height	33.5	ins.
Weight	193.5	lbs.
Dry clothes capacity	9	lbs.
Heater rating	2500	W
Motor rating during washing	0.07	HP
Motor rating during spinning	0.16	HP
Water load	3.1	gals.
Minimum water pressure	7	p.s.i. (4.9 Nw/cm ²)
Maximum water pressure	110	p.s.i. (78.4 Nw/cm ²)
Supply Voltage	220-240	V

INSTALLATION


UNPACKING

After having removed the cardboard packing, reinforcing angles and polythene wrapping, proceed as follows:

- 1) tilt the machine and remove base packing (fig. 1).
- 2) Remove back panel and bracket securing motor to back of the appliance (fig. 2)

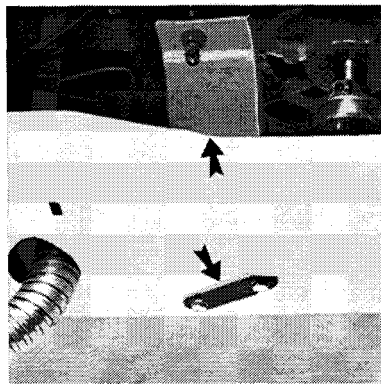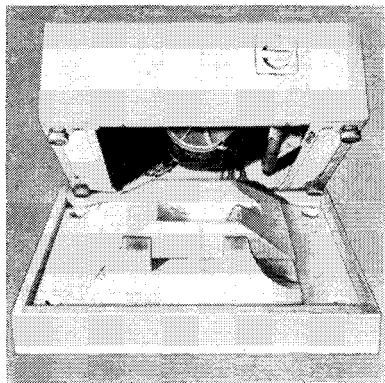

- 3) Remove the 6 screws securing the top of the machine and lift off.
- 4) Remove the screws and nuts which fix the transit bar (fig. 3) to the cabinet
- 5) Replace top and back panel.

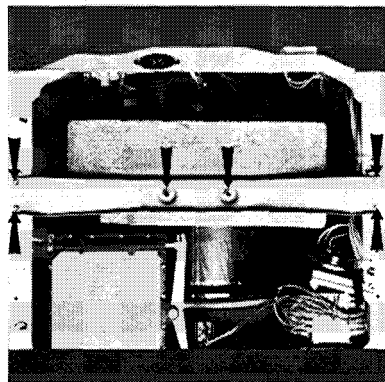


LEVELLING

Move the washer to its permanent operating location and carefully level it by adjusting the feet and locking them in position with the lock nut (fig. 4). It is

important that special care is taken in levelling the appliance in order to avoid any vibration or movement during operation.


When positioning the machine, a small space must be allowed all round, so that it cannot touch the walls or adjacent furniture while it is operating.

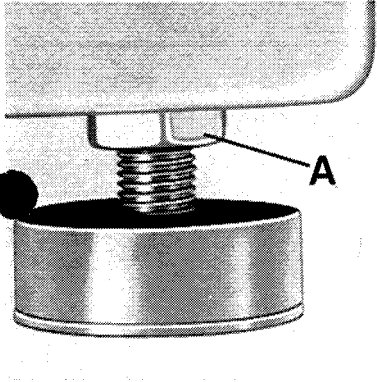

4

WATER CONNECTION

Water inlet hose: if a cold water tap having a $\frac{3}{4}$ " gas thread spout is available, the inlet hose fitted with the rubber sealing washer (supplied with the machine) should be connected as shown (fig. 5).

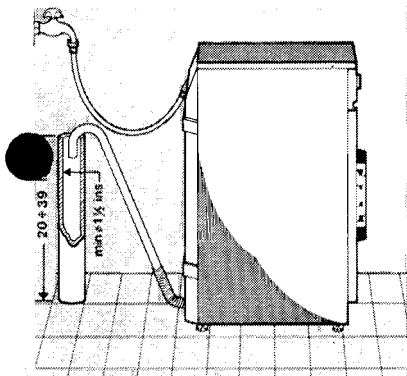


5

IMPORTANT: To obtain the best washing results, it is necessary to use the cold water supply only.

If the water connection is made onto new pipes or onto pipes which have not been used for a long time, it is advisable to run off a certain amount of water before connecting the machine. This will avoid foreign matter blocking the filters placed at the end of the water inlet hose.

Drain hose: Hook the curved end of the outlet hose over the edge of a sink or insert it into a drain pipe not less than 20 ins. and not more than 39 ins. from floor level (fig. 6).

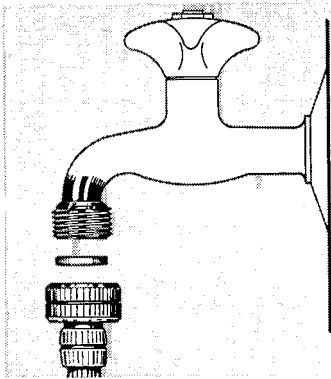

6

The water should drain quickly and the end of the outlet hose must not be submerged in water.

It is advisable that the drain pipe, if used, has an internal diameter of at least 1.1/2 ins. Be sure that the drain hose is not choked or placed in such a way as to obstruct the normal water flow.

If an extension hose is required, its inner diameter must be the same as that of the original hose of the washer; its length must not exceed 52 ins. and the drain must be no higher than 31 ins.

ELECTRICAL CONNECTION

WARNING: THIS APPLIANCE MUST BE EARTHED

Connection to the electrical supply should be made by a 3 pin 13 Amp or 3 pin 15 Amp plug. If a BS 1363 3 pin 13 Amp fused plug and socket is used, the plug should be fitted with a 13 Amp fuse. If a 15 Amp plug and socket is used this should be protected by a 15 Amp fuse either in the plug or at the distribution board fuse box.

The manufacturer declines any liability should this safety measure not be observed.


IMPORTANT

The wires in this mains lead are coloured in accordance with the following code:

GREEN AND YELLOW - EARTH

BLUE - NEUTRAL

BROWN - LIVE

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug proceed as follows: the wire which is coloured green and yellow must be connected to the terminal in the plug which is marked with the letter E or by the earth symbol  or coloured green or green and yellow. The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red. The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.

OPERATING INSTRUCTIONS

PRELIMINARY CHECK

Carry out the following check before using the machine:

- is the plug in the socket? is the power on?
- is the water inlet hose connected to the tap and the tap turned on?
- has the drain hose been placed on the edge of a sink or in a drain?
- is the door properly closed?

STARTING AND STOPPING


To start the machine, select the programme required by turning the timer control knob to the required number and pull out the control knob. It should be noted that this knob freewheels in the 'on' position, therefore the programme selection cannot be changed without switching the machine off. Once the

machine is started, it will automatically carry out all operations up to the end of the programme chosen and will automatically stop. To switch the machine off or stop the machine in the course of a programme, push in the timer control knob.

As a safety feature the door is automatically locked during the washing cycle and remains locked for a further 60-70 seconds after the machine finishes the programme or is switched off. This feature is not however operative during the water filling stage. As an additional safety feature the door is also fitted with a double action catch. Operation of this catch is very simple provided that the outside section is first slid inwards and then without releasing it the complete catch is pulled outwards (fig. 7).



7

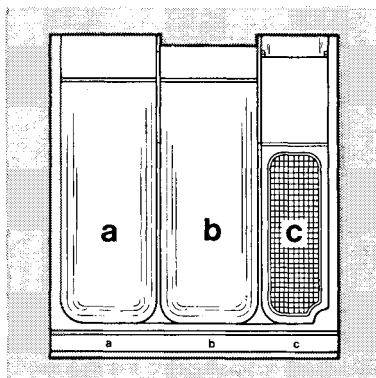

8

SELECTION OF WASHING PROGRAMME

The washing machine carries out 8 washing programmes. Each programme has been specially designed for a specific type of fabric (e.g. cotton, synthetic fibres, wool, etc.).

The appropriate programme must therefore be chosen according to the type of fabric to be washed.

Operate as follows:


- make sure the timer knob is pressed in and then rotate it clockwise until the timer index line corresponds with the number of the programme chosen;
- put washing powder into the appropriate compartments of the pull-out dispenser on the left-hand side of the machine.

FILLING WITH WASHING POWDER

The washing powder dispenser is located on the left front side of the control panel. It is very important to use a low sudsing powder (see paragraph « Which powder ») such as Persil Automatic. Pull out dispenser drawer and add washing powder. The amount of washing powder for the prewash or soaking (2-3 ozs.) should be put into section « A » of dispenser (fig. 8) and the powder for the

main wash (3-4 ozs.) should be put into section « B ». For biological washing of synthetic material, use the specific powders which are available on the market and read the manufacturer's instructions carefully. Once the dispenser drawer is filled, close by pushing in.

« INTENSIVE WASH » PUSH BUTTON

It is advisable to depress push button  when washing shirts or tableclothes having particularly hard-to-remove stains as this will give a vigorous washing action even on the delicate cycles.

USE OF ADDITIVES

This washing machine is designed to carry out automatically special treatments such as the addition of fabric softeners at the end of some washing programmes. The liquids to be used should be put into compartment C (fig. 8) of the dispenser at the beginning of the programme and will be automatically utilised at the appropriate time. Dense liquids must be diluted with water. With regard to the amount of additive to be used follow the manufacturer's instructions bearing in mind that Approximately 3 gallons of water are utilized during this process.

WHICH POWDER?

Do not use ordinary powders like Ariel, Radiant, Daz etc. in your new Zanussi SL 24. The reason for this is very simple, these powders produce so much lather that clothes are prevented from tumbling freely and cannot get properly clean.

Do use the right powder. To get the best results from the SL 24 we recommend **Persil Automatic**. Like all modern automatic machines the SL 24 works at peak efficiency with a low lather product. Persil Automatic's balanced lather is specially designed to complement the cleaning action of these machines. So use it regularly for trouble free washing and superb results.

Do use enough powder. To get your clothes really clean it is essential that enough powder is used in the machine. The correct amount will depend on a number of things — the hardness of the water, the size of the load, and the amount of soiling present. As a guide we suggest you follow the table below and adjust the amounts in light of your personal experience. You may find it helps to use a measuring cup at first.

	Small Load or Light Soiling	Full Load or Heavy Soiling
Soft Water	1 cup	1-2 cups
Hard Water	1-2 cups	2-3 cups

WASH PROGRAMMES

COTTON, LINEN

1

Whites-heavy soil - bio prewash

Long prewash and soaking in lukewarm water.

Vigorous wash in very hot water.

5 rinses in cold water.

Spinning.

Put the powder required for bio-prewash and soaking into compartment « a » and for the main wash into compartment « b »; if required, pour the liquid additive into compartment « c ».

2

Whites-heavy soil

Prewash in lukewarm water.

Vigorous wash in very hot water.

5 rinses in cold water.

Spinning.

Put the powder required for prewash into compartment « a » and for the main wash into compartment « b »; if required, pour the liquid additive into compartment « c ».

3

Whites

Vigorous wash in very hot water.

5 rinses in cold water.

Spinning.

Put the powder required for the wash into compartment « b »; if required, pour the liquid additive into compartment « c ».

4

Fast coloureds

Vigorous wash in hot water.

5 rinses in cold water.

Spinning.

Put the powder required for the wash into compartment « b »; if required, pour the liquid additive into compartment « c ».

WASH PROGRAMMES

Non-fast coloureds

5

Vigorous wash in lukewarm water.

5 rinses in cold water.

Spinning.

Put the powder required for the wash into compartment « b »; if required, pour the liquid additive into compartment « c ».

6

Rinses

5 rinses in cold water.

Spinning.

7

Special Treatments

Rinse with cold water and additive.

Spinning.

Pour the liquid additive into compartment « c » taking care not to exceed the level of the filter.

8

Spin


Spinning for about 5 minutes with water draining.

It is important to place timer index line exactly on No. 8 position.

If you wish to spin your laundry at the completion of programmes 9, 10 and 11 use the following procedure. Switch machine off and turn the timer control knob to the No. 8 position and start the machine. Allow the machine to spin for approximately 1 minute. Depress the knob. Turn to the off position.

WASH PROGRAMMES

SYNTHETICS, WOOL, DELICATES

Note: There is no water draining in the last rinse of the following cycles to prevent the clothes from creasing if they are left in the machine at the end of the wash. To drain the water, turn the timer knob to the symbol 

9

White nylon - heavy soil

Prewash in lukewarm water.

Gentle wash in hot water.

3 rinses in cold water.

No spinning.

Put the powder required for prewash into compartment « a » and for the main wash into compartment « b ».

A short spin may be given if desired, see programme 8.

10

Delicates

Gentle wash in warm water.

3 rinses in cold water.

No spinning.

Put the powder required for the main wash into compartment « b ».

A short spin may be given if desired, see programme 8.

11

Woollens

Special cycle for washing wool garments bearing the Woolmark Label « Pure New Wool - Washing shrink resistant ».

Very gentle wash in lukewarm water.

3 rinses in cold water.

No spinning.

Put the powder required for the wash into compartment « b ». A short spin may be given if desired, see programme 8.

12

Rinses

3 rinses in cold water.

No spinning.



Drain

Water draining and tumbling.

CARE AND CLEANING

Make sure that the plug has been removed from the socket prior to undertaking any kind of maintenance.

From time to time, carry out a complete cycle without a washing load, adding 1 oz. of Calgon. This operation should also be effected when the washer has been out of use for a long time.

- Leave the door ajar for a couple of hours or so after the wash to allow air to circulate freely inside the machine.
- Chromium, polished and plastic parts, must be cleaned with a soft damp cloth, never with abrasives.
- For the cabinet exterior use a lukewarm light solution of mild soap, then rinse and dry carefully. It is also advisable, from time to time, to treat the cabinet with a white wax polish spread with a soft woollen cloth.


FILTER CLEANING

The filter (fig. 9) is located in the lower front part of the washer. Its purpose is to collect lint and objects (safety-pins, coins etc.) inadvertently left in the articles to be washed.

The filter should be cleaned regularly as follows:

- At the end of a wash programme place the free end of the drain hose at floor level in a basin to collect any water left in the hose.
- Before taking the filter out, place a small receptacle below the housing in order to collect any water that may come out.
- Unscrew the filter knob counterclockwise and pull the filter out (fig. 9).
- Clean filter and return, ensuring that the filter knob is screwed tight.

9

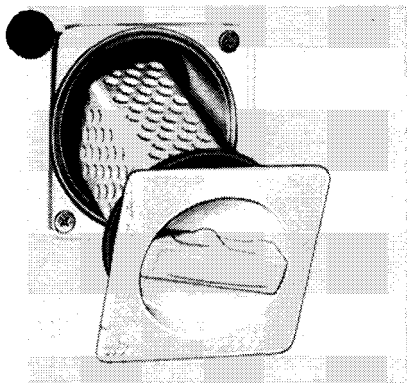

HINTS FOR CARE OF WASHING POWDER DISPENSER

We recommend that the washing powder dispenser is checked regularly to ensure that it is clean and dry. Do wipe the dispenser after each wash.

Should the dispenser require special cleaning, the drawer can be completely removed, and the interior cleared of any deposit.

The drawer can be removed from the front of the appliance by giving a sharp pull outwards. A sharp tap with the palm of the hand may be necessary when replacing the drawer.

HELPFUL TIPS FOR WASHING

Some practical advice is given in order to obtain the best washing results:

- use a low suds washing powder such as « Persil Automatic » made for front loading washing machines, an excessive formation of suds can cause irregular operation;
- the quantity of washing powder depends on the amount of laundry and on how soiled it is, therefore it may be necessary to adjust the quantities given in this book;
- woollens must be washed with mild washing agents which, owing to their tendency to produce suds, should be used in small amounts.
To obtain the best results when washing wool or delicates do not wash more than 2 lbs. at a time;
- in order to get good washing results for synthetic material use a maximum washing load of 5 to 6 lbs;
- if hard water is used it can be softened by adding special products like Calgon to the washing powder. These products facilitate the powder's work and give the best washing results;
- items should be sorted according to fabric type, amount of dirt and colour fastness;
- tears and open seams must be mended, loose buttons secured, zippers closed, laces or belts of dresses and aprons collected in a cotton bag: articles without hems should not be washed, ensure pockets are emptied, spots of rust, paint, ink, etc should be removed beforehand.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>