


# Replacing the Lamp




Turn off the projector and unplug the power cord. Allow the projector to cool for at least 60 minutes.

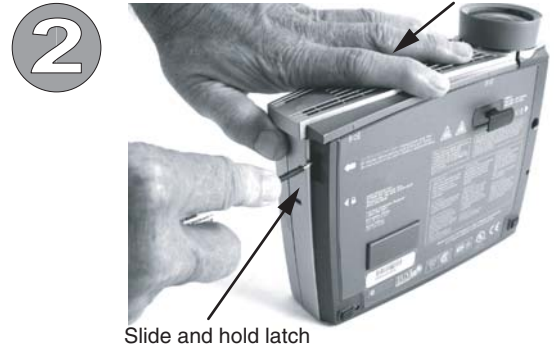

Slide and hold latch


Place the projector on its rear. Insert a small screw-driver into the slot near the front. Slide the latch downward. Hold the latch open while you slide the lamp grill off.

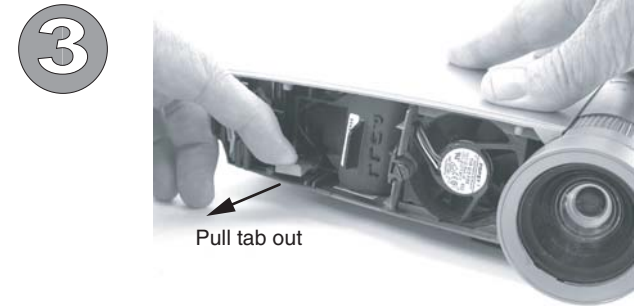


Place the projector rightside up on a flat surface. Pull the yellow tab on the lamp outward. This disengages the lamp connector.



Loosen the captive screw on the lamp.

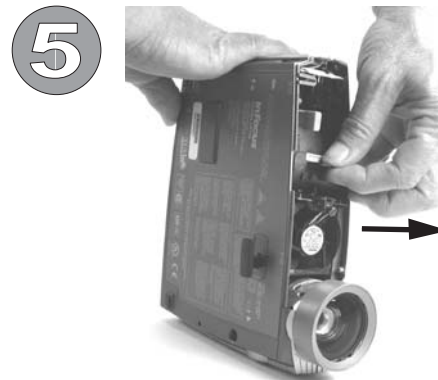

Place the projector on its side. Grasp the pull tab to pull the lamp out. Dispose of the lamp module in an environmentally proper manner.

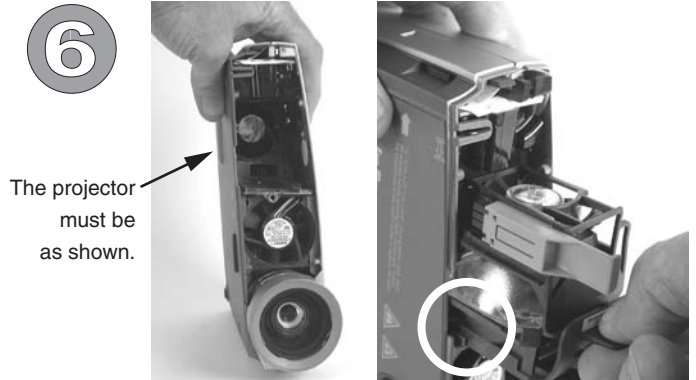

Place the projector on its side. Slide the lamp into the projector. Make sure that the bottom of the lamp fits into the rails inside the projector (circled above).



Gently press the lamp into place. Then tighten the screw.



Gently press the yellow tab inward until it stops. You can feel the lamp connector engage.



Slide the front grill toward the lens until it snaps into place. To reset the lamp timer, press and hold the reset button, then press the menu/select button (while still pressing the reset button) for 10 seconds.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>