

Welcome

Welcome to the world of Motorola digital wireless communications! We are pleased that you have chosen the Motorola C331 wireless phone.



Personal Communications Sector
600 North U.S. Highway 45
Libertyville, Illinois 60048

1-800-331-6456 (United States)
1-888-390-6456 (TTY/TDD United States)
1-800-461-4575 (Canada)

www.motorola.com (United States)
www.motorola.ca (Canada)

MOTOROLA, the Stylized M Logo and all other trademarks indicated as such herein are trademarks of Motorola, Inc. ® Reg. U.S. Pat. & Tm. Off. TrueSync, Sidekick, Starfish, and the Stylized Starfish Logo are registered trademarks of Starfish Software, Inc., a wholly owned independent subsidiary of Motorola, Inc. All other product or service names are the property of their respective owners.

© 2002 Motorola, Inc. All rights reserved.

Software Copyright Notice

The Motorola products described in this manual may include copyrighted Motorola and third party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

Manual number:

Cover number: 8988485L49-O









Menu Map

Main Menu

- **Recent Calls**
 - Received Calls
 - Dialed Calls
 - Notepad
 - Call Times
- **Phonebook**
- **Voice Dial**
- **Datebook**
- **Radio**
- **Messages**
 - Create Msg
 - Voicemail
 - Text Msgs
 - Quick Notes
 - Outbox
 - Drafts
- **Ring Styles**
 - Style
 - Style Detail
 - My Tones
- **Shortcuts**
- **Web Sessions**
- **Calculator**
- **Games**
- **Settings**
(see next page)

Note: This is the standard phone menu layout. You or your service provider may have changed the menu layout or changed some feature names. Not all features may be available for all users.

For example, the **Radio** feature on the main menu (left) is displayed only when the optional FM Stereo Radio Headset accessory is plugged into the accessory connector port on your phone (see phone illustration, page 1).

Shortcuts
Change display zoom: Press  , then press and hold 
Lock/unlock keypad: Press  
Display my phone number: Press  
Go to dialed calls list: Press 
Exit menu system: Press 

Settings Menu



- **Phone Status**
 - My Tel. Number
 - Active Line
 - Battery Meter
 - Other Information
- **Connection**
 - Incoming Call
- **In-Call Setup**
 - In-Call Timer
 - Answer Options
- **Security**
 - Phone Lock
 - Lock Keypad
 - Lock Application
 - Talk Secure
 - Restrict Calls
 - New Passwords

- **Other Settings**
 - Personalize
 - Main Menu
 - Keys
 - Greeting
 - Initial Setup
 - Time and Date
 - Backlight
 - Zoom
 - TTY Setup
 - Scroll
 - Animation
 - Language
 - Battery Save
 - Contrast
 - DTMF
 - Master Reset
 - Master Clear
 - Network
 - Car Settings
 - Headset

Contents

Menu Map	3
About This Guide	10
Safety and General Information	11
Getting Started	18
What's in the Box?	18
Assembling Your Phone	19
Taking Your Phone Apart	21
Charging the Battery	22
Replacing the Battery	23
Turning Your Phone On	24
Making a Call	25
Ending a Call	25
Answering a Call	26
Seeing Your Phone Number	26
About Your Phone	27
Using the Display	27
Zooming In and Out	29
Adjusting Volume	29
Battery Use	30
Making and Answering Calls	32
Redialing a Number	32
Using Caller ID	32
Using Talk Secure	32
Returning Unanswered Calls	33
Calling an Emergency Number	33
Turning Off a Call Alert	34
Canceling an Incoming Call	34
Calling With Speed Dial	35

Calling With One-Touch Dial	35
Calling a Number In a Text Message	35
Additional Calling Features	36
Using Features While On a Call	37
Using Call Waiting	37
Making a Three-Way Call	37
Additional On-Call Features	38
Using the Menu	39
Navigating to a Feature	39
Selecting a Feature Option	40
Entering Feature Information	41
Entering Text	43
Choosing a Text Mode	43
Using Tap Method	44
Using Symbol Mode	47
Using iTAP™ Software Predictive Text Entry Method	48
Menu Feature Descriptions	52
Recent Calls	63
Viewing Received Calls or Dialed Calls	63
Using the Notepad	65
Viewing and Resetting Call Timers	65
Phonebook	68
Viewing Entry Details	68
Storing a Phonebook Entry	69
Storing a PIN Code with a Phone Number	71
Recording a Voice Name For a Phonebook Entry	73
Dialing a Phonebook Entry	74
Editing a Phonebook Entry	75
Deleting a Phonebook Entry	75

Setting the Primary Number for a Phonebook Entry	76
Checking Phonebook Capacity	76
Sorting the Phonebook List	77
Datebook	79
Week View	79
Day View	80
Event View	80
Adding a Datebook Event	81
Changing Event Information	81
Copying an Event	82
Deleting an Event	83
Radio	84
Turning the Radio On and Off	84
Tuning a Station	85
Storing a Preset	85
Selecting a Preset	85
Sending and Receiving Calls with the Radio On	85
Messages—Voicemail	87
Storing Your Voicemail Number	87
Receiving a Voicemail Message	88
Listening to a Voicemail Message	88
Messages—Text	89
Setting Up the Text Message Inbox	89
Receiving a Text Message	90
Reading, Locking, or Deleting a Text Message	91
Storing Sounds	93
Sending a Text Message	94
Sending a Quick Note Text Message	96
Viewing the Status of Sent Text Messages	97

Ring Styles	98
Selecting a Ring Style	98
Customizing a Ring Style	99
Creating Alert Tones	100
Setting Reminders	107
Shortcuts	109
Standard Shortcuts	109
Creating a Shortcut	109
Using Shortcuts	110
Browser	111
Starting a Browser Session	111
Interacting With Web Pages	112
Calculator	113
Calculating Numbers	113
Converting Currency	115
Games	116
Playing a Game	116
Game Options	116
Blackjack	117
Falling Numbers	118
Video Poker	119
Adjusting Your Settings	121
Reordering Menu Items	121
Customizing a Soft Key Function	121
TTY Operation	122
Hands-Free Use	124
Data Calls	127
Connecting Your Phone to an External Device	127
Making a Data Call	129
Receiving a Data Call	130

Security	132
Assigning a New Code or Password	132
If You Forget a Code or Password	133
Locking and Unlocking Your Phone	134
Locking and Unlocking Your Keypad	135
Restricting Calls	135
Activating Talk Secure	136
Troubleshooting	137
Programming Instructions	146
Specific Absorption Rate Data	148
Additional Health and Safety Information	150
Warranty	159
Product Registration	167
Export Law Assurances	167
Index	168
Wireless Phone Safety Tips	179

About This Guide

This user guide introduces you to the many features in your Motorola wireless phone.

Navigating to a Menu Feature

Use the menu system to access your phone's features. This guide shows you how to select a menu feature as follows:

Find the Feature

☰ > **Messages**
> **Text Msgs**

This example shows that you must press ☰, scroll to and select **Messages**, then scroll to and select **Text Msgs**.

Optional Features



This label identifies an optional network or subscription-dependent feature that may not be offered by all service providers in all geographical areas. Contact your service provider for more information.

Optional Accessories



This label identifies a feature that requires an optional Motorola Original™ accessory.

Safety and General Information

IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION. READ THIS INFORMATION BEFORE USING YOUR PHONE.

The information provided in this document supersedes the general safety information contained in user guides published prior to July 2000. For information regarding radio use in a hazardous atmosphere please refer to the Factory Mutual (FM) Approval Manual Supplement or Instruction Card, which is included with radio models that offer this capability.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

RF Operational Characteristics

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits radio frequency (RF) energy. The phone operates in the frequency range of 824 MHz to 849 MHz in analog and digital mode and 1850 MHz to 1910 MHz in digital mode.

When you communicate with your phone, the system handling your call controls the power levels at which your phone transmits. The output power level typically may vary over a



range from ____ watts to ____ watts in analog mode and ____ watts to ____ watts in digital mode.

Exposure To Radio Frequency Energy

Your Motorola phone is designed to comply with the following national and international standards and guidelines regarding exposure of human beings to radio frequency electromagnetic energy:

- United States Federal Communications Commission, Code of Regulations; 47 CFR part 2 sub-part J
- American National Standards Institute (ANSI) / Institute of Electrical and Electronic Engineers (IEEE) C95.1-1992
 - Institute of Electrical and Electronic Engineers (IEEE) C95.1-1999 Edition
 - National Council on Radiation Protection and Measurements (NCRP) of the United States, Report 86, 1986
- International Commission on Non-Ionizing Radiation Protection (ICNIRP) 1998
- Ministry of Health (Canada) Safety Code 6. Limits of Human Exposure to Radiofrequency Electromagnetic Fields in the Frequency Range from 3 kHz to 300 GHz, 1999
- Australian Communications Authority Radiocommunications (Electromagnetic Radiation-Human Exposure) Standard 1999

To assure optimal phone performance and make sure human exposure to radio frequency electromagnetic energy is within

the guidelines set forth in the above standards, always adhere to the following procedures:

Portable Phone Operation and EME Exposure

Antenna Care

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

Do NOT hold the antenna when the phone is in use. Holding the antenna affects call quality and may cause the phone to operate at a higher power level than needed.

Phone Operation

When placing or receiving a phone call, hold your phone as you would a wireline telephone. **Speak directly into the microphone.**

Body-Worn Operation

To maintain compliance with FCC/Health Canada RF exposure guidelines, if you wear a phone on your body when transmitting, always place the phone in a Motorola-supplied or approved clip, holder, holster, case, or body harness for this product. Use of non-Motorola-approved accessories may exceed FCC/Health Canada RF exposure guidelines. If you do not use one of the Motorola-supplied or approved body-worn accessories, and are not using the phone held in the normal use position, **ensure the phone and its antenna are at least one inch (2.5 centimeters) from your body when transmitting.**



Data Operation

When using any data feature of the phone, with or without an accessory cable, **position the phone and its antenna at least one inch (2.5 centimeters) from your body.**

Approved Accessories

For a list of approved Motorola accessories, visit our website at www.mot.com.

Electromagnetic Interference/Compatibility

Note: Nearly every electronic device is susceptible to electromagnetic interference (EMI) if inadequately shielded, designed, or otherwise configured for electromagnetic compatibility.

Facilities

To avoid electromagnetic interference and/or compatibility conflicts, turn off your phone in any facility where posted notices instruct you to do so. Hospitals or health care facilities may be using equipment that is sensitive to external RF energy.

Aircraft

When instructed to do so, turn off your phone when on board an aircraft. Any use of a phone must be in accordance with applicable regulations per airline crew instructions.

Medical Devices

Pacemakers

The Advanced Medical Technology Association recommends that a minimum separation of 6 inches (15 centimeters) be

maintained between a handheld wireless phone and a pacemaker. These recommendations are consistent with the independent research by, and recommendations of, the United States Food and Drug Administration.

Persons with pacemakers should:

- ALWAYS keep the phone more than six inches (15 centimeters) from your pacemaker when the phone is turned ON.
- NOT carry the phone in the breast pocket.
- use the ear opposite the pacemaker to minimize the potential for interference.
- turn OFF the phone immediately if you have any reason to suspect that interference is taking place.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your physician may be able to assist you in obtaining this information.

Safety and General Use While Driving

Check the laws and regulations on the use of phones in the area where you drive. Always obey them.



When using your phone while driving, please:

- give full attention to driving and to the road.
- use hands-free operation, if available.
- pull off the road and park before making or answering a call if driving conditions so require.

Operational Warnings

For Vehicles With an Air Bag

Do not place a portable phone in the area over an air bag or in the air bag deployment area. Air bags inflate with great force. If a portable phone is placed in the air bag deployment area and the air bag inflates, the phone may be propelled with great force and cause serious injury to occupants of the vehicle.

Potentially Explosive Atmospheres

Turn off your phone prior to entering any area with a potentially explosive atmosphere, unless the phone is a model specifically identified as being “Intrinsically Safe.” Do not remove, install, or charge batteries in such areas. Sparks in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.

Note: The areas with potentially explosive atmospheres referred to above include fueling areas such as below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders, and any other area where you would normally be advised to turn off your vehicle engine. Areas with potentially explosive atmospheres are often but not always posted.

Blasting Caps and Areas

To avoid possible interference with blasting operations, turn OFF your phone when you are near electrical blasting caps, in a blasting area, or in areas posted: "Turn off two-way radio." Obey all signs and instructions.

Operational Cautions

Antennas

Do not use any portable phone that has a damaged antenna. If a damaged antenna comes into contact with your skin, a minor burn can result.

Batteries

All batteries can cause property damage and/or bodily injury such as burns if a conductive material such as jewelry, keys, or beaded chains touches exposed terminals. The conductive material may complete an electrical circuit (short circuit) and become quite hot. Exercise care in handling any charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects.

ITC01-101



Getting Started

 
What's in the Box?

Your phone is partially assembled when shipped.

**Front Cover &
Endoskeleton**



Back Cover



Battery



Side Grips



Getting Started



To assemble your phone, follow the instructions in "Assembling Your Phone" on page 19.

Your wireless phone typically is shipped with a battery and a charger. Other accessory options can customize your phone for maximum performance and portability.

To purchase Motorola Original™ accessories, contact the Motorola Customer Call Center at 1-800-331-6456 in the United States or 1-800-461-4575 in Canada.


Assembling Your Phone

To assemble your phone:

Do This


- 1 If necessary, fit the keypad into the front cover.

Note: Skip this step if assembling your phone for the first time.

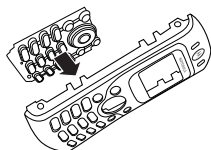


- 2 Install the phone endoskeleton into the front cover.

Note: Skip this step if assembling your phone for the first time.

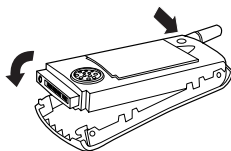

- 3 Fit the end of the battery with the gold contacts into the bottom end of the battery compartment. (The contacts should face away from you.)


Then push the battery down until it snaps into place.

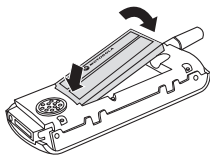


Do This

- 4** Insert the side grips into each side of the front cover. The colored sides of the grips should face out.

If the side grips do not fit easily into place, rotate them and insert the opposite sides.

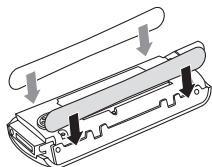

- 5** Attach the bottom end of the back cover, then push the top end downward until it latches.

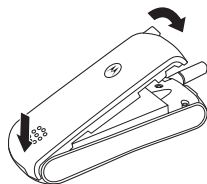

- 6** If you installed a new battery, you need to charge it before you can use your phone. See “Charging the Battery” on page 22.




Taking Your Phone Apart

To disassemble your phone:

Do This

- 1** Remove the back cover from the phone.


Press the tab at the top of the phone, then lift the cover up and off the phone.

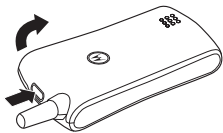

-
- 2** Remove the battery.


- 3** Remove the phone endoskeleton from the front cover.

- a** Pry the side grips outward while lifting up on the bottom of the endoskeleton.
- b** Slide the top of the endoskeleton downward until the complete unit is removed from the cover.

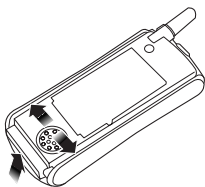


Do This

- 4 Remove the side grips.

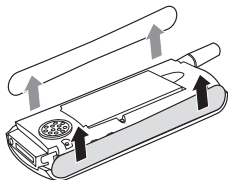

- 5 Remove the keypad from the front cover.

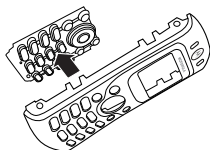

Charging the Battery

New batteries are shipped partially charged. Before you can use your phone, you need to charge the battery. Some batteries perform best after several full charge/discharge cycles.

Do This

- 1 Plug the travel charger into your phone with the release tab facing up.



- 2 Plug the other end of the travel charger into the appropriate electrical outlet.



Do This

- 3 When your phone indicates that the battery is fully charged (**Charge Complete**), press the release tab and remove the travel charger.
-
-

Notes:

- When you charge the battery, the battery level indicator in the upper right corner of the display shows how much of the charging process is complete.
- If the battery charge drops too low, your phone may power off during a call, even when the charger is connected. To avoid this possibility, do not make calls while charging the battery.

Replacing the Battery




Your phone is designed to be used only with Motorola Original batteries and accessories. We recommend that you store batteries in their protective cases when not in use.

Do This

- 1 If necessary, remove the back cover from the phone.

Press the tab at the top of the phone, then lift the cover up and off the phone.

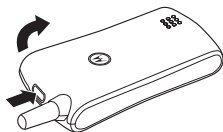

- 2 Remove the battery.
-
-




Do This


- 3** Install the replacement battery.

Fit the end with the gold contacts into the bottom end of the battery compartment. (The contacts should face away from you.)

Then push the battery down until it snaps into place.

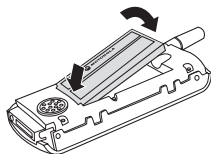


- 4** Attach the bottom end of the back cover, then push the top end downward until it latches.

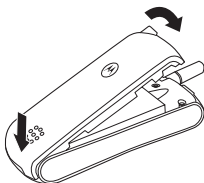


Turning Your Phone On

Do This

- 1** Press and hold 

To

turn on your phone

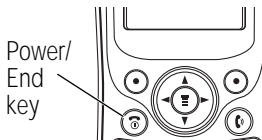

Do This**To**

- 2** If necessary, enter your four-digit unlock code and press **OK** (⊙)

unlock your phone

The unlock code is originally set to 1234. Your service provider may change this number before you receive your phone.

Making a Call

Press**To**

- 1** keypad keys

dial the phone number

Tip: If you make a mistake, press **DELETE** (⊙) to delete the last digit, or press and hold **DELETE** (⊙) to clear all digits.

-
- 2** (⊙)

make the call

Ending a Call

Press**To**



- (⊙)

end the call





Answering a Call

When you receive a call, your phone rings and/or vibrates and displays an incoming call message.

Press	To
 or ANSWER 	answer the call

Tip: If your phone is locked, you must unlock it to answer the call.

Seeing Your Phone Number


Press	To
 	see your phone number





About Your Phone

See page 1 for a basic phone diagram.

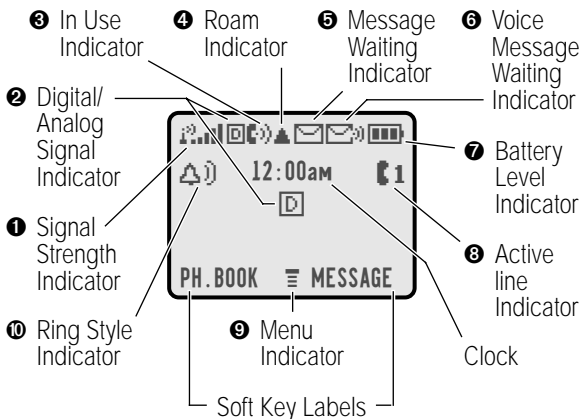
Using the Display



The *idle display* is the standard display that you see when you are *not* on a call or using the menu.

Labels at the bottom corners of the display show the current soft key functions. A  (menu) indicator at the bottom center of the display indicates that you can press  to enter the main menu.



1 Signal Strength Indicator Vertical bars show the strength of the network connection. You cannot make or receive calls when the  (no signal) indicator is displayed.



2 Digital (D) or Analog (A) Signal Indicator Shows whether you are receiving a digital or analog signal.

3 In Use Indicator Shows that a call is in progress.



4 Roam Indicator Shows that your phone is seeking or using another network system outside your home network.



5 Message Waiting Indicator Appears when you receive a text message.




6 Voice Message Waiting Indicator Appears when you receive a voicemail message.

7 Battery Level Indicator Vertical bars show the battery charge level. Recharge the battery when you see **Low Battery** and hear the low battery alert.





8 Active Line Indicator Shows the current active phone line.

9 Menu Indicator Indicates that you can press  to enter the main menu or open a feature sub-menu.





⑩ Ring Style Indicator Shows the ring style setting.

 = loud ring



 = soft ring

 = vibrate

 = ring and vibrate


 = silent

Zooming In and Out


Press and release , then press and hold  to zoom in and out on the display. Zoom in to increase text size, zoom out to display more information.


You can also zoom in and out from the menu. See page 59.

Adjusting Volume

You can adjust your phone's earpiece and ringer volume by using the  key:

When	Adjust
during a call	earpiece speaker volume
phone is idle	ringer volume

Press  (right-arrow) to increase volume

Press  (left-arrow) to decrease volume.



Battery Use

Battery performance depends on many factors, including your wireless carrier's network configuration; signal strength; the temperature at which you operate your phone; the features and/or settings you select and use; and your voice, data, and other application usage patterns.

Battery Care

Caution: To prevent injuries or burns, do not allow metal objects to contact or short-circuit the battery terminals.

To maximize your battery's performance:

- Always use Motorola Original™ batteries and battery chargers. The phone warranty does not cover damage caused from using non-Motorola batteries and/or battery chargers.
- New batteries or batteries that have been stored for long periods of time may require a longer charge time.
- Maintain the battery at or near room temperature when charging.
- Do not expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.
- When you do not intend to use a battery for a while, store it uncharged in a cool, dark, dry place, such as a refrigerator.



- Over extended periods of time, batteries gradually wear down and require longer charging times. This is normal. If you charge your battery regularly and notice a decrease in talk time or an increase in charging time, then it is probably time to purchase a new battery.



The rechargeable batteries that power this product must be disposed of properly and may need to be recycled. Refer to your battery's label for battery type. Contact your local recycling center for proper disposal methods. Never dispose of batteries in a fire because they may explode.

Extending Battery Life

- **Turn off your display backlight**

The backlight uses power. To turn it off, see page 59.

- **Avoid keypad-intense functions**

Activities that require intensive keystroke use (such as playing a game or using messaging) reduce your phone's talk and standby time. Lock the keypad when storing the phone in your purse or pocket to avoid unnecessary keypad and backlight activations. See page 135.





Making and Answering Calls

For basic instructions on how to make a call, end a call, and answer a call, see pages 25–26.

Redialing a Number

If you hear an ordinary busy signal:

Press	To
1 	hang up
2 	redial the busy number

Using Caller ID



Calling line identification (caller ID) displays the phone number for incoming calls.

The phone displays the caller's name when the name is stored in your phonebook, or

Incoming Call when caller ID information is not available.

Using Talk Secure


When *talk secure* is activated, your phone always tries to use a high-security connection to prevent others from intercepting your calls. To activate talk secure, see page 136.



If a high-security connection is not available, your phone uses a standard connection and displays **Line Not Secure**. This message does not appear when caller ID or other information is displayed.



Returning Unanswered Calls

Your phone keeps a record of your unanswered calls, and displays:

- the  (missed call) indicator
- **X Missed Calls Y Unknown**, where **X** is the total number of missed calls and **Y** is the number of missed calls with no caller ID information

Press	To
1 VIEW (⊙)	see the received calls list
2 	select a call to return
3 	make the call

Calling an Emergency Number

Your service provider programs one or more emergency phone numbers, such as 911, that you can call under any circumstances, even when your phone is locked.

Note: Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.



Press	To
1 keypad keys	dial the emergency number
2	call the emergency number

Turning Off a Call Alert

You can turn off your phone's incoming call alert before answering the call.

Press	To
either volume key	turn off the alert

Canceling an Incoming Call

While the phone is ringing or vibrating:



Press	To
or IGNORE (cancel the incoming call



Depending on your phone settings and/or service subscription, the call may be forwarded to another number, or the caller may hear a busy signal.

Calling With Speed Dial

 Each entry you store in your phonebook is assigned a unique *speed dial* number. To speed dial a phonebook entry:

Press	To
1 keypad keys	enter the speed dial number for the entry you want to call
2 	submit the number
3 	call the entry

Calling With One-Touch Dial


To call phonebook entries 1 through 9, just press and hold the one-digit speed dial number for one second.



We recommend that you reserve phonebook entry 1 (speed dial number 1) for storing and dialing your voicemail number. In many cases, your service provider has already done this for you. If necessary, see page 69 to store your voicemail number for one-touch dial access.

Calling a Number In a Text Message





To call a phone number embedded in a text message that you receive:

Press	To
1 	open the Text Msg Menu





Press	To
2 	scroll to Call Back
3 SELECT (	call the number

Additional Calling Features

While dialing (with digits visible in the display), open the **Dialing Menu** to perform the following tasks:

Press	To
 > Attach Number	attach a number from the phonebook or recent call lists
 > Send Message	open a new text message with the number in the To field

 You can also call a number using these features:

Do This	To Call
Press  , scroll to and select Voice Dial () , then press SELECT () and say the entry's name within two seconds	a phonebook entry using voice dial To record a voice name, see page 73.
Press  > Recent Calls > Received Calls or Dialed Calls > <i>entry to call</i>	a missed call, or a recent received or dialed call

Using Features While On a Call

Using Call Waiting



When you are on a call, an alert tone sounds to indicate that you have received a second call.

Press	To
1	answer the new call
2	switch back to the first call



Making a Three-Way Call



During a call, you can call and connect a third party for a three-way call. You cannot do this if you already have a call on hold.

Press	To
1 keypad keys	dial the third party's number
2	call the number
3	connect the two calls
4	end the entire call

Additional On-Call Features



Press	To
MUTE (⊙) (if available) or ☰ > Mute	mute the call
SPEAKER (⊙) (if available) or ☰ > Spkrphone On	activate an attached speakerphone
☰ > My Tel. Number	see your phone number
☰ > Send Tones	send a number to the network as DTMF tones, for credit card or password calls To activate DTMF tones, see the “DTMF” option on page 60.
☰ > Received Calls or Dialed Calls	view recent received or dialed call numbers
☰ > Messages	view or send messages
☰ > Datebook	view datebook entries
☰ > Other Information	view phone specifications
☰ > TTY Setup	switch to TTY mode For more information, see “Switch to TTY Mode During a Voice Call” on page 123.

Using the Menu


Navigating to a Feature

Use these keys to move through the menu system:

Left Soft Key


Perform the function shown in the lower left corner of the display (usually **EXIT** or **BACK**).

Menu Key

Enter the menu system, or open a sub-menu, when  appears in the bottom center of the display.

Power/End Key

Exit the menu system without making changes, return to the idle display.

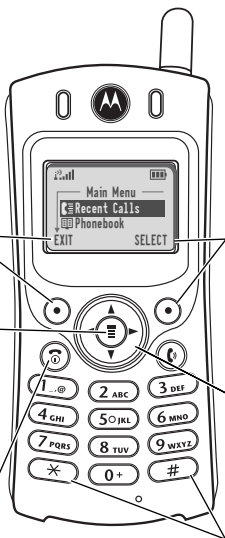

Right Soft Key

Perform the function shown in the lower right corner of the display (usually **SELECT** the highlighted menu item).

Navigation Key

Scroll through lists, adjust volume.

 and 


Cycle through and set the value of the highlighted menu item.



Selecting a Feature Option

Some features require you to select an item from a list:

Press **BACK** (⊙) to go back to the previous screen.

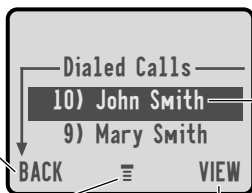

Highlighted item

Press **VIEW** (⊙) to open the sub-menu.


Press **VIEW** (⊙) to view details of the highlighted item.




- Press **UP** (⊙) to scroll up or down to highlight the item you want.
- In a numbered list, press a number key to highlight the item.
- In an alphabetized list, press a key multiple times to cycle through the letters on the key and highlight the closest matching list item.


 
Entering Feature Information


Some features require you to enter information:

 
 

Press  to scroll down to additional items.

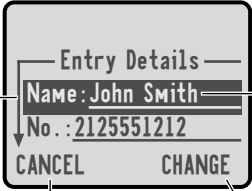

Highlighted item

Press **CANCEL** () to exit without making changes. **DONE** () appears when you enter or edit information.

Press **CHANGE** () to edit the information.

- Enter numbers or text with the keypad.
- When an item has a list of possible values, press  or  to scroll through and select a value.
- When an item has a list of possible numeric values, press a number key to set the value.
- If you enter or edit information and do not want to save your changes, press  to exit without saving.



The message center lets you compose and send text messages. A *flashing cursor* shows where text will appear:

Flashing cursor indicates insertion point.



Press **BROWSE** (⊙) to view and insert a name, number, or message from previously stored information.

Press **CANCEL** (⊙) to exit without making changes.

Press (⊖) to open the sub-menu.

When you enter text, the flashing cursor changes to a *block cursor*, and the soft key functions change:

Block cursor indicates current highlighted character.



Press **OK** (⊙) to accept and store the text.


After two seconds, the block cursor reverts to a flashing cursor and moves to the next position.

Press **DELETE** (⊙) to delete the character to the left of the insertion point.

Entering Text

Multiple text entry methods make it easy for you to enter names, numbers, and messages on your phone.

Choosing a Text Mode

Press  from any text entry screen to select a text mode:

iTAP Let the phone predict each word as you enter it. See page 48.

Tap Method Enter letters, numbers, and symbols by pressing a key one or more times. See page 44.

Numeric Enter numbers only.


Symbol Enter symbols only. See page 47.


Browse Browse your phonebook or recent call lists to select a name or number.

Note: The text mode you select remains active until you change it by selecting another mode.

Using Tap Method

This is the standard mode for entering text on your phone.

Press  from any text entry screen and select the **Tap Method** menu option.

Do This	To
1 Press a number key one or more times	select a letter, number, or symbol shown in the “Character Chart” on page 46
2 Continue pressing number keys	enter the remaining characters
3 Press OK ()	store the text when you are finished




General Text Entry Rules

Press a number key repeatedly to cycle through its characters. See “Character Chart” on page 46.


Press a number key as many times as necessary to enter the desired character at flashing cursor location.

Move flashing cursor to the left or right in text message.

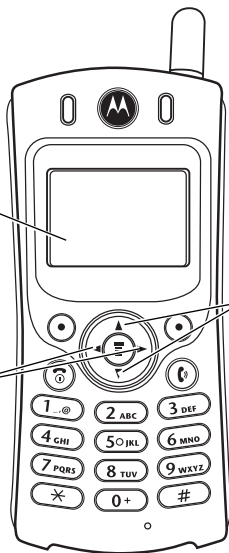


Change letter in block cursor to uppercase or lowercase.

Press and hold a number key to cycle between **tap method** and **numeric mode**.


 

 
 

 
 

 
- If you do not press a key for two seconds, the character in the block cursor is accepted, and the cursor moves to the next position.
- The first character of every sentence is capitalized. (Press  down to force the character to lowercase while it is highlighted by the block cursor).

- Your phone may support multiple languages. The current language setting determines whether a new message begins on the left or right side of the display.

You can switch languages within a message. Press  to select the text mode and language you want to use.


Character Chart


 

Use this chart as a guide for entering spaces, letters, numbers, and symbols with the tap method.

	space . 1 ? ! , @ _ & ~ : ; " - () ' ¿ ¡ % £ \$ ¥ ¤ €
	a b c 2 á à â ã ç
	d e f 3 é è ê ë
	g h i 4 í î ï
	j k l 5
	m n o 6 ñ ó ô õ
	p q r s 7
	t u v 8 ð ü ú ù û
	w x y z 9
	+ - 0 x * / \ [] = > < # §

Note: This chart may not reflect the exact character set available on your phone.


 
 
Using Symbol Mode

Your phone provides an alternate way to enter symbol characters in a message. Press  from any text entry screen and select the **Symbol** menu option.

Do This	To
1 Press a number key one time	display its symbol options at the bottom of the display See “Symbol Chart” on page 47.
2 Press  or  or Press the number key multiple times	highlight the symbol you want
3 Press SELECT ()	enter the symbol at the flashing cursor location

Symbol Chart


Use this chart as a guide for entering characters in symbol mode.

	space . ? ! , @ _ & ~ : ; " - () ' ` ~ i % £ \$ ¥ ¤ €
	@ _ \ α β
	/ : ; δ φ

4 GHI	" & ' γ
5 OJPL	() [] { } λ
6 MNO	ı i ~ ω
7 PQRS	< > = π β σ
8 TUV	\$ £ ¥ ¤ € θ
9 WXYZ	# % * ξ ψ
0+	+ - x * / = > < # §

Using iTAP™ Software Predictive Text Entry Method

iTAP™ software provides a predictive text entry method that lets you enter a word using one keypress per letter.

Press  from any text entry screen and select the iTAP menu option.

Enter Words




Do This




- 1 Press a number key one time

To


enter the first letter of the word


The letters associated with the key are shown at the bottom of the display.

Do This	To
2 Press number keys (one per letter)	enter the rest of the word Alternative words and letter combinations are shown at the bottom of the display. The word choices are updated with each keypress.
3 Press  or 	highlight the word you want
4 Press SELECT ()	enter the word at the flashing cursor location A space is automatically inserted after the word.

  For example, to spell the word “act,” press    .
The display shows:

Flashing cursor indicates insertion point.

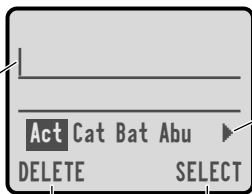

Press  to scroll and see additional word choices.

Press **DELETE** () to clear the last letter.

Press **SELECT** () to insert the highlighted word.

Enter Novel Words

You may enter a word that is not in the iTAP software dictionary. If the word you want is not displayed:

Do This	To
1 Press DELETE (⊙) one or more times	delete letters until you see a letter combination that matches the start of the word
2 Press (⊗) or (#)	highlight the letter or letter combination
3 Press SELECT (⊙), then press (⊗)	shift the text entry cursor to the left and “lock” the selected word portion
4 Continue to enter letters and highlight letter combinations	spell the word


Punctuation

Press	To
(0.) or (1.)	enter punctuation or other characters as shown in the “Character Chart” on page 46




Capitalization

The first word of a sentence is automatically capitalized, with following words in lowercase.


 
Press	To
	change the words to initial character capitalized, all uppercase characters, or all lowercase characters

Enter Numbers

Do This	To
1 Enter the first digit and then highlight it	put the iTAP software in number entry mode
2 Press number keys	add digits to the number
3 Press SELECT ()	enter the number at the flashing cursor location

Delete Letters and Words

Place the cursor to the right of the text you want to delete, and then do the following:

Do This	To
Press DELETE ()	delete one letter at a time
Hold DELETE ()	delete the entire message

Menu Feature Descriptions

This chapter describes all of your phone's features in order of the menu map shown on pages 3–4.

Main Menu

RECENT CALLS

Received Calls

☰ > Recent Calls
> Received Calls

View a list of recently received calls. See page 63.

Dialed Calls

☰ > Recent Calls
> Dialed Calls

View a list of recently dialed calls. See page 63.

Notepad

☰ > Recent Calls
> Notepad

Call or store the last number entered on the keypad. See page 65.

Call Times

☰ > Recent Calls
> Call Times

View call timers that track time spent on your last call, dialed calls, received calls, all calls since reset, and all calls total. See page 65.



PHONEBOOK

☰ > Phonebook

Store names and numbers as entries in your phonebook, then call numbers by selecting them from the phonebook list. See page 68.

VOICE DIAL > **Voice Dial**

You can record a voice name for a new or existing phonebook entry. A voice name lets you call the phonebook entry using voice dial

DATEBOOK > **Datebook**

Use the datebook calendar to schedule and review your appointments. See page 79.

RADIO > **Radio**

Listen to FM radio stations with the optional Motorola Original™ FM Stereo Radio Headset accessory. This menu feature is displayed only when the FM Stereo Radio Headset is plugged into the accessory connector port on your phone. See page 84.



MESSAGES > **Messages**

Adjust message settings, view and manage the various types of messages your phone can receive and/or send:



Create Msg Create new text messages. See page 94.

VoiceMail Listen to your recorded voice messages. See page 87.

Text Msgs Read and manage text messages. See page 89.

Quick Notes Select and send pre-written messages from the quick notes list. See page 96.



Outbox View all outgoing text messages, delivered and undelivered.

Drafts Store and edit text messages that you have written but not sent.

RING STYLES

Style ⓘ > Ring Styles
> Style

Select the ring style your phone uses to notify you of incoming calls, messages, or other events. See page 98.

Style Detail ⓘ > Ring Styles
> Style Detail

Change details about the current ring style. *Style* represents the name of the ring style. See page 98.

My Tones ⓘ > Ring Styles
> My Tones

Create custom alert tones for your phone. See page 100.

SHORTCUTS ⓘ > Shortcuts

Create keypad shortcuts to menu features. See page 109.



WEB SESSIONS

 > **Web Sessions**

Access Web pages and run Web-based applications. The browser delivers WAP (Wireless Application Protocol) pages from your service provider directly to your phone. See page 111.



CALCULATOR

 > **Calculator**

Use your phone as a calculator or currency converter. See page 113.

GAMES

 > **Games**

Play games on your phone. See page 116.

Settings Menu

PHONE STATUS

My Tel. Number

 > **Settings**
> **Phone Status**
> **My Tel. Number**

View, enter, and edit information about your name and phone number.

Active Line

 > **Settings**
> **Phone Status**
> **Active Line**

Change the active phone line to send and receive calls from either of the available numbers.

Battery Meter

 > **Settings**
> **Phone Status**
> **Battery Meter**

View a detailed battery charge meter.



Other Information

- ☰ > Settings
- > Phone Status
- > Other Information



View your phone's feature specifications (if available from the service provider).

CONNECTION

Connect your phone to a computer or hand-held device to send and receive data calls on the connected device. See page 127.

**Incoming Call**

- ☰ > Settings
- > Connection
- > Incoming Call

Specify the format for the next incoming call. You can select **Data In Only** or **Normal**. See page 130.

IN-CALL SETUP

Set the features that are active during a call, such as the in-call timer and call answering options.

In-Call Timer

- ☰ > Settings
- > In-Call Setup
- > In-Call Timer

Adjust call timer **Display** and **Beep** settings. You can set your timer to beep at a selected interval during your calls. (60 seconds is the default.) You can also turn on or off a display timer during calls as follows:

- | | |
|-------------|--|
| Time | Display the elapsed time for the current call. |
| Off | No in-call timer display. |

- Answer Options** ☰ > Settings
> In-Call Setup
> Answer Options

Turn call answering options on or off:

Multi-Key Answer by pressing any key.

SECURITY

- Phone Lock** ☰ > Settings > Security
> Phone Lock

Lock and unlock your phone. See page 134.

- Lock Keypad** ☰ > Settings > Security
> Lock Keypad

View instructions on how to lock and unlock your keypad. See page 135.

- Lock Application** ☰ > Settings > Security
> Lock Application

Lock and unlock specific phone applications (such as phonebook or datebook). When an application is locked, users must enter the unlock code to use the application.

- Talk Secure** ☰ > Settings > Security
> Talk Secure

Activate a secure connection to prevent others from intercepting your calls. See pages 32 and 136.

- Restrict Calls** ☰ > Settings > Security
> Restrict Calls

Restrict incoming and outgoing calls. See page 135.



New Passwords

☰ > Settings > Security
> New Passwords

Change your unlock code (originally set to 1234) or your security code (originally set to 000000). See page 132.

OTHER SETTINGS**Personalize**

☰ > Settings
> Other Settings
> Personalize

Set several personal phone options:

Main Menu

Change the order of the main menu. See page 121.

Keys

Change the functions of the soft keys in the idle display. See page 121.

Greeting

Change the text displayed when you turn on your phone.

**Initial Setup**

☰ > Settings
> Other Settings
> Initial Setup

Set many basic phone options:

Time and Date

Set the phone's time and date.



Backlight	Set the amount of time that the display backlight remains on, or turn off the backlight to conserve battery power.
Zoom	Switch between three lines (Zoom Out) and two lines (Zoom In) of display text.
TTY Setup	Set your phone to operate in one of three TTY modes, or return to normal Voice mode. See page 122.
Scroll	Force the cursor to stop or wrap around when it reaches the top or bottom of a list in the display.
Animation	Turn animation off (to conserve battery power) or on. Animation makes your phone's menus move smoothly as you scroll up and down.
Language	Set the language for phone menus.
Battery Save	Adjust the phone's power usage characteristics to conserve power.



Contrast

Adjust the contrast setting for your display.

DTMF

Your phone can send a number to the network as dual tone multi-frequency (DTMF) tones. DTMF tones are used to communicate with automated systems that require you to enter a number such as a code, password, or credit card number. Use this option to set DTMF tones long, short, or off.

Master Reset

Reset all options back to their original factory settings *except* for the unlock code, security code, and lifetime timer.



Master Clear

Reset all options back to their original factory settings *except* for the unlock code, security code, and lifetime timer, *and* clear all user settings and entries.

Note: This option *erases all user-entered information* stored in your phone's memory, including phonebook and datebook entries. Once you erase the information, it cannot be recovered.

Network

- ☰ > Settings
- > Other Settings
- > Network



View and adjust your phone's network settings.

Your service provider registers your phone to a network. You can view information about the current network, change how your phone searches for a network, and activate alerts that indicate when a call is dropped or network registration changes.



Car Settings

- ⓘ > Settings
- > Other Settings
- > Car Settings



Adjust hands-free car kit settings.

You can set your phone to route calls directly to the car kit when it detects a connection, and automatically answer calls after two rings. See page 124.

Note: The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

Headset

- ⓘ > Settings
- > Other Settings
- > Headset



Set your phone to automatically answer calls after two rings when connected to a headset. See page 124.



Recent Calls



Viewing Received Calls or Dialed Calls

Your phone keeps a list of the calls you recently received and dialed, even if the calls did not connect. The lists are sorted from newest to oldest entries. The oldest entries are deleted as new ones are added.

Shortcut: Press to go directly to the dialed calls list from the idle display.

Find the Feature

> Recent Calls

Press	To
1	scroll to Received Calls or Dialed Calls
2 SELECT (select the list
3	scroll to an entry
	Note: ✓ means the call connected.



Press	To
4	call the entry's number
or	
VIEW	view entry details
or	
	open the Last Calls Menu to perform other procedures as described in the following list

The **Last Calls Menu** includes the following options:




Option	Description
Store	Create a phonebook entry with the number in the No. field.
Delete	Delete the entry.
Delete All	Delete all entries in the list.
Send Message	Open a new text message with the number in the To field.
Add Digits	Add digits after the number.
Attach Number	Attach a number from the phonebook or recent call lists, after the highlighted number.
Send Tones	Send the number to the network as DTMF tones, for credit card or password calls.

Using the Notepad


Your phone stores the most recent string of digits entered on the keypad in a temporary memory location called the *notepad*. This can be a phone number that you called, or a number that you entered but did not call. To retrieve the number stored in the notepad:

Find the Feature

 > Recent Calls
> Notepad

Press	To
	call the number
or	
	open the Dialing Menu to attach a number or insert a special character
or	
STORE ()	create a phonebook entry with the number in the No. field

Viewing and Resetting Call Timers

Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing . This time includes busy signals and ringing.



The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, please contact your service provider directly.





You can view the following network connection times:

Timer	Description
Last Call	Time spent on last dialed or received call. You cannot reset this timer.
Dialed Calls	Time spent on dialed calls since the last time you reset this timer.
Received Calls	Time spent on received calls since the last time you reset this timer.
All Calls	Time spent on dialed and received calls since the last time you reset this timer.
Lifetime	Time spent on all calls on this phone. You cannot reset this timer.



To view a call timer:

Find the Feature

☰ > Recent Calls
> Call Times

Press	To
1 	scroll to the timer you want\
2 SELECT ()	view the recorded time

To reset the call timer:

Press	To
1 RESET ()	reset the time (if available)
2 YES ()	confirm the reset



Phonebook








You can store names and phone numbers or email addresses in your phone's electronic phonebook.

To see the names in your phonebook, press

- ☰ > **Phonebook** from the idle display. Scroll to a name and press **VIEW** (⊙) to view details of the phonebook entry as shown below.

Viewing Entry Details

Type indicator identifies number type:

-  Work
-  Home
-  Main
-  Mobile
-  Fax
-  Pager
-  Email

Voice Name indicator indicates a recorded voice name

Entry's **Name**


Entry's **phone number** or **email address**

Entry's speed dial number

Return to list

Press ☰ to open the **Phonebook Menu**

Edit entry

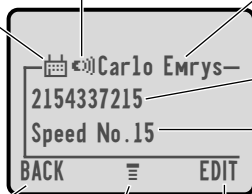

Note: When you set a distinctive ringer alert for an entry, the **Ringer ID** setting appears below the speed dial number.

Storing a Phonebook Entry

A phone number or email address is required for a phonebook entry. All other information is optional.

Shortcut: Enter a phone number in the idle display, then press **STORE** (⊙) to create a phonebook entry with the number in the **No.** field. Go directly to step 3 to continue.

Enter Information

Find the Feature

☰ > Phonebook


 
 
☰ > New



Press	To
1	scroll to Phone Number or Email Address
2 SELECT (⊙)	select the entry type
3 CHANGE (⊙)	select Name
4 keypad keys	enter a name for the entry
5 OK (⊙)	store the name
6 CHANGE (⊙)	select No. or Email
7 keypad keys	enter the phone number or email address
	Tip: You can store a PIN code with the phone number. See page 71.
8 OK (⊙)	store the phone number or email address




Press	To
9 CHANGE (⊙)	select Type
	Note: This option is not available for email entries.
10 Ⓢ	scroll to the number type
11 SELECT (⊙)	select the number type
12 RECORD (⊙)	record a voice name for the entry, if desired (see page 73)
or	
	Go to step 13 if you do not want a voice name
13 Ⓢ	scroll to Speed No.
	The next available speed dial number is assigned to a new phonebook entry.
14 CHANGE (⊙)	select Speed No. if you want to change it
15 keypad keys	enter a different speed dial number, if desired
16 OK (⊙)	store the speed dial number
17 CHANGE (⊙)	select Ringer ID if you want to assign a distinctive ringer alert for the phone number
	Your phone uses the alert to notify you when you receive a call from this phone number. See page 99.

Press	To
18 	scroll to the alert you want
19 SELECT 	store the ringer ID alert
20 SELECT 	select MORE if you want to create another entry under the same Name

You must use a different **Type** identifier for each number.

Complete Phonebook Entry

When you finish entering information for a phonebook entry:




Press	To
DONE 	store the entry

Storing a PIN Code with a Phone Number

You can store a PIN code with a phone number for calls that require additional digits (for example, to make a calling card call, or to retrieve voicemail or answering machine messages). Insert one or more of the following characters in the dialing sequence to ensure that the number dials and connects properly:





Press	To
 > Insert Pause	insert a p (pause) character Your phone dials the preceding digits, waits for the call to connect, then sends the remaining digit(s).
 > Insert Wait	insert a w (wait) character Your phone dials the preceding digits, waits for the call to connect, then prompts you for confirmation before it sends the remaining digit(s).
 > Insert 'n'	insert an n (number) character Your phone prompts you for a number before dialing the call. The number you enter is inserted into the dialing sequence in place of the n character

Note: You can store a maximum of 32 digits per number. Each character counts as one digit.






 
 
 
Recording a Voice Name For a Phonebook Entry

You can record a voice name for a new or existing phonebook entry. A voice name lets you call the phonebook entry using voice dial (see page 74).

Tip: Make your recording in a quiet location. Hold the phone about four inches (10 centimeters) from your mouth, and speak directly into the phone in a normal tone of voice.

Find the Feature

 > **Phonebook**

Do This	To
1 Press 	scroll to the phonebook entry
2 Press VIEW ()	view entry details
3 Press EDIT ()	edit the entry
4 Press 	scroll to Voice Name
5 Press RECORD ()	begin recording
6 Press and release RECORD () and say the entry's name (in two seconds)	record the voice name
7 Press and release RECORD () and say the name	confirm the voice name
8 Press DONE ()	store the voice name





Dialing a Phonebook Entry

Use one of the following procedures to call a number (or send a text message to an email address) stored in your phonebook.


Phonebook List

Find the Feature

 > Phonebook

Press	To
1 keypad key letter	jump to entries that begin with that letter (optional)
2 	scroll to the entry
3 	make the call

Voice Dial

Do This	To
Press V. Dial () and say the entry's name within two seconds)	make the call




To speed dial a phonebook entry, see page 35. To call an entry with one-touch dial, see page 35.



Editing a Phonebook Entry

Find the Feature

 > **Phonebook**




 
 
Press	To
1 	scroll to the entry
2 VIEW ()	view entry details
3 EDIT ()	edit the entry

Edit the entry as described on pages 69-71.

Deleting a Phonebook Entry

Find the Feature

 > **Phonebook**

Press	To
1 	scroll to the entry
2 	open the Phonebook Menu
3 	scroll to Delete
4 SELECT ()	select Delete
5 YES ()	confirm the deletion









Setting the Primary Number for a Phonebook Entry

When you enter multiple phone numbers for the same name, you can set one as the primary number.

Find the Feature

 > **Phonebook**

Press	To
1 	scroll to the entry
2 	open the Phonebook Menu
3 	scroll to Set Primary
4 SELECT (	select Set Primary
5 	scroll to the number you want to set as the primary number
6 SELECT (	set the primary number



Depending on how the phonebook list is sorted, the primary number is listed first, or is the only number that appears for a phonebook entry. See page 77.

Checking Phonebook Capacity

You can see how much memory space remains for storing phonebook and datebook entries on your phone.

Find the Feature

 > **Phonebook**

Press	To
1 	open the Phonebook Menu
2 	scroll to Ph Book Capacity



Press	To
3 SELECT (⊙)	select Ph Book Capacity Your phone displays the phone memory meter.

Sorting the Phonebook List

You can sort your phonebook list by speed dial number (the standard), name, email address, or voice name.

Tip: The voice name sort is identical to the name sort, except that entries with voice name tags appear first.

Find the Feature ☰ > Phonebook

Press	To
1 ☰	open the Phonebook Menu
2 ⬇️	scroll to Setup
3 SELECT (⊙)	select Setup
4 ⬇️	scroll to Sort by
5 CHANGE (⊙)	select Sort by
6 ⬇️	scroll to Name, Speed No., Voice Name, or Email
7 SELECT (⊙)	select the sort order

If you select **Speed No.**, **Voice Name**, or **Email**, the procedure is complete.



If you select **Name**, you must specify whether you want to view all numbers or just the primary number for each name:

Press	To
8 CHANGE (⊙)	change view preference
9 ⊕	scroll to Primary Contacts or All Contacts
10 SELECT (⊙)	select the view preference
11 DONE (⊙)	set the view preference

To set an entry's primary phone number, see page 76.

Datebook

The datebook is a calendar that lets you schedule and organize events such as appointments and meetings. You can set the datebook to send a reminder alarm for specific events.


Note: You must set the correct time and date on your phone to use the datebook.

To schedule or review datebook events:

Find the Feature  > **Datebook**


Week View

The datebook initially displays a calendar for the week. Lines or filled boxes indicate scheduled events.

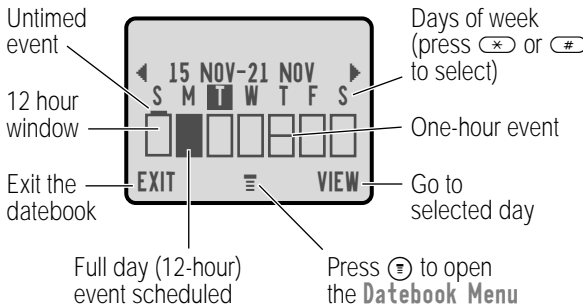


Day View

Select a day and press **VIEW** (⊙) to see the day's events.

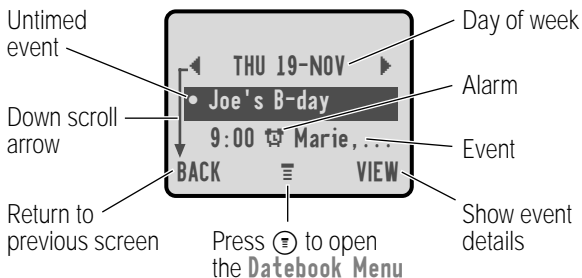

Event View

Select an event and press **VIEW** (⊙) to see event details.

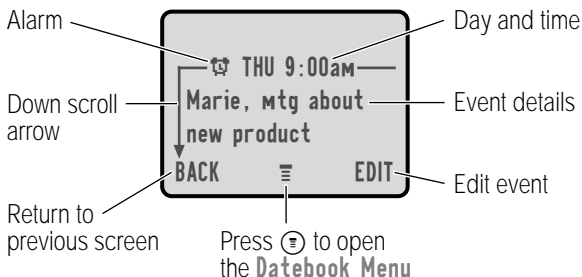





Adding a Datebook Event

A title is required for a datebook event. All other information is optional.

Note: You must create an event to use the reminder alarm.

Find the Feature

 > **Datebook** > *day*
 > **New**






Press	To
1 CHANGE ()	select Title
2 keypad keys	enter a title for the event
3 OK ()	store the event title
4 	scroll to other fields and enter information as necessary You can set start time, duration, date, repeat interval, and reminder alarm.
5 DONE ()	store the event






Changing Event Information

 Find the Feature

 > **Datebook**


 










Press	To
1 	scroll to the day
2 VIEW ()	display the day view
3 	scroll to the event
4 VIEW ()	display the event view
5 EDIT ()	edit the event

Press	To
6 	scroll to the information you want to change
7 CHANGE (	edit the information
8 keypad keys	enter new information
9 DONE (	store the information

Copying an Event

 Find the Feature

 > **Datebook**








Press	To
1 	scroll to the day
2 VIEW (	display the day view
3 	scroll to the event
4 	open the Datebook Menu
5 	scroll to Copy
6 SELECT (	copy the event
7 YES (	confirm the copy
	Your phone assumes you want to change the date, and displays the Date field.
8 keypad keys	enter date information
9  (	move to month, day, and year
10 DONE (	save the copy of the event
11 	scroll to and edit event information, if necessary
12 DONE (	store the information



Deleting an Event

Find the Feature

  > **Datebook**

Press	To
1 	scroll to the day
2 VIEW (	display the day view
3 	scroll to the event
4 	open the Datebook Menu
5 	scroll to Delete
6 SELECT (	select Delete
7 YES (	confirm the deletion



Radio



You can use your phone to listen to FM radio stations when the optional Motorola Original™ FM Stereo Radio Headset accessory is plugged into the phone's accessory connector port.

Turning the Radio On and Off

Press	To
Radio (⊙)	turn the radio on and off

Alternatively, you can use the following procedure:

Press	To
1 ⊙	open the menu
2 ⊙	scroll to Radio
3 On (⊙) or Off (⊙)	turn the radio on or off

Note: The **Radio** menu feature and soft key options appear only when the FM Stereo Radio Headset is plugged into the accessory connector port.



Tuning a Station

Do This	To
Press 	scroll to the next frequency
or	
Press and hold 	scroll to the next available stereo station

Storing a Preset

Do This	To
Press and hold a number key ( to )	assign its preset number to the tuned station

Selecting a Preset

Press	To
a number key ( to )	tune the station stored at the preset location

Sending and Receiving Calls with the Radio On

Your phone rings or vibrates as usual to notify you of an incoming call, message, or other event.



Do This	To
Press IGNORE (⊙)	ignore the call
Press ANSWER (⊙) or Press the button on the FM Stereo Radio Headset microphone	answer the call Note: You can use the FM Stereo Radio Headset microphone to converse with the other party during a call

To end the call and resume the FM broadcast:

Do This	To
Press (Ⓜ)	end the call
or Press and hold the button on the FM Stereo Radio Headset microphone	

Turn the radio off before dialing outgoing calls from the phone keypad. You do not have to turn off the radio to dial emergency numbers, or numbers selected from your phonebook or recent call lists.

Tip: To dial a recently called number, press (Ⓜ) or the button on the FM Stereo Radio Headset microphone to go to the dialed calls list. For more information, see page 63.



Messages—Voicemail



You can listen to your voicemail messages by calling your network voicemail phone number. Voicemail messages are stored on the network—not on your phone.

Storing Your Voicemail Number

Storing your voicemail number on your phone makes it easy for you to listen to new voicemail messages. In many cases, your service provider has already done this for you.


Find the Feature ☰ > **Messages**
 > **Voicemail**
 ☰ > **VoiceMail Setup**

Press	To
1 keypad keys	enter your voicemail number Tip: You can store your PIN code with the voicemail number. See page 71.
2 OK (⊙)	store the number

Your service provider additionally may store your voicemail number as phonebook entry number 1, so you can use one-touch dial to listen to your voicemail messages. If necessary, see page 69 to store your voicemail number for one-touch dial access.



Receiving a Voicemail Message

When you receive a voicemail message, your phone displays the  (voice message waiting) indicator and a **New VoiceMail** notification.


Press	To
CALL (☎)	listen to the message

If reminders are turned on, your phone sends a reminder at regular intervals until you close the new message notification, listen to the message, or turn off your phone.

Listening to a Voicemail Message

Find the Feature  > **Messages** > **VoiceMail**

The phone calls your voicemail number. If no voicemail number is stored, your phone prompts you to store one.

Shortcut: If your voicemail number is also stored as phonebook entry number 1, you can press and hold  to listen to your voicemail message(s).



Messages—Text



Text messages are brief messages that you can send and receive.

Quick notes are pre-written text messages that you can customize and send quickly.

Your text message inbox must be set up *before* you can send and receive messages. The number of messages the inbox can hold depends on the length of the messages, and the number of other messages and drafts stored on your phone.

Setting Up the Text Message Inbox

Notes:

- In many cases, your service provider has already set up the text message inbox for you.
- In the following procedure, if you select an option such as **Expire After** but do not change it, you must scroll to the next option. Your phone will not automatically scroll to it.

Find the Feature

☰ > Messages
☰ > Text Msg Setup

Press



1 CHANGE (⊙)

To

change the **Expire After** period






Press	To
2 keypad keys	enter the expiration period—the number of days your network tries to send unreceived messages
3 OK (⊙)	store the expiration period
4 CHANGE (⊙)	change the Cleanup setting
5 	scroll to the number of days you want to keep messages in the inbox, or the number of messages you want to keep
6 SELECT (⊙)	select the cleanup setting
7 CHANGE (⊙)	change the SMS Alert setting
8 	select whether you want incoming message alerts turned On or Off while you are on a voice call
9 SELECT (⊙)	select the SMS Alert setting
10 DONE (⊙)	save the inbox settings

Receiving a Text Message

Note: Your text message inbox must be set up before you can receive text messages. See page 89.

When you receive a text message, your phone displays the  (message waiting) indicator and a **New Message** notification, and plays an alert.

Press	To
READ (⊙)	open the message

If reminders are turned on, your phone sends a reminder at regular intervals until you close the new message notification, read the message, or turn off your phone.

When your phone displays **Memory is Full!**, your phone automatically deletes the oldest message each time it receives a new message.











Reading, Locking, or Deleting a Text Message

Messages in the text message inbox are sorted from newest to oldest. The oldest messages are deleted automatically as specified by the inbox cleanup setting (see page 89). If you want to save a message, you should lock it to prevent it from being deleted during cleanup.

Find the Feature

 > Messages
> Text Msgs

Press	To
1 	scroll to the message The following indicators show message status:  = unread  = unread and urgent  = unread and urgent (with attachment)  = read  = read and urgent  = read and locked
2 READ 	open the message



Press	To
3 SAVE (⊙)	close the message
or	
REPLY (⊙)	compose and send a reply
or	
⊙	open the Text Msg Menu to perform other procedures as described in the following list

The **Text Msg Menu** includes the following options:

Option	Description
Delete	Delete the message.
Call Back	Call the number in the message header or embedded in the message.
Go To	Launch the browser and go to a Web address (URL) embedded in the message.
Forward	Open a copy of the text message, with an empty To field. Note: You cannot forward sound files embedded in a text message. Only the text is forwarded.
Store Tone	Store the selected sound file.
Play	Play a sound file in the message.
Lock/Unlock	Lock or unlock the message.



Option	Description
Store Number	Create a phonebook entry, with the embedded number in the No. field.
Delete All	Delete all inbox messages.
Create Message	Open a new text message.
Store Address	Create a phonebook entry, with the embedded email address in the Email field.
Setup	Open the text message inbox setup menu.

Storing Sounds

Text messages that you receive can contain sounds.

The first time you press **READ** (⊙) to read a message that contains a sound, the sound begins playing. The sound does not play if you just scroll to the list of message.

You can store these embedded sound files on your phone, and use them as alert tones.

Press	To
1 ⊙	open the Text Msg Menu
2 ⊙	scroll to Store Tone
3 SELECT (⊙)	select the option Your phone adds the sound to the My Tones list.



For more information about using sound files, see pages 99 and 100.



Sending a Text Message


You can send a text message to one or more recipients. You can manually enter each recipient's phone number or email address, or select numbers/addresses from the phonebook or recent call lists.

As you complete the steps below, note the following:

- When you manually enter numbers and/or email addresses, you must insert a space between each entry. Press and hold  until the space appears, then enter the next number or email address.
- In the following steps, if you select an option such as **Priority** but do not change it, your phone does not automatically scroll to the next option. You must press  to scroll to the next option.

Find the Feature

 > **Messages**
> **Create Message**

Press	To
1 CHANGE ()	select To



Press	To
2 keypad keys	enter one or more phone numbers and/or email addresses Tip: Press and hold 1 to insert a space between each number/address that you enter manually.
or	
BROWSE (⊙)	select numbers/addresses from the phonebook or recent call lists
3 OK (⊙)	store the numbers/addresses
4 CHANGE (⊙)	select Msg
5 keypad keys	enter the message Note: Message length is limited. As you near the limit, a display counter shows how many characters are left.
6 OK (⊙)	store the message
7 CHANGE (⊙)	select Priority
8 (⊙)	scroll to the priority you want
9 SELECT (⊙)	set the priority
10 CHANGE (⊙)	select Call
11 keypad keys	enter a number for the recipient to call back
12 OK (⊙)	store the number



Press	To
13 CHANGE (⊙)	select Receipt
14	select whether you want the message status to be updated when the recipient opens the message
	Note: Sent messages are stored in your outbox. If you attempt to send a message when your outbox is full, your phone will prompt you to delete one or more stored messages.
15 OK (⊙)	store your receipt preference
16 DONE (⊙)	finish the message
17 YES (⊙)	send the message
or	
NO (⊙)	cancel the message or save it in the drafts folder




Sending a Quick Note Text Message

Quick notes are pre-written messages that you can edit and send quickly (for example, **Meet me at ...**). You can also create and store new quick notes.

Find the Feature

> **Messages**
> **Quick Notes**



Press	To
1 	scroll to the quick note
2 READ ()	read the quick note
or	
	open the Quick Note Menu to perform other procedures as described in the following list

The **Quick Note Menu** includes the following options:



Option	Description
New	Create a new quick note.
Edit	Edit the quick note.
Delete	Delete the quick note.
Send	Open a new message with the quick note in the Msg field.

Viewing the Status of Sent Text Messages

Messages that you send are stored in the outbox.


Find the Feature  > **Messages** > **Outbox**


Messages in the outbox are sorted from newest to oldest. The following indicators show message status:

>> = sending in progress  = delivered
 ✕ = sending failed  = read by recipient


Ring Styles


Your phone rings or vibrates to notify you of an incoming call or other event. This ring or vibration is called an *alert*. You can select one of five different ring styles:

 = loud ring

 = soft ring

 = vibrate

 = ring and vibrate

 = silent



The ring style indicator in the display shows the current ring style (see page 27).

Each ring style contains settings for specific event alerts, ringer ID, and ringer and keypad volume.

Selecting a Ring Style

Find the Feature

 > Ring Styles > Style

Press	To
1 	scroll to the ring style
2 SELECT ()	select the ring style





Customizing a Ring Style

Change Style Settings

You can change the alerts that notify you of the following events: incoming calls, text messages, voicemail messages, data calls, fax calls, alarms, and reminders. Any changes you make are saved to the current ring style.

Find the Feature  > **Ring Styles**
> **Style Detail**

Note: *Style* represents the current ring style.


Press	To
1 	scroll to the event
2 CHANGE ()	select the event
3 	scroll to the alert you want
4 SELECT ()	select the alert

Activate and Deactivate Ringer IDs

When ringer IDs are turned on, your phone uses distinctive ringer alerts to notify you of incoming calls or messages from specific entries stored in your phonebook. To assign a ringer ID to a phonebook entry, see page 69.

Find the Feature  > **Ring Styles**
> **Style Detail**

Note: *Style* represents the current ring style.

Press	To
1 	scroll to Ringer IDs



Press	To
2 CHANGE (⊙)	change the ringer IDs setting
3 Ⓢ	scroll to On or Off
4 SELECT (⊙)	select the option

Set Ringer or Keypad Volume

Find the Feature

Ⓢ > **Ring Styles**
> **Style Detail**

Note: *Style* represents the current ring style.

Press	To
1 Ⓢ	scroll to Ring Volume or Key Volume
2 * or #	scroll to the desired volume
3 OK (⊙)	confirm the new volume

Creating Alert Tones

You can create and store up to 32 custom alert tones on your phone. The tones appear in the list of available alerts.

Create a Tone

Find the Feature

Ⓢ > **Ring Styles**
> **My Tones**

Press	To
1 Ⓢ	scroll to [New Tone]
2 SELECT (⊙)	select [New Tone]
3 CHANGE (⊙)	select Notes



Press	To
4 keypad keys	enter notes (see page 101)
5 OK (⊙)	store the notes
6 CHANGE (⊙)	select Name
7 keypad keys	enter a name for the tone
8 OK (⊙)	store the name
9 DONE (⊙)	store the tone

Enter Notes

To create a new tone, use the keypad keys to enter notes. For each note, you must specify the octave (optional), pitch, length, and a length modifier (optional). Press a key multiple times to cycle through its available options and enter the necessary character as described in the following lists.

Octave

The default setting for a new tone is octave four.

Key	Display	Description
0	*	enter * followed by a number (0 to 8) to set the octave

Notes and Rests

Key	Display	Description
0	#	sharp
	&	flat






Key	Display	Description
2 ABC	a	note A
	b	note B
	c	note C
3 DEF	d	note D
	e	note E
	f	note F
4 GHI	g	note G
7 PQRS	r	rest


Lengths and Modifiers

Key	Display	Description
0+	0	whole note
1 .	1	half note
2 ABC	2	quarter note
3 DEF	3	eighth note
4 GHI	4	sixteenth note
5 OPL	5	1/32 note
1 .	.	dotted note
	:	double dotted note
	;	2/3 length note

Volume Control Characters

Key	Display	Description
	V, +, and -	Set volume level from V1 to V15. Enter V+ or V- to increase or decrease volume one level from current setting.

Repeat Characters

Key	Display	Description
	(,), and @	Use parentheses to enclose sequence of notes to be repeated. After the sequence, enter @ followed by digit(s) to set number of repetitions.



Note Entry Sequence

Do This	Action
1 Set the octave (optional)	Set the octave (*0 to *8) <i>before</i> selecting the note. The octave applies to the note and all following notes until you change it again.
2 Set the note to a sharp or flat, if necessary	Enter a sharp or flat (# or &) <i>before</i> selecting the note.



 
 
 

 
 
 
 
 
 

 

 
 
 
 
 
 
 
 
 
 



 
Do This	Action
3 Select the note (required)	Press a keypad key.
4 Set length (required)	Set the length (0 to 5) <i>after</i> selecting the note. If you do not specify a length, a 2 (quarter note) length is appended to the note.
5 Modify length (optional)	Enter a length modifier (. , : , or ;) <i>after</i> you set the length.

You can perform the following tasks when creating a tone:

Task	Action
Insert a rest	Enter one or more rests (r characters) as needed in the tone sequence. Set the length of the rest (0 to 5) <i>after</i> the rest, just as you would for a note.
Repeat a note sequence	Use (and) to group a sequence of notes. After the sequence, enter @ followed by a number to set the number of repetitions.
Adjust volume	Enter V+ or V- to increase or decrease volume one level at the current location in the note sequence.
Listen to a new tone as you compose it	Press ☰ to enter the Compose Menu , and select Play All to play the notes you have entered.

Example

Press the following keys to create this sequence of notes and rests in octave three: **C** (quarter note), **E flat** (quarter note), **half rest**, and **G** (whole note):

Press	To	Display
1      	set octave three	*3
2   	enter note C	c
3    	set length to quarter note	2
4    	enter flat symbol	&
5  	enter note E flat	e
6    	set length to quarter note	2
7 	enter rest	r
8 	set length to half rest	1
9 	enter note G	g
10 	set length to whole note	0

Play a Tone

Find the Feature

 > Ring Styles
> My Tones





Press	To
1	scroll to the tone
2	open the My Tones Menu
3	scroll to Play
4 SELECT (select Play
5 PLAY (play the tone again
or	
CANCEL (return to my tones list

Edit a Tone

You cannot edit the predefined alert tones included with your phone. To edit a custom alert tone:

Find the Feature > **Ring Styles**
> **My Tones**






Press	To
1	scroll to the tone
2 EDIT (open the tone details
3	scroll to the item you want to edit (Name or Notes)
4 CHANGE (select the item
5 keypad keys	enter new text or notes
6 OK (store the tone

Delete a Tone

You cannot delete the predefined alert tones included with your phone. To delete a custom alert tone:

Find the Feature

 ☰ > Ring Styles
> My Tones

Press	To
1 	scroll to the tone
2 	open the My Tones Menu
3 	scroll to Delete
4 SELECT (	select Delete
5 YES (	confirm the deletion

Download a Tone

You can download custom alert tones from a text message. See page 93.

Setting Reminders



A reminder is an alert that rings or vibrates at regular intervals to notify you about a voicemail or text message that you have received.

Find the Feature

☰ > Ring Styles
> Style Detail
> Reminders



Note: *Style* represents the current ring style.

Press	To
1 	scroll to Beep or Vibrate to set the reminder alert type, or Off to turn off all reminders
2 SELECT ()	select the reminder alert






 




Shortcuts

Your phone includes several standard shortcuts. You can create additional shortcuts to frequently used menu items.

Standard Shortcuts

The following shortcuts are pre-programmed in your phone. You cannot edit or delete these shortcuts.


Do This	To
Press  , then press and hold  (within two seconds)	zoom in/out on your phone display
Press  	lock/unlock your keypad
Press  	see your phone number
Press 	go to the dialed calls list
Press 	exit the menu system







Creating a Shortcut

You can create a keypad shortcut *plus* an optional voice shortcut to a menu item. A voice shortcut takes you directly to the menu item when you say the shortcut name.


Tip: Make your recording in a quiet location. Hold the phone about four inches (10 centimeters) from your mouth, and speak directly into the phone in a normal tone of voice.

Do This	To
1 Press 	enter the menu system


Do This	To
2 Press 	scroll to the menu item
3 Press and hold 	open the shortcut editor
4 Press DELETE ()	change the keypad shortcut number
or	
5 Press OK ()	select the default keypad shortcut number

Using Shortcuts

Use a Keypad Shortcut

Press	To
1 	open the menu
2 <i>the keypad shortcut number</i>	go to the menu item or perform the menu action

Select a Shortcut From the List

Find the Feature  > **Shortcuts**
> *the shortcut you want*

Browser




 
The browser lets you access Web pages and Web-based applications on your phone. Contact your service provider to set up access, if necessary.



Starting a Browser Session

Find the Feature


 
 

 > **Web Sessions**

Press	To
1 	scroll to a bookmark, service, or application
2 SELECT ()	select the item

If you are unable to establish a network connection with the micro-browser, contact your service provider.



Interacting With Web Pages



Press	To
	scroll through text, or highlight a selectable item
SELECT (⊙)	select the highlighted item
CALL (⊙)	call the highlighted phone number from the browser
keypad keys, followed by OK (⊙)	enter information Press  to delete one letter at a time if you make a mistake.
	go back to the previous page
	open the Browser Menu




Calculator

You can use your phone as a calculator and currency converter.

Calculating Numbers

Press	To
1 number keys	enter a number
2 	highlight a calculator function
3 SELECT ()	perform the function

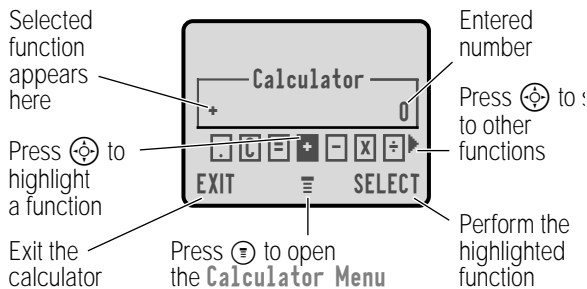

The calculator can perform the following functions:

Function	Description
.	Insert a decimal point
C	Clear the calculation
CE	Clear entry (replaces C when you enter subsequent values in a calculation)
=	Calculate the result
+	Add
-	Subtract
x	Multiply
÷	Divide
%	Divide the displayed value by 100
±	Change the entry's sign (positive/negative)
\$	Calculate the exchange rate
MS	Store the value in memory (overwrites current stored value)
MC	Clear the value stored in memory
MR	Replace the displayed value with the value stored in memory






Converting Currency

The currency converter works just like the calculator, but uses the \$ (currency) function:

Find the Feature

 > **Calculator**

 > **Exchange Rate**

Press	To
1 number keys	enter the exchange rate
2 OK ()	store the exchange rate
3 number keys	enter the amount to convert (amount to multiply by the exchange rate)
4 	highlight the \$ function
5 SELECT ()	perform the conversion



Games





You can play games on your phone between phone calls. An incoming call, message, alarm, or alert automatically ends the game.




 
Playing a Game

Find the Feature

 > **Games**

Press	To
1 	scroll to a game
2 SELECT ()	start the game

When the game is over:

Press	To
NEW () or YES ()	start another session of the same game
BACK () or NO ()	end the game session

Game Options

Press  to select the following options during a game:

Option	Description
Game Sounds	Switch game sounds on/off.
New Game	Start a new game session.

Option	Description
Key Configuration	Assign game functions to different keypad keys.
Help	Review the goal of the game. Note: This option is not available for Blackjack.



Blackjack

In this classic card game, you play against the dealer to see who can get closer to 21 points without going over.

Rules of the Game

- The first card is dealt to the dealer. The dealer's cards are shown at the top of the display, and your cards are shown at the bottom.
- Face cards count as 10 points. Number cards count as the points shown on their face.
- An ace counts as 11 points, unless that would put you over 21 points. Otherwise, an ace is counted as 1 point. An ace that is originally counted as 11 may later be counted as 1 if it will bring your total under or equal to 21 points.
- An initial deal of an ace and a card with a face value of 10 points counts as exactly 21 points or Blackjack.
- Blackjack automatically wins against any other hand that totals 21 points.
- If you score more than 21 points, you go "bust" or lose.



- If you get five cards without going bust, you win.
- If you and the dealer have the same score, the dealer wins.
 - You can ask for a “hit” or another card as long as you do not go bust.
- As long as the dealer’s total is less than 17 points, the dealer must continue to take a hit.

How to Play

When the game begins, you are dealt two cards.

Press	To
STAY (⊙)	see the results of the hand
HIT ME (⊙)	request another card

Falling Numbers


Score points by pressing the corresponding number key for numbers as they “fall” down the display.

Rules of the Game

- If a number reaches the bottom of the display or if you press an incorrect number key, you score one miss.
- The game is over when you score three misses.
- The game has five levels. When you complete a level, play continues automatically at the next level.
- You earn a bonus if you finish a level without a miss.

How to Play

When the game begins, numbers start falling from the upper portion of the display. Press the corresponding number key to eliminate a falling number before it reaches the bottom of the display.

Press  to select the following options:

Option	Description
Level	Choose the starting level of play.
Top Scores	View the top five scores.

Video Poker

Turn 100 credits into 9,999-plus credits by making the best possible poker hands.


Rules of the Game

- You start a new game with 100 credits. You must bet from 1-10 credits for each hand you play.
- You are dealt five cards face up, and have one opportunity to trade in cards (zero to five) for new ones.
- A winning hand earns credits as listed in the **Awards Table**.
- Your credit total is saved when you exit the game. The next time you play, you start with the number of credits that remain from the previous session.
- The game is over when you lose all of your credits.



How to Play

Place your initial bet or change your bet (from 1-10 credits) and then:



Press	To
DEAL (⊙)	start a new hand
4 CH	select the card to the left
6 MR	select the card to the right
5 D or DISCARD (⊙)	discard selected card
5 U or UNDO (⊙)	undo discard (replaces previous option after discard)
DONE (⊙)	remove discarded cards and deal replacements

Press ⊞ to select the following options:

Option	Description
Change Bet	Change bet amount (not available while hand is in play).
Choose Deck	Choose the deck image.
Awards Table	View the list of odds/payouts for each winning hand.

Adjusting Your Settings

Reordering Menu Items

You can reorder the items in your phone's main menu.

Find the Feature

- ☰ > Settings
- > Other Settings
- > Personalize
- > Main Menu




 

 
Press	To
1	scroll to a menu item
2 GRAB (grab the menu item
3	move the item to a new location in the menu
4 INSERT (insert the menu item

Customizing a Soft Key Function

You can relabel the soft keys (and) to access different menu items from the idle display.

Find the Feature

- ☰ > Settings
- > Other Settings
- > Personalize > Keys

Press	To
1 	scroll to Left or Right
2 CHANGE (	select the key
3 	scroll to the new key function
4 CHANGE (	confirm the new function

TTY Operation



You can use an optional TTY device with your phone to send and receive calls. You must plug the TTY device into the phone's headset jack and set the phone to operate in one of three

TTY modes.

Notes:





- Use a TSB-121 compliant cable (provided by the TTY manufacturer) to connect the TTY device to your phone.
- For optimal performance, your phone should be at least 12 inches (30 centimeters) away from the TTY device. Placing the phone too close to the TTY device may cause high error rates.

Set TTY Mode

When you set your phone to a TTY mode, it operates in that mode whenever the TTY device is connected.

Find the Feature


-  > **Settings**
- > **Other Settings**
- > **Initial Setup**
- > **TTY Setup**

Press	To
1 	scroll to TTY Setup
2 CHANGE (	change the TTY mode
3 	scroll to the TTY mode
4 SELECT (	select the TTY mode





 
The **TTY Setup** menu includes the following options:

Option	Description
TTY	Transmit and receive TTY characters
VCO	Receive TTY characters but transmit by speaking into the microphone
HCO	Transmit TTY characters but receive by listening to the earpiece
Voice	Return to normal voice mode


 





When your phone is in a TTY mode, the international TTY symbol and the mode setting are shown in the display. You can press **TTYMODE** () to change the mode setting.

Switch to TTY Mode During a Voice Call

Press	To
1 	open the Call menu
2 	scroll to TTY Setup
3 SELECT (	display the TTY Setup menu
4 	scroll to the TTY mode
5 SELECT (	select the TTY mode



Press	To
1 	open the Call menu
2 	scroll to TTY Setup
3 SELECT ()	display the TTY Setup menu
4 	scroll to the TTY mode
5 SELECT ()	select the TTY mode

Return to Voice Mode

To return to normal voice mode, select **Voice** from the **TTY Setup** menu as described on page 122.

Hands-Free Use



You can purchase an optional Motorola Original™ hands-free car kit or headset for your phone.

These accessories provide alternative ways for you to use your phone without using your hands.


 




Note: The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

Automatic Answer

You can set your phone to automatically answer calls after two rings (four seconds) when connected to a car kit or headset.

Find the Feature

 > **Settings**
> **Other Settings**


 
Press	To
1 	scroll to Car Settings or Headset
2 SELECT (	select the feature
3 	scroll to Auto Answer
4 CHANGE (	select Auto Answer
5 	scroll to On or Off
6 SELECT (	confirm the setting

Automatic Hands-Free

You can set your phone to automatically route calls to a car kit when it detects a connection.

Find the Feature

-  > **Settings**
- > **Other Settings**
- > **Car Settings**
- > **Auto Handsfree**

Press	To
1 	scroll to On or Off
2 SELECT (	confirm the setting

Power-Off Delay

When your phone is connected to a car kit, you can set it to stay on for a period of time after you switch off the ignition. This prevents the phone from draining your vehicle battery, but leaves the phone on long enough that you do not have to re-enter your unlock code when making short stops.





Note: This feature may not work with all car ignition switches.

Caution: If you select **Continuous**, the phone does not power off when you turn off the ignition. Be careful not to drain your vehicle battery if you select this option.

Find the Feature

☰ > Settings
> Other Settings
> Car Settings
> Power-Off Delay

Press	To
1 	scroll to the time delay
2 SELECT 	confirm your selection



Charger Time

When your phone is connected to a car kit, you can set it to charge itself for a specified time period after you switch off the ignition. This helps ensure that the phone battery gets fully charged while the vehicle is parked.

Note: This feature may not work with all car ignition switches.

Find the Feature

☰ > Settings
> Other Settings
> Car Settings
> Charger Time

Press	To
1 	scroll to the charge time
2 SELECT 	confirm your selection

Data Calls



A Motorola Original™ data kit lets you transfer data between your phone and a computer or other external device. You can:



- use your phone as a modem to connect to the Internet.
- use your phone to send and receive data calls on your computer or hand-held device.

Connecting Your Phone to an External Device

Connect your phone to a computer or hand-held device using a serial cable or a USB cable.

Note: Not all devices are compatible with serial cable or USB cable connections. Check your external device for specifications.

Set Up a Cable Connection

Attach a serial cable or Motorola Original USB cable to the phone and external device as follows.

Note: Check your computer or hand-held device to determine the type of cable you need.




Attaching a Serial Cable


Use the interchangeable head on the Motorola Multi-Connect Serial Cable to connect a computer or other compatible device to your phone.

Do This

- 1 Plug the serial cable into the detachable head. Make sure that the Motorola logo on the detachable head and the metal shielding on the serial cable plug are both facing you.

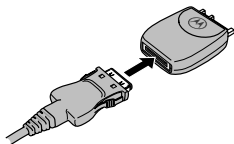

- 2 With the Motorola logo and the phone both facing you, plug the detachable head into the phone's accessory connector port.

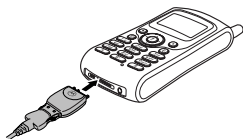


- 3 Plug the other end of the cable into the serial interface connection on the external device and tighten the screws.



Attaching a USB Cable

Do This

- 1 Plug the end of the cable with the Motorola logo into the phone's accessory connector port. Make sure that the logo and the phone are both facing you.

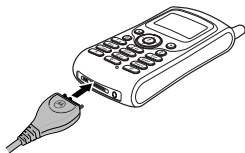

- 2 Plug the other end—the USB connection—into the USB port on the external device.
-
-

Install the Software

Install the software from the CD-ROM that comes with your Motorola Original data kit. See the data kit's user guide for more information.



Making a Data Call

Use this procedure to send data from a connected device, and to synchronize phonebook and datebook information between your phone, computer, and/or hand-held device.

First connect your phone to the device as described on page 127 .

Do This

- 1 Check the phone

To

make sure that the phone is connected and powered on

Do This	To
2 Open the application on your computer	place the call through the application (such as dial-up-networking) Note: You cannot dial data numbers through your phone's keypad. You must dial them through your computer.
3 End the call from the connected device	close the call and connection when the transfer is complete

Receiving a Data Call

Set Up Your Phone

Find the Feature

☰ > Settings
> Connection
> Incoming Call

Do This	To
1 Press CHANGE (⊙)	select Next Call
2 Press ⊕	scroll to Data In Only
3 Press SELECT (⊙)	set the call format
4 Connect your phone to the device	enable the data transfer

Note: When the phone is in data mode, any call that comes in—voice or data—is transferred to the connected



device. To return a voice call, reset your phone to voice mode as described on page 131.

Transfer the Data

Your phone notifies you when the data call arrives, and transfers the call to the connected device. Use the application running on the device to answer the call.

End the Data Connection

When the data transfer is complete:

Do This	To
End the call from the connected device	close the connection

Reset Normal Voice Operation

After making a data call, you must reset your phone to resume normal voice operations. You cannot receive voice calls when your phone is in data mode.

Find the Feature

- ☰ > **Settings**
- > **Connection**
- > **Incoming Call**

Do This	To
1 Press CHANGE (⊙)	select Next Call
2 Press ⊕	scroll to Normal
3 Press SELECT (⊙)	reset your phone

Your phone also reverts to normal voice operations when you turn it off and then turn it back on.



Security

Assigning a New Code or Password

Your phone's unlock code is originally set to 1234, and the security code is originally set to 000000. Your service provider may reset these numbers before you receive your phone.

If your service provider has *not* reset these numbers, we recommend that you change them to prevent other users from accessing your personal information. The unlock code must contain four digits, and the security code must contain six digits.

Notes:


 
 
 

- Your service provider may retain your phone's security code for customer service purposes. In this case, you will not be able to use phone features that require you to enter the security code.
- If the unlock code is the only code you can change, the **New Passwords** menu is not available. In this case, change the unlock code by selecting: ⓘ > **Settings** > **Security** > **Phone Lock** > **Unlock Code**.

To change a code or password:

Find the Feature

ⓘ > **Settings** > **Security**
> **New Passwords**


 


Press	To
1 	scroll to the code or password
2 CHANGE ()	select the code or password
3 keypad keys	enter your old code
4 OK ()	submit your old code
5 keypad keys	enter the new code
6 OK ()	assign the new code
7 keypad keys	re-enter the new code
8 OK ()	confirm the new code

If You Forget a Code or Password

If you forget your security code, contact your service provider.

If you forget your unlock code, try entering 1234 or the last four digits of your phone number. If that does not work, do the following at the **Enter Unlock Code** prompt:

Press	To
1 	go to the unlock code bypass screen
2 keypad keys	enter your security code
3 OK ()	submit your security code



Locking and Unlocking Your Phone

You can lock your phone manually or set the phone to lock automatically whenever you turn it off.

To use a locked phone, you must enter the unlock code. A locked phone still rings or vibrates for incoming calls or messages, *but you must unlock it to answer.*

You can make emergency calls on your phone even when it is locked. For more information, see page 33.

Lock Your Phone Manually

Find the Feature

☰ > Settings > Security
> Phone Lock
> Lock Now

Press	To
1 keypad keys	enter your unlock code
2 OK (⊙)	lock the phone

Set Your Phone to Lock Automatically

You can set your phone to lock when you turn it off.

Find the Feature

☰ > Settings > Security
> Phone Lock
> Automatic Lock > On

Press	To
1 keypad keys	enter your unlock code
2 OK (⊙)	activate automatic lock





Unlock Your Phone

At the **Enter Unlock Code** prompt:

Press	To
1 keypad keys	enter your unlock code
2 OK (⊙)	unlock your phone

Locking and Unlocking Your Keypad

You can lock your phone keypad to prevent accidental keypresses (for example, when carrying your phone in a purse or pocket).

Press	To
 	lock or unlock your keypad

Note: Incoming calls and messages unlock the keypad.

Restricting Calls

You can stop all incoming and/or outgoing calls, or you can restrict them to the numbers stored in your phonebook.

Notes:



- You can make emergency calls when outgoing calls are restricted.
- Your phone still receives incoming text messages when incoming calls are restricted.



When you restrict incoming calls to numbers stored in the phonebook, a valid incoming call may be restricted if caller ID information for the call is not available from the network.

Find the Feature


 > **Settings** > **Security**
> **Restrict Calls**

Press	To
1 keypad keys	enter your unlock code
2 OK (⊙)	open the restrict calls menu
3 	scroll to Outgoing Calls or Incoming Calls
4 CHANGE (⊙)	select the option
5 CHANGE (⊙)	change the Allow setting
6 	scroll to All , None , or Phonebook
7 SELECT (⊙)	select the allowed calls

Activating Talk Secure

Find the Feature







 > **Settings** > **Security**
> **Talk Secure**

Press	To
1 	scroll to Preferred or Off
2 SELECT (⊙)	switch talk secure on or off

 Your phone can attempt to send your calls using a high-security connection, to prevent others from intercepting them. For more information, see page 32

Troubleshooting

Check these questions first if you have problems with your phone. If you need additional help, contact the Motorola Customer Call Center at 1-800-331-6456 (United States) or 1-800-461-4575 (Canada).

Question	Answer
Is your phone set up correctly?	Press   . If you do not see your phone number, contact your service provider.
Is your battery charged? Do you see  in the display?	The battery level indicator should have at least one segment showing (). If it does not, recharge your battery. See page 22.
Does the handset have a signal? Do you see  in the display?	The signal strength indicator should have at least one segment showing (). If it does not, move to an area with a stronger signal to use your phone.
Is the earpiece volume too low?	While on a call, press the upper volume key on the side of your phone.






Question	Answer
Is the other party unable to hear you?	Your phone may be muted. Press UNMUTE (⊙) if necessary to unmute the phone. Also, make sure that your phone's microphone is not blocked by its carrying case or a sticker.
Has the phone been damaged or dropped, or become wet?	Dropping your phone, getting it wet, or using a non-Motorola battery or battery charger can damage the phone. The phone's limited warranty does not cover liquid damage or damage caused from using non-Motorola accessories.
Was a non-Motorola battery or battery charger used?	

The following refer to specific problems:

Problem	Solution
My phone was stolen. To whom should I report this?	Report a stolen phone to the police and to your service provider (the company that sends you your monthly wireless service bill).
I forgot my password.	See page 133.





Problem	Solution
<p>I pressed the power key, but nothing happened.</p>	<p>Be sure to press and hold  (the power key) until the display appears and you hear an alert. This could take several seconds. If nothing happens, check that a charged battery is installed. See page 23.</p>
<p>The display says: Enter Unlock Code. How do I unlock my phone?</p>	<p>Enter the factory-preset unlock code (1234), or the last four digits of your phone number. If this fails, call your service provider (the company that sends you your monthly wireless service bill).</p>
<p>My phone asks for an unlock code when I try to open a feature.</p>	<p>The application you want is locked. If you do not know the unlock code, see page 133.</p>
<p>My phone does not ring.</p>	<p>If you see  or  in the display, then the ringer is turned off. See page 98.</p> <p>Also, the ringer may be set to Silent even though your phone is set to an audible ring style. See page 99.</p>





Problem	Solution
<p>My phone rings even though I selected the Silent (or Vibrate) ring style.</p>	<p>The ringer may be set to play a tone even though your phone is set to a silent ring style. See page 99.</p>
<p>I tried to place a call and heard an alternating high/low tone.</p>	<p>Your call did not reach the wireless system. You may have dialed the number too soon after turning the phone on. Wait until you see the idle display before making a call.</p>
<p>I cannot send/receive calls.</p>	<p>Make sure that you have a phone signal (see the “Signal Strength Indicator” item on page 28). Avoid electrical or radio interference, and obstructions such as bridges, parking garages, or tall buildings.</p> <p>Your phone also may have the Restrict Calls feature turned on. If you know the unlock code, you can change this setting in the security menu (☰ > Settings > Security).</p>

Problem	Solution
<p>My phone has poor reception and drops calls.</p>	<p>Make sure that your antenna is not bent or damaged.</p> <p>Also, make sure you have a phone signal (see the “Signal Strength Indicator” item on page 28). Stay clear of any obstructions such as bridges, parking garages, or tall buildings.</p>
<p>I cannot hear others on my phone.</p>	<p>While on a call, increase volume by pressing the  up-arrow key. The display should show the volume increasing.</p> <p>Also, make sure that your phone’s earpiece is not blocked by its carrying case.</p>
<p>I cannot open my message inbox.</p>	<p>Before you can use text messages, you must set up the message inbox. See page 89.</p>
<p>How do I see the calls I sent or received?</p>	<p>To see the most recent calls you dialed or received:</p> <ul style="list-style-type: none">  > Recent Calls > Received Calls or Dialed Calls





Problem	Solution
<p>My phone will not send voicemail commands, passwords, or other codes.</p>	<p>Your phone sends commands and passwords as DTMF tones. You can set your phone's DTMF tones to be Long, Short, or Off. If you have trouble sending numbers, check your DTMF setting.</p> <ol style="list-style-type: none"> From the idle display, press: <ul style="list-style-type: none"> ⓘ > Settings > Other Settings > Initial Setup > DTMF Press Ⓞ to scroll to Long or Short. Press SELECT (Ⓞ) to select it.
<p>My phone's display is too dark.</p>	<p>Use the Contrast feature to change the level of contrast in your display. See page 60.</p> <p>You can also use the Backlight feature to change the length of time that the display backlight stays on. See page 59.</p>
<p>My battery didn't last as long as I expected. What can I do to extend battery life</p>	<p>Your battery's performance is affected by charge time, feature use, temperature changes, backlight use, and other factors. For tips on extending your battery life, see page 30.</p>

Problem	Solution
I am unable to record a voice note, voice name, or voice shortcut.	Try moving to a quieter location to make your voice recording. Hold the phone about four inches (10 centimeters) from your mouth, and speak directly into the phone in a normal tone of voice.
My TTY device doesn't work with my phone.	Your phone must be set to a TTY mode for the phone to detect your TTY device. See page 122.
I plugged the data cable into my phone but my phone did not beep. How do I know if the data cable is ready to go?	<p>The beep indicates that you are set up correctly. If you did not hear a beep, make sure that both ends of the data cable are connected—the smaller end to your phone and the larger end to your computer.</p> <p>Also, your computer may have deactivated the port to save power. Try opening an application that uses the port, like a fax or dial-up application, to automatically activate the port.</p>





Problem	Solution
<p>My phone beeped when I attached the data cable, but my data applications don't work.</p>	<p>You must be in an area with digital coverage. Check your phone's display for the digital signal indicator (D).</p> <p>Some wireless networks may not support data transmission. If you see the digital indicator, but you are roaming on an unfamiliar network, this may be the case.</p> <p>Also, remember that data transmission usually requires a subscription. Call your service provider for more information.</p>
<p>When sending data with the data cable, why does the computer show a connection rate of 19200 Kbps?</p>	<p>19200 Kbps is the data transfer rate of the connection between your computer and the phone. The rate of the connection between your phone and the network is displayed on your phone, and will be either 14400 or 9600 Kbps.</p>
<p>I can't end my data call by closing the application on my computer. What can I do?</p>	<p>Try pressing Ⓢ on your phone. Or try disconnecting the cable or turning off the phone. If possible, always close the connection through your computer, as these alternative methods may disrupt the application on your computer.</p>

Problem	Solution
<p>I launched the browser but the display says: Service Not Available.</p>	<p>You may be in an area without service. If you have wireless service, look in the display for the digital signal indicator (D). If you do not see the indicator, you may be in an area that has only analog service or no service at all. If you see the digital signal indicator, you may be connected to a digital network that does not support Internet access.</p>
<p>I launched the browser but the display says: Data Server Unavailable.</p>	<p>Try again in a few minutes. The servers may be temporarily busy.</p>



Programming Instructions

Follow this procedure if you need to program your phone's phone number(s).

Note: Programming is normally done by a trained technician at the site of purchase. Users should not make changes other than ones in the following procedure.

Before programming, ask your service provider for your:

- Carrier System ID (a one- to five-digit number)
- 10-digit MIN (Mobile Identification Number)

Press	To
1 , the Carrier System ID number, , ,	enter programming mode
2 , , , , , 	enter the security code
(This is the security code that is in the phone when it is shipped from the factory.)	
3 OK ()	submit the security code
4	scroll to MIN
5 CHANGE ()	open the MIN display
6 keypad keys for the 10-digit MIN	enter the new MIN

Press	To
7 OK (⊙)	store the new MIN
8 DONE (⊙)	exit programming mode

Specific Absorption Rate Data

The selected product C331 meets the government's requirements for exposure to radio waves.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government and by Health Canada for Canada. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population.

The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC and by Health Canada is 1.6W/kg.¹ Tests for SAR are conducted using standard operating positions accepted by the FCC and by Industry Canada with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

Before a phone model is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government- for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) reported to the FCC and available for review by Industry Canada. . The highest SAR value for this model phone when tested for use at the ear is __ (2) __ and when worn on the body, as described in this user guide, is __ (3) __. (Body-worn measurements differ among phone models, depending upon available accessories and regulatory requirements).²

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site:

<http://phonefacts.net>

or the Canadian Wireless Telecommunications Association (CWTA) Web site:

<http://www.cwta.ca>

1. In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.
2. The SAR information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

**The U.S. Food and Drug
Administration's Center for
Devices and Radiological Health
Consumer Update on Mobile Phones**



FDA has been receiving inquiries about the safety of mobile phones, including cellular phones and PCS phones. The following summarizes what is known—and what remains unknown—about whether these products can pose a hazard to health, and what can be done to minimize any potential risk. This information may be used to respond to questions.

Why the concern?

Mobile phones emit low levels of radio frequency energy (i.e., radio frequency radiation) in the microwave range while being used. They also emit very low levels of radio frequency energy (RF), considered non-significant, when in the stand-by mode. It is well known that high levels of RF can produce biological damage through heating effects (this is how your microwave oven is able to cook food). However, it is not known whether, to what extent, or through what mechanism, lower levels of RF might cause adverse health effects as well. Although some research has been done to address these questions, no clear picture of the biological effects of this type of radiation has emerged to date. Thus, the available science does not allow us to conclude that mobile phones are absolutely safe, or that they are unsafe. However, the available scientific evidence does not demonstrate any adverse health effects associated with the use of mobile phones.

What kinds of phones are in question?

Questions have been raised about hand-held mobile phones, the kind that have a built-in antenna that is positioned close to the user's head during normal telephone conversation. These types of mobile phones are of concern because of the short distance between the phone's antenna—the primary source of the RF—and the person's head. The exposure to RF from mobile phones in which the antenna is located at greater distances from the user (on the outside of a car, for example) is drastically lower than that from hand-held phones, because a person's RF exposure decreases rapidly with distance from the source. The safety of so-called “cordless phones,” which have a base unit connected to the telephone wiring in a house and which operate at far lower power levels and frequencies, has not been questioned.

How much evidence is there that hand-held mobile phones might be harmful?

Briefly, there is not enough evidence to know for sure, either way; however, research efforts are on-going. The existing scientific evidence is conflicting and many of the studies that have been done to date have suffered from flaws in their research methods. Animal experiments investigating the effects of RF exposures characteristic of mobile phones have yielded conflicting results. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. In one study, mice genetically altered to be predisposed to developing one type of cancer developed more than twice as many such cancers when they were exposed to RF energy compared to controls. There is much uncertainty among scientists about whether results obtained from animal studies apply to the use

of mobile phones. First, it is uncertain how to apply the results obtained in rats and mice to humans. Second, many of the studies that showed increased tumor development used animals that had already been treated with cancer-causing chemicals, and other studies exposed the animals to the RF virtually continuously—up to 22 hours per day.

For the past five years in the United States, the mobile phone industry has supported research into the safety of mobile phones. This research has resulted in two findings in particular that merit additional study:

- 1 In a hospital-based, case-control study, researchers looked for an association between mobile phone use and either glioma (a type of brain cancer) or acoustic neuroma (a benign tumor of the nerve sheath). No statistically significant association was found between mobile phone use and acoustic neuroma. There was also no association between mobile phone use and gliomas when all types of types of gliomas were considered together. It should be noted that the average length of mobile phone exposure in this study was less than three years.

When 20 types of glioma were considered separately, however, an association was found between mobile phone use and one rare type of glioma, neuroepitheliomatous tumors. It is possible with multiple comparisons of the same sample that this association occurred by chance. Moreover, the risk did not increase with how often the mobile phone was used, or the length of the calls. In fact, the risk actually decreased with cumulative hours of mobile phone use. Most cancer causing agents increase risk with increased exposure. An ongoing study of brain

cancers by the National Cancer Institute is expected to bear on the accuracy and repeatability of these results.¹

- 2 Researchers conducted a large battery of laboratory tests to assess the effects of exposure to mobile phone RF on genetic material. These included tests for several kinds of abnormalities, including mutations, chromosomal aberrations, DNA strand breaks, and structural changes in the genetic material of blood cells called lymphocytes. None of the tests showed any effect of the RF except for the micronucleus assay, which detects structural effects on the genetic material. The cells in this assay showed changes after exposure to simulated cell phone radiation, but only after 24 hours of exposure. It is possible that exposing the test cells to radiation for this long resulted in heating. Since this assay is known to be sensitive to heating, heat alone could have caused the abnormalities to occur. The data already in the literature on the response of the micronucleus assay to RF are conflicting. Thus, follow-up research is necessary.²

FDA is currently working with government, industry, and academic groups to ensure the proper follow-up to these industry-funded research findings. Collaboration with the Cellular Telecommunications Industry Association (CTIA) in particular is expected to lead to FDA providing research recommendations and scientific oversight of new CTIA-funded research based on such recommendations.

Two other studies of interest have been reported recently in the literature:

- 1 Two groups of 18 people were exposed to simulated mobile phone signals under laboratory conditions while

they performed cognitive function tests. There were no changes in the subjects' ability to recall words, numbers, or pictures, or in their spatial memory, but they were able to make choices more quickly in one visual test when they were exposed to simulated mobile phone signals. This was the only change noted among more than 20 variables compared.³

- 2 In a study of 209 brain tumor cases and 425 matched controls, there was no increased risk of brain tumors associated with mobile phone use. When tumors did exist in certain locations, however, they were more likely to be on the side of the head where the mobile phone was used.

Because this occurred in only a small number of cases, the increased likelihood was too small to be statistically significant.⁴

In summary, we do not have enough information at this point to assure the public that there are, or are not, any low incident health problems associated with use of mobile phones. FDA continues to work with all parties, including other federal agencies and industry, to assure that research is undertaken to provide the necessary answers to the outstanding questions about the safety of mobile phones.

What is known about cases of human cancer that have been reported in users of hand-held mobile phones?

Some people who have used mobile phones have been diagnosed with brain cancer. But it is important to understand that this type of cancer also occurs among people who have not used mobile phones. In fact, brain cancer occurs in the

U.S. population at a rate of about 6 new cases per 100,000 people each year. At that rate, assuming 80 million users of mobile phones (a number increasing at a rate of about 1 million per month), about 4800 cases of brain cancer would be expected each year among those 80 million people, whether or not they used their phones. Thus it is not possible to tell whether any individual's cancer arose because of the phone, or whether it would have happened anyway. A key question is whether the risk of getting a particular form of cancer is greater among people who use mobile phones than among the rest of the population. One way to answer that question is to compare the usage of mobile phones among people with brain cancer with the use of mobile phones among appropriately matched people without brain cancer. This is called a case-control study. The current case-control study of brain cancers by the National Cancer Institute, as well as the follow-up research to be sponsored by industry, will begin to generate this type of information.

What is FDA's role concerning the safety of mobile phones?

Under the law, FDA does not review the safety of radiation-emitting consumer products such as mobile phones before marketing, as it does with new drugs or medical devices. However, the agency has authority to take action if mobile phones are shown to emit radiation at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of mobile phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions at this time, FDA has urged the mobile

phone industry to take a number of steps to assure public safety. The agency has recommended that the industry:

- support needed research into possible biological effects of RF of the type emitted by mobile phones
- design mobile phones in a way that minimizes any RF exposure to the user that is not necessary for device function
- cooperate in providing mobile phone users with the best possible information on what is known about possible effects of mobile phone use on human health

At the same time, FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of mobile phone safety to ensure a coordinated effort at the federal level. These agencies are:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Federal Communications Commission
- Occupational Health and Safety Administration
- National Telecommunications and Information Administration

The National Institutes of Health also participates in this group.

In the absence of conclusive information about any possible risk, what can concerned individuals do?

If there is a risk from these products—and at this point we do not know that there is—it is probably very small. But if people

are concerned about avoiding even potential risks, there are simple steps they can take to do so. For example, time is a key factor in how much exposure a person receives. Those persons who spend long periods of time on their hand-held mobile phones could consider holding lengthy conversations on conventional phones and reserving the hand-held models for shorter conversations or for situations when other types of phones are not available.

People who must conduct extended conversations in their cars every day could switch to a type of mobile phone that places more distance between their bodies and the source of the RF, since the exposure level drops off dramatically with distance. For example, they could switch to:

- a mobile phone in which the antenna is located outside the vehicle
- a hand-held phone with a built-in antenna connected to a different antenna mounted on the outside of the car or built into a separate package
- a headset with a remote antenna to a mobile phone carried at the waist

Again, the scientific data do not demonstrate that mobile phones are harmful. But if people are concerned about the radio frequency energy from these products, taking the simple precautions outlined above can reduce any possible risk.

Where can I find additional information?

For additional information, see the following Web sites:

Federal Communications Commission (FCC) RF Safety Program (select "Information on Human Exposure to RF

Fields from Cellular and PCS Radio Transmitters”):

<http://www.fcc.gov/oet/rfsafety>

World Health Organization (WHO) International Commission on Non-Ionizing Radiation Protection (select Qs & As): <http://www.who.int/emf>

United Kingdom, National Radiological Protection Board:
<http://www.nrpb.org.uk>

Cellular Telecommunications Industry Association (CTIA): <http://www.wow-com.com>

U.S. Food and Drug Administration (FDA) Center for Devices and Radiological Health:
<http://www.fda.gov/cdrh/consumer/>

1. Muscat et al. Epidemiological Study of Cellular Telephone Use and Malignant Brain Tumors. In: State of the Science Symposium; 1999 June 20; Long Beach, California.
2. Tice et al. Tests of mobile phone signals for activity in genotoxicity and other laboratory assays. In: Annual Meeting of the Environmental Mutagen Society; March 29, 1999, Washington, D.C.; and personal communication, unpublished results.
3. Preece, AW, Iwi, G, Davies-Smith, A, Wesnes, K, Butler, S, Lim, E, and Varey, A. Effect of a 915-MHz simulated mobile phone signal on cognitive function in man. *Int. J. Radiat. Biol.*, April 8, 1999.
4. Hardell, L, Nasman, A, Pahlson, A, Hallquist, A and Mild, KH. Use of cellular telephones and the risk for brain tumors: a case-control study. *Int. J. Oncol.*, 15: 113-116, 1999.

ITC00-010

Warranty

Limited Warranty for Motorola Personal Communications Products and Accessories Purchased in the United States and Canada

I. What This Warranty Covers

Defects in materials and workmanship in the following new “**Products**” manufactured, sold or certified by Motorola, with which this limited warranty is included in/on the package:

(a) wireless cellular telephones, pagers and two-way radios that operate via “Personal Radio Service” (such as Family Radio Service and General Mobile Radio Service), together with software imbedded in any of these products, and

(b) subject to the following exceptions, accessories or software sold for use with these products.

- Battery Exception. This limited warranty extends only to batteries in which the fully-charged capacity falls below 80% of rated capacity and batteries that leak;
- Software Exceptions. This limited warranty extends only to physical defects in the media (such as CD-ROM) that tangibly embodies each copy of any software sold and/or certified by Motorola for use with Products. Software that is not tangibly embodied in media and that is purchased separately from Products (such as software that is downloaded from the internet) comes “**as is**” and **without warranty**.



II. What the Period of Coverage Is

Subject to the following exceptions, one year from the date the Products are purchased by the first end-user:

- 90-Day Warranty Exception. The warranty is for 90 days for: (a) any software tangibly embodied in media or (b) any accessories for two-way radios that are covered by this warranty, as described in Section I, above.
- Limited Lifetime Warranty Exception. The warranty is a limited lifetime warranty for the lifetime of ownership by the first end-user of the following products, **only**: (a) decorative covers, including bezel, PhoneWrap™ or case (any model); and (b) ear buds and boom headsets that transmit mono sound through a wire connection (this does **not** include ear buds or boom headsets that either transmit stereo sound or that are wireless, or both).
- Repair/Replacement Exception. The warranty is for the balance of the original warranty or for 90 days from the date returned and delivered to the first end-user, whichever is longer.

III. Who is Covered

This warranty extends to you only if you are the first end-user purchaser.

IV. What We Will Do to Correct Warranty Problems

At no charge to you, we have the option to repair or replace the Products that do not conform to the warranty, or to refund the Products' purchase price. We may use functionally equivalent reconditioned/refurbished/pre-owned or new Products or parts. No software updates are provided.

V. How to Get Warranty Service

PLEASE CALL US — DO NOT SHIP:

USA

Cellular 1-800-331-6456

Paging 1-800-548-9954

FRS Radios 1-800-353-2729

TTY (Text Telephone)

1-888-390-6456

Canada

All Products

1-800-461-4575

TTY (Text Telephone)

1-888-390-6456

Accessories and software—call the number designated for the product with which they are used.

You will receive instructions on how to ship the Products to Motorola or our designated resource. If instructed to ship the Products, you must ship them with freight, duties and insurance prepaid. Regardless of where you are instructed to return the Products, you must include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase; (b) a written description of the problem; (c) the name of your service provider (if this Product requires subscription service); (d) the name and location of the installation facility (if applicable) and, most importantly; (e) your address and telephone number. If requested, you must also return all detachable parts such as antennas, batteries and chargers. **RETAIN YOUR ORIGINAL PROOF OF PURCHASE.**

For Products we ask you ship to us, we will ship repaired or replacement Products at our expense for the freight and insurance, but at your expense for any duties. If additional information is needed, please contact us at the telephone number listed above.

VI. What This Warranty Does Not Cover

- **Products that are operated in combination with ancillary or peripheral equipment or software not furnished or otherwise certified by Motorola for use with the Products (“ancillary equipment”), or any damage to the Products or ancillary equipment as a result of such use. Among other things, “ancillary equipment” includes batteries, chargers, adaptors, and power supplies not manufactured or supplied by Motorola. Any of these voids the warranty.**
- Someone other than Motorola (or its authorized service centers) tests, adjusts, installs, maintains, alters, modifies or services the Products in any way. Any of these voids the warranty.
- Rechargeable batteries that: (a) are charged by other than the Motorola-approved battery charger specified for charging such batteries; (b) have any broken seals or show evidence of tampering; (c) are used in equipment other than the Product for which they are specified; or (d) are charged and stored at temperatures greater than 60 degrees centigrade. Any of these voids the warranty.
- Products that have: (a) serial numbers or date tags that have been removed, altered or obliterated; (b) board serial numbers that do not match each other, or board serial numbers that do not match the housing; or (c) nonconforming or non-Motorola housings or parts. Any of these voids the warranty.

- Defects or damage that result from: (a) use of the Products in a manner that is not normal or customary; (b) improper operation or misuse; (c) accident or neglect such as dropping the Products onto hard surfaces; (d) contact with water, rain, extreme humidity or heavy perspiration; (e) contact with sand, dirt or the like; or (f) contact with extreme heat, or spills of food or liquid.
- Physical damage to the surface of the Products, including scratches, cracks or other damage to a display screen, lens or other externally exposed parts.
- Failure of Products that is due primarily to any communication service or signal you may subscribe to or use with the Products.
- Coil cords that are stretched or that have any broken modular tabs.
- Leased Products.

Flat-rate repair rates may apply to Products not covered by this warranty. To obtain information about Products needing repairs that are not covered by this warranty, please call the telephone number previously listed. We will provide information on repair availability, rates, methods of payment, where to send the Products, etc.

VII. Some Other Limitations

This is Motorola's complete warranty for the Products, and states your exclusive remedies. This warranty is given in lieu of all other express warranties. Implied warranties, including without limitation, the implied warranties of merchantability and fitness for a particular purpose, are given only if specifically required by applicable law. Otherwise, they are specifically excluded.

No warranty is made as to coverage, availability, or grade of service provided by the Products, whether through a service provider or otherwise.

No warranty is made that the software will meet your requirements or will work in combination with any hardware or applications software products provided by third parties, that the operation of the software products will be uninterrupted or error free, or that all defects in the software products will be corrected.

In no event shall Motorola be liable, whether in contract or tort (including negligence) for damages in excess of the purchase price of the Product, or for any indirect, incidental, special or consequential damages of any kind, or loss of revenue or profits, loss of business, loss of information or data, or other financial loss arising out of or in connection with the ability or inability to use the Products, to the full extent these damages may be disclaimed by law.

VIII. Patent and Software Provisions

At Motorola's expense, we will defend you, and pay costs and damages that may be finally awarded against you, to the extent that a lawsuit is based on a claim that the Products directly infringe a United States patent. Our obligation is conditioned on: (a) you notifying us promptly in writing when you receive notice of the claim; (b) you giving us sole control of the defense of the suit and all negotiations for its settlement or compromise; and (c) should the Products become, or in Motorola's opinion be likely to become, the subject of a claim of infringement of a United States patent, you permit us, at our option and expense, either to: procure for you the right to continue using the Products; replace or modify them so that they become non-infringing; or grant you a credit for such Products, as depreciated, and accept their return. The depreciation will be an equal amount per year over the lifetime of the Products, as established by Motorola.

Motorola will have no liability to you with respect to any claim of patent infringement that is based upon the combination of the Products or parts furnished under this limited warranty with ancillary equipment, as defined in VI., above.

This is Motorola's entire liability with respect to infringement of patents by the Products.

IX. State Law and Other Jurisdiction Rights

Some states and other jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from jurisdiction to jurisdiction.

To obtain information on Motorola Personal Communications Products, including warranty service, accessories and optional Extended Warranties on selected Products, please call:

USA**Cellular 1-800-331-6456****Paging 1-800-548-9954****FRS Radios 1-800-353-2729****TTY (Text Telephone)****1-888-390-6456****Canada****All Products****1-800-461-4575****TTY (Text Telephone)****1-888-390-6456**

Accessories and software—call the telephone number designated above for the product with which they are used.

**DO NOT SHIP PRODUCTS TO THESE ADDRESSES —
INSTEAD PLEASE CALL.**

To correspond with Motorola about Products, please write us at: <http://www.motorola.com> or at:

In the USA:

Motorola, Inc.

600 North U.S. Highway 45

Libertyville, IL 60048

In Canada:

Motorola Canada Limited

5875 Whittle Road

Mississauga, ON L4Z 2H4

ITC01-078

Product Registration

Online Product Registration:

<http://www.motorola.com/warranty>

Product registration is an important step toward enjoying your new Motorola product. Registering helps us facilitate warranty service, and permits us to contact you should your product require an update or other service. Registration is for U.S. residents only and is not required for warranty coverage.

Please retain your original dated sales receipt for your records. For warranty service of your Motorola Personal Communications Product you will need to provide a copy of your dated sales receipt to confirm warranty status.

Thank you for choosing a Motorola product.

Export Law Assurances

This product is controlled under the export regulations of the United States of America and Canada. The Governments of the United States of America and Canada may restrict the exportation or re-exportation of this product to certain destinations. For further information contact the U.S. Department of Commerce or the Canadian Department of Foreign Affairs and International Trade.

Index

A

accessories

optional 10, 84, 122,
124, 127

standard 18

accessory connector port
1

active line indicator

defined 28

illustration 27

Add Digits feature 64

alarm 79, 81

alert

creating 100–107

defined 98

reminders, turning on/off
107

selecting 99

turning off 34

analog signal indicator

defined 28

illustration 27

animation 59

answering a call 26

antenna 1

application, locking 57

appointments. *See*
datebook

Attach Number feature 36,
64

B

backlight 59

battery

car kit charger time 126

charging 22–23

extending battery life
30–31, 59

installing 23

level indicator 23, 27,
28

meter 55

battery save 59

blackjack 117–118

block cursor, defined 42

browse text mode 43

browser

using 111–112

browser. *See* browser

C

calculator 113–115

calendar. *See* datebook

call

adding digits after phone
number 64

- alert, creating 100–107
- alert, selecting 99
- alert, turning off 34
- answer options 57
- answering 26
- call waiting 37
- calling card 71
- canceling 34
- data call 129–131
- datebook, opening 38
- deleting 63–64
- dialed calls list 36, 38, 63–64
- dialing 25
- dialing a recent call 63–64
- emergency number 33
- ending 25
- in-call timer 56
- incoming call type, setting 130–131
- making 25
- message center, accessing 38
- muting 38
- prefix digits, inserting 36
- privacy 32, 136
- received calls list 36, 38, 63–64
- receiving 26
- recent calls 63–64
- restricting 135
- ring style, setting 98
- secure connection 32, 136
- speakerphone, activating 38
- storing 63–64
- three-way call 37
- timing 65–67
- unanswered call 33
- voice dial 36
- call timers 65–67
 - resetting 67
 - viewing 67
- call waiting 37
- caller ID 32, 33
- calling card call 71
- calling line identification. See caller ID
- car kit
 - automatic answer 124
 - automatic hands-free 125
 - charger time 126
 - power-off delay 125
- clock 27
- codes
 - changing 132–133
 - default 25
 - if you forget a code/password 133

original 132
computer
 connecting to phone
 127–129
contrast, display 60
currency converter 115
cursor 42
customizing the menu 121

D

data call
 connecting to external
 device 127–129
 incoming call format,
 setting 130–131
 making 129–130
 receiving 130–131
date, setting 58
datebook
 adding an event 81
 alarm 81
 calendar 79
 changing event
 information 81
 copying an event 82
 day view 80
 deleting an event 83
 event reminders, turning
 on/off 107
 event view 80
 reminders 81
 week view 79

deleting a call 63–64
dialed calls list 36, 38,
 63–64

dialing a number 25

Dialing Menu 65

digital signal indicator
 defined 28
 illustration 27

display

 animation 59
 backlight 59
 contrast 60
 described 27–29
 greeting 58
 idle display 27
 illustration 27
 language 59
 zoom setting 59
 zooming in/out 29

drafts folder 54

DTMF tones 38, 60, 64,
 142

E

earpiece
 illustration 1
 volume, adjusting 29

email

 address, storing in
 phonebook
 69–71

email, sending 74, 94–96

emergency number 33
end key
 functions 25
 menu functions 39
ending a call 25
Enter Unlock Code
 message 133, 135
event alert 99
exchange rate, calculating
 115
external device
 connecting to phone
 127–129

F

factory settings, resetting
 60–61
falling numbers 118–119
flashing cursor, defined 42
FM Stereo Radio Headset
 53, 84–86

G

games 116–120
greeting, display 58

H

hands-free mode
 automatic answer 124
 automatic call routing
 125

charger time 126
defined 124
power-off delay 125
speakerphone,
 activating 38

headset

 automatic answer 124
 FM Stereo Radio
 Headset 53,
 84–86

high-security connection
 32, 136

I

idle display, defined 27
in use indicator
 defined 28
 illustration 27
inbox, text message
 89–90
in-call timer 56
incoming call
 canceling 34
 type, setting 130–131
Incoming Call message
 32

indicators

 active line 27, 28
 battery level 23, 27, 28
 digital/analog signal 27,
 28
 in use 27, 28

- loud ring style 29, 98
 - menu 27, 28
 - message waiting 27, 28, 90
 - missed call 33
 - ring and vibrate ring style 29, 98
 - ring style 27, 29, 98
 - roam 27, 28
 - signal strength 27, 28
 - silent alert 29
 - silent ring style 29, 98
 - soft ring style 29, 98
 - vibrate ring style 29, 98
 - voice message waiting 27, 28, 88
 - voice name 68
 - iTAP software 48–51
- K**
- key
 - end 25, 39
 - left soft key 1, 27, 39, 121
 - lock 57, 135
 - menu 1, 10, 28, 39
 - navigation 39
 - power 24
 - power/end 1
 - right soft key 1, 27, 39, 121
 - scroll 1
 - send 1, 25, 26, 63
 - voice 73
 - keypad
 - answering calls 57
 - locking and unlocking 57, 135
 - volume, setting 100
- L**
- language, setting 59
 - left soft key
 - customizing 121
 - functions 1, 27, 39
 - Line Not Secure** message 33
 - lock
 - applications 57
 - keypad 57, 135
 - phone 134–135
 - lock application feature 57
 - loud ring style indicator 29, 98
 - Low Battery** message 28
- M**
- making a call 25
 - master clear 61
 - master reset 60
 - Memory is Full!** message 91
 - menu
 - Browser Menu** 112

- Calculator Menu** 113
 - customizing 121
 - Datebook Menu** 79, 80
 - Dialing Menu** 36, 65
 - entering text 41–42, 43–51
 - features 52–62
 - language, setting 59
 - Last Calls Menu** 64
 - lists 40
 - locking applications 57
 - My Tones Menu** 106, 107
 - navigating 10, 39
 - Phonebook Menu** 68
 - Quick Note Menu** 97
 - rearranging features 121
 - scroll feature 59
 - Text Msg Menu** 92–93
 - using features 10, 40–42
 - menu indicator
 - defined 28
 - illustration 27
 - menu key 1, 10, 28, 39
 - message
 - deleting, text 91–93
 - dialing number from 35
 - drafts folder 54
 - inbox setup, text
 - message 89–90
 - locking, text 91–93
 - outbox 54, 97
 - quick note 96–97
 - reading, text 91–93
 - receiving, text 90–91
 - reminders, receiving 88, 91
 - reminders, turning on/off 107
 - sending 36, 94–96
 - sound 93–94
 - status 97
 - text 89–97
 - voicemail 87–88
 - message waiting indicator
 - defined 28
 - displayed 90
 - illustration 27
 - microphone 1
 - missed call indicator 33
 - Missed Call** message 33
 - missed call, dialing 36
 - muting a call 38
 - my telephone number 26, 38, 55
 - my tones 100–107
 - My Tones Menu** 106, 107
- ## N
- navigation key 39
 - network settings 61
 - notepad
 - defined 65

entering digits 65
retrieving digits 65
number, viewing your own
55
numeric text mode 43

O

one-touch dial
defined 35
using 35
voicemail number 35
optional accessory,
defined 10
optional feature, defined
10
outbox 54, 97

P

passwords. *See* codes
pause character 72
phone
active line indicator 28
alert, turning off 34
answer options 57
codes 132–133
connecting to external
device 127–129
erase user-entered
information 61
feature specifications
38, 56
information 38

keypad, locking and
unlocking 57,
135
locking 134–135
muting a call 38
reset all options 60
secure connection 32,
136
security code 132
specifications 38, 56
turning on/off 24
unlock code 25, 132,
133
unlocking 25, 134–135
voice dial 36
phone number
active line indicator 28
active phone line,
changing 55
adding digits after 64
attaching to prefix digits
36
attaching two numbers
64
redialing 32
seeing your own 26, 38
sending text message to
36
storing in phonebook
69–71
viewing your own 55
voice dial 36

- phonebook
 - attaching two numbers 64
 - capacity, checking 76
 - deleting an entry 75
 - dialing a number 74
 - editing an entry 75
 - email address 68
 - entry details 68
 - entry name 68
 - number type indicator 68
 - one-touch dial 35
 - phone number 68
 - prefix digits, inserting 36
 - primary number, setting 76
 - ringer ID,
 - activating/deactivating 99–100
 - ringer ID, defined 70, 99
 - ringer ID, setting 70
 - sending an email 74
 - sorting entries 77
 - speed dial number 68, 70
 - speed dial number, defined 35
 - speed dial, using 35
 - storing an entry 69–71
 - voice name entry 73
 - voice name indicator 68
 - PIN code 71
 - power key 24
 - power/end key
 - functions 1
 - predictive text entry 48–51
 - privacy, call 32, 136
- Q**
 - quick note 96–97
 - defined 89
- R**
 - radio 84–86
 - received calls list 36, 38, 63–64
 - recent calls 63–64
 - redial
 - busy number 32
 - reminders
 - datebook 81
 - defined 107
 - text message 91
 - turning on/off 107
 - voicemail message 88
 - restricting calls 135
 - right soft key
 - customizing 121
 - functions 1, 27, 39
 - ring alert
 - selecting 99
 - turning off 34

- ring and vibrate alert
 - turning off 34
- ring and vibrate ring style indicator 29, 98
- ring style
 - customizing 99–100
 - defined 98
 - indicators 29, 98
 - setting 98
- ring style indicator
 - defined 29, 98
 - illustration 27
- ringer
 - volume, adjusting 29
 - volume, setting 100
- ringer ID
 - activating/deactivating 99–100
 - defined 70, 99
 - listed in phonebook entry 68
 - setting for phonebook entry 70
- roam indicator
 - defined 28
 - illustration 27
- S**
- scroll feature 59
- scroll keys 1
- secure connection 32, 136
- security code
 - changing 132–133
- send key 1, 25, 26, 63
- short message service.
 - See text message
- shortcuts
 - creating 109
 - standard 109
 - using 110
- signal strength indicator
 - defined 28
 - illustration 27
- silent alert indicator 29
- silent ring style indicator 29, 98
- SMS. See text message
- soft keys
 - customizing 121
 - functions 27, 39
 - illustration 1
 - labels 27
- soft ring style indicator 29, 98
- sound
 - storing 93–94
- speakerphone, activating 38
- speed dial
 - changing number 70
 - number, defined 35
 - sorting phonebook entries by 77

- using 35
- standby time, increasing 31
- storing a call 63–64
- symbol text mode 47–48
- symbols, entering 47–48

T

- Talk Secure** feature 32, 136
- tap method text entry 44–46
- telephone number, viewing your own 55
- text
 - block cursor 42
 - browse mode 43
 - character chart 46
 - entering from keypad 43–51
 - entry mode, changing 43
 - flashing cursor 42
 - iTAP software predictive text entry 48–51
 - numeric mode 43
 - symbol chart 47
 - symbol mode 47–48
 - tap method 44–46
- text message
 - defined 89
 - deleting 91–93

- dialing number from 35
- drafts folder 54
- inbox setup 89–90
- locking 91–93
- outbox 54
- quick note 96–97
- reading 91–93
- receiving 90–91
- reminders 91
- sending 36, 94–96
- sound 93–94
- status 97
- text mode, changing 43
- three-way call 37
- time, setting 58
- timers 65–67
 - resetting 67
 - viewing 67
- travel charger, using 22
- TTY device 122–124

U

- unlock
 - keypad 57, 135
 - phone 134–135
- unlock code 133
 - bypassing 133
 - changing 132–133
 - entering 25, 134, 135

V

- vibrate alert
 - selecting 99
 - turning off 34
- vibrate ring style
 - indicator 29, 98
 - setting 98
- video poker 119–120
- voice dial
 - dialing a number 36, 74
 - recording voice name 73
- voice key
 - recording a voice name 73
- voice message waiting
 - indicator 27, 28, 88
- voice name
 - defined 73
 - phonebook indicator 68
 - recording 73
- voice shortcut
 - creating 109
 - defined 109
- voicemail
 - dialing with one-touch dial 35
 - reminders, turning on/off 107
 - using 87–88
- volume
 - earpiece 29

keypad 100

ringer 29, 100

volume control 29

W

wait character 72

warranty 159–166

Web pages 111–112

Z

zoom setting 59

zooming in/out 29



MOTOROLA

Wireless Phone Safety Tips

“Safety is your most important call!”

Your Motorola wireless telephone gives you the powerful ability to communicate by voice—almost anywhere, anytime, wherever wireless phone service is available and safe conditions allow. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When driving a car, driving is your first responsibility. If you find it necessary to use your wireless phone while behind the wheel of a car, practice good common sense and remember the following tips:

- 1 Get to know your Motorola wireless phone and its features such as speed dial and redial.** If available, these features help you to place your call without taking your attention off the road.



- 2 **When available, use a hands-free device.** If possible, add an additional layer of convenience to your wireless phone with one of the many Motorola Original™ hands-free accessories available today.
- 3 **Position your wireless phone within easy reach.** Be able to access your wireless phone without removing your eyes from the road. If you receive an incoming call at an inconvenient time, if possible, let your voice mail answer it for you.
- 4 **Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.** Rain, sleet, snow, ice, and even heavy traffic can be hazardous.
- 5 **If you receive an incoming call at an inconvenient time do not take notes or look up phone numbers while driving.** Jotting down a “to do” list or going through your address book takes attention away from your primary responsibility—driving safely.
- 6 **Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic.** Try to plan calls when your car will be stationary. If you need to make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
- 7 **Do not engage in stressful or emotional conversations that may be distracting.** Make people you are talking with aware you are driving and suspend conversations which have the potential to divert your attention away from the road.



- 8 Use your wireless phone to call for help.** Dial 9-1-1 or other local emergency number in the case of fire, traffic accident or medical emergencies.*
- 9 Use your wireless phone to help others in emergencies.** If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want others to do for you.*
- 10 Call roadside assistance or a special non-emergency wireless assistance number when necessary.** If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.*

* Wherever wireless phone service is available.

Check the laws and regulations on the use of wireless telephones and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas.



For more information,
please call
1-888-901-SAFE
or visit the
CTIA Web site at
www.wow-com.comTM

ITC00-011



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>