

## Nokia Music Speakers MD-3

The MD-3 stereo speakers offer high-quality audio when you listen to music or the radio on your compatible Nokia phone or audio device. The speakers have a 3.5-mm stereo audio plug (located at the base of the speakers).

Read this user guide carefully before using the speakers. Also read the user guide for your phone, which provides important safety and maintenance information, or the user guide for the compatible audio device. Keep all accessories and enhancements out of the reach of small children.

### Chargers

Check the model number of any charger before use with this device. The device is intended for use when supplied with power from the AC-4 charger.



**Warning!** Use only chargers approved by Nokia for use with this particular device. The use of any other types may invalidate any approval or warranty, and may be dangerous.

When you disconnect the power cord of any enhancement, grasp and pull the plug, not the cord.

### Set up for use

The speakers can be powered by three AA batteries or the supplied AC-4 charger. Note that the AC-4 charger does not charge the batteries. When you use batteries, alkaline batteries are recommended.

To use the speakers on battery power, to install the batteries, open the battery cover at the back of the speakers by pressing the two catches, place the batteries as indicated in the battery compartment, and close the battery cover by pushing it in place. During long periods where the speakers are not used, remove the batteries to prevent damage from battery leakage.

To use the speakers with the AC-4 charger, connect the charger to a wall outlet, and plug the charger cable to the connector at the back of the speakers.

### Use the speakers

To connect the speakers to the phone or audio device, plug the speaker cable into the connector on the device. The speakers can be used with compatible Nokia adapters. To use the speakers with a Nokia adapter, connect the adapter to the device and the speaker cable to the adapter.

To switch the speakers on or off, press the power key located at the top of the speakers. When the speakers are switched on, the green indicator light is on.

To set the volume, use the slider at the top of the speakers. If the sound level of the speakers becomes too low when using battery power, change the batteries.

## Care and maintenance

Your device is a product of superior design and craftsmanship and should be treated with care. The following suggestions will help you protect your warranty coverage.

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will corrode electronic circuits. If your device does get wet, allow it to dry completely.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not store the device in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the device in cold areas. When the device returns to its normal temperature, moisture can form inside the device and damage electronic circuit boards.

- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.

If the product is not working properly, take it to the nearest authorized service facility for service.

## DECLARATION OF CONFORMITY

Hereby, NOKIA CORPORATION declares that this MD-3 product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. A copy of the Declaration of Conformity can be found at [http://www.nokia.com/phones/declaration\\_of\\_conformity/](http://www.nokia.com/phones/declaration_of_conformity/).



### Disposal

The crossed-out wheeled-bin symbol on your product, literature, or packaging reminds you that in the European Union all electrical and electronic products, batteries, and accumulators must be taken to separate collection at the end of their working life. Do not dispose of these products as unsorted municipal waste.

Return the products to collection to prevent possible harm to the environment or human health from uncontrolled waste disposal and to promote the sustainable reuse of material resources. Collection information is available from the product retailer, local waste authorities, national producer responsibility organizations, or your local Nokia representative. For more information, see product Eco-Declaration or country-specific information at [www.nokia.com](http://www.nokia.com).

© 2007 Nokia. All rights reserved.

Nokia and Nokia Connecting People are registered trademarks of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>