 


Panasonic®

Owner's Manual Compact Speaker System

Model No. SC-MC07

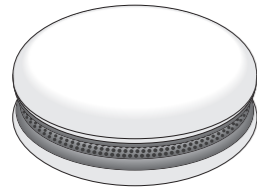

Thank you for purchasing this product.
For optimum performance and safety, please read these instructions carefully.
Please keep this manual for future reference.

Register online at www.panasonic.com/register (U.S. customers only)

If you have any questions, contact:
U.S.A. and Puerto Rico : 1-800-211-PANA (7262)

P

Panasonic Consumer Marketing Company of North America,
Division of Panasonic Corporation of North America

En

One Panasonic Way, Secaucus,
New Jersey 07094
<http://www.panasonic.com>

© Panasonic Corporation 2012
Printed in China

VQT4L28
F0512SY0

IMPORTANT SAFETY INSTRUCTIONS

Read these operating instructions carefully before using the unit. Follow the safety instructions on the unit and the applicable safety instructions listed below. Keep these operating instructions handy for future reference.

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use this apparatus near water.
- 6 Clean only with dry cloth.
- 7 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9 Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11 Only use attachments/accessories specified by the manufacturer.
- 12 Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13 Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



Safety precautions

WARNING

- To reduce the risk of fire, electric shock or product damage,
- Do not expose this unit to rain, moisture, dripping or splashing.
 - Do not place objects filled with liquids, such as vases, on this unit.
 - Use only the recommended accessories.
 - Do not remove covers.
 - Do not repair this unit by yourself. Refer servicing to qualified service personnel.

CAUTION

- Unit**
- Do not place sources of naked flames, such as lighted candles, on this unit.
 - Product identification marking is located on the bottom of the unit.

Batteries

- Danger of explosion if battery is incorrectly replaced. Replace only with the type recommended by the manufacturer.
- Mishandling of batteries can cause electrolyte leakage and may cause a fire.
 - Do not mix old and new batteries or different types at the same time.
 - Do not heat or expose to flame.
 - Do not leave the battery(ies) in a car exposed to direct sunlight for a long period of time with doors and windows closed.
 - Do not take apart or short circuit.
 - Do not recharge alkaline or manganese batteries.
 - Do not use batteries if the covering has been peeled off.
 - Remove batteries if you do not intend to use this unit for a long period of time. Store in a cool, dark place.
- When disposing the batteries, please contact your local authorities or dealer and ask for the correct method of disposal.

FCC Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: To assure continued compliance, follow the attached installation instructions and use only shielded interface cables with ferrite core when connecting to computer or peripheral devices.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Declaration of Conformity
Trade Name: Panasonic
Model No.: SC-MC07

Responsible Party:
Panasonic Corporation of North America
One Panasonic Way, Secaucus, NJ 07094

Support Contact:
Panasonic Consumer Marketing Company of North America
[1-800-211-PANA \(7262\)](tel:1-800-211-PANA)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Accessories

Check the supplied accessories before using this unit.

 
1 USB cable (RFE0242)

- Product numbers provided in this Owner's Manual correct as of May 2012. These may be subject to change.
- Do not use any other USB cables except the supplied one.

Power supply preparation

Please connect to a PC using the USB cable (supplied) or use batteries (not supplied).

Connecting the USB cable

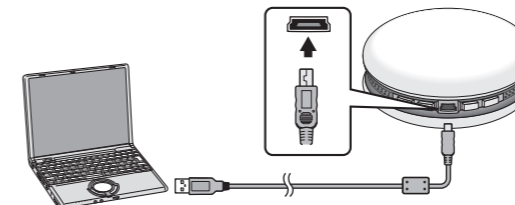


USB cable (supplied)

- Do not use any other USB cables except the supplied one. (Operation is not guaranteed.)
- Do not connect two or more USB devices to a PC. (Operation is not guaranteed.)

Inserting the batteries

 Insert so the poles (+ and -) match those in this unit.

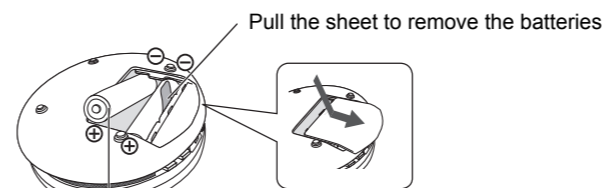

LR6, AA (Alkaline)
(not supplied)

- Use alkaline batteries.
- If the battery is low, the indicator will change from blue to red.

Note

- Connection to a USB port of a PC provides the unit with the power supply only; communication with the PC or charging of the unit does not work.
- USB is higher priority than battery, when this unit is connected to a PC and the battery is inserted at the same time.

Control reference guide

Front

 
- When you listen to the sound, face the front side of the unit.
(The speaker is built into the front side.)



Status Indicator

- Blue: Power on and Bluetooth® mode
- Red: Low battery

Rear

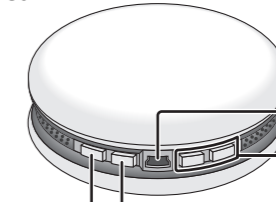

USB port

Adjust the volume

Start Bluetooth® pairing mode

Power on/off (⏻/⏻)

Listening to audio from a Bluetooth® device

By using the Bluetooth® connection, you can listen to the sound from the Bluetooth® audio device with this unit wirelessly.

Preparation

Switch on the Bluetooth® feature of the device and put the device near this unit. Read the operating instructions of Bluetooth® audio device for its operation.

Pair with another device and listen to audio

- 1 Press [⏻/⏻] to turn this unit on.
 - If using this unit for the first time, please go to Step 3.
- 2 Press and hold [⏻] for 2 seconds.
 - The indicator will blink fast and the unit will enter pairing standby mode.
 - When this unit is operated on batteries, it functions as a battery check indicator. (See "Control reference guide")
- 3 In the Bluetooth® pairing settings of the Bluetooth® device, select to pair with "SC-MC07".
 - Depending on the device, connection may take place automatically when pairing is selected. In this case, go to Step 5.
 - If prompted for a passkey, input "0000".
- 4 In the Bluetooth® connecting settings of the Bluetooth® device, select to connect with "SC-MC07".
 - When the connection is made, the indicator on the unit lights up.
- 5 Start playback on the Bluetooth® device.
 - Adjust the volume using the [- VOL +] buttons on the unit.
 - When the maximum or minimum volume is reached, you will be notified by a beep sound.

Disconnecting

- Switch off this unit or the device.
- Stop / disable the Bluetooth® transmission of the device.

Listening to audio from a paired device

When this unit is turned on, the indicator will blink slowly indicating that the unit is in connection standby mode. Please perform Steps 4 and 5.

- When the power is turned on, this unit is connected to the last-used Bluetooth® device. At this point, please perform Step 5.

Note

- This unit can only connect to one device at a time.
- You can pair up to 6 devices with this unit. If a 7th device is paired, the device with the oldest connection history will be replaced.
- Panasonic bears no responsibility for data and/or information that can possibly be compromised during a wireless transmission.

Auto Power Off

This unit automatically switches off if there is no audio input and you do not use it for approximately 10 minutes.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>