Quick Start Guide





Tips

See the User Manual for how to mount the main unit and speakers onto wall.
See "Connect AV devices" for more AV connection options.

- For connection and operation of your AV devices, see the respective user manuals.

Note:

- If automatic setup of wireless connection fails, see "Set up wireless connection manually" in the User Manual for the solution. Attach the speakers to the main unit.

2

3

Slide the table stand onto the bottom of the main unit.

Place the main unit and speakers.

4

Connect the audio sockets of the system and TV with the supplied coaxial cable (A) or the white/red connectors of the supplied AV cable (B).


5

Connect the FM antenna.

6

Connect the power cords of the main unit and wireless subwoofer.

➔ Wireless connection sets up automatically.

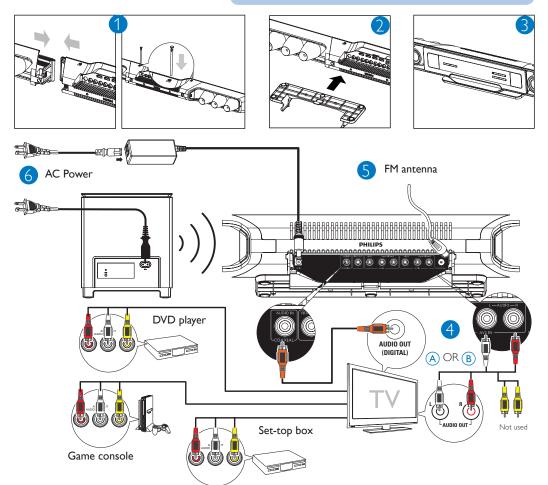



Setting the clock

IMPORTANT!

– To set clock in the Eco Power Standby mode, first press and hold for more than 2 seconds to switch to the standby mode.

Ú

In standby mode, press and hold SET TIME/PRO.

When the hour digits flash, press VOL +/- to set the hours.

Press SET TIME/PRO.

4

When the minute digits flash, press VOL +/- to set the minutes.

Press SET TIME/PRO again to confirm the time setting.

Program remote control

Place the smart remote control (A) within 1mm-10mm distance from the other remote control (B).

Press LEARN for 2 seconds to activate the learning mode.

→ A blue indicator on the smart remote control (A) lights up.

Press the button on the other remote control (B) that is to be stored on the smart remote control (A).


➔ If the code is received successfully, the blue indicator flashes.

4

Press one of the 12 white learning buttons on the smart remote control (A) to store the code of this button.

 If the code is stored successfully, the indicator flashes green for 2 seconds, then turns blue again.

Repeat steps 3 and 4 to program more buttons on the smart remote control (A).

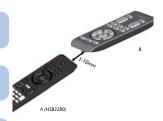

Notes:

 If there is no operation within 8 seconds, the systme quits the learning mode automatically and the indicator turns off.
 During the learning process, the normal remote control functions are disabled.
 By default, the remote control codes of a Philips TV are stored in the smart remote control. The available preset buttons are POWER, AV, ▲CH▼, ▲VOL▼, MUTE and SLEEP.



Enjoy sound of a connected AV device through the soundbar system



Detailed playback features and additional functions are described in the accompany owner's manual.

Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com