

Operation Manual

XM digital satellite data & audio receiver

GEX-P10XMT

PIONEER CORPORATION

4-1, MEGURO 1-CHOME, MEGURO-KU, TOKYO 153-8654, JAPAN

PIONEER ELECTRONICS (USA) INC.

P.O. Box 1540, Long Beach, California 90801-1540, U.S.A.
TEL: (800) 421-1404

PIONEER EUROPE NV

Haven 1087, Keetberglaan 1, B-9120 Melsele, Belgium
TEL: (0) 3/570.05.11

PIONEER ELECTRONICS ASIACENTRE PTE. LTD.

253 Alexandra Road, #04-01, Singapore 159936
TEL: 65-6472-7555

PIONEER ELECTRONICS AUSTRALIA PTY. LTD.

178-184 Boundary Road, Braeside, Victoria 3195, Australia
TEL: (03) 9586-6300

PIONEER ELECTRONICS OF CANADA, INC.

300 Allstate Parkway, Markham, Ontario L3R OP2, Canada
TEL: 1-877-283-5901

PIONEER ELECTRONICS DE MEXICO, S.A. de C.V.

Blvd.Manuel Avila Camacho 138 10 piso
Col.Lomas de Chapultepec, Mexico, D.F. 11000
TEL:55-9178-4270

先鋒股份有限公司

總公司: 台北市中山北路二段44號13樓
電話: (02) 2521-3588

先鋒電子(香港)有限公司

香港九龍尖沙咀海港城世界商業中心9樓901-6室
電話: (0852) 2848-6488

<KKYZX> <04L00000>

Register your product at

<http://www.pioneerelectronics.com>

See "Product registration" page

Published by Pioneer Corporation.
Copyright © 2004 by Pioneer Corporation.
All rights reserved.

Printed in Thailand
<CRB2045-A/N> UC

Before You Start

Precautions

Information to User

Alteration or modifications carried out without appropriate authorization may invalidate the user's right to operate the equipment.

About this unit

⚠ WARNING

- Handling the cord on this product or cords associated with accessories sold with the product may expose you to chemicals listed on proposition 65 known to the State of California and other governmental entities to cause cancer and birth defects or other reproductive harm. **Wash hands after handling.**

⚠ CAUTION

- Do not allow this unit to come into contact with liquids. Electrical shock could result. Smoke, overheating, or permanent damage could result from contact with liquids.
- Keep this manual handy as a reference for operating procedures and precautions.
- Never set the volume of your product so high that you cannot hear outside traffic and emergency vehicles.
- Protect this product from moisture.
- If the battery is disconnected or has discharged, any previously set memory will be erased and must be reprogrammed.

En

Before You Start

📍 Important (Serial Number)

The serial number of this device is located on the bottom of this unit. For your own security and convenience, be sure to record this number on the enclosed warranty card. ▣

About this manual

This unit features a number of sophisticated functions ensuring superior reception and operation. All the functions have been designed for the easiest possible use, but many are not self-explanatory. This operation manual will help you benefit fully from this unit's potential and maximize your listening enjoyment.

We recommend that you familiarize yourself with the functions and their operation by reading through the manual before you begin using this unit. It is especially important that you read and observe **Precautions**, **WARNINGS** and **CAUTIONS** in this manual. ▣

Before You Start

After-sales service for Pioneer products

Please contact the dealer or distributor from where you purchased the product for its after-sales service (including warranty conditions) or any other information. In case the necessary information is not available, please contact the companies listed below. Please do not ship your product to the companies at the addresses listed below for repair without making advance contact.

U.S.A.

Pioneer Electronics (USA), Inc.
CUSTOMER SUPPORT DIVISION
P.O. Box 1760
Long Beach, CA 90801-1760
800-421-1404

For warranty information, please see the Limited Warranty sheet included with your product. ▣

Product registration

Visit us at the following site:

<http://www.pioneerelectronics.com>

- Register your product. We will keep the details of your purchase on file to help you refer to this information in the event of an insurance claim such as loss or theft.
- Receive updates on the latest products and technologies.
- Download owner's manuals, order product catalogues, research new products, and much more. ▣

En

Before You Start

About the XM Logo

(((XM)))™



The "XM" mark on this unit indicates that it is an XM satellite radio receiver. You can receive XM satellite radio broadcasts by connecting the unit as shown in the installation manual.

📎 Note

The XM name and related logos are trademarks of XM Satellite Radio Inc. ▣

Introducing XM Satellite Radio

There's a world beyond AM and FM. XM Satellite Radio. Up to 130 channels. Coast-to-coast coverage. Digital quality sound. With many commercial-free music channels. Plus the best sports, comedy, talk, news and entertainment. Questions? [Visit www.xmradio.com](http://www.xmradio.com). The future is waiting.

📎 Notes

- XM Radio is responsible for the channel lineup and categories, and may change at any time. Please contact XM Radio for the latest channel lineup and category information.
- To activate the XM tuner, you must have an XM subscription. ▣

Before You Start

About the XM NAVTRAFFIC Logo



Required \$9.99 basic monthly XM radio subscription and XM NavTraffic service subscriptions sold separately. XM NavTraffic only available in select markets. Premium Channels for radio service available at additional monthly costs. Other fees and taxes, including a one-time activation fee, may apply. Subscription fee is consumer only. All fees and programming subject to change. Subscriptions subject to Customer Agreement available at xmradio.com. XM radio service only available in the 48 contiguous United States.
© 2004 XM Satellite Radio Inc. All rights reserved.



NAVTEQ Traffic-is a trademark of NAVTEQ North America, LLC.
—2004. NAVTEQ North America, LLC.

How to subscribe

Listeners can subscribe by visiting XM on the web at www.xmradio.com or by calling XM's Listener Care at 1-800-XM-RADIO [1-(800) 967-2346]. Customers should have their Radio ID ready; for details, refer to "Display the ID code". Customers are able to receive a limited number of free-to-air channels without activation.

Note

For information on the coverage area where XM tuner reception is available, please visit www.xmradio.com.

Technology. It is prohibited to copy, decompile, disassemble, reverse engineer or manipulate any technology incorporated in receivers compatible with the XM Satellite Radio system. Furthermore, the AMBE® voice compression software included in this product is protected by intellectual property rights including patent rights, copyrights, and trade secrets of Digital Voice Systems, Inc. The user of this or any other software contained in an XM Radio is explicitly prohibited from attempting to copy, decompile, reverse engineer, or disassemble the object code, or in any other way convert the object code into human-readable form. The software is licensed solely for use within this product.

Before You Start

Operating with different head units

You can control this product by connecting a Pioneer head unit (sold separately). The following describes how to operate this product with the head unit. In the diagrams and description, "DEH-P6700MP" is used as the example head unit.

When this product is combined with any of the Pioneer units listed below, data services such as traffic information, sports or stock information will be available.

For the details of these functions, please see the manuals supplied with each unit.

Navigation systems supporting data communication functions (as at May 2005)

- AVIC-D1, AVIC-N2
- AVIC-N1 (requires upgrade using map disc CNDV-50MT [CNDV-50MTP])

Notes

- When using this product with the head units marked *2, these units will be unable to display the characters correctly on the unit's sub display (LCD display).
- When using this product with units marked *3, be sure to update the navigation system's software program using the latest map disc CNDV-50MT [CNDV-50MTP] (sold separately) to utilize traffic and data functionality.
- This product cannot be used with any head units other than those listed below. Functionality with head units other than those listed below may be limited, or not functional at all. Pioneer does not support or guarantee the functionality of this product with head units other than those listed below.

En

Head unit group 1

When using "GEX-P10XMT" with the following head units, operation is the same as for "DEH-P6700MP". Operate according to the instructions in this operation manual.

DEH-P760MP	DEH-P7600MP
DEH-P750MP	DEH-P7500MP
DEH-P660	DEH-P6600
DEH-P650	DEH-P6500
DEH-P960MP *2	DEH-P9600MP *2

Head unit group 2

When using "GEX-P10XMT" with the following head units, refer to the operation manual supplied with the head unit for operating instructions.

AVH-P7500DVD *2	AVH-P5700DVD
AVH-P6600DVD *2	AVH-P7600DVD *2
AVH-P6500DVD *2	
AVIC-N1 *2 *3	AVIC-N2 *2
AVIC-D2	
DEH-P8MP	DEH-P80MP
DEH-P860MP	DEH-P8600MP
DEH-P770MP	DEH-P7700MP

 
Before You Start

Resetting the microprocessor

The microprocessor must be reset under the following conditions:


- Prior to using this unit for the first time after installation
- If the unit fails to operate properly
- When strange or incorrect messages appear on the display
- When changing the navigation system or unit combination

- Press RESET on the unit with a pen tip or other pointed instrument.

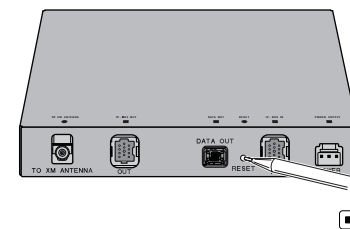

En

 What's What

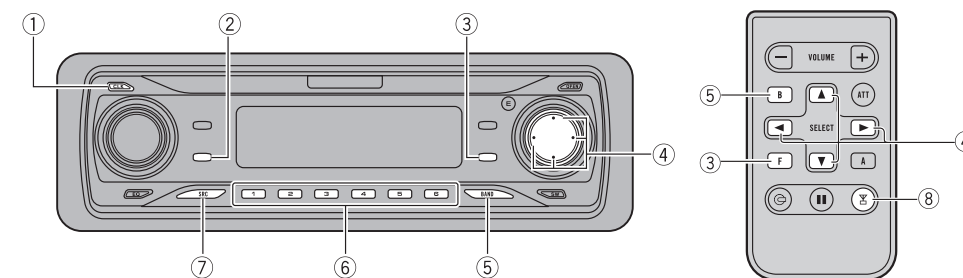

Head unit (e.g. DEH-P6700MP)

① CLOCK button

Press and hold to change channel select mode.

② DISPLAY button

Press to select different displays.

③ FUNCTION button

Press to select functions.

④ ▲/▼/◀/▶ buttons

Press to select a channel, recall a channel and select a category. Also used for controlling functions.

⑤ BAND button

Press to select among three XM bands and cancel the control mode of functions.

⑥ 1-6 buttons

Press for preset tuning.

⑦ SOURCE button

Head unit is turned on by selecting a source. Press to cycle through all of the available sources.

Remote control (e.g. DEH-P6700MP)

You can operate in the same way with the remote control supplied with the head unit.

⑧ TUNER button

Press to select the tuner as the source.

Note

As the button layout differs depending on the model, please read the Operation Manual of the Head Unit or Navigation system you are using.

En

En

XM tuner


Power supply for this unit

The method for turning this unit's power supply ON/OFF differs according to other units you combine with it.

When combining this unit with either AVIC-D1, AVIC-N1, or AVIC-N2:

- This unit's power supply can be turned OFF only if the ignition switch is turned OFF. If for any reason you want to switch the power of the unit OFF, switch the vehicle's ignition off (turn the ACC of your vehicle to OFF).

When combining with another head unit (or AV head unit):

- When the head unit's power supply is OFF, this unit is also OFF. (Selecting a source other than XM tuner will not turn this product off.)
- This unit's power supply can be turned OFF if the ignition switch is turned OFF. If for any reason you want to switch the power of the unit OFF, switch the vehicle's ignition off (turn the ACC of your vehicle to OFF). 

Selecting the XM source


1 Press **SOURCE** to turn the head unit on.

2 Press **SOURCE** to select "XM" source.

Press **SOURCE** repeatedly to switch between the following sources:

 
XM tuner—**Tuner**—**Television**—**DVD player/Multi-DVD player**—**Built-in CD player**—**Multi-CD player**—**External unit 1**—**External unit 2**—**AUX**

Note

To quit listening to the XM tuner, press **SOURCE** to switch to another source or press **SOURCE** and hold until the head unit turns off. 

XM tuner

Listening to XM

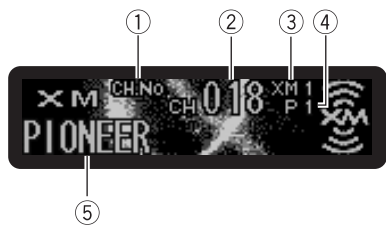

These are the basic steps necessary to operate the XM.

① **XM channel select setting indicator**

Shows what channel select setting has been selected. **CH.No** is displayed when **CH NUMBER** is selected, and **CAT** is displayed when **CATEGORY** is selected.

② **XM channel number indicator**

Shows to which XM channel number the tuner is tuned to.

③ **XM band indicator**

Shows the XM band which has been selected.

④ **XM preset number indicator**

Shows what XM preset has been selected.

⑤ **XM channel name**

Shows the channel name of broadcast channel.

1 Press **SOURCE** to select a XM source.

2 Press **BAND** to select a band.

Press **BAND** until the desired band is displayed, **XM1**, **XM2** or **XM3**.

3 Press **◀** or **▶** to select the desired channel.


The channel number moves up or down successively. Channels that cannot currently be selected are skipped, and the next channel is selected.

- If you press and hold **◀** or **▶**, you can increase or decrease channel number continuously.

- You can also select a channel from a desired channel category. (Refer to "Switching the channel select mode".)

4 Press **SOURCE** and hold until the head unit turns off or press **SOURCE** to select another source.

Notes

- When you turn the power on, change the source to XM tuner, or select a channel, it may take a few seconds while this unit acquires and processes the satellite signal before you can hear anything.
- Depending on the head unit, it may be possible to switch to channel number direct input mode using the allocated button on the remote control (e.g. **DIRECT**). For details, refer to the manual of the head unit. 

XM tuner

Storing and recalling channels

If you press any of the preset tuning buttons **1–6** you can easily store up to six channels for later recall with the touch of a button.


- Memory and recall are for broadcasts. If you recall a memorized broadcast that has been moved to another channel, the channel to which the broadcast was moved is selected.

- When you find a channel that you want to store in memory, press one of the preset tuning buttons 1–6 and hold until the preset number stops flashing.**

The number you have pressed will flash in the preset number indicator and then remain lit. The selected channel has been stored in memory.

The next time you press the same preset tuning button, the channel is recalled from memory.


Notes

- Up to 18 channels, six for each of the three XM bands, can be stored in memory.
- When channel number select mode is selected, you can also use **▲** and **▼** to recall channels assigned to preset tuning buttons **1–6**.
- If a channel you have recalled cannot be selected, a message is displayed for 2 seconds and the unit returns to the operating status before the channel was recalled. 

Switching the XM display

 
XM channels each have a channel number and channel name. XM programming also carries the song or program title, the artist name and category when available.

- Press **DISPLAY**.

Press **DISPLAY** repeatedly to switch between the following settings:
Channel name—Artist name/feature—Song/program title—Channel category 

XM tuner

Introduction of advanced tuner operation

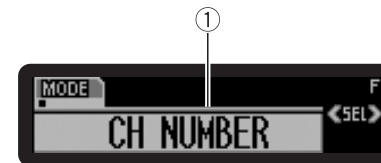

① **Function display**

Shows the function status.


- Press **FUNCTION** to display the function name.

Press **FUNCTION** to display the following function:

MODE (Channel select mode)

- To return to the XM display, press **BAND**. 

Note

Depending on the head unit you are using, it may be possible to directly switch between the channel select mode using the allocated button (e.g. **CLOCK**). For details, refer to the manual of the head unit. 

Switching the channel select mode

When selecting a channel, you can switch between selecting a channel by channel number or by channel category. Initially, channel number select mode is selected.

1 Press **FUNCTION** to select **MODE**.


Press **FUNCTION** until **MODE** appears in the display.

2 Press **◀** or **▶** to select the desired channel select mode.

Press **◀** or **▶** repeatedly to switch between the following settings:

CH NUMBER (Channel number select mode)—**CATEGORY** (Channel category select mode)

Note

Depending on the head unit you are using, it may be possible to directly switch between the channel select mode using the allocated button (e.g. **CLOCK**). For details, refer to the manual of the head unit. 

XM tuner

Selecting the channel in the channel category

Channels are organized into various program categories, e.g. Rock, Classic, Jazz. You can search between different categories, and then search among channels within each channel category.

1 Select the channel category select mode. (Refer to “Switching the channel select mode” above.)

2 Press **BAND** to return to the previous display.


3 Press **▲** or **▼** to select the desired channel category.

Once you select a channel category, the unit searches for channels in that category. During search, the channel category doesn't immediately change even if you press the button. To successively change the channel category, continue pressing the button.

4 Press **◀** or **▶** to select the desired channel in the selected channel category.

The channel number moves up or down in the selected channel category. Channels that cannot currently be selected are skipped, and the next channel in that channel category is selected.

Note

If you select a channel of another category by channel recall, etc., during steps 3 and 4, the category selected in step 3 still remains in memory. If you press **◀** or **▶**, the channel number moves up or down in the category selected in step 3 regardless of the category of the present channel. 

Display the ID code (Radio ID)

Each XM tuner is identified with a unique Radio ID. You will need the Radio ID when activating XM service or when reporting a problem. How to display the ID code depends on the channel select mode.

Note

Carefully check your XM Radio ID. The letters **F**, **I**, **O**, and **S** are not used.

Channel number select mode

If you select **CH 000**, the ID code is displayed.


● Press **◀** or **▶** to select the channel number zero (CH 000).

Channel category select mode

RADIO ID is provided as a channel category for displaying the ID code.

● Press **▲** or **▼** to select the RADIO ID from channel category.

Notes

- If you select another channel, display of the ID code is canceled.
- Display of the ID code repeats displaying **RADIO ID** and the ID code one after the other. 


Additional Information

Messages

When problems occur with the XM tuner, a message appears on the display. Refer to the table below to identify the problem, then take the suggested corrective action.

Message	Cause	Action
ANTENNA	The XM antenna is not connected. A short-circuit occurring in the antenna or the surrounding antenna cable.	Check whether the XM antenna cable is attached securely. Make sure that there is nothing unusual with the antenna or antenna cable. Turn the ignition off and then on.
UPDATING	Radio is being updated with latest encryption code.	Wait until the encryption code is fully updated. Channels 000 and 001 should function normally.
NOSIGNAL	XM signal is too weak at the current location.	Wait until the car reaches a location with a stronger signal.
LOADING	Unit is acquiring audio or program information.	Wait until the unit has received the information.
OFF AIR	The channel currently selected has stopped broadcasting.	Select another channel.
-----	The user has selected a channel number that does not exist or is not subscribed to.	Automatically switches to Channel 001.
----	There is no artist name/feature, song/program title, or channel category associated with the channel at that time.	No action needed.

Note

When the messages that is not listed above are displayed, refer to the operation manual supplied with the head unit. 

En

Additional Information

Specifications

General

Power source 14.4 V DC (10.8 – 15.1 V allowable)
Grounding system Negative type
Max. current consumption 2.0 A
Dimensions (W × H × D) 179 × 27 × 139 mm (7 × 1 × 5-1/2 in.)
Weight 0.57 kg (1.26 lbs)

XM tuner

Frequency range 2,332.50 – 2,345.00 MHz
Usable sensitivity
Satellite – 105.0 dBm
Terrestrial – 102.0 dBm


Audio

Signal-to-noise ratio 90 dB (IHF-A network)
Separation 85 dB

Antenna

Power source (Provided by the satellite line)
..... 4.9 V DC (4.4 – 5.4 V allowable)
Max. current consumption 0.1 A
Type Active type
Dimensions
Base (W × H × D) 29 × 14 × 40 mm [1-1/8 × 1/2 × 1-5/8 in]
Cord 5 m
Weight 0.06 kg (0.13 lbs)

Note

Due to possible improvements, specifications and design are subject to change without notice. 

En

En

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>