

Pioneer sound.vision.soul

DVD MULTIMEDIA AV NAVIGATION SERVER

AVIC-D3

Quick Start Guide

This guide is intended to guide you through the basic functions of this navigation system. For details, please refer to the Operation Manual provided with the product.


Hardware buttons

- (1) Disc loading slot
- (2) EJECT button
- (3) MENU button
- (4) MAP button
- (5) VOLUME knob

Turn to adjust the AV (Audio and Video) volume or press to change the AV source. Press and hold the **VOLUME** knob to switch the source to mute.


- (6) |◀▶|

Pressing this button when the AV source is selected skips a track, file or chapter. Press and hold to fast forward/fast reverse a track, file or chapter.

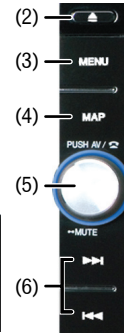


Switching the screen

Press the following buttons and touch keys to display the respective screens.

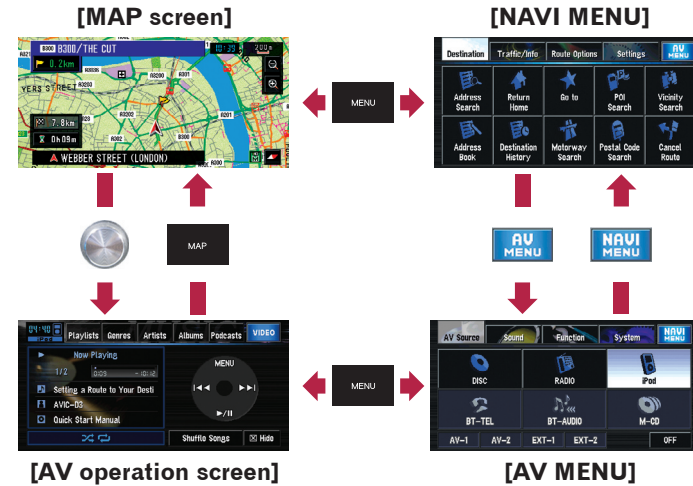


Search function overview

This navigation system has multiple methods for entering your destination.

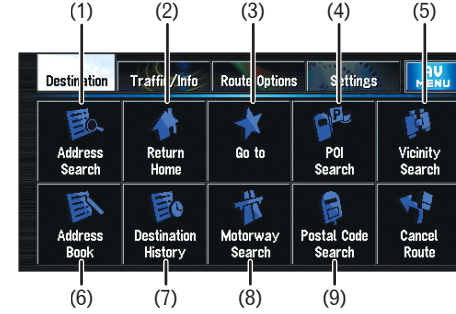

- (1) Search by address
- (2) Shortcut key for home address
- (3) Shortcut key for favourite destination
- (4) Search for stores, restaurants, and other businesses in the points of interest database
- (5) Search for stores, restaurants, and other businesses in your vicinity
- (6) Select a destination from your address book
- (7) Select a previously routed destination
- (8) Select a route to a motorway entrance or exit
- (9) Search for a destination by postal code number

Search result list for vicinity search

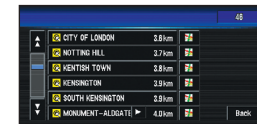

Searching for your destination by address

- 1 Display the [NAVI MENU].
- 2 Touch the **Destination** tab and then touch **Address Search**.
- 3 Input the street name.
- 4 Select the street name from the list.
- 5 Input the house number and then touch **OK**.



Country key

Touching the country key displays the country selector screen.

- 4 Select the street name from the list.



If the list screen for city or area is displayed, touch the city or area where your destination is located.

- 5 Input the house number and then touch **OK**.



When route calculation is completed, navigation guidance begins.




- 6 Begin driving in accordance with navigation guidance.

This navigation systems gives you route guidance both visually and by voice.


Basic operation on the map screen

Switching the view mode

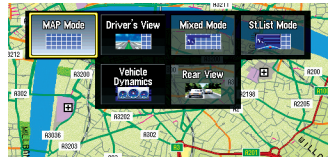


Press the **MAP** button on the map screen. This navigation system allows you to select different view modes depending on your preference.

Scrolling the map

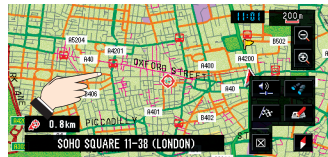

Touch and hold where you would like to scroll to on the map screen. After a few seconds, the scrolling will begin.


Zoom in or zoom out

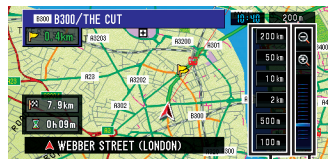

Touch or .

(1) Direct scale change
(2) Gradual scale change

Setting the voice guidance volume

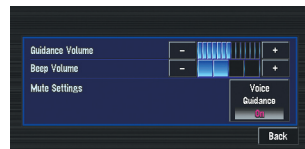

Touch the **Settings** tab in **[NAVI MENU]** and then touch **Volume**.

Traffic information on the map

Traffic conditions can be overlaid on the map when there is traffic information transmitted by FM radio service through the Radio Data System (RDS-TMC).



- (1) **Traffic event**
- Stationary traffic
 - Slow and queuing traffic
 - Closed/blocked roads
 - Other event (e.g., accident)

Selecting the AV source

Touch the **AV source icon** to select the desired AV source.



- (1) **AV source icon**
- **DISC** [CD, ROM, DVD-V, DivX]
 - **RADIO** [Tuner]
 - **iPod** [iPod]
 - **BT-TEL** [Bluetooth-Telephone]
 - **BT-AUDIO** [Bluetooth-Audio]
 - **M-CD** [Multi-CD player]
- (2) **OFF** [Switch the source off]

In the AV operation screen or the source off screen, press the **MENU** button to display **[AV MENU]**.

Operation of AV operation screens

CD source screen



Touch keys

Play/Pause


Fast Forward

CD: Skip the track forward or backward

DVD: Skip the chapter forward or backward

DVD: Stop playback

DVD-V source screen

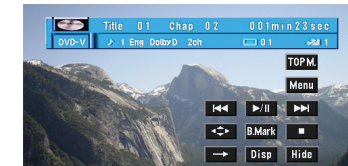

Touch the screen to display touch keys, when you play the DVD-Video.

RADIO source screen



▲Up/▼Down

Switch the radio station

◀Seek/Seek▶

Seek tuning (keep touching for about one second and release)

Band

Switch between bands:
FM1 – FM2 – FM3 – MW/LW

Detail

Switch to the Detail information display.

Playing your Apple iPod®

You can control an iPod by connecting the iPod cable (CD-I200) (sold separately) to the navigation system.

Playback of music sources

1 Display the **[AV MENU]**.

2 Touch the **iPod** icon to display the iPod source screen.



- (1) Touch one of the categories in which you want to search for a song.
- (2) Touch to display the video screen.
- (3) Touch keys to operate the music source.


Playback of video sources

Change the video setting on the iPod so that the iPod can output the video to an external device, before you display the video screen. For details concerning setting and operation, refer to the iPod's owner's manual.

1 Display the iPod source screen.

2 Touch **VIDEO** to display the video screen.

In the video screen, control operations with the iPod's buttons.

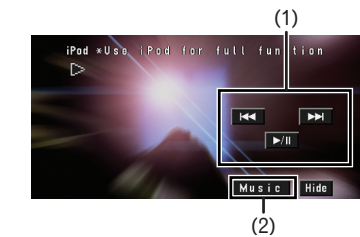

- (1) Touch keys to operate the video source.
- (2) Touch to display the music screen.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>