

# 15 Minute IC3 Chargers

23-038 & 23-039

Your incredible I-C3 rechargeable system charges either AA or AAA I-C3 batteries in 15 minutes or less. It can also NiMH or NiCd batteries overnight. The 23-038 charges up to two batteries at a time, and the 23-039 charges up to four batteries.



23-038

23-039

## 23-038

1. Place the batteries in charging pocket according to the polarity markings (+/-). Insert the positive (+) end first, and then press down on the negative (-) flat end until the battery is securely in place.
2. Swing out the plug on the back of the charger, and then plug the charger into a standard wall outlet.



## 23-039

1. Place the batteries in charging pocket according to the polarity markings (+/-). Insert the positive (+) end first, and then press down on the negative (-) flat end until the battery is securely in place.
2. Plug the small end of the adaptor cord into the top of the charger, and then plug the adaptor into a standard wall outlet. To charge in the car, plug the small end of the car adaptor cord into the top of the charger and plug the large end of the car adaptor into your car lighter power port.



## Operation Notes

- The green LED light and the cooling fan will come on to indicate batteries are charging. The light and the cooling fan will turn off when charging is complete.
- When charging is complete, you may continue to trickle charge the batteries by leaving them in the charger. If you unplug the charger, remove the batteries.
- You will hear the cooling fan when the charger is operating (only when charging I-C3 batteries.)
- Your charger was designed for use with I-C3 15 Minute Rechargeable Batteries. You will get optimum battery performance and the fastest charging with these batteries.
- Regular rechargeable NiMH (Nickel Metal Hydride) or NiCd (Nickel Cadmium) AA or AAA size batteries may be used in this charger, but will need to charge overnight.
- You can charge AA and AAA size batteries at the same time.
- Do not charge I-C3 15 Minute Rechargeable Batteries and regular NiMH (Nickel Metal Hydride) batteries at the same time.
- I-C3 batteries gradually lose power when stored and not in use. For optimal performance, recharge prior to using.
- You do not have to completely drain I-C3 batteries prior to recharging.

## Important Safety Instructions

- This manual contains important safety and operating instructions.
- Before using battery charger, read all instructions and cautionary markings on the battery charger, battery, and product using battery.
- To reduce risk of battery explosion, follow these instructions and those marked on the charger and battery.
- The batteries will become warm during charging. Use caution when handling.
- To reduce risk of injury, charge only I-C3, NiMH and NiCd rechargeable batteries. Other types of batteries may burst causing personal injury and damage.
- Never attempt to charge single-use alkaline or zinc carbon batteries.
- Do not charge Rechargeable Alkaline (Renewal) batteries in this charger.
- To reduce the risk of electric shock, unplug the charger from the outlet before cleaning. Never immerse the charger in water or any other liquid. Do not expose charger to rain or snow.
- Never disassemble the charger or alter the plug. This may cause electric shock.

## Troubleshooting

If the green light and/or the cooling fan do not turn on or if the green light flashes:

- The batteries may not be loaded properly. Reload the batteries, firmly pressing each battery down to the bottom of the charging pocket.
- The batteries may be damaged. Discontinue use of these batteries.
- The charger is outside of its operating temperature. If for example, you leave your charger inside a car during summer or winter, the charger temperature may fall outside this range. Allow charger to come to room temperature before re-starting.

## Limited One Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>